




ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

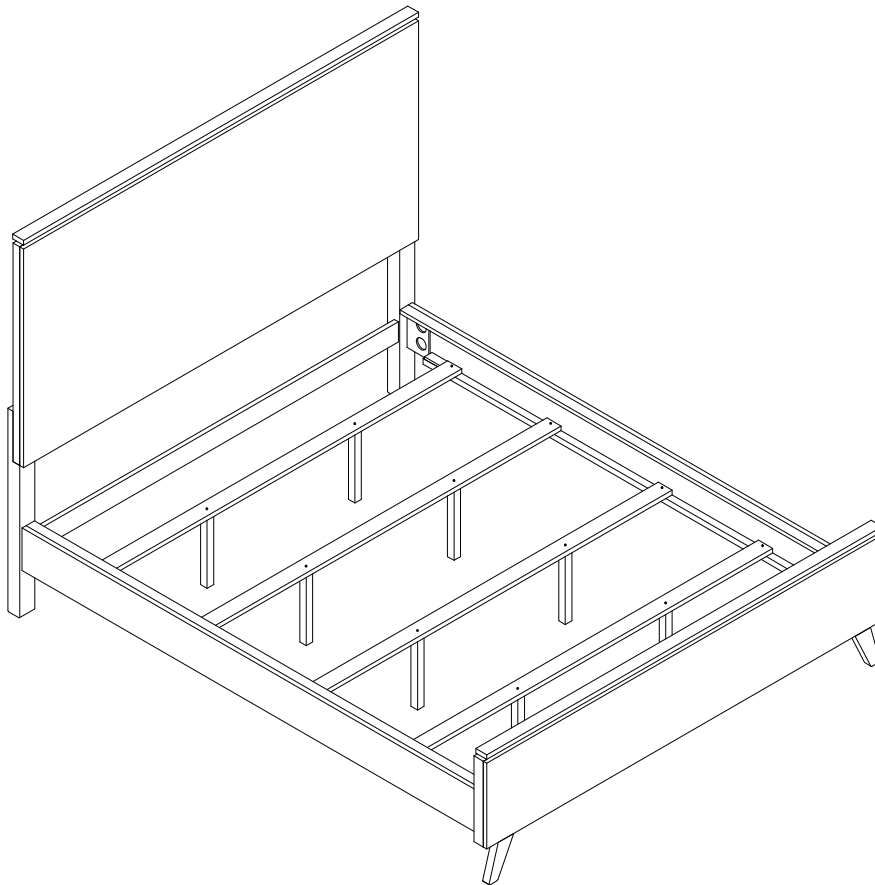

Fine Furniture for every stage of life

224601KW(B1-B3)
California King Bed

ITEM: 224601KW(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD
PANEL




1PC

C RIGHT
HEADBOARD LEG



1PC

B HEADBOARD BOTTOM
RAIL



1PC

D LEFT
HEADBOARD LEG



1PC

B2 (BOX 2)

E FOOTBOARD
PANEL



1PC

G LEFT
FOOTBOARD LEG
WITH "G" LABEL



1PC


F RIGHT
FOOTBOARD LEG
WITH "F" LABEL



1PC

B3 (BOX 3)

H BED RAIL



2PCS

J BED SLAT




4PCS

I BED SLAT SUPPORT
WITH LEVELER




8PCS

HB 224601KW(B1)
FROM BOX 1
HEADBOARD
COMPLETE

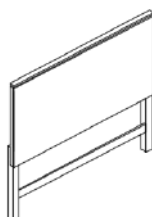

1PC

FB 224601KW(B2)
FROM BOX 2
FOOTBOARD
COMPLETE

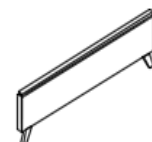

1PC

ITEM: 224601KW(B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!







1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION








Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224601KW(B1)

1	BOLT (Ø5/16" x 45MM - BLK)		8PCS	2	LOCK WASHER (Ø5/6" - BLK)		8PCS
3	FLAT WASHER (Ø5/16" - BLK)		8PCS	4	ALLEN WRENCH (4MM - BLK)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224601KW(B2)

5	BOLT (Ø5/16" x 45MM - BLK)		2PCS	6	LOCK WASHER (Ø5/6" - BLK)		2PCS
7	FLAT WASHER (Ø5/16" - BLK)		2PCS	8	ALLEN WRENCH (4MM - BLK)		1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224601KW(B3)

9	THREADED BOLT (Ø5/16" x 100mm - BLK)		8PCS	10	HEX NUT (Ø5/16" x 14mm -BLK)		8PCS
11	WRENCH (14MM - RBW)		1PC	12	HALF ROUND NUT (Ø5/16" - BLK)		8PCS
13	FLAT HEAD SCREW (Ø4 x 30mm - BLK)		8PCS	14	BOLT (Ø1/4" x 30MM - BLK)		8PCS
15	ALLEN WRENCH (4MM - BLK)		1PC				


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **224601KW(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 1

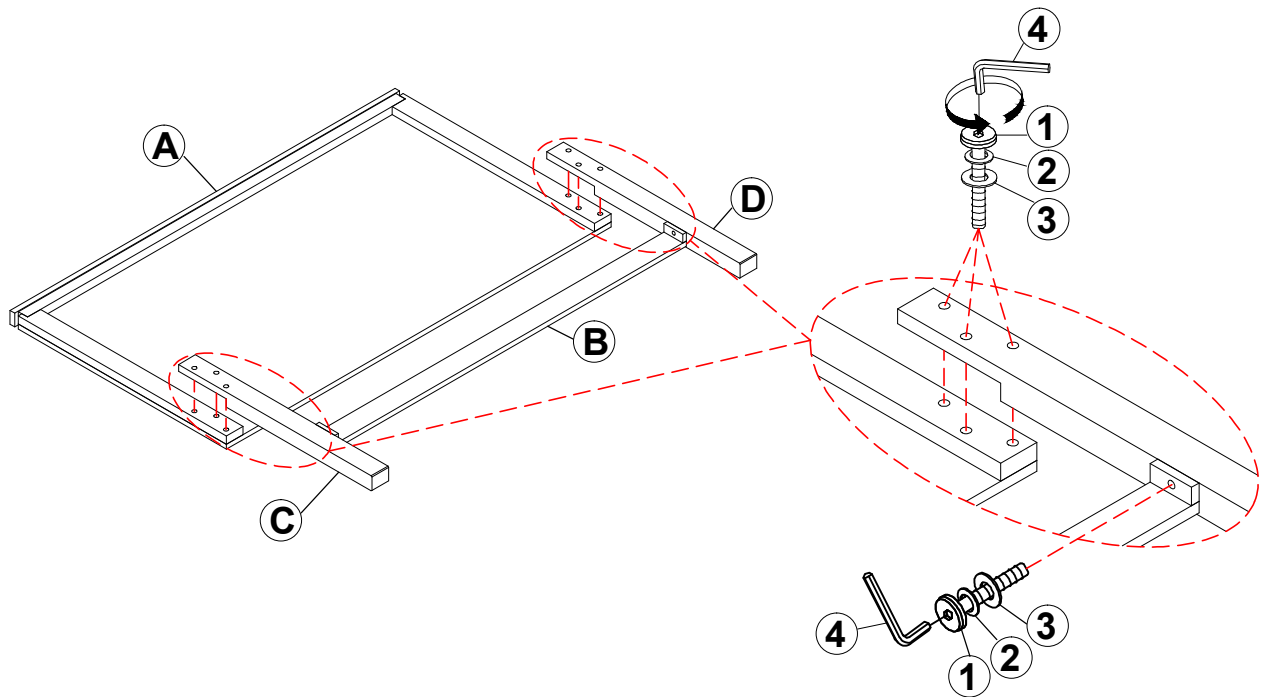


STEP 2

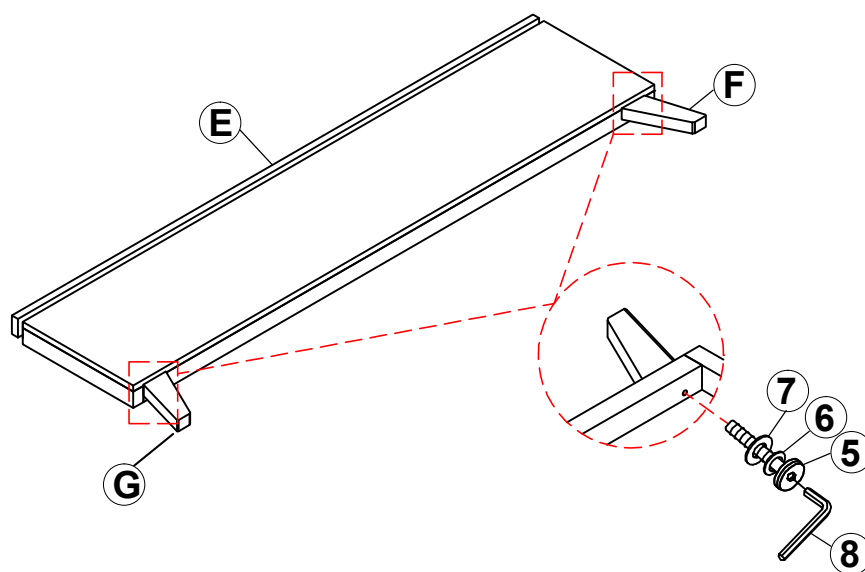


ITEM: **224601KW(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

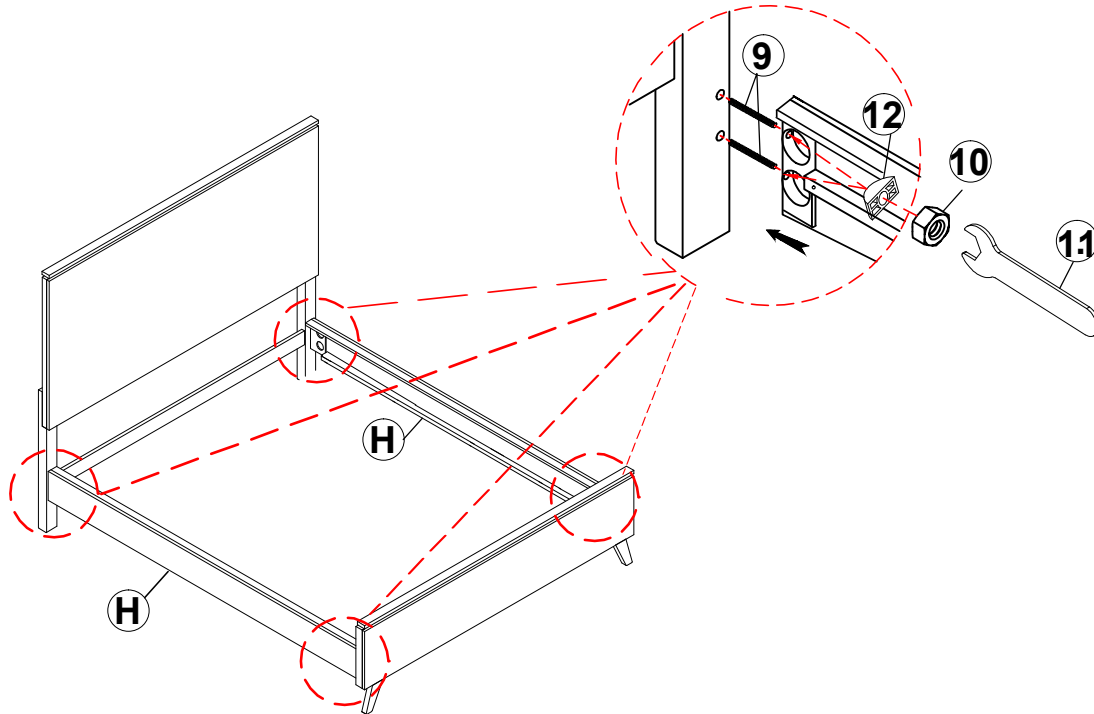


STEP 4 COMPLETE

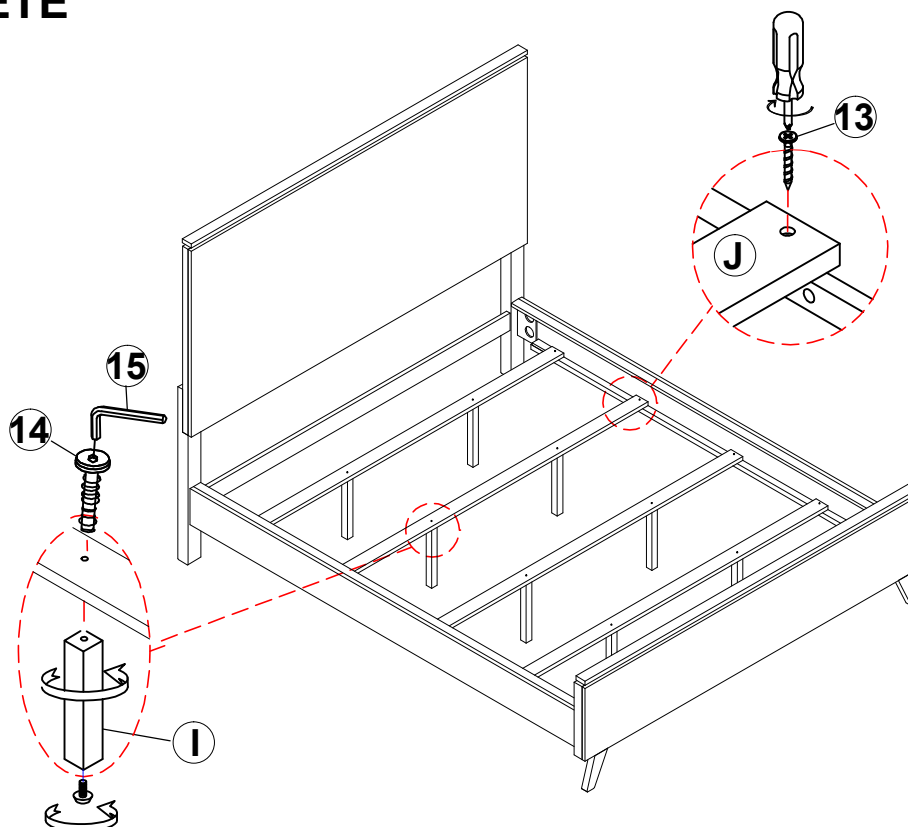

ITEM: **224601KW(B1-B3)**



Inner Size: 77.00"W X 86.00"D

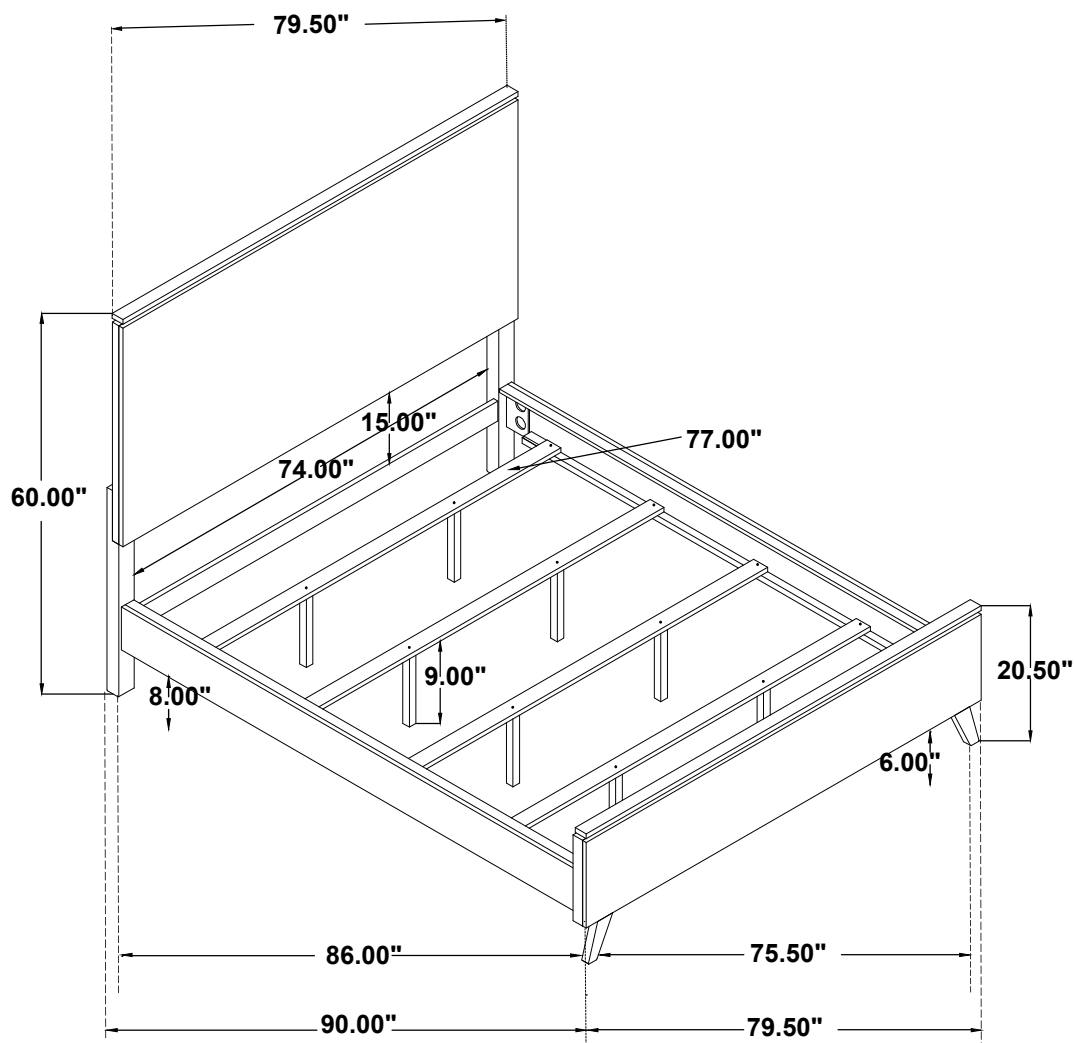

Note: Dimension tolerance $\pm 5\%$