




## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

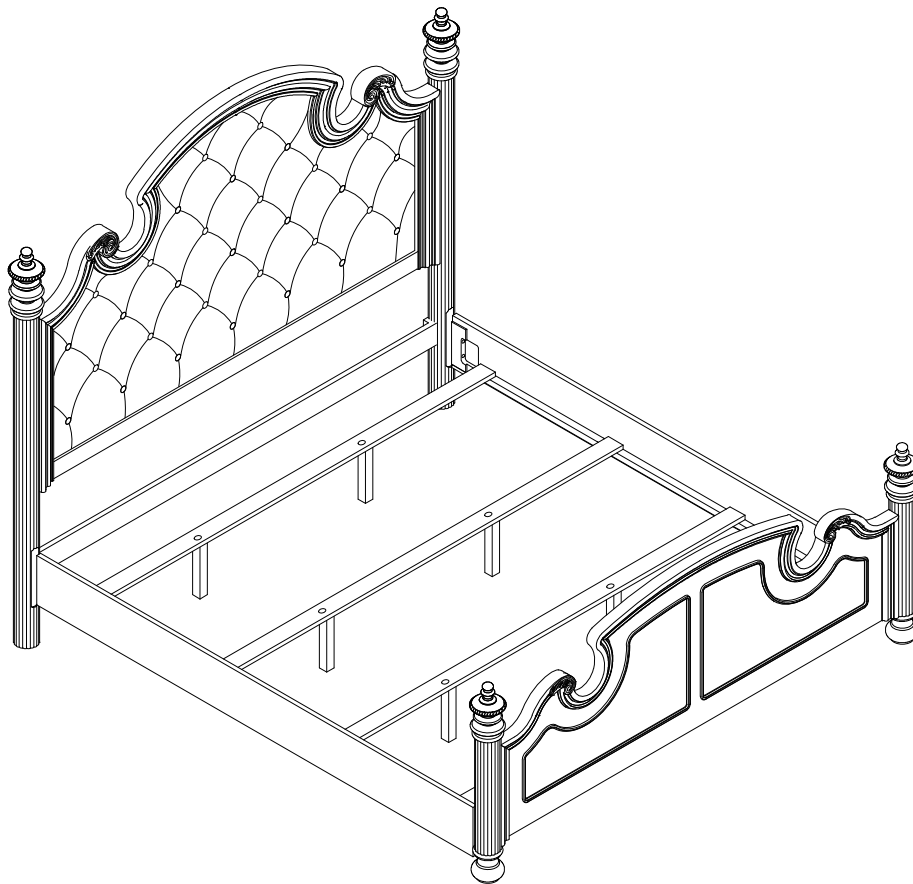

*Fine Furniture for every stage of life*

**224761KE(B1-B3)**  
**Eastern King Bed**

# ITEM: 224761KE(B1-B3)

## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

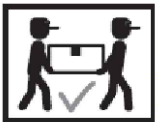


ASSEMBLY TIME

25 MINUTES

## PARTS IDENTIFICATION


### B1 (BOX 1)

A HEADBOARD PANEL

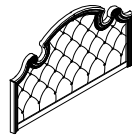

1PC

B HEADBOARD BOTTOM RAIL



1PC

C RIGHT  
HEADBOARD LEG



1PC

D LEFT  
HEADBOARD LEG



1PC

E HEADBOARD FINAL



2PCS

### B2 (BOX 2)

F FOOTBOARD



1PC

G FOOTBOARD FINAL



2PCS

H FOOTBOARD BUN FOOT



2PCS

### B3 (BOX 3)

I BED RAIL



2PCS

J BED SLAT SUPPORT  
WITH LEVELER



8PCS

K BED SLAT




4PCS

HB  
224761KE (B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE



1PC

FB  
224761KE (B2)  
FROM BOX 2  
FOOTBOARD  
COMPLETE

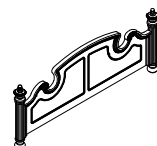

1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 224761KE(B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.











### WARNING!







- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 ( BOX 1) - HARDWARE PACK IS LOCATED IN 224761KE ( B1)

1	<b>BOLT</b> (Ø5/16" x 50MM-RBW)		4PCS	2	<b>LOCK WASHER</b> (Ø5/16" - RBW)		4PCS
3	<b>FLAT WASHER</b> (Ø5/16" - RBW)		4PCS	4	<b>ALLEN WRENCH</b> (5MM- RBW)		1PC
5	<b>THREADED BOLT</b> (Ø5/16" x 70MM - RBW)		4PCS	6	<b>HALF ROUND NUT</b> (Ø5/16" - RBW)		4PCS
7	<b>HEX NUT</b> (Ø5/16" x 12MM- RBW)		4PCS	8	<b>WRENCH</b> (12MM - RBW)		1PC

### Z-B3 ( BOX 3) - HARDWARE PACK IS LOCATED IN 224761KE ( B3)

9	<b>THREADED BOLT</b> (Ø5/16" x 90MM - RBW)		8PCS	10	<b>FLAT HEAD SCREW</b> (Ø4 x 30MM - RBW)		8PCS
11	<b>HEX NUT</b> (Ø5/16" x 12MM- RBW)		8PCS	12	<b>WRENCH</b> (12MM - RBW)		1PC
13	<b>LOCK WASHER</b> (Ø5/16" - RBW)		8PCS	14	<b>FLAT WASHER</b> (Ø5/16" - RBW)		8PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 224761KE(B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 1

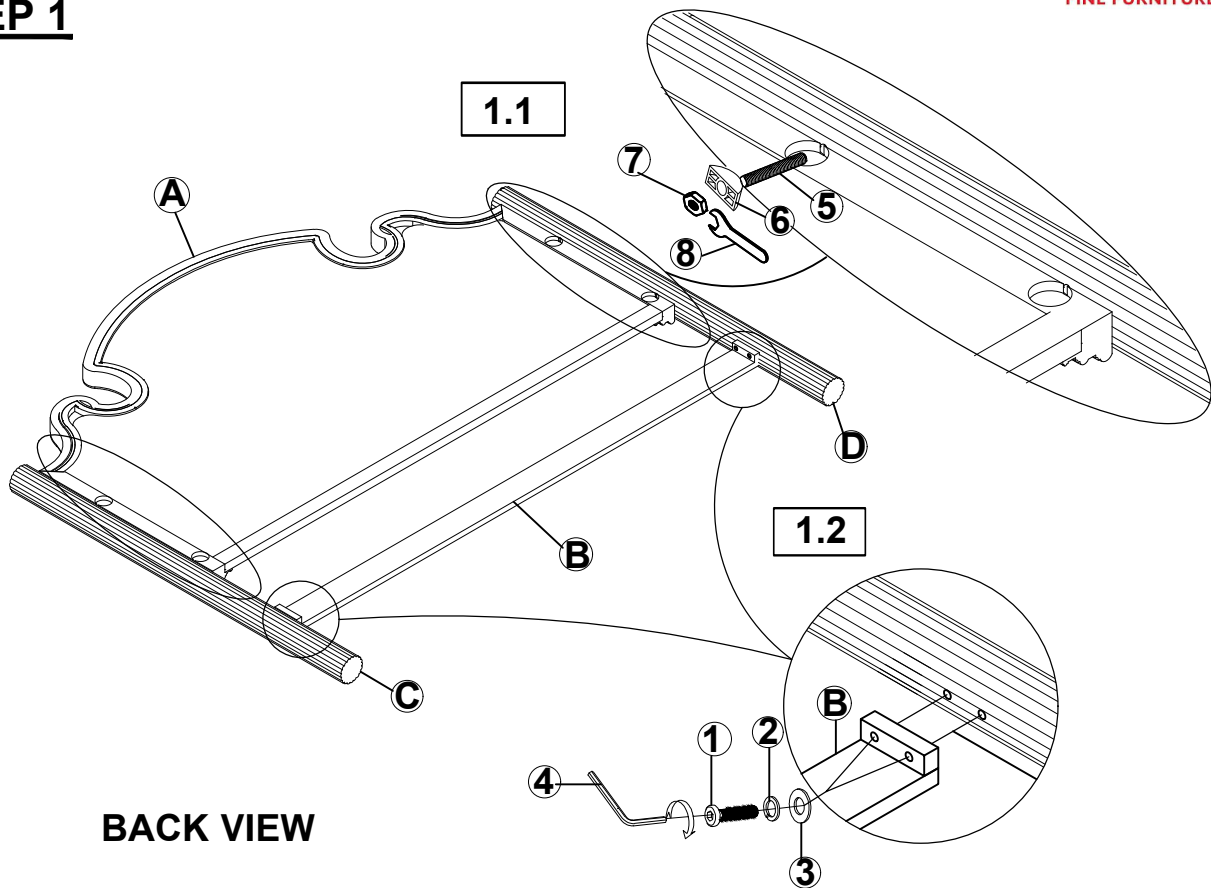


### STEP 2

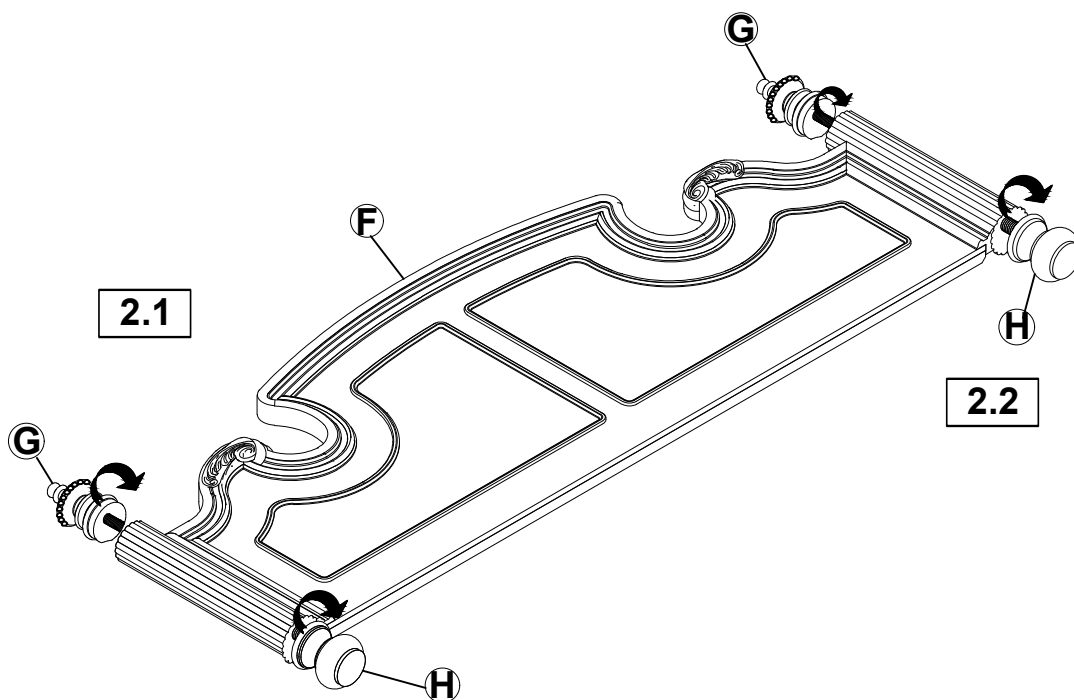



ITEM: **224761KE(B1-B3)**

**ASSEMBLY INSTRUCTIONS**

**STEP 3**

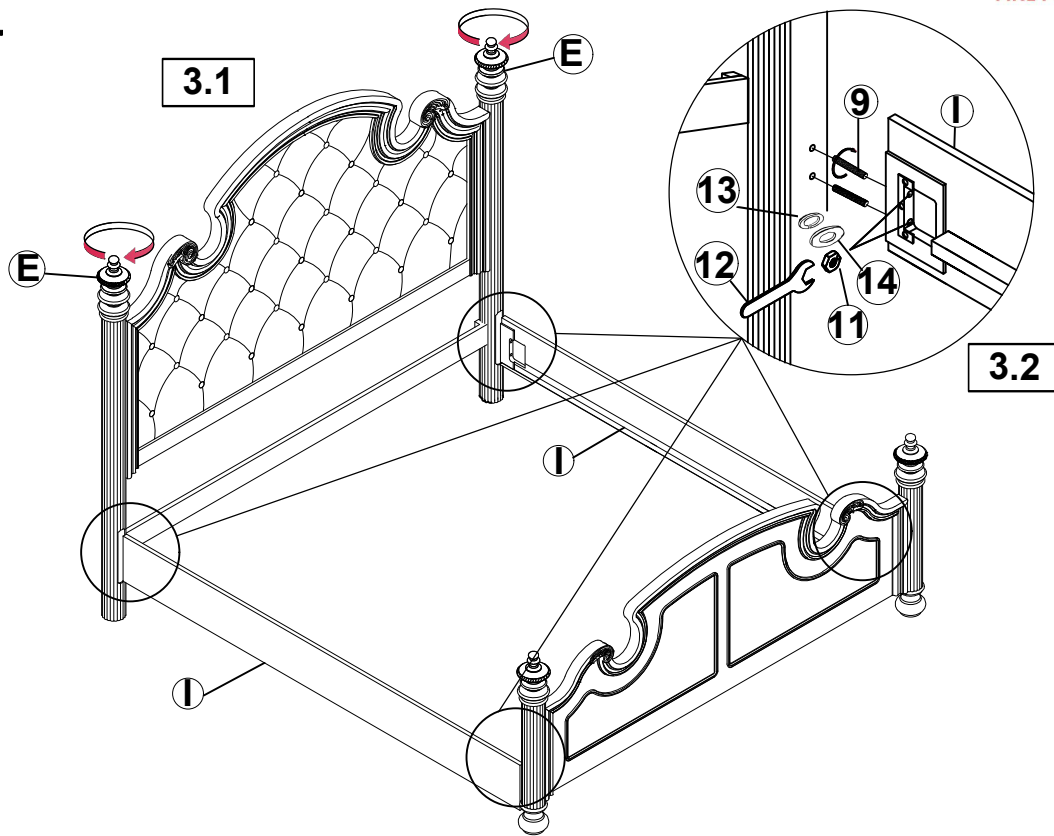


**STEP 4**  
**COMPLETE**

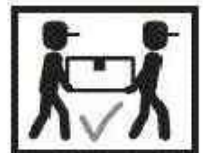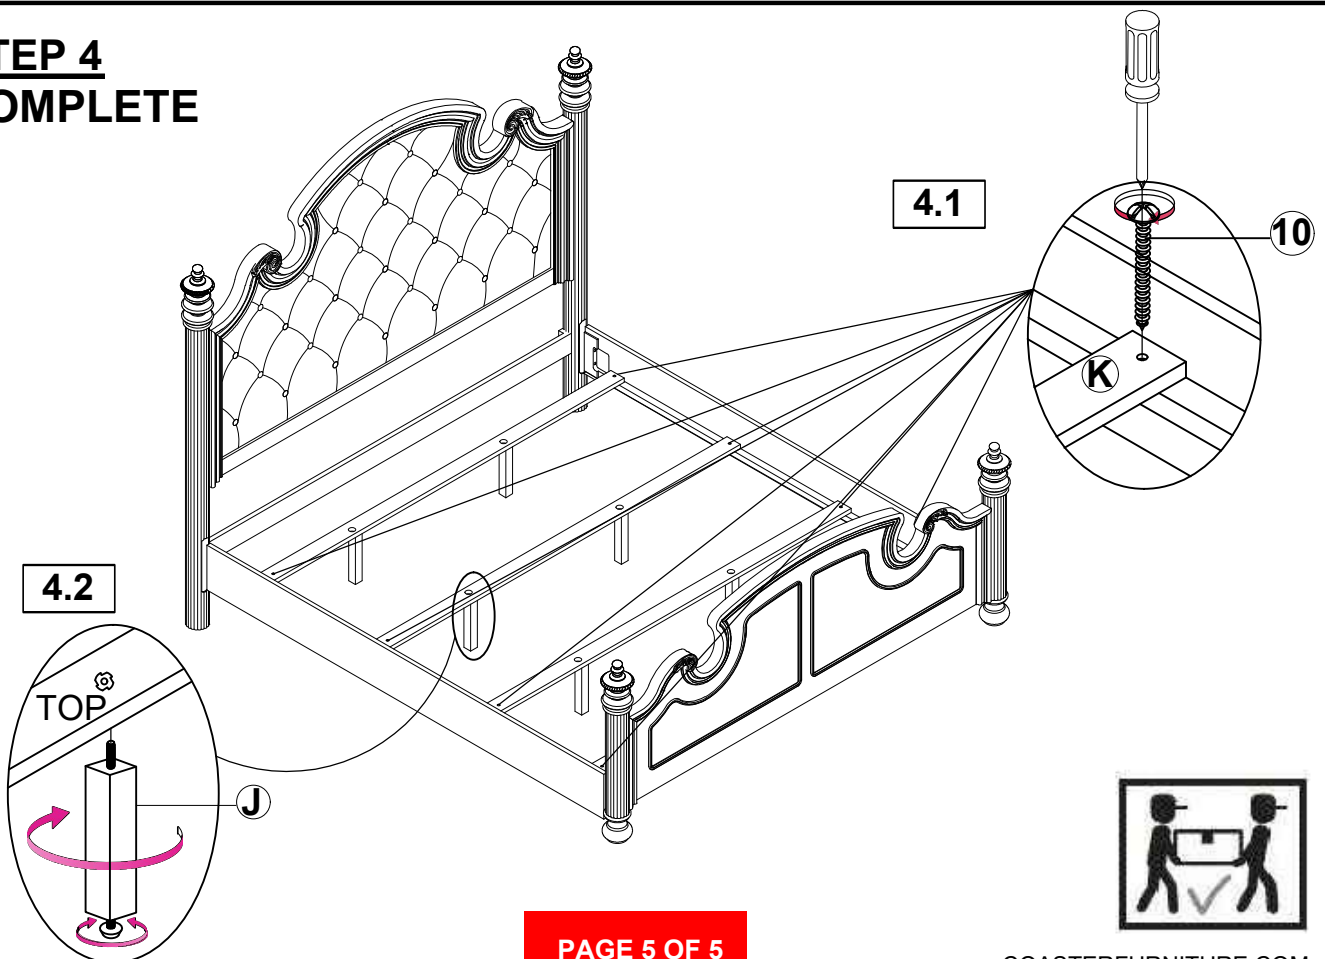

ITEM: **224761KE(B1-B3)**



Inner Size : 81.00"W X 77.00"D

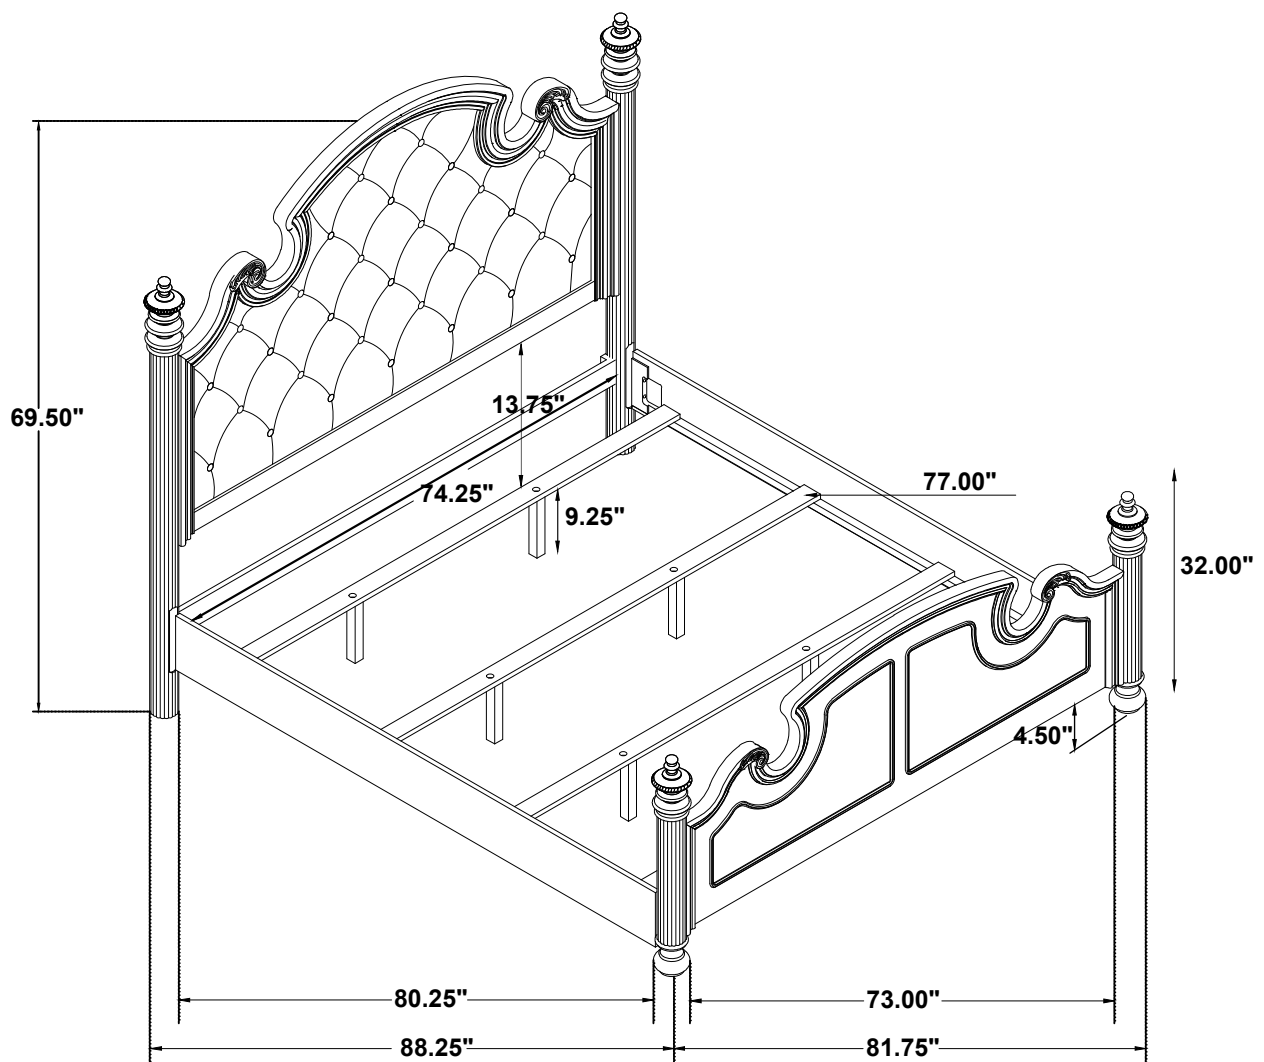

**Note: Dimension tolerance  $\pm 5\%$**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224762**  
**Nightstand**

ITEM: **224762**

## ASSEMBLY INSTRUCTIONS




### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

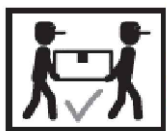

ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

**A NIGHTSTAND**



**1PC**

**B BUN FOOT**




**4PCS**




ITEM: **224762**  
ASSEMBLY INSTRUCTIONS



**STEP 1**

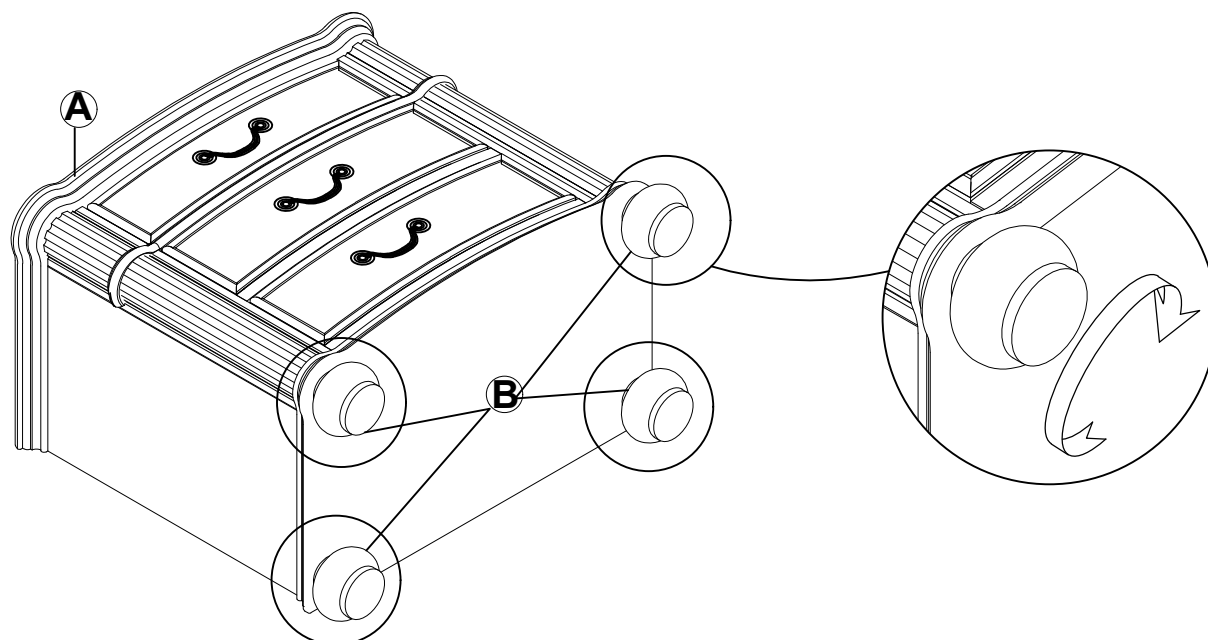

**STEP 2**  
**COMPLETE**


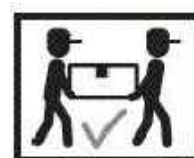


## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

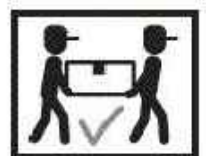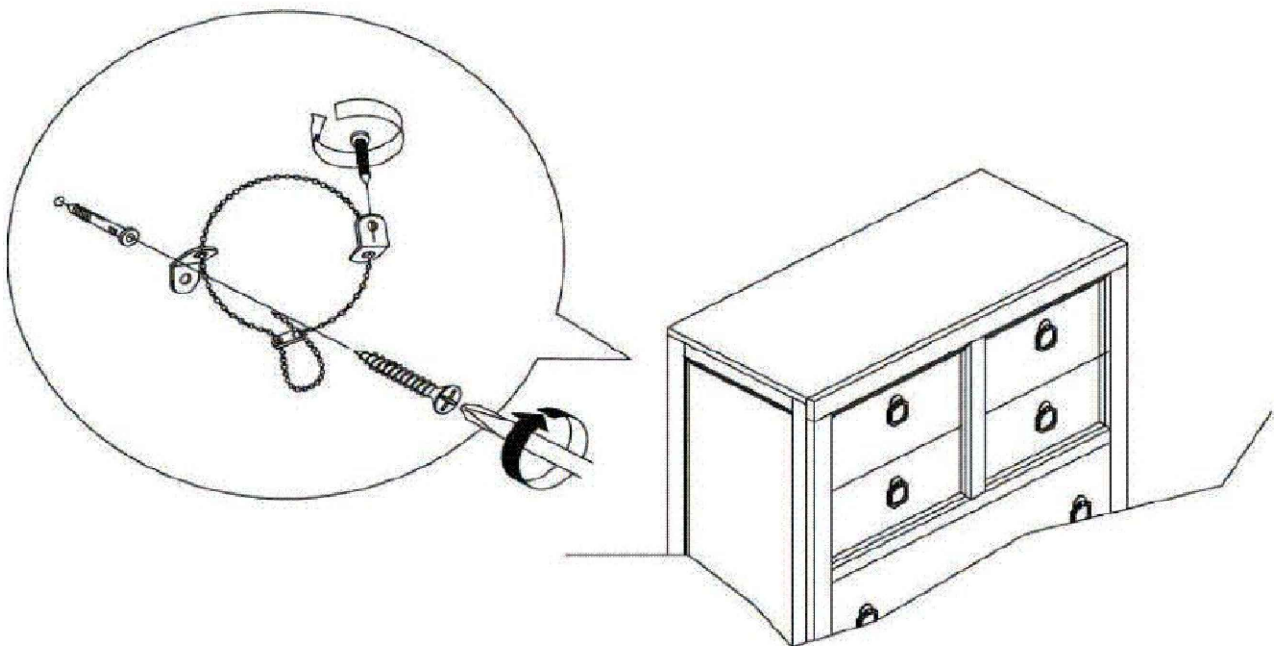


ITEM: **224762**



Inner Size of Drawer A :19.00"W X 12.25"D X 3.00"H X 0.50T

Inner Size of Drawer B :19.00"W X 12.25"D X 3.75"H X 0.50T

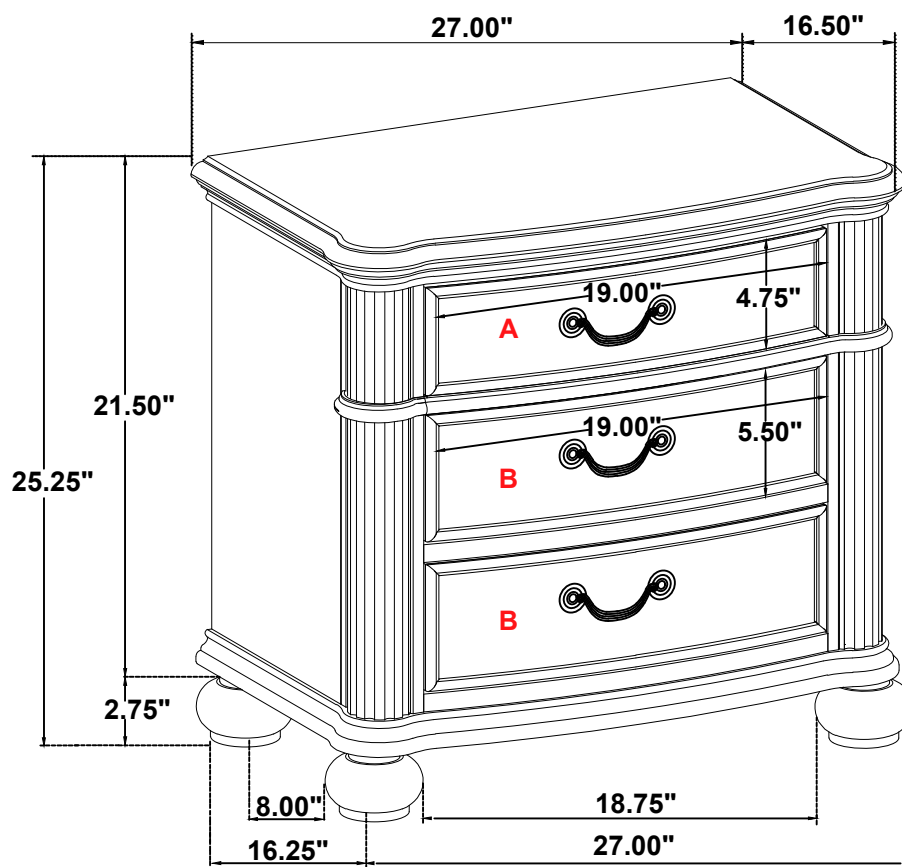

**Note: Dimension tolerance  $\pm 5\%$**

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**224763**  
**Dresser**

ITEM: **224763**

## ASSEMBLY INSTRUCTIONS




### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

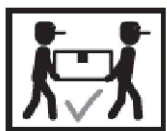


ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

**A DRESSER**

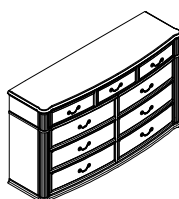


**1PC**

**B BUN FOOT**




**4PCS**

**C CENTER SUPPORT LEG  
WITH LEVELER**




**1PC**

ITEM: **224763**  
**ASSEMBLY INSTRUCTIONS**  
**STEP 1**

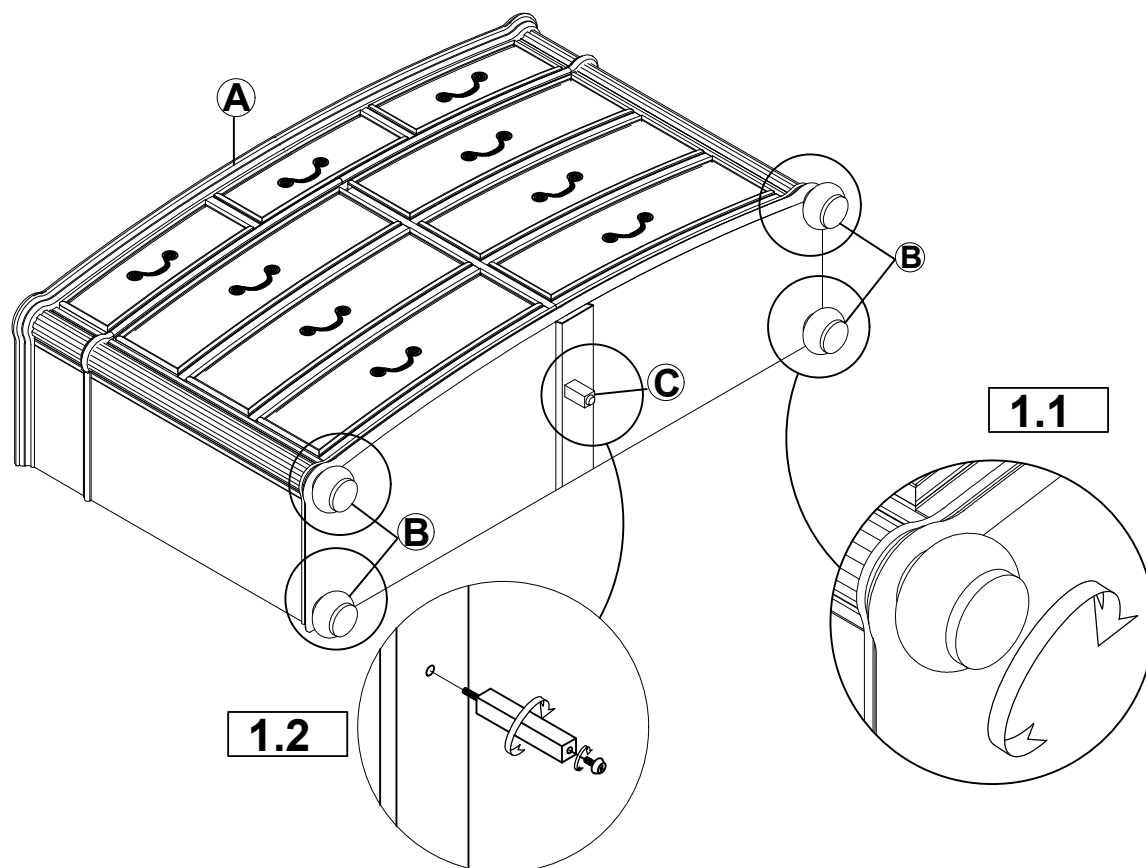

**STEP 2**  
**COMPLETE**


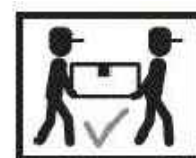


## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

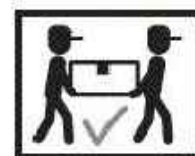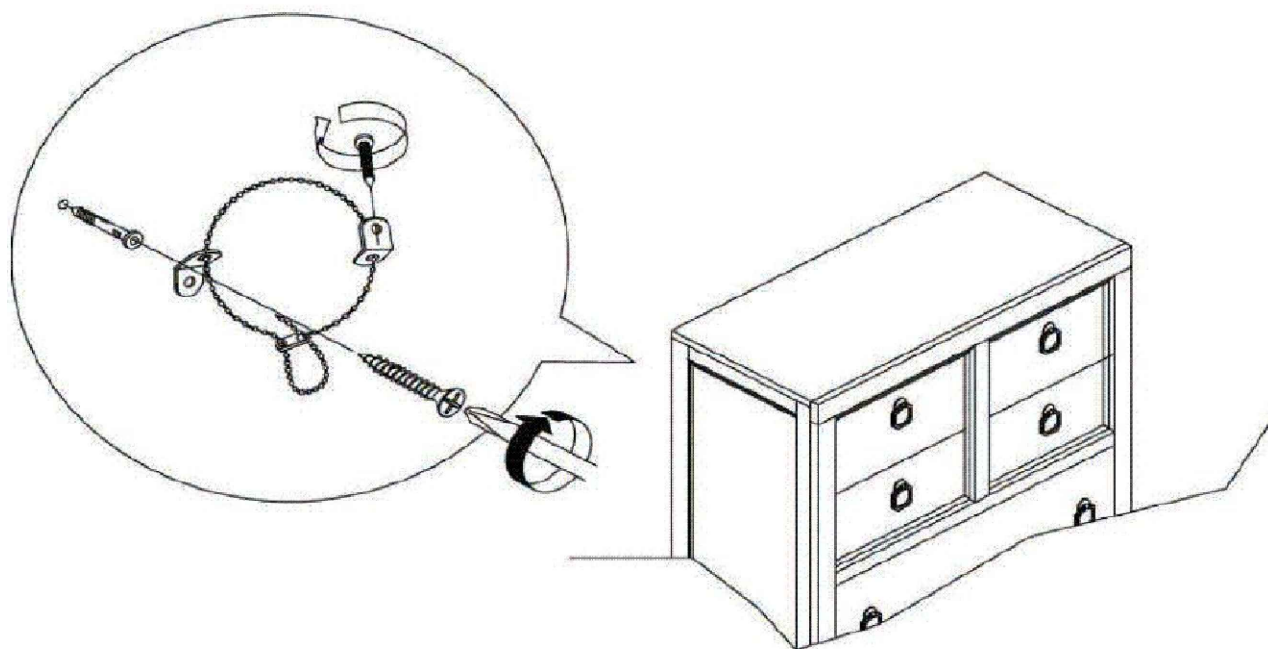


ITEM: **224763**



**Inner Size of Drawer A :16.00"W X 14.00"D X 4.00"H X 0.50T**

**Inner Size of Drawer B :16.00"W X 13.75"D X 4.00"H X 0.50T**

**Inner Size of Drawer C :25.00"W X 14.00"D X 5.50"H X 0.50T**

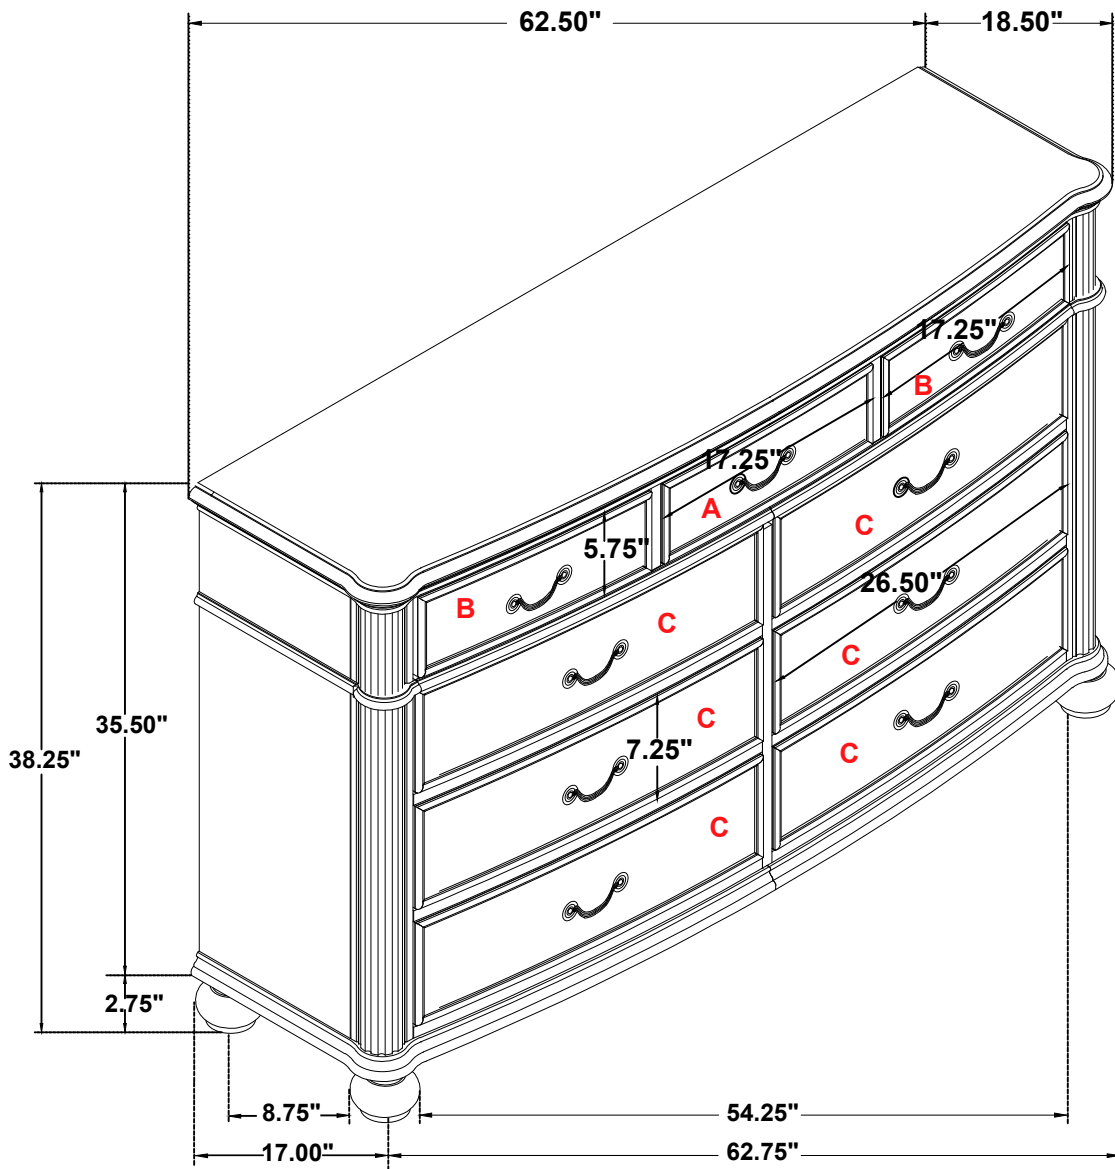

**Note: Dimension tolerance  $\pm 5\%$**



*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for very stage of life*

**224764**  
***Mirror***

ITEM: **224764**

## ASSEMBLY INSTRUCTIONS




### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

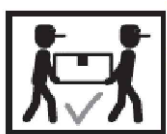

ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

- A **DRESSER**  
FROM BOX ITEM #224763




1PC

- B **MIRROR**

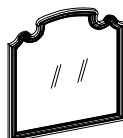

1PC

- C **MIRROR SUPPORT**  
(PACKED WITH DRESSER)



2PCS

## HARDWARE IDENTIFICATION

- 1 **BOLT**  
(Φ1/4" x 40mm - RBW)



6PCS

- 2 **LOCK WASHER**  
(Φ1/4 - RBW)




6PCS

- 3 **FLAT WASHER**  
(Φ1/4- RBW)




6PCS

- 4 **ALLEN WRENCH**  
(4mm - RBW)





1PC


ITEM: **224764**  
ASSEMBLY INSTRUCTIONS  
**STEP 1**

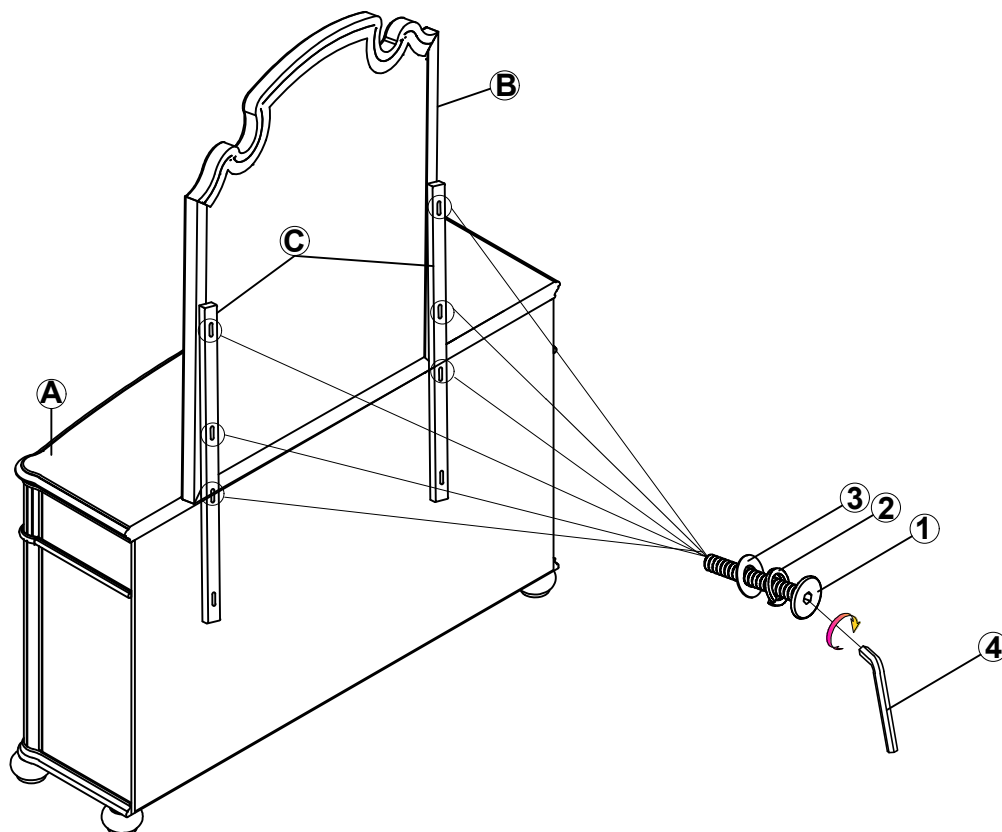

**STEP 2**  
**COMPLETE**

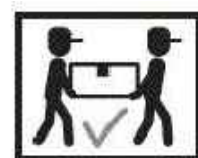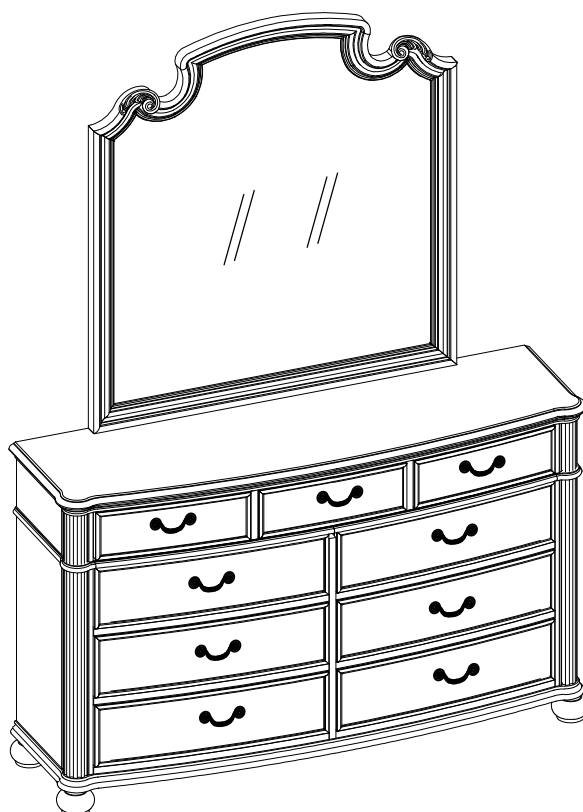

ITEM: **224764**

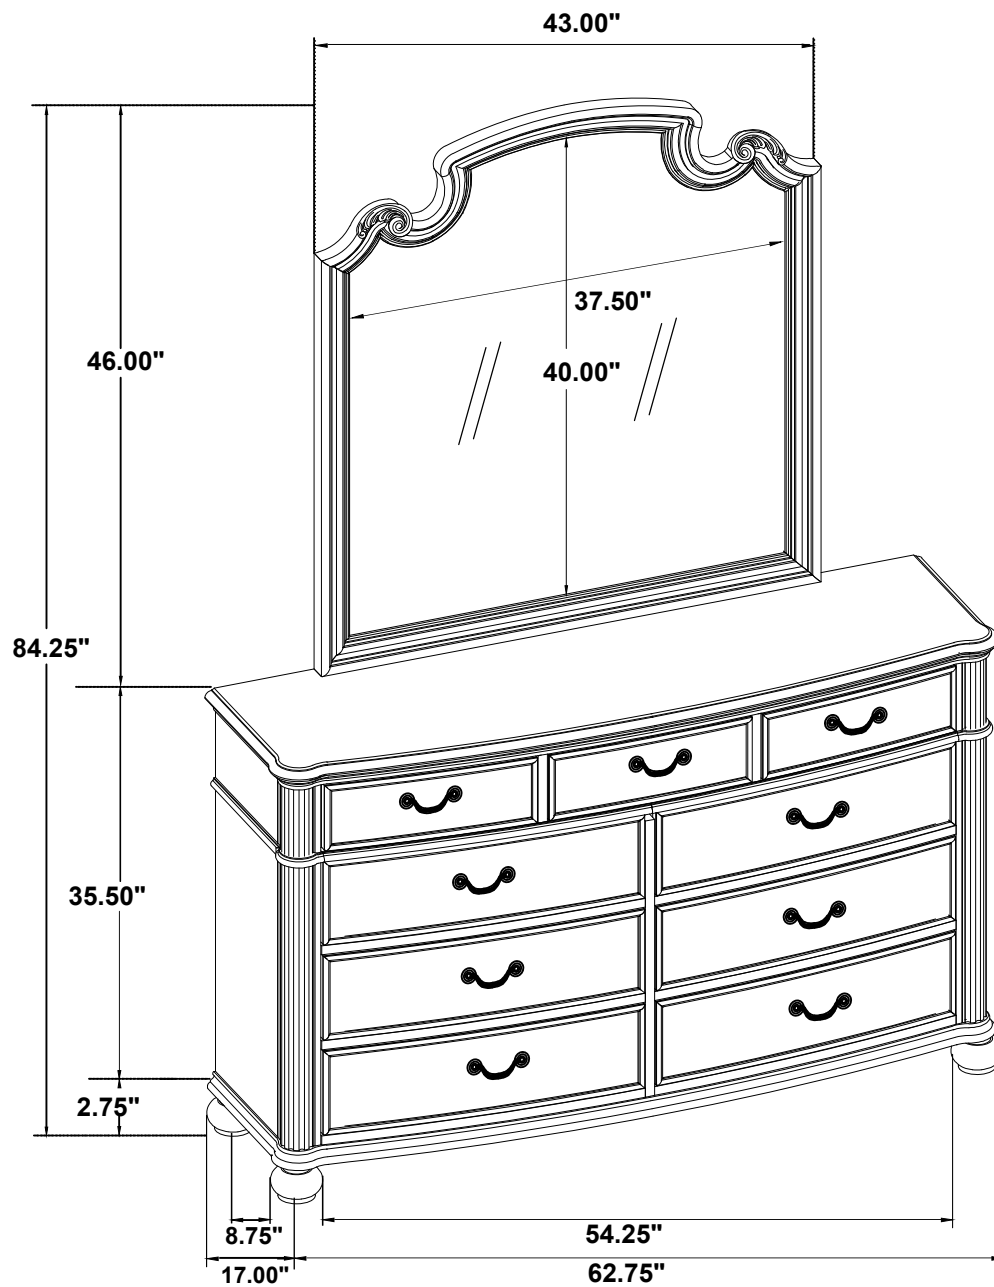

**Note: Dimension tolerance  $\pm 5\%$**

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**224765**  
**Chest**

ITEM: **224765**

## ASSEMBLY INSTRUCTIONS




### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



#### WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

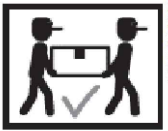


ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A CHEST

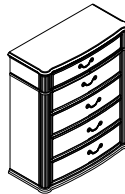


1PC

B BUN FOOT



4PCS

ITEM: **224765**  
ASSEMBLY INSTRUCTIONS  
**STEP 1**

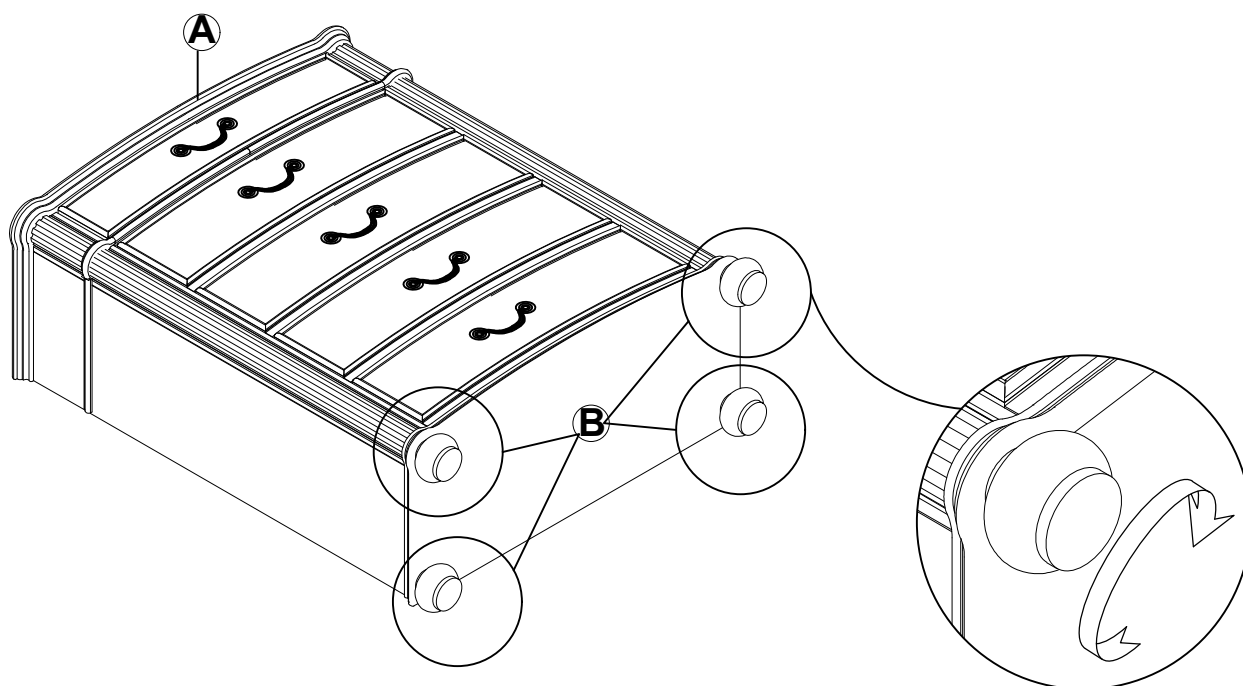

**STEP 2**  
**COMPLETE**





## ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

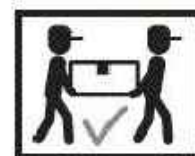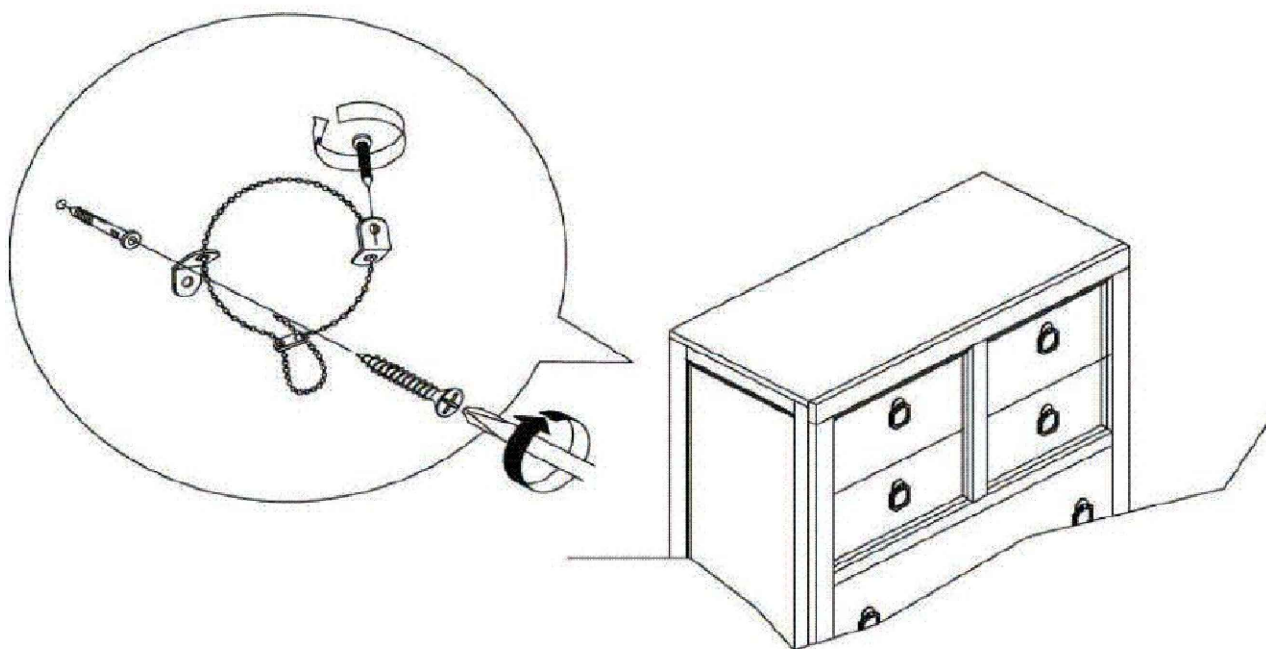




ITEM: **224765**



Inner Size of Drawer A :29.50"W X 13.00"D X 4.00"H X 0.50T

Inner Size of Drawer B :29.50"W X 13.00"D X 6.00"H X 0.50T

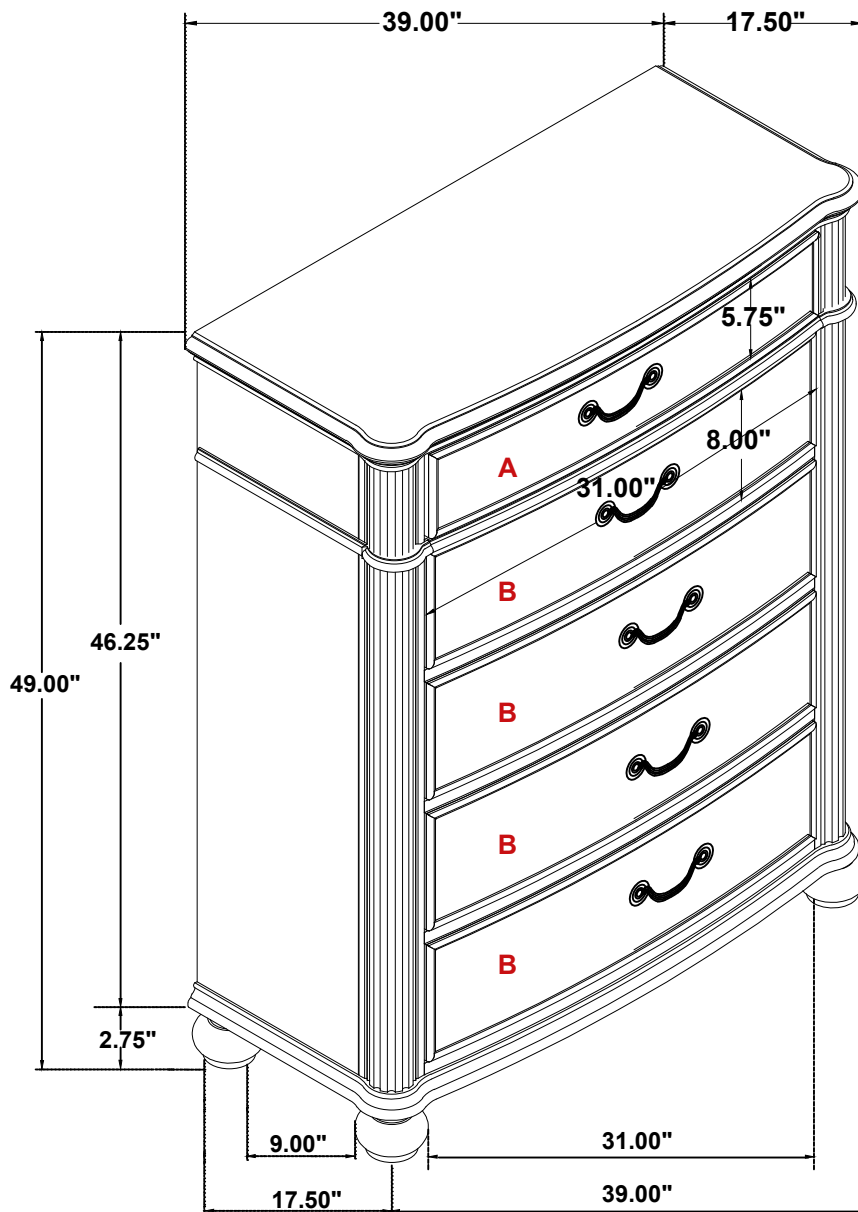

**Note: Dimension tolerance  $\pm 5\%$**