




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

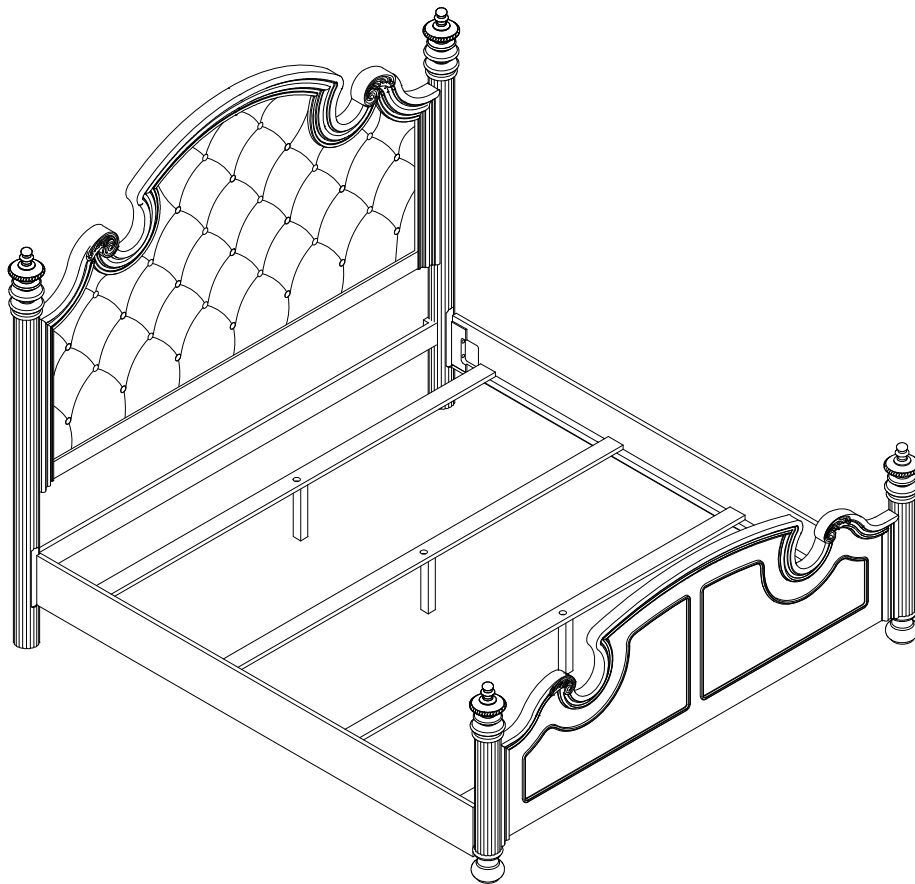

Fine Furniture for every stage of life

224761Q(B1-B3)
Queen Bed

ITEM: 224761Q(B1-B3)

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

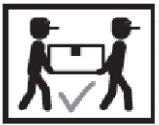


ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD PANEL

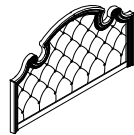

1PC

B HEADBOARD BOTTOM RAIL



1PC

C RIGHT
HEADBOARD LEG



1PC

D LEFT
HEADBOARD LEG



1PC

E HEADBOARD FINAL



2PCS

B2 (BOX 2)

F FOOTBOARD



1PC

G FOOTBOARD FINAL



2PCS

H FOOTBOARD BUN FOOT



2PCS

B3 (BOX 3)

I BED RAIL



2PCS

J BED SLAT SUPPORT
WITH LEVELER



4PCS

K BED SLAT




4PCS

HB
224761Q (B1)
FROM BOX 1
HEADBOARD
COMPLETE



1PC

FB
224761Q (B2)
FROM BOX 2
FOOTBOARD
COMPLETE

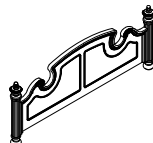

1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 224761Q(B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!


- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224761Q (B1)

1	BOLT (Ø5/16" x 50MM-RBW)		4PCS	2	LOCK WASHER (Ø5/16" - RBW)		4PCS
3	FLAT WASHER (Ø5/16" - RBW)		4PCS	4	ALLEN WRENCH (5MM- RBW)		1PC
5	THREADED BOLT (Ø5/16" x 70MM - RBW)		4PCS	6	HALF ROUND NUT (Ø5/16" - RBW)		4PCS
7	HEX NUT (Ø5/16" x 12MM- RBW)		4PCS	8	WRENCH (12MM - RBW)		1PC

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224761Q(B3)

9	THREADED BOLT (Ø5/16" x 90MM - RBW)		8PCS	10	FLAT HEAD SCREW (Ø4 x 30MM - RBW)		8PCS
11	HEX NUT (Ø5/16" x 12MM- RBW)		8PCS	12	WRENCH (12MM - RBW)		1PC
13	LOCK WASHER (Ø5/16" - RBW)		8PCS	14	FLAT WASHER (Ø5/16" - RBW)		8PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 224761Q(B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 1

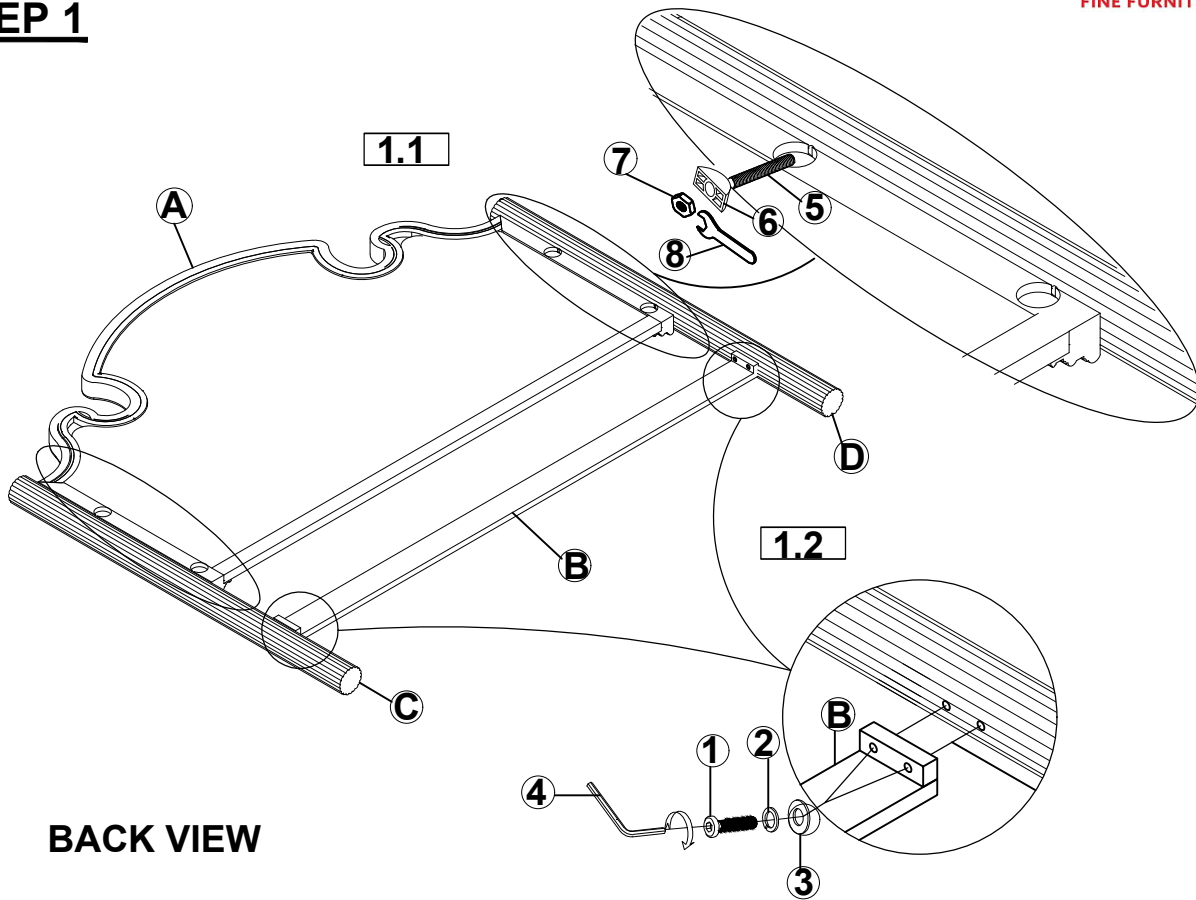


STEP 2

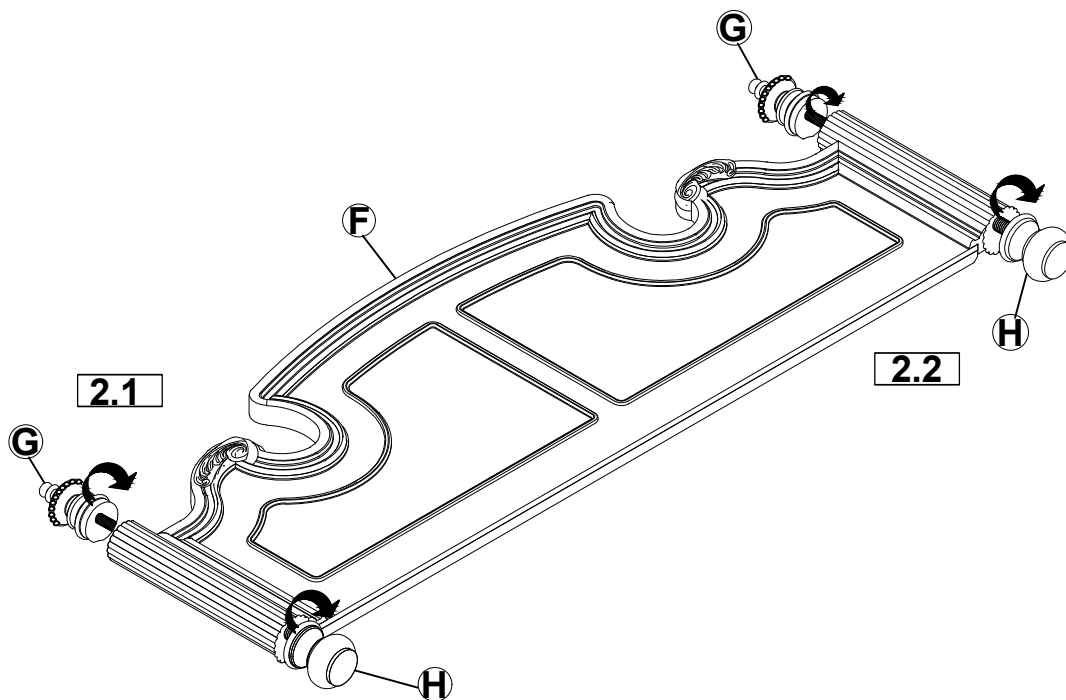


ITEM: **224761Q(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

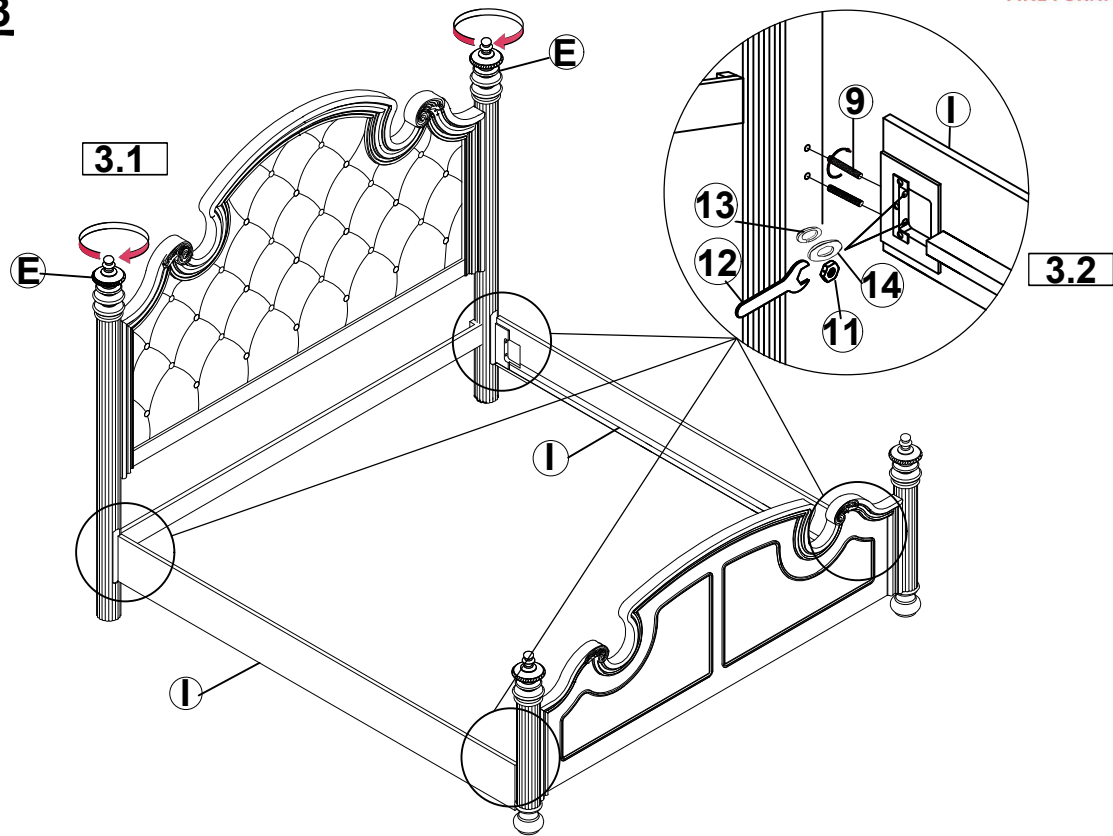


STEP 4
COMPLETE

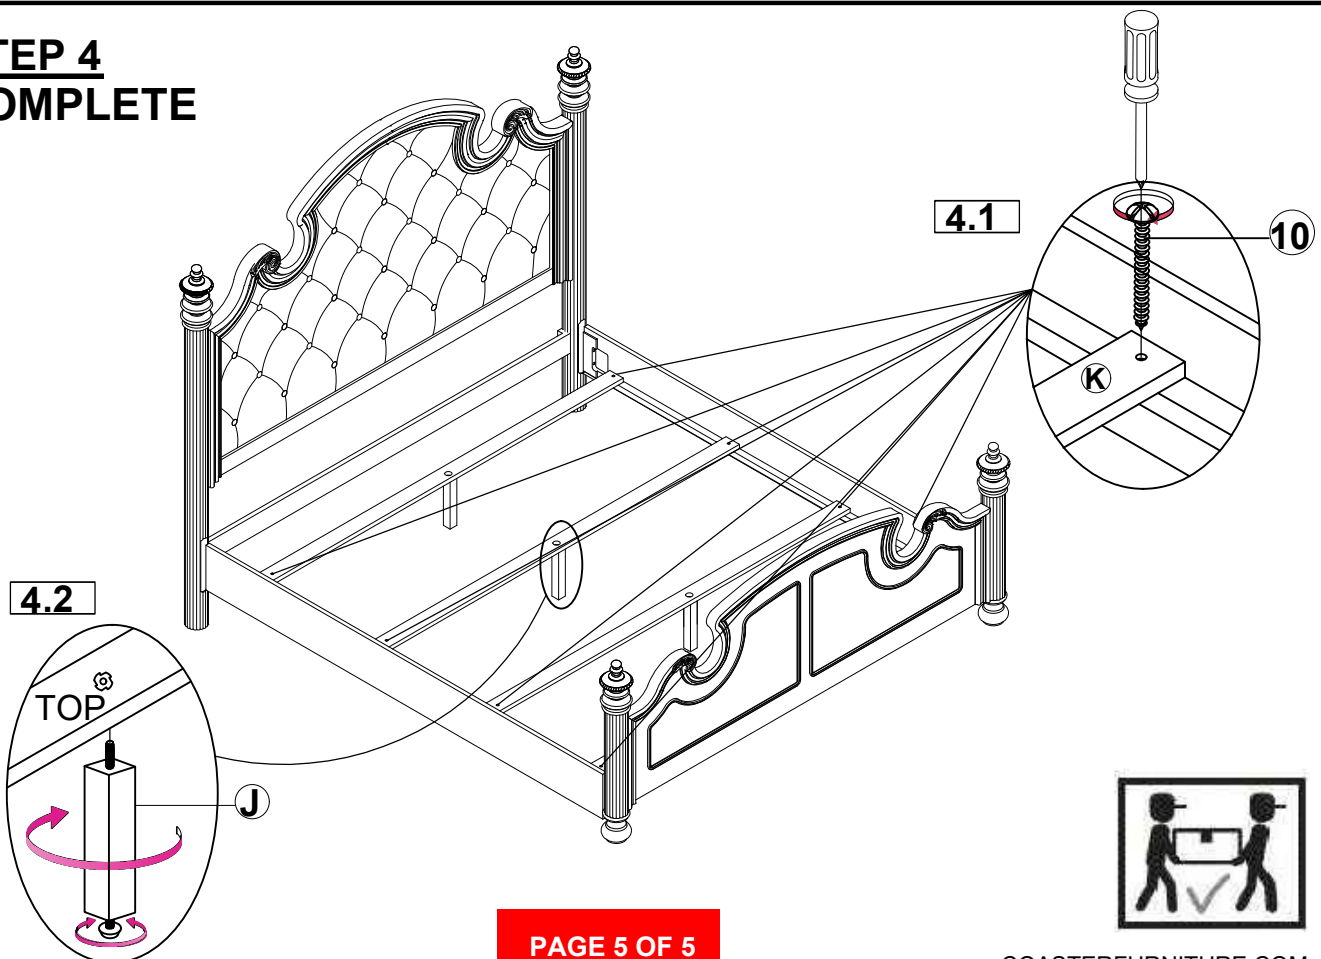

ITEM: **224761Q(B1-B3)**



Inner Size : 81.00"W X 77.00"D

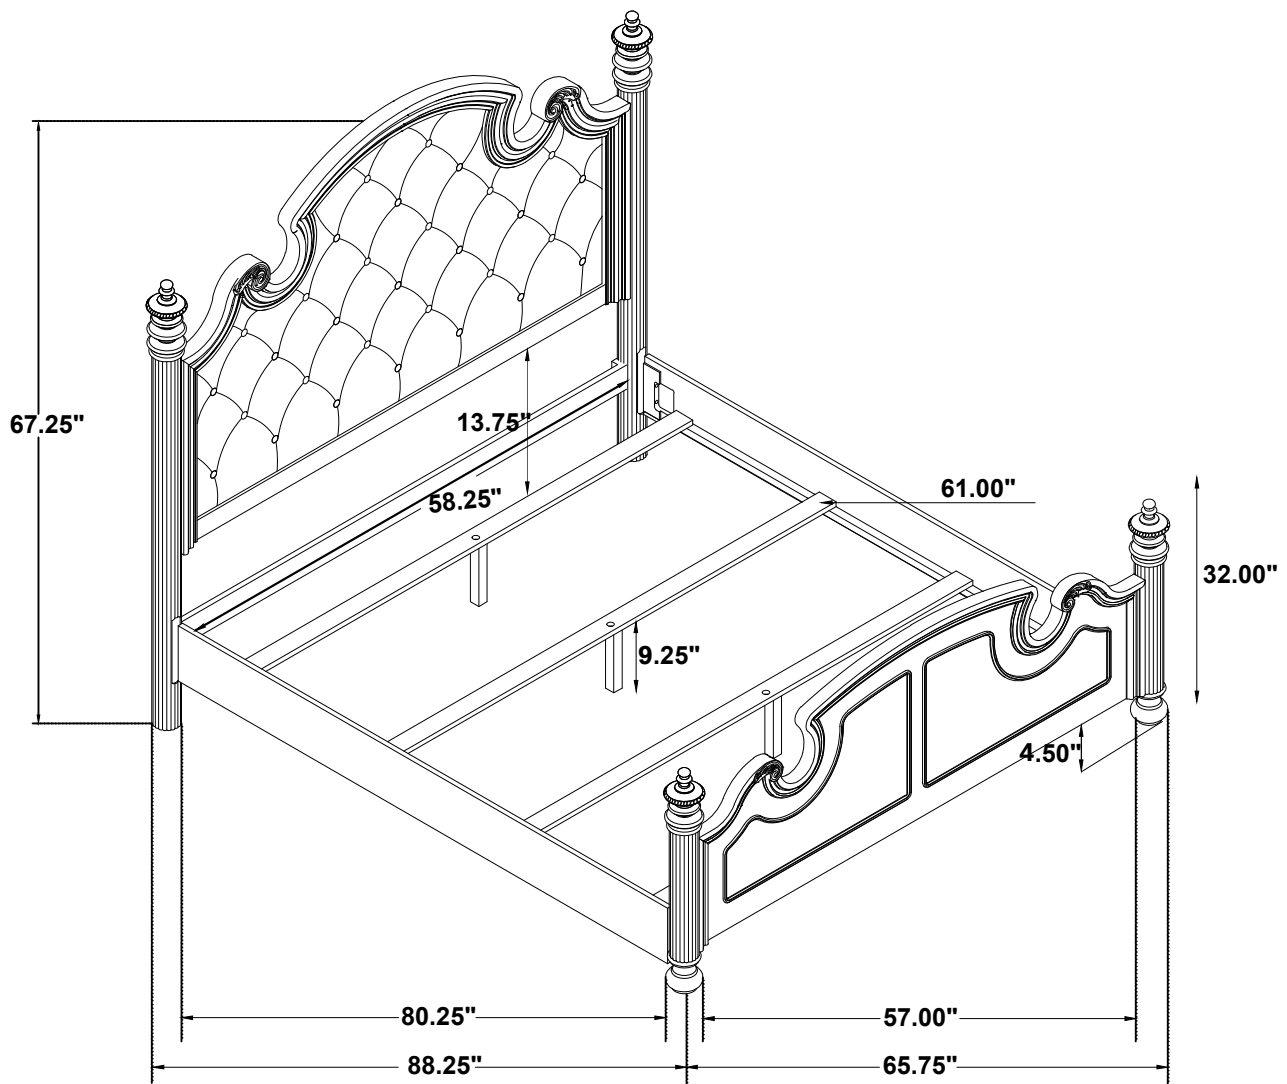

Note: Dimension tolerance $\pm 5\%$



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224762
Nightstand

ITEM: **224762**

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

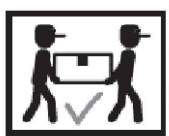

ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND



1PC

B BUN FOOT




4PCS


ITEM: **224762**
ASSEMBLY INSTRUCTIONS



STEP 1

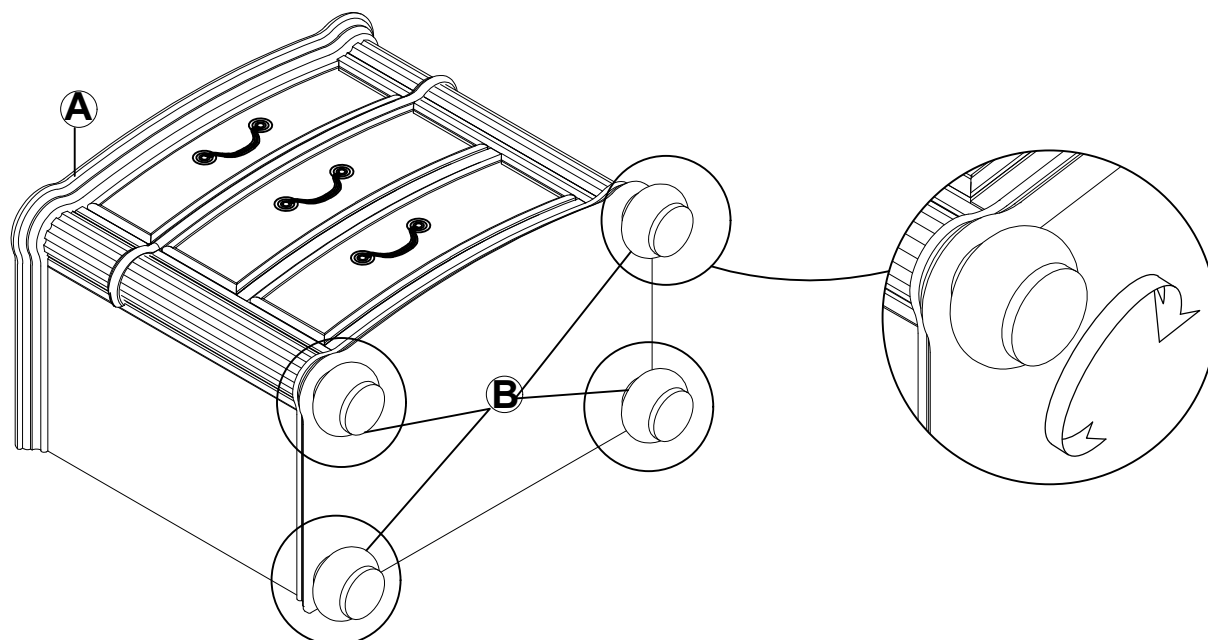

STEP 2
COMPLETE


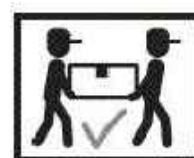


ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

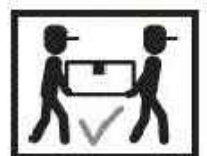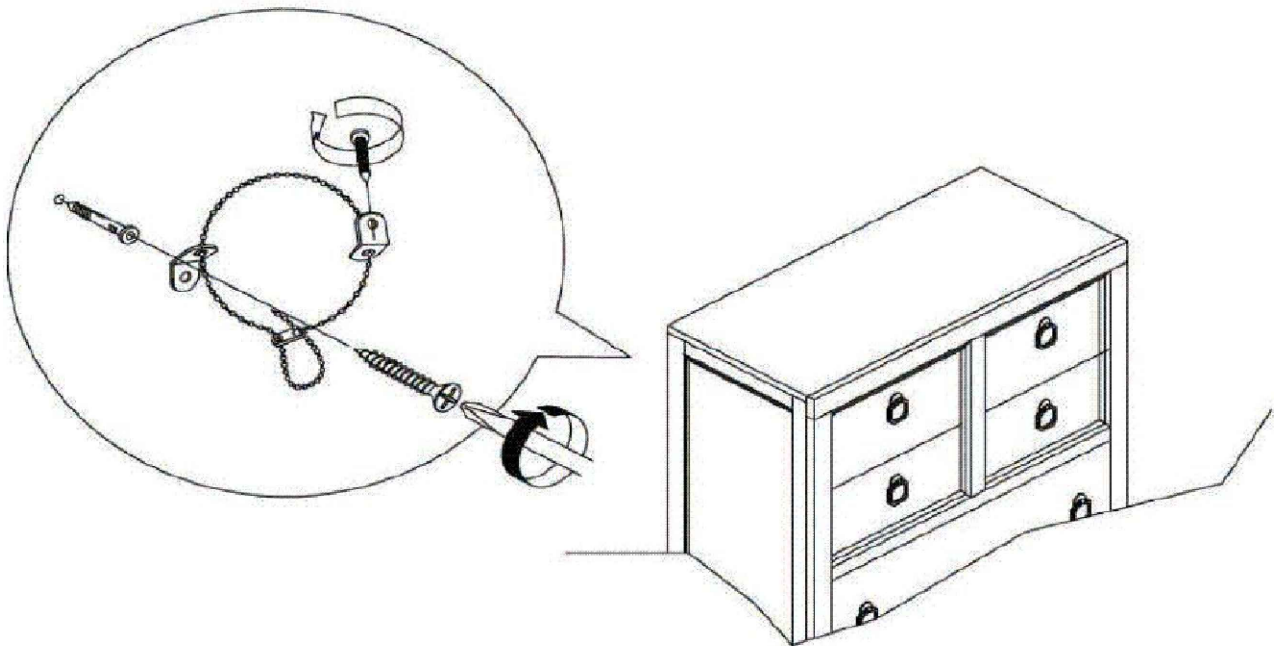


ITEM: **224762**



Inner Size of Drawer A :19.00"W X 12.25"D X 3.00"H X 0.50T

Inner Size of Drawer B :19.00"W X 12.25"D X 3.75"H X 0.50T

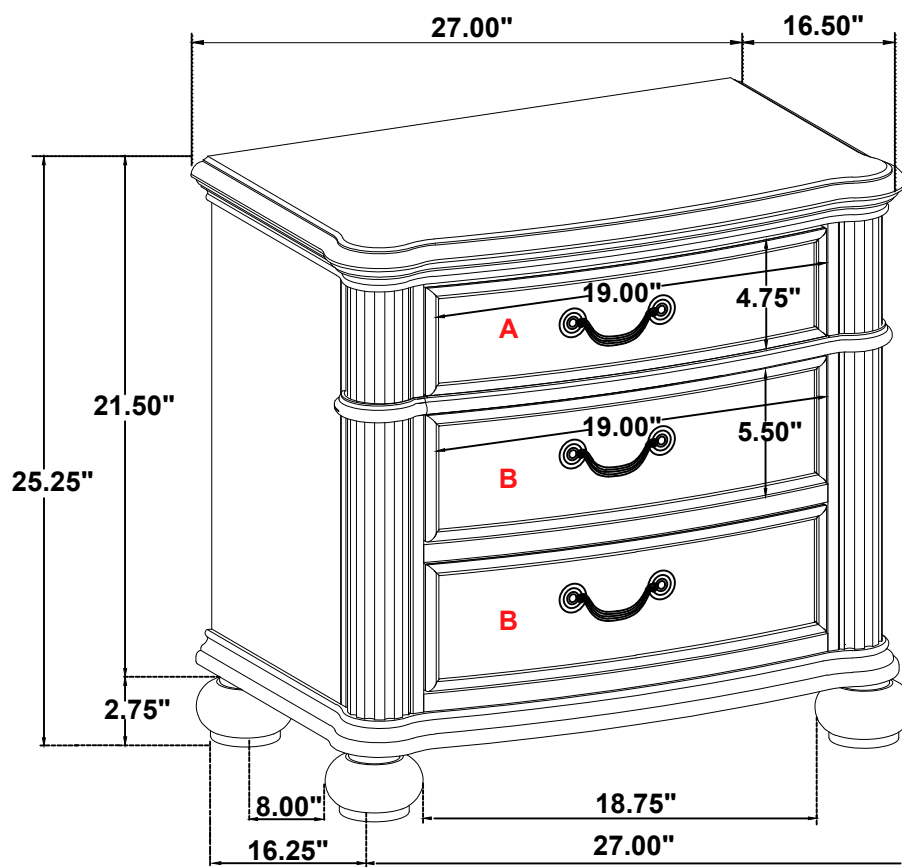

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

224763
Dresser

ITEM: **224763**

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

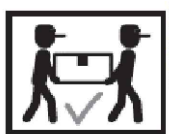


ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER

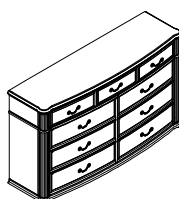


1PC

B BUN FOOT




4PCS

**C CENTER SUPPORT LEG
WITH LEVELER**




1PC

ITEM: **224763**
ASSEMBLY INSTRUCTIONS
STEP 1

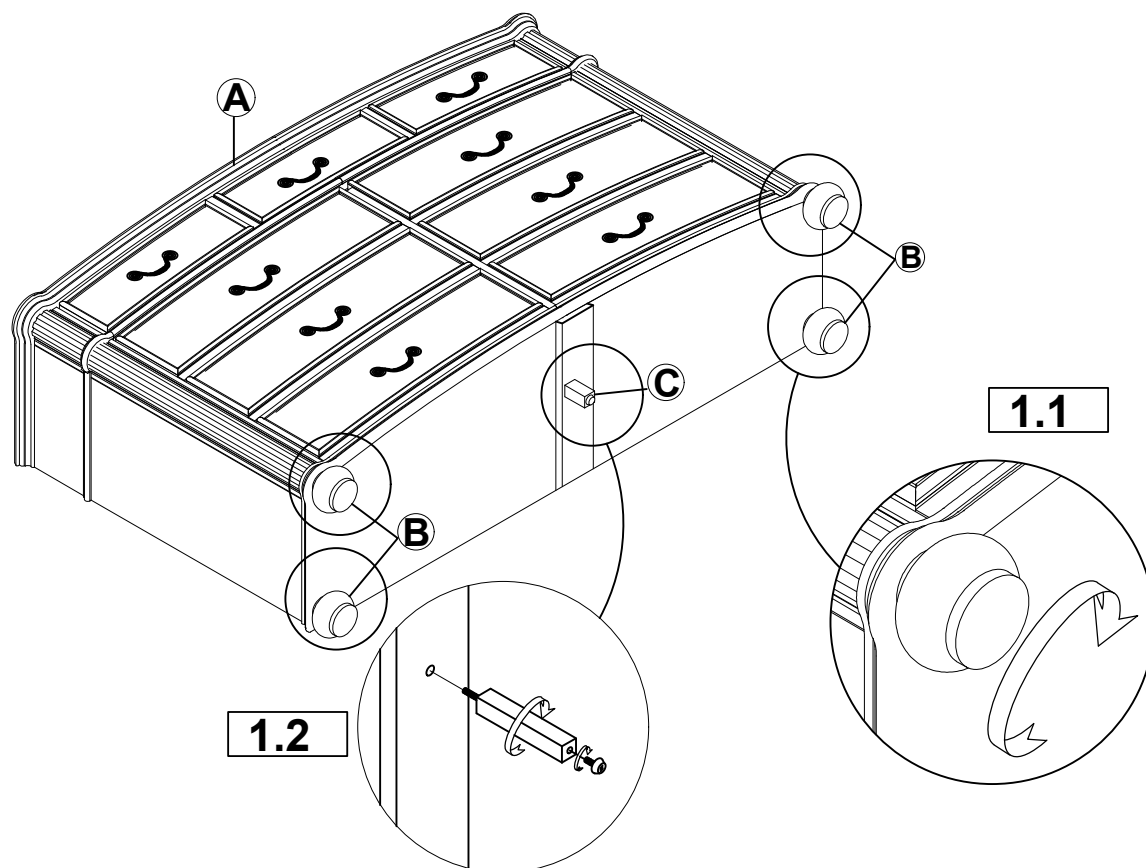

STEP 2
COMPLETE


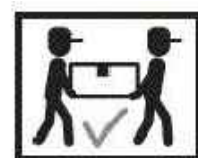


ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

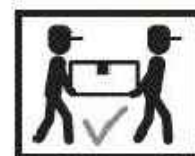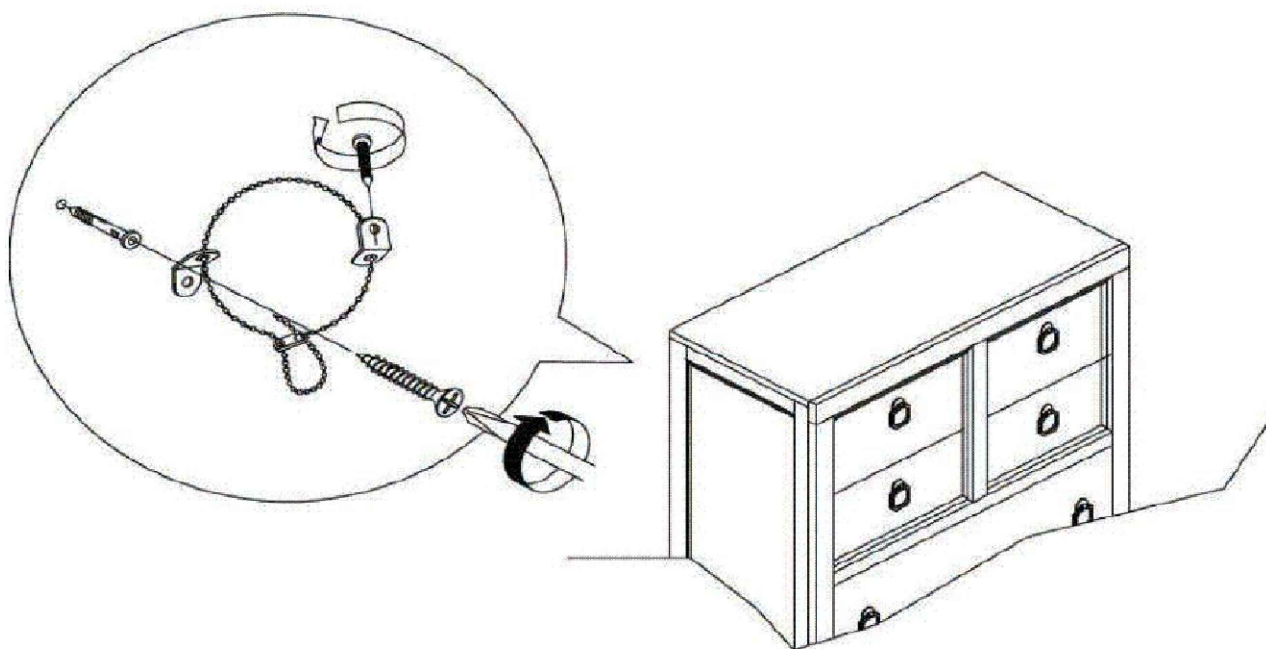


ITEM: **224763**



Inner Size of Drawer A :16.00"W X 14.00"D X 4.00"H X 0.50T

Inner Size of Drawer B :16.00"W X 13.75"D X 4.00"H X 0.50T

Inner Size of Drawer C :25.00"W X 14.00"D X 5.50"H X 0.50T

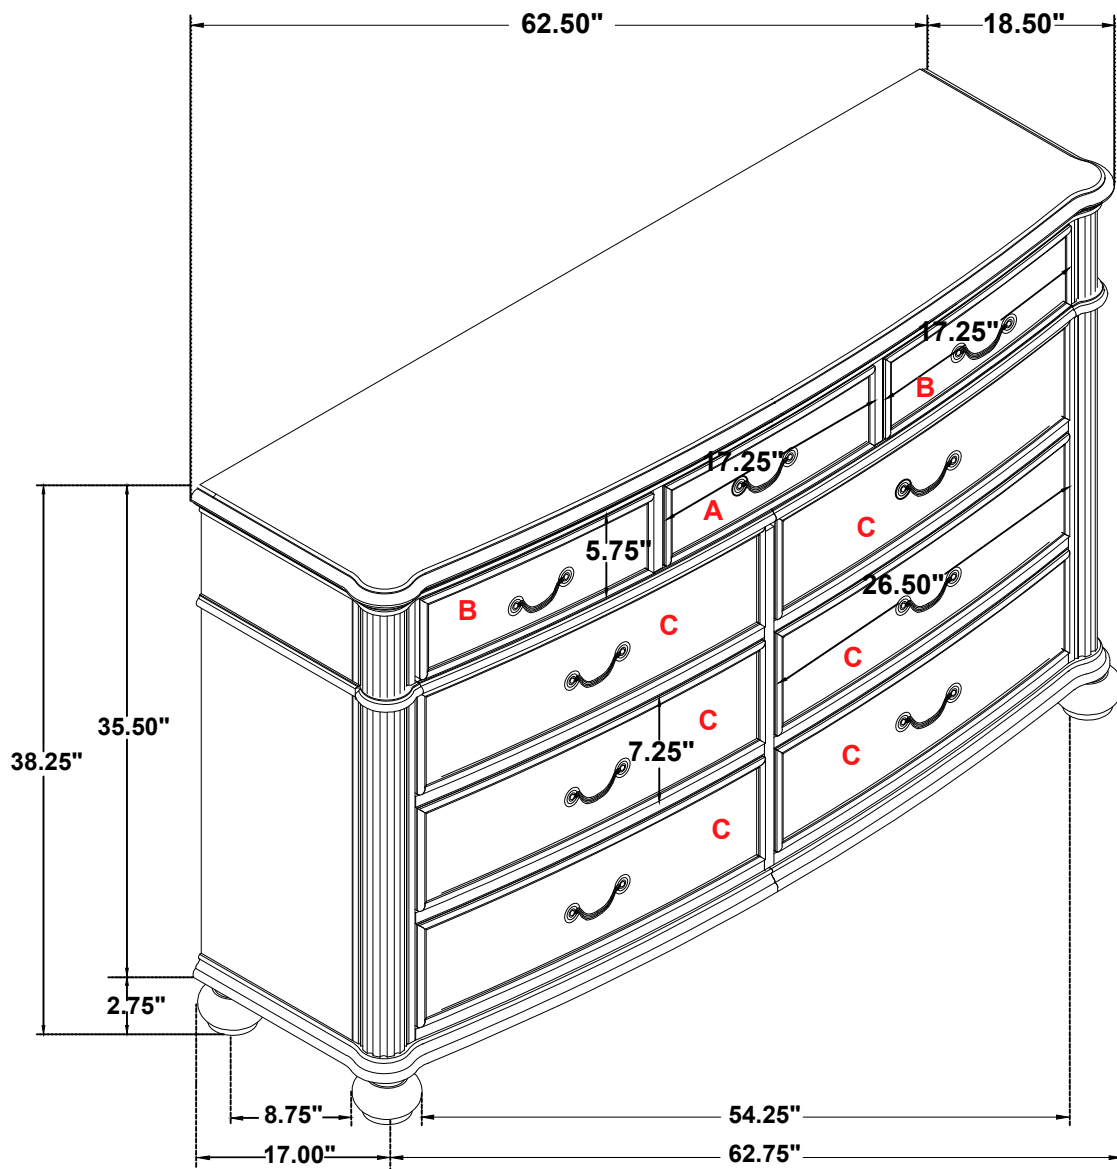

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for very stage of life

224764
Mirror

ITEM: **224764**

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

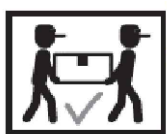

ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

- A DRESSER**
FROM BOX ITEM #224763




1PC

- B MIRROR**

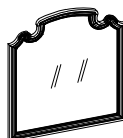

1PC

- C MIRROR SUPPORT**
(PACKED WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

- 1 BOLT**
(Φ1/4" x 40mm - RBW)



6PCS

- 2 LOCK WASHER**
(Φ1/4 - RBW)




6PCS

- 3 FLAT WASHER**
(Φ1/4- RBW)




6PCS

- 4 ALLEN WRENCH**
(4mm - RBW)





1PC


ITEM: **224764**
ASSEMBLY INSTRUCTIONS
STEP 1

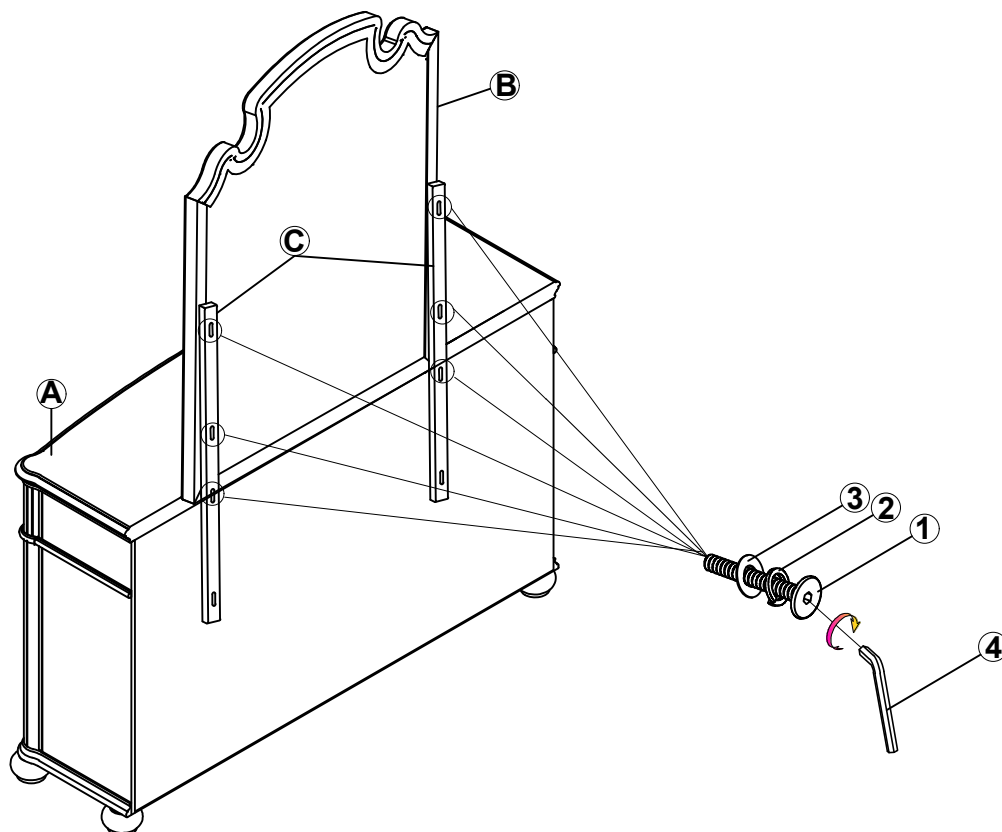

STEP 2
COMPLETE

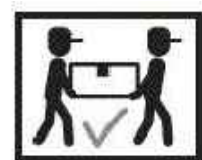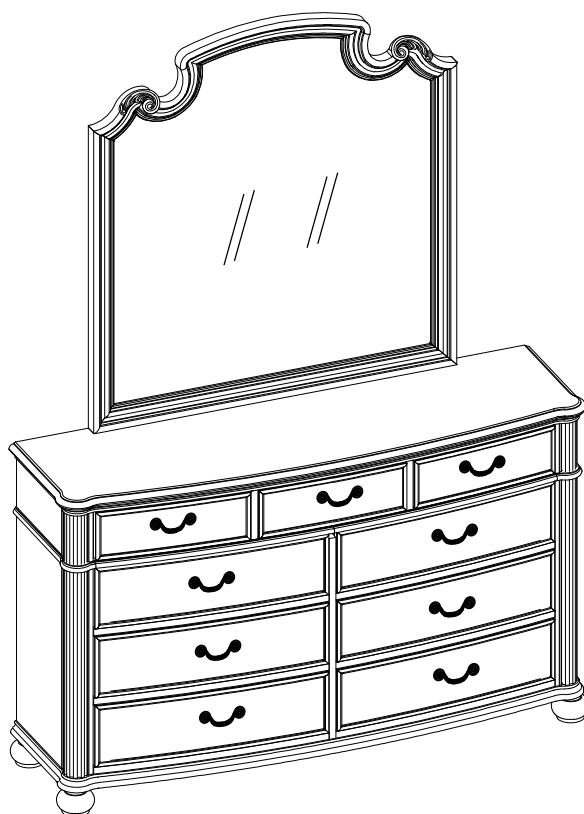

ITEM: **224764**

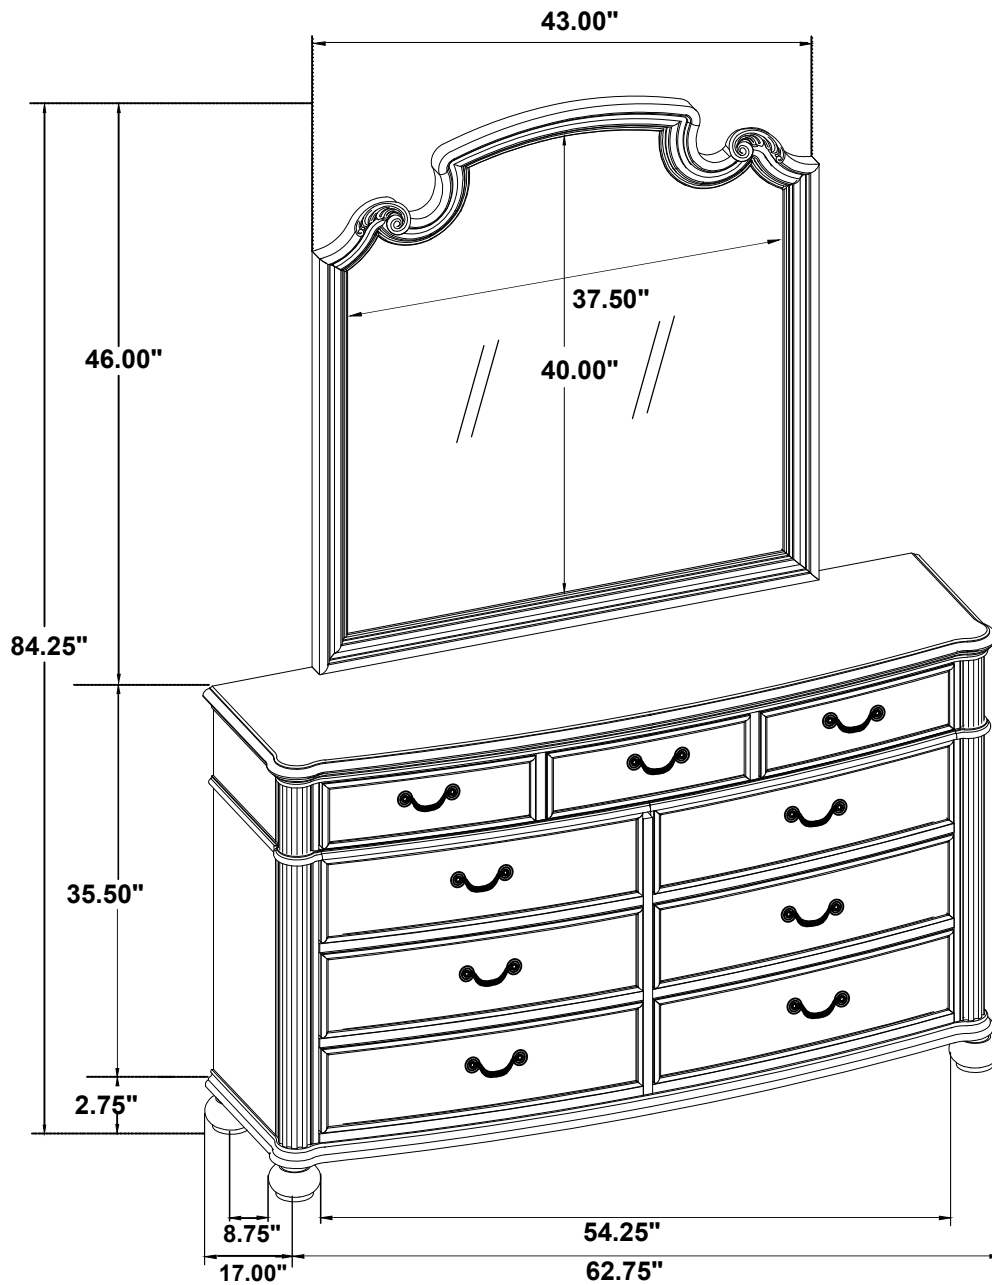

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

224765
Chest

ITEM: **224765**

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

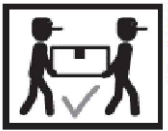


ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A **CHEST**

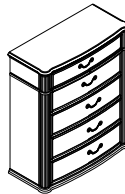


1PC

B **BUN FOOT**




4PCS

ITEM: **224765**
ASSEMBLY INSTRUCTIONS
STEP 1

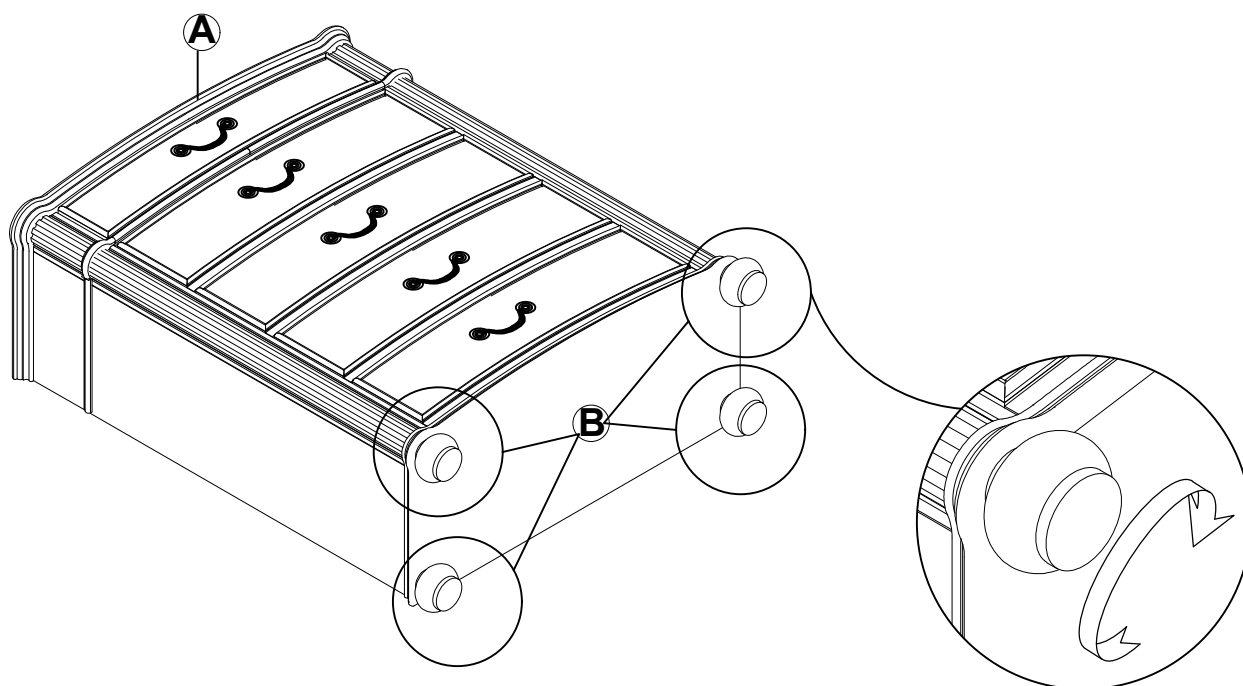

STEP 2
COMPLETE


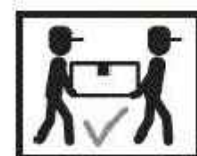


ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

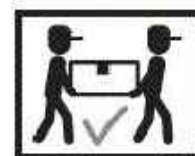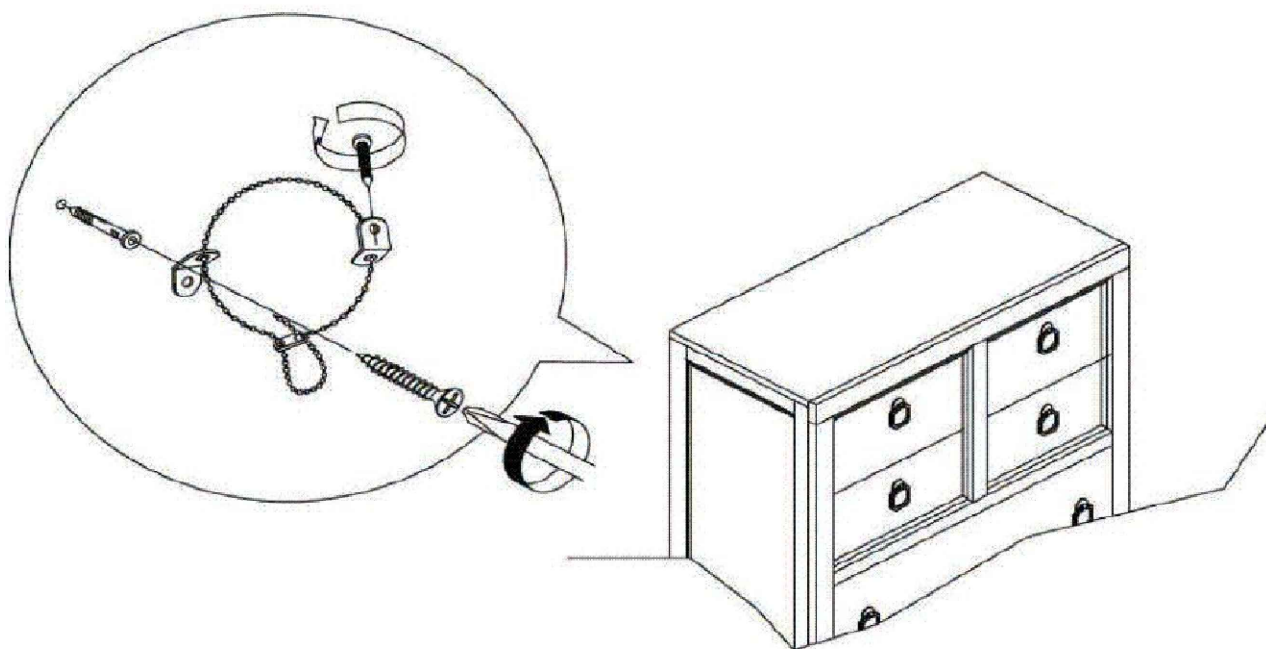


ITEM: **224765**



Inner Size of Drawer A :29.50"W X 13.00"D X 4.00"H X 0.50T

Inner Size of Drawer B :29.50"W X 13.00"D X 6.00"H X 0.50T

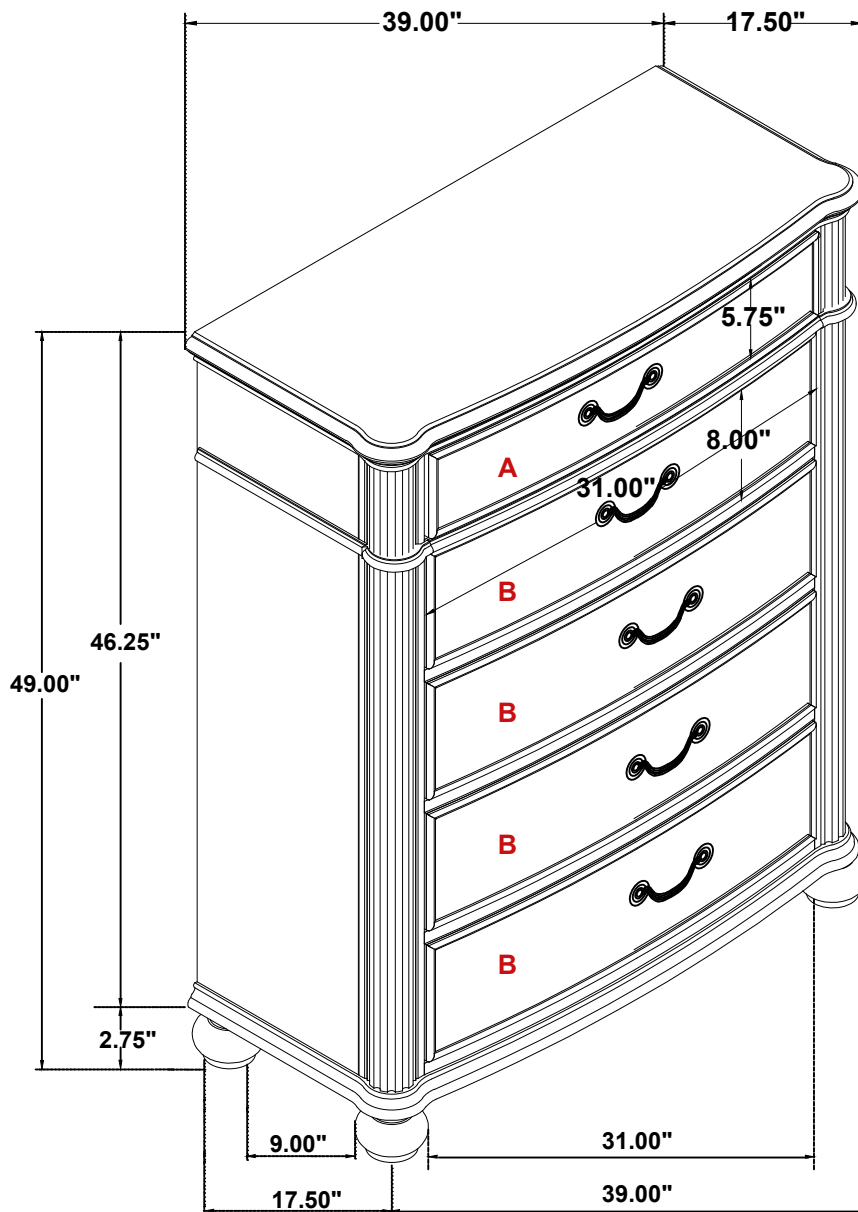

Note: Dimension tolerance $\pm 5\%$