




## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

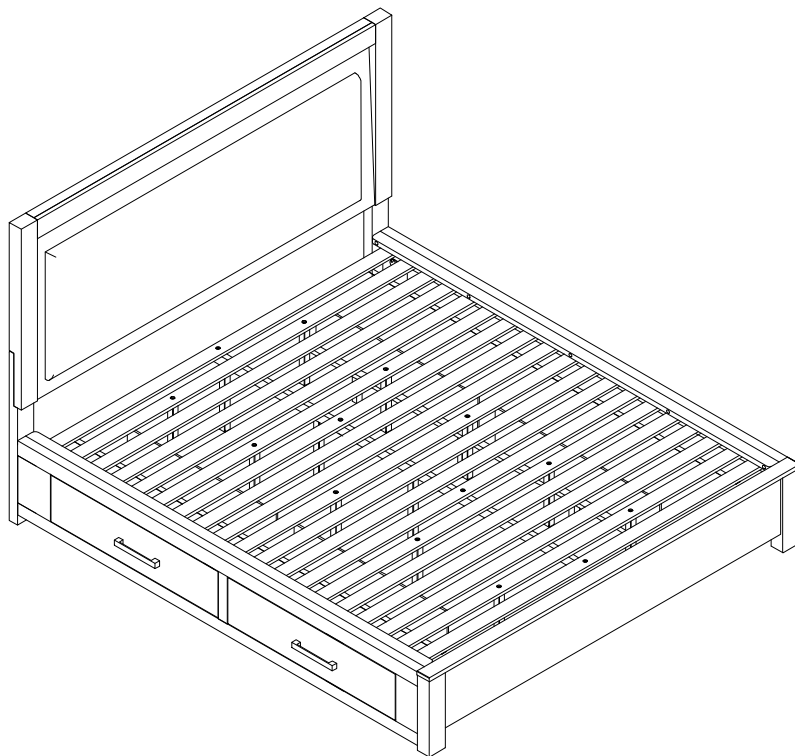

*Fine Furniture for every stage of life*

## **224850KW (B1-B3)** **California King Bed**

REVISION 0 : 08/15/2024  
REVISION 1 : 03/18/2025

# ITEM: 224850KW(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

25 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

AN HEADBOARD PANEL

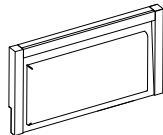

1PC

BN LEFT HEADBOARD LEG



1PC


CN RIGHT HEADBOARD LEG



1PC

### B2 (BOX 2)

DN FOOTBOARD



1PC

EN ROLL SLAT (19PCS)



1SET


FN ROLL SLAT SUPPORT WITH LEVELER



10PCS

### B3 (BOX 3)

GN STORAGE DRAWERS

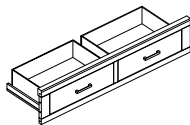

2SET

HN RAIL TOP



2PCS

IN DRAWERS SUPPORT LEG WITH LEVELER



6PCS

JN CENTER RAIL




1PC

KN CENTER RAIL SUPPORT WITH LEVELER




4PCS

HBN 224850KW (B1) FROM BOX 1 HEADBOARD COMPLETE

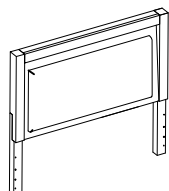

1PC

DN 224850KW (B2) FROM BOX 2 FOOTBOARD



1PC

# ITEM: 224850KW(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







### WARNING!





1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION





### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224850KW(B1)

1	<b>MEDIUM BOLT</b> (Ø5/16" x 45MM - BLK)		6PCS
2	<b>BIG LOCK WASHER</b> (Ø5/16" - BLK)		6PCS
3	<b>BIG FLAT WASHER</b> (Ø5/16" x 19 x 1.5MM - BLK)		6PCS
4	<b>ALLEN WRENCH</b> (74 x 30 x 4MM - BLK)		1PC

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224850KW(B2)

5	<b>SHORT BOLT</b> (Ø1/4" x 32MM - BLK)		12PCS
6	<b>SMALL LOCK WASHER</b> (Ø1/4" - BLK)		12PCS
7	<b>SMALL FLAT WASHER</b> (Ø1/4" x 19 x 1.5MM - BLK)		12PCS
4	<b>ALLEN WRENCH</b> (74 x 30 x 4MM - BLK)		1PC

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224850KW(B3)

8	<b>WOODEN DOWEL</b> (Ø8 x 40MM)		12PCS
9	<b>LONG BOLT</b> (Ø5/16" x 75MM - BLK) (Ø1/4" x 45MM - BLK)		10PCS
6	<b>SMALL LOCK WASHER</b> (Ø1/4" - BLK)		10PCS
7	<b>SMALL FLAT WASHER</b> (Ø1/4" x 19 x 1.5MM - BLK)		10PCS

# ITEM: 224850KW(B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:






1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION


4	<b>ALLEN WRENCH</b> (74 x 30 x 4MM - BLK)		1PC
10	<b>THREADED BOLT</b> (Ø5/16" x 75MM - BLK)		8PCS
13	<b>U-SQUARE WASHER</b> (25 x 15 x 2MM - BLK)		8PCS
14	<b>HEX NUT</b> (Ø5/16 x 17MM - BLK)		8PCS
15	<b>WRENCH</b> (13MM - BLK)		1PC

ITEM: **224850KW(B1-B3)**


## ASSEMBLY INSTRUCTIONS



### STEP 1

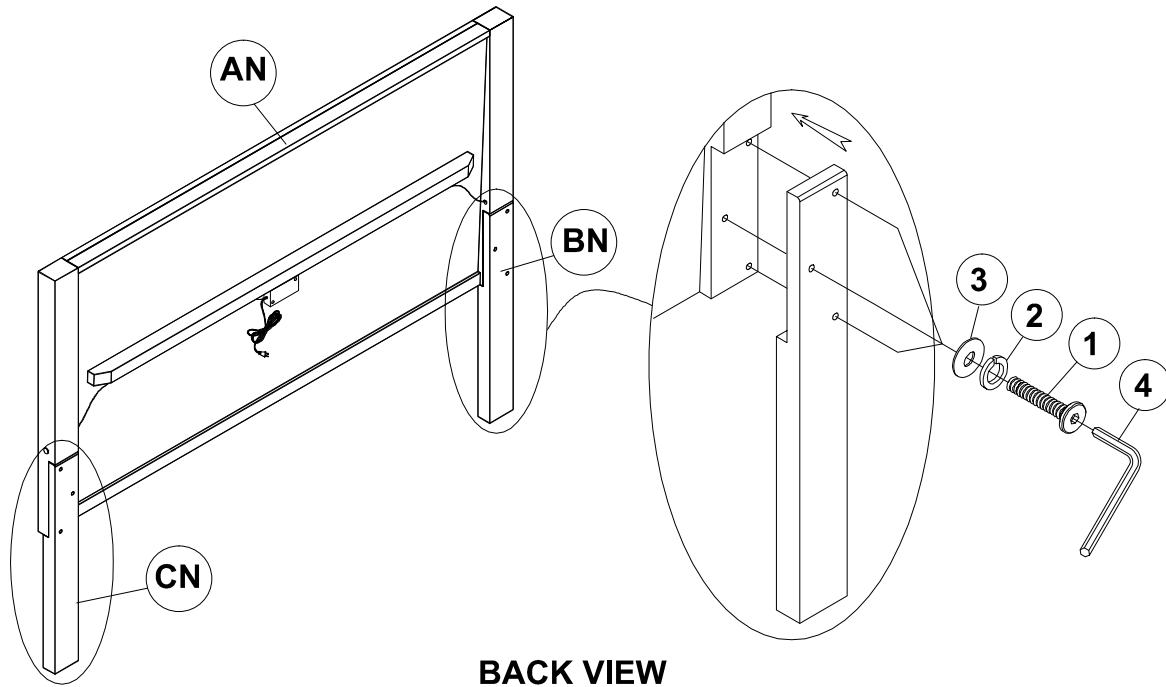

### STEP 2

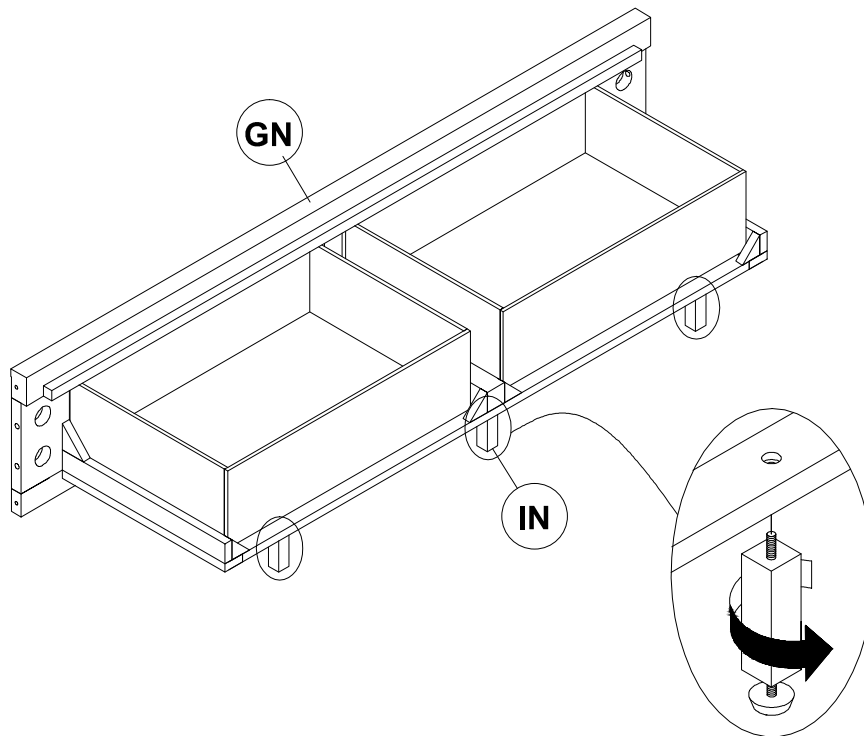


ITEM: **224850KW(B1-B3)**


## ASSEMBLY INSTRUCTIONS



### STEP 3

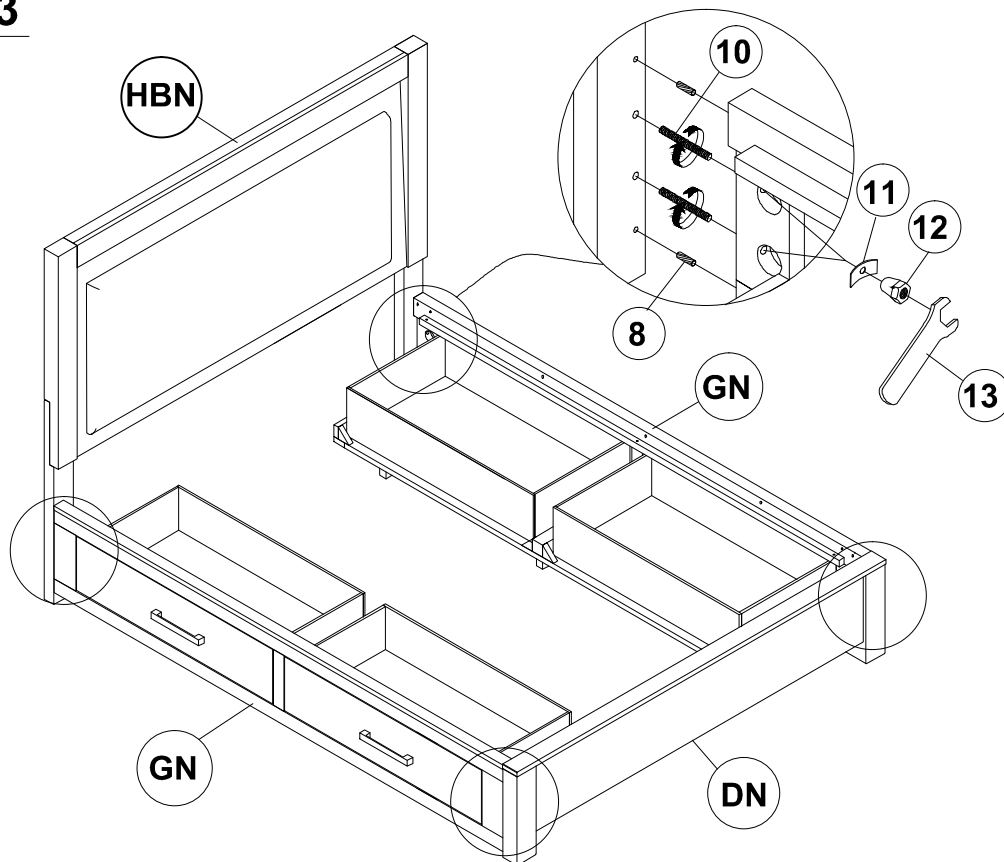

### STEP 4

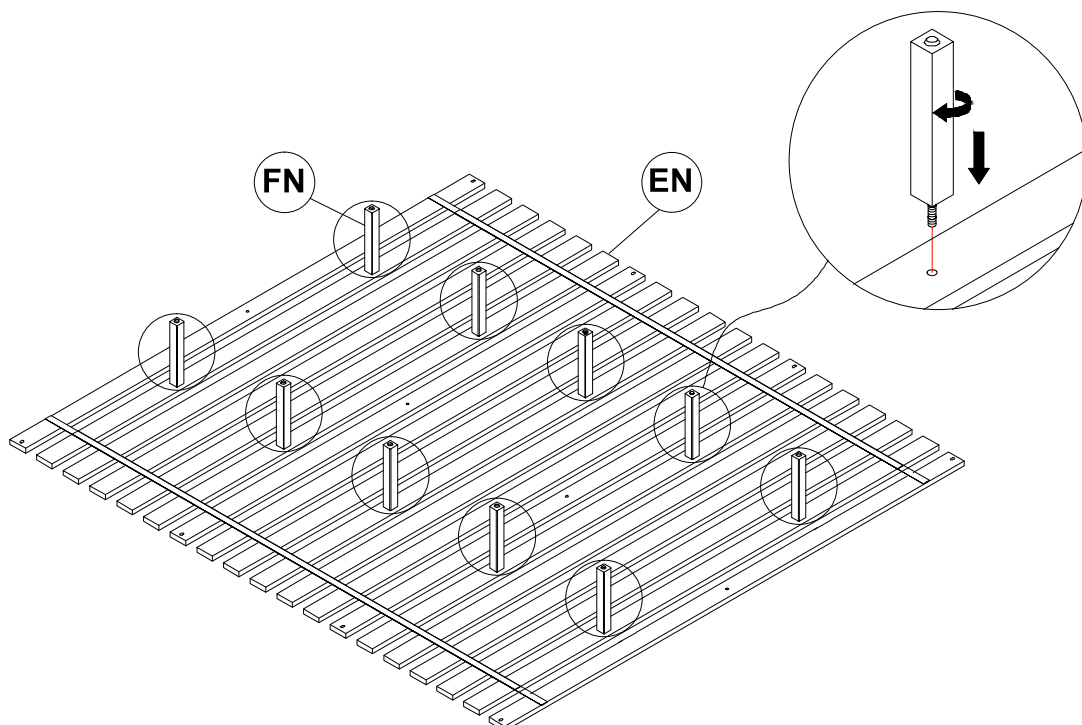


ITEM: **224850KW(B1-B3)**


## ASSEMBLY INSTRUCTIONS



### STEP 5

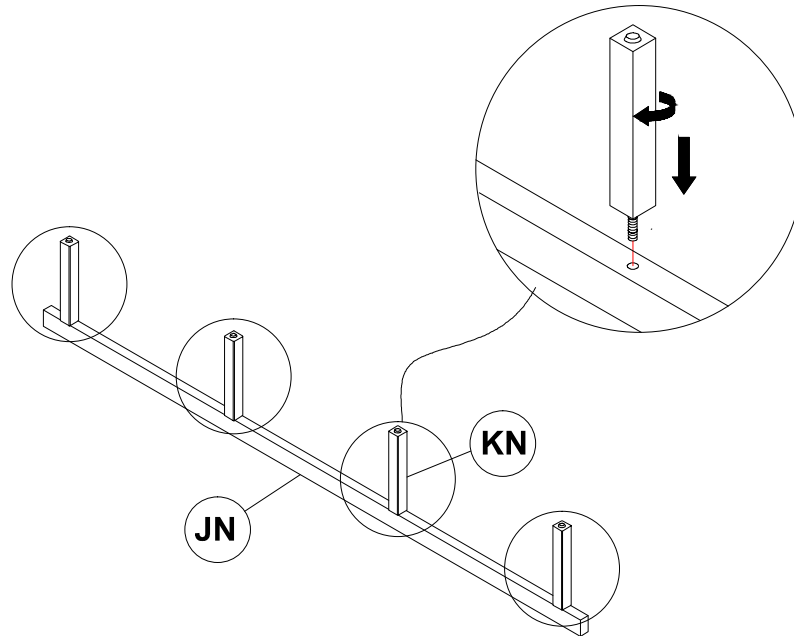

### STEP 6

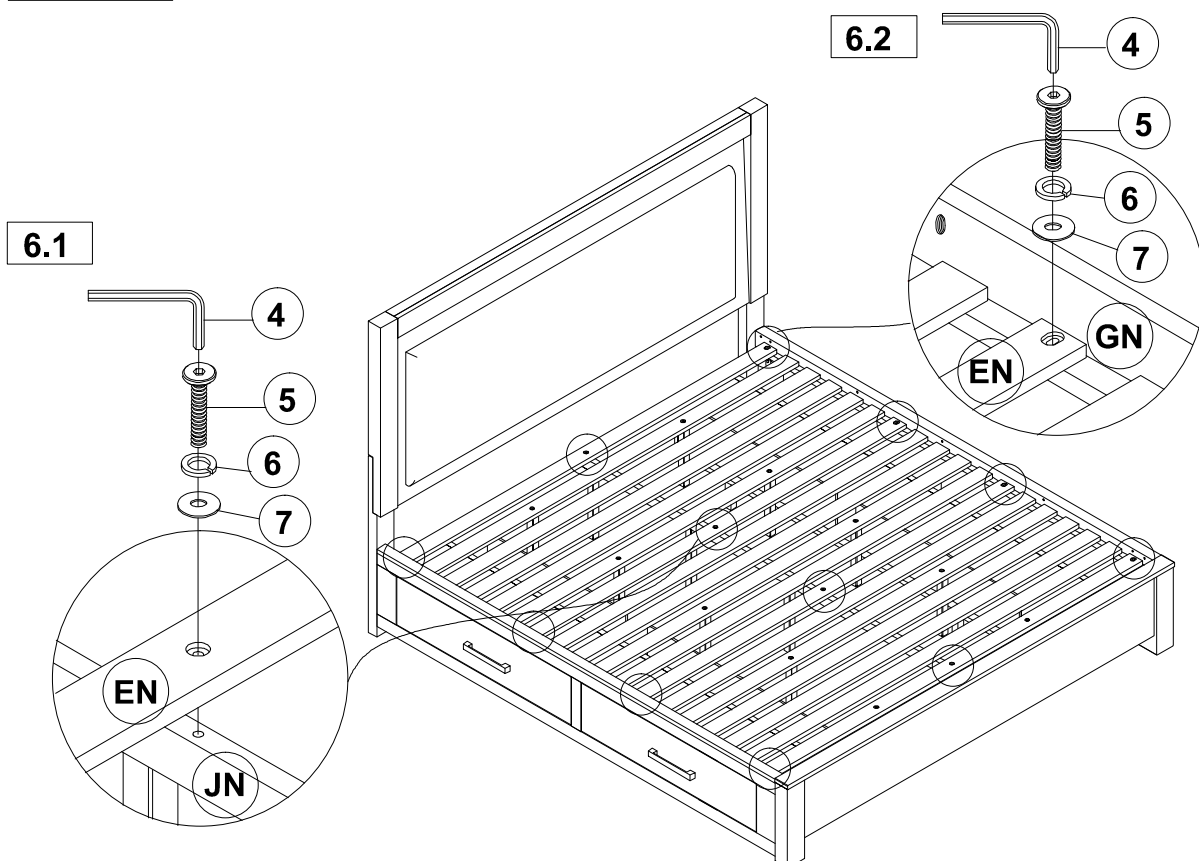


# ITEM: 224850KW(B1-B3)

## ASSEMBLY INSTRUCTIONS



### STEP 7


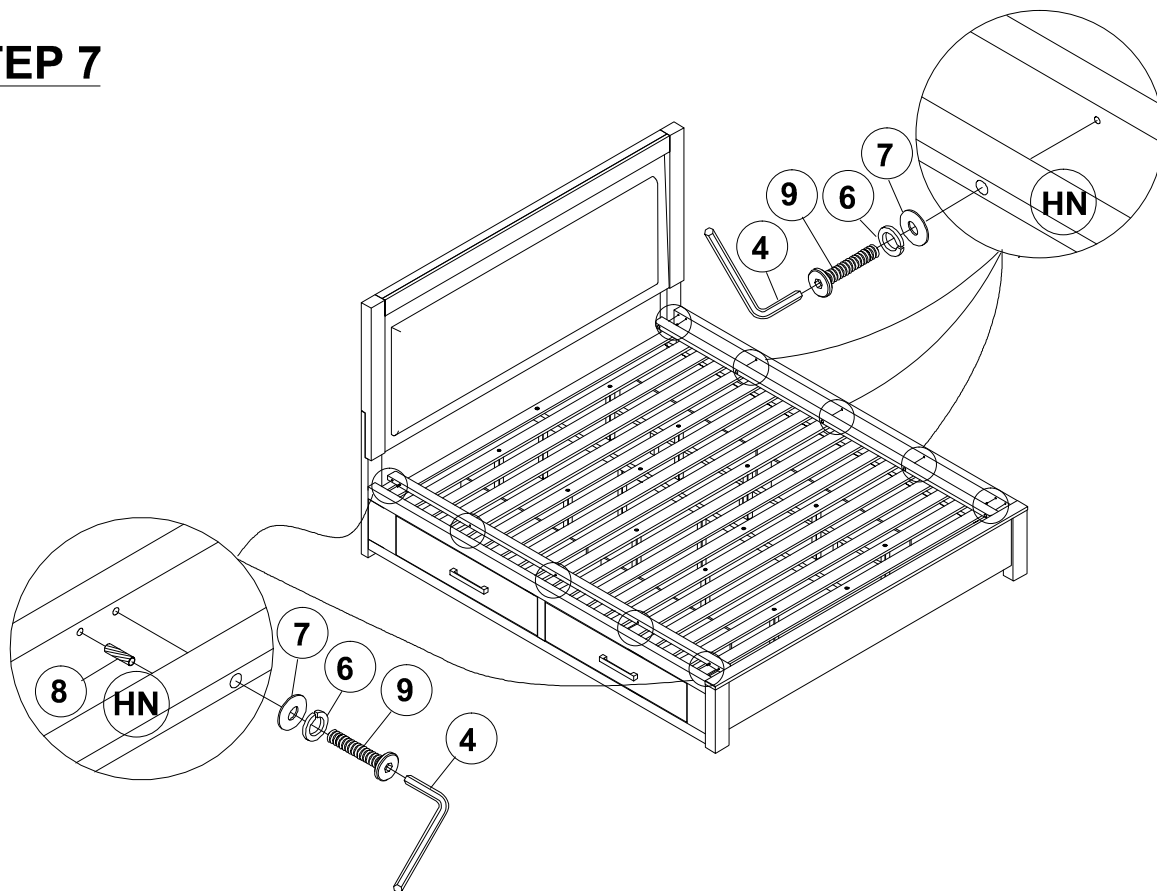


### STEP 8 COMPLETE

★ Attach the Adapter to the power source according to the instructions on the adapter.



**Touched light location**  
Your Touch is the Switch  
Touch 1-Night light  
Touch 2-Energy saver light  
Touch 3-Bright reading light  
Touch 4-Off

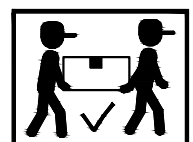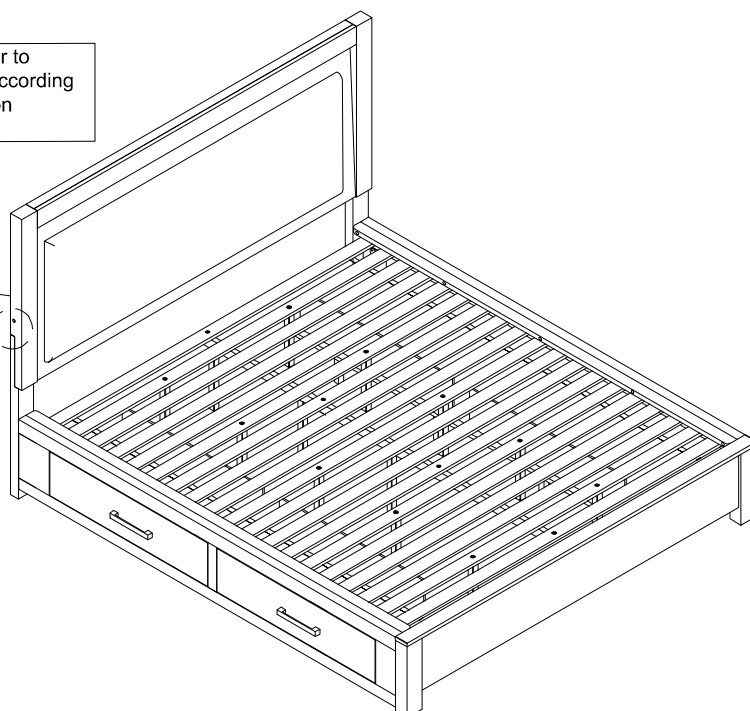




ITEM: **224850KW(B1-B3)**



Inner Size : 76.75"W X 86.00"D

Inner Size of Drawer : 33.50"W X 17.25"D X 6.25"H X 0.50"T

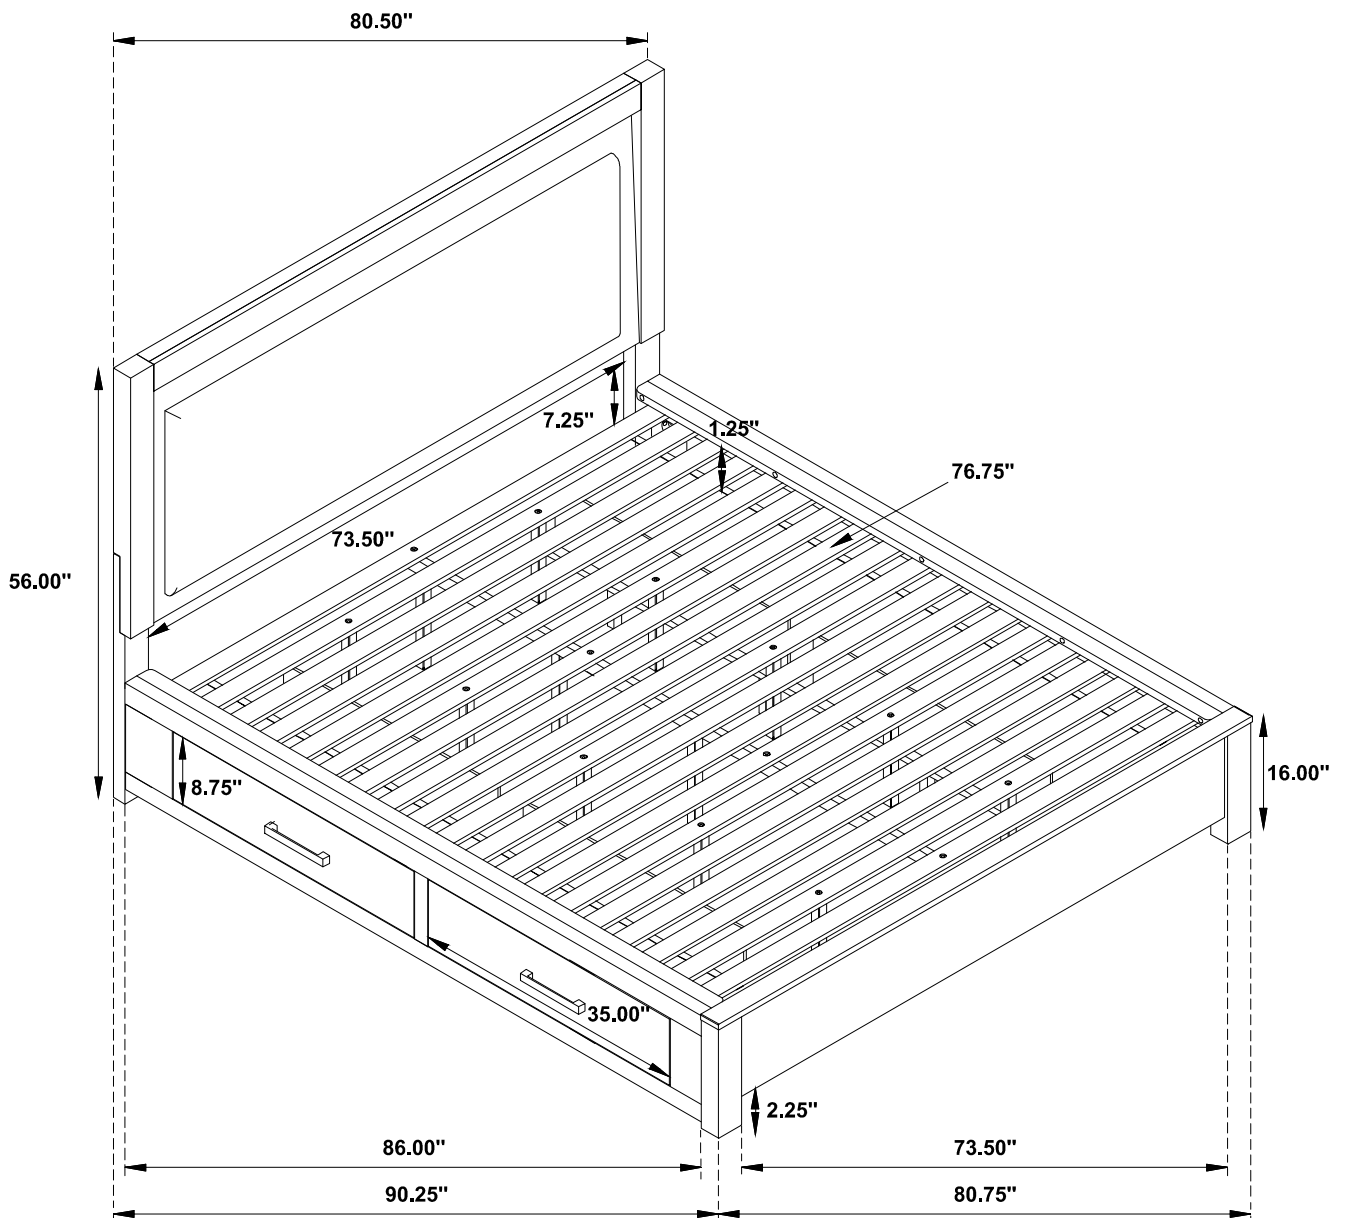

**Note: Dimension tolerance  $\pm 5\%$**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224852**  
**Nightstand**

REVISION 0 : 08/15/2024  
REVISION 1 : 03/18/2025

PAGE 1 OF 2

COASTERFURNITURE.COM

ITEM: **224852**



## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

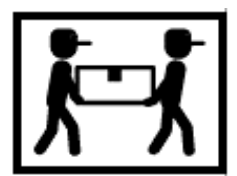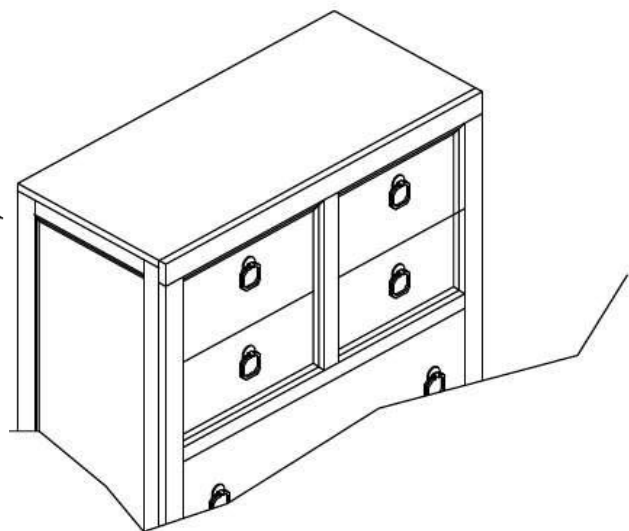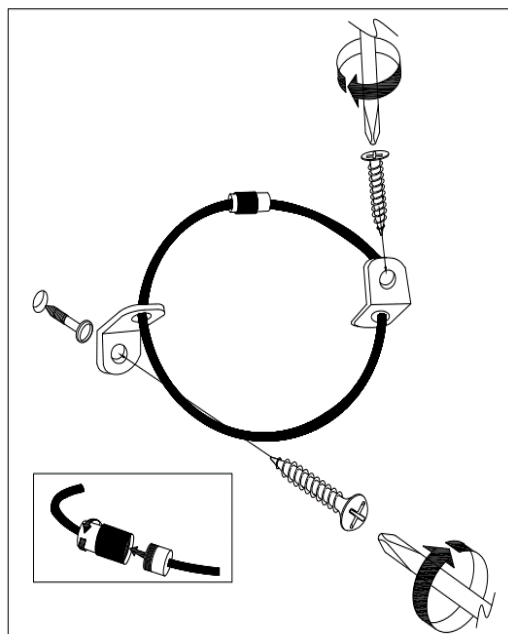

ITEM: **224852**



**Inner Size of Drawer : 21.00"W X 12.75"D X 6.00"H X 0.50"T**

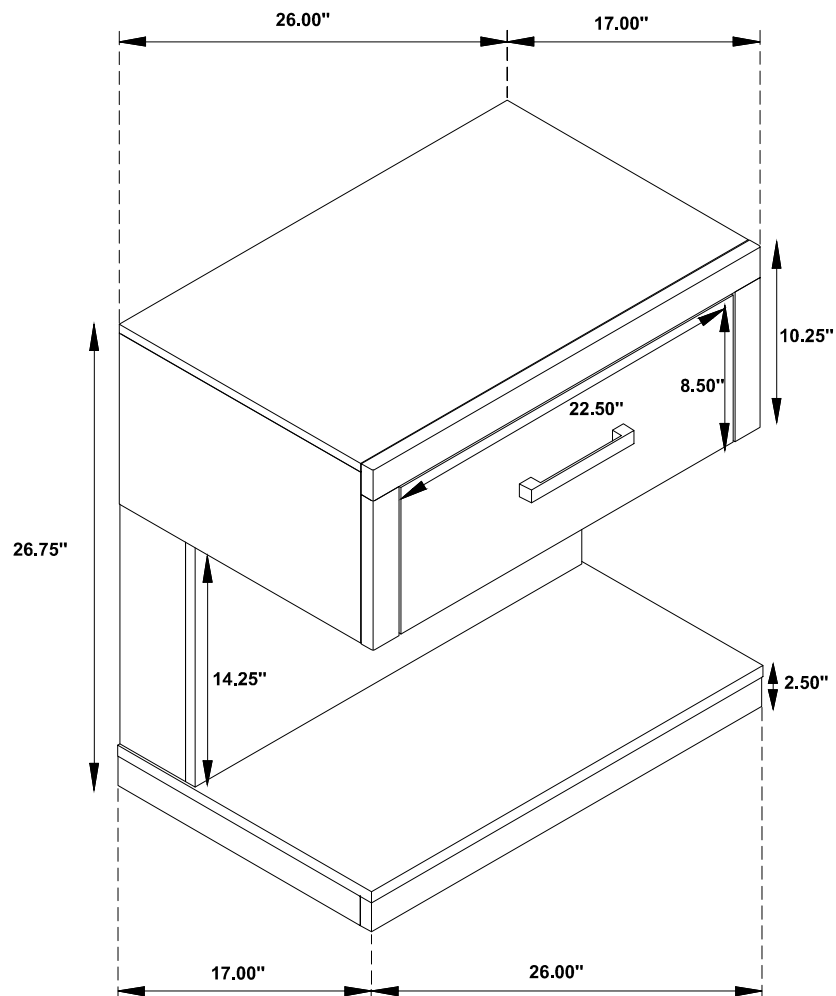

**Note: Dimension tolerance  $\pm 5\%$**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224853**  
***Dresser***

REVISION 0 : 08/15/2024  
REVISION 1 : 03/18/2025

ITEM: **224853**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

AN DRESSER

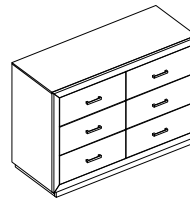

1PC

BN CENTER SUPPORT  
LEG WITH LEVELER




1PC

ITEM: **224853**



## ASSEMBLY INSTRUCTIONS



### STEP 1

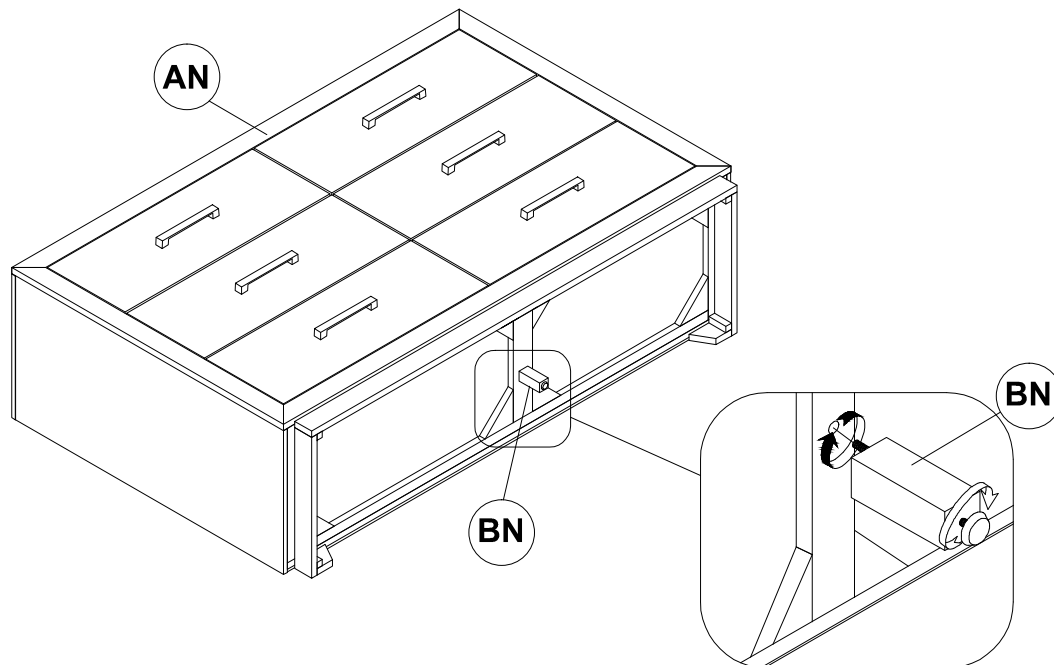

### STEP 2 COMPLETE

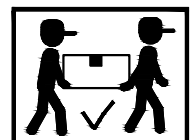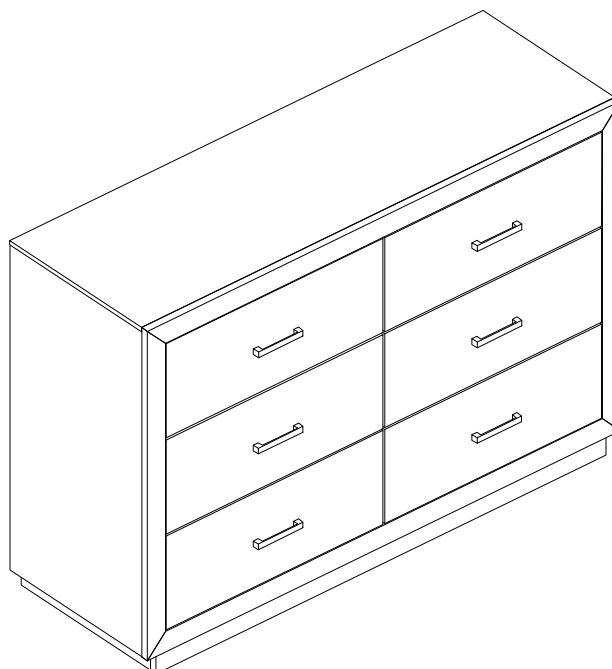

ITEM: **224853**



## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

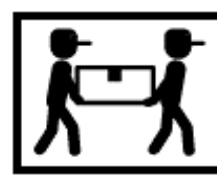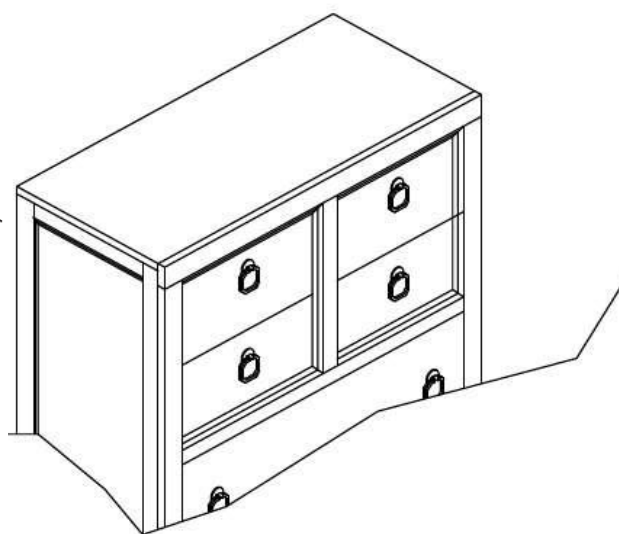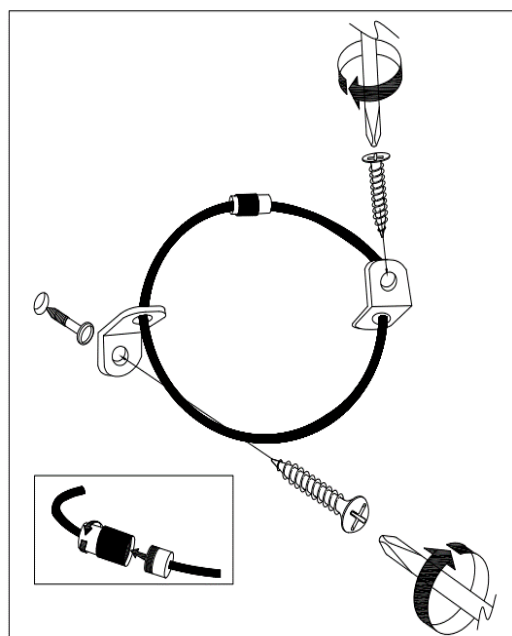




ITEM: **224853**



**Inner Size of Drawer : 27.25"W X 12.75"D X 8.25"H X 0.50"T**

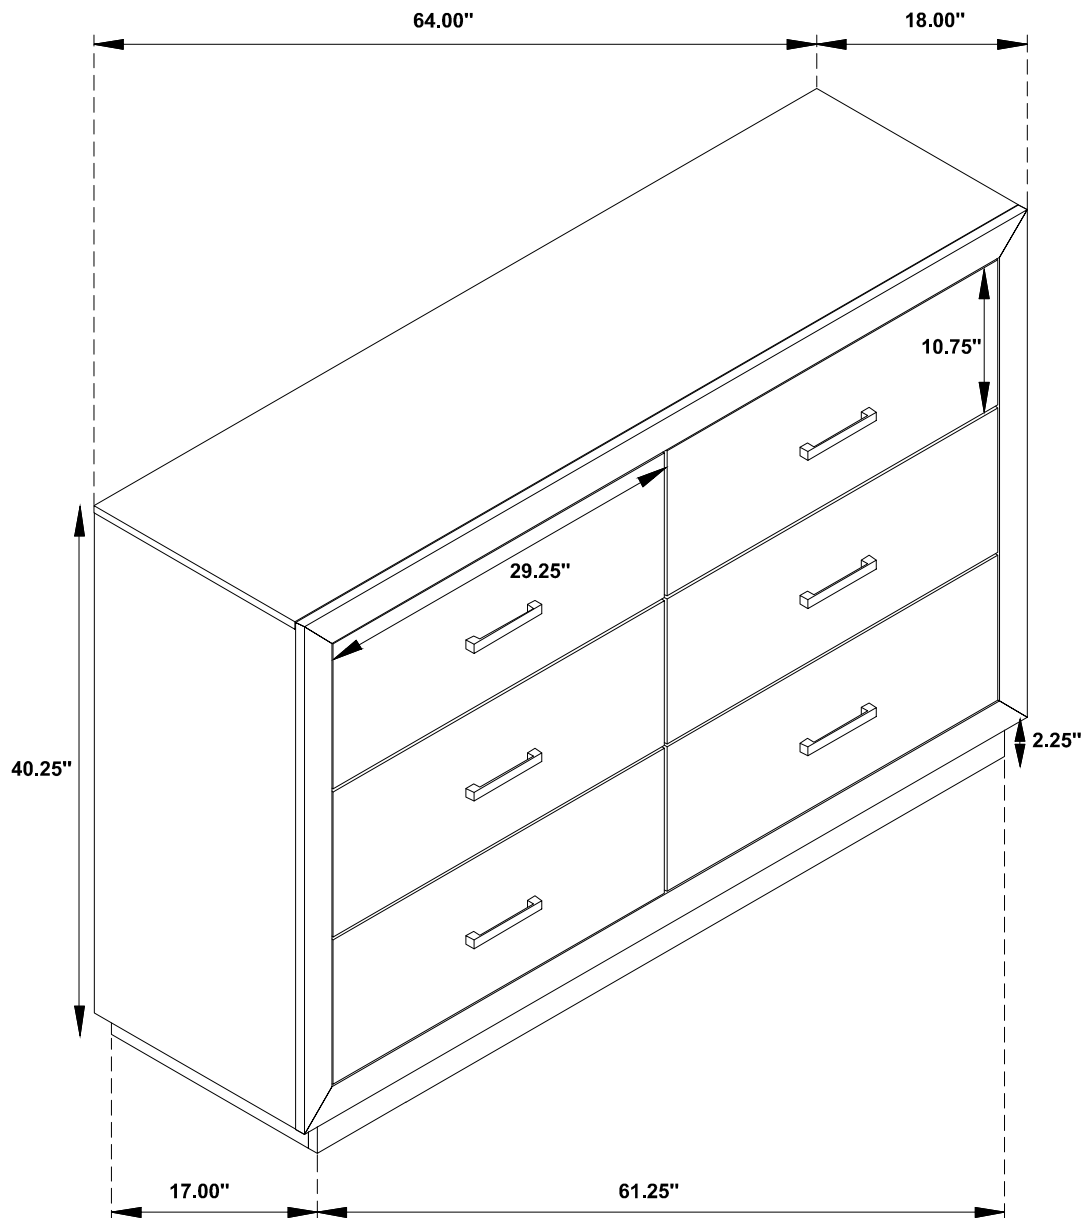

**Note: Dimension tolerance  $\pm 5\%$**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224854**  
***Mirror***

REVISION 0 : 08/15/2024  
REVISION 1 : 03/18/2025

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM: **224854**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


## PARTS IDENTIFICATION

AN DRESSER  
FROM BOX ITEM# 224853

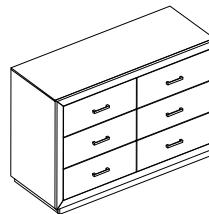


1PC

BN MIRROR

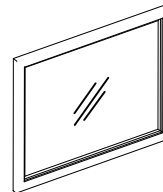

1PC


CN MIRROR SUPPORT  
(PACKED WITH DRESSER)



2PCS

## HARDWARE IDENTIFICATION

1 BOLT  
(Ø1/4" x 32MM - BLK)



6PCS

2 LOCK WASHER  
(Ø1/4" - BLK)



6PCS

3 FLAT WASHER  
(Ø1/4" x 19 x 1.5MM - BLK)



6PCS

4 ALLEN WRENCH  
(74 x 30 x 4MM - BLK)




1PC

ITEM: **224854**



## ASSEMBLY INSTRUCTIONS




### **STEP 1**

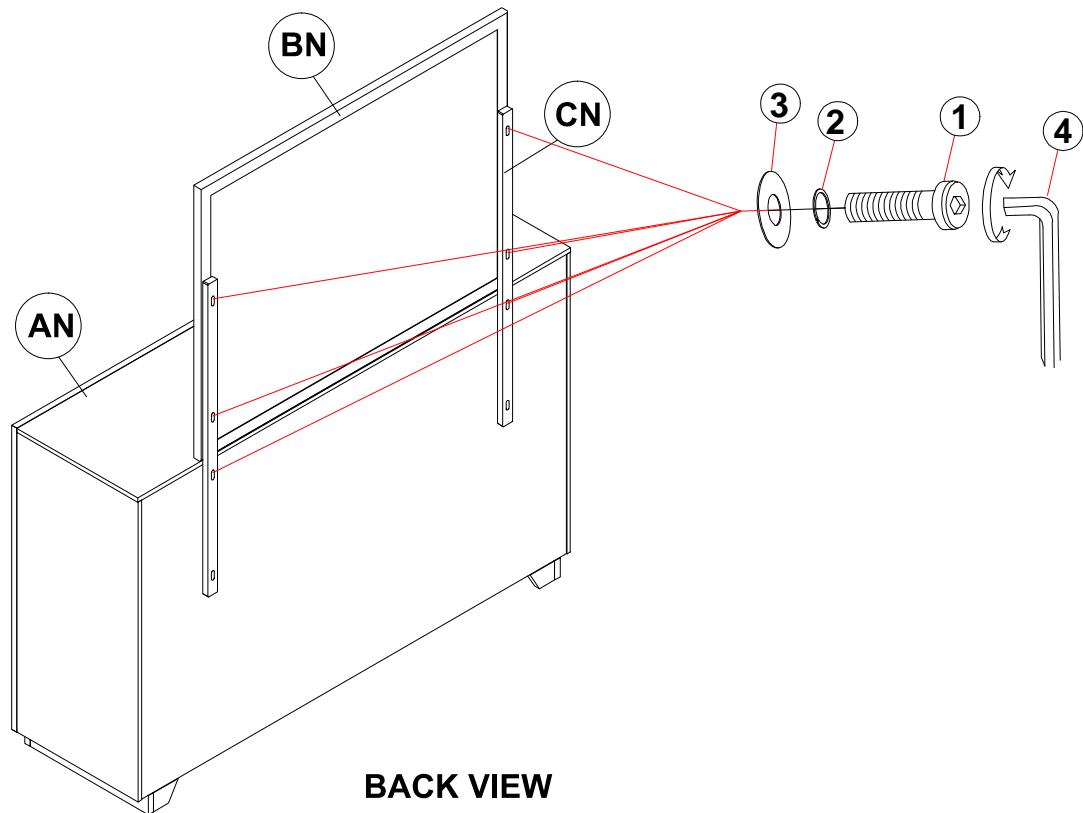

### **STEP 2** **COMPLETE**

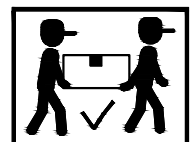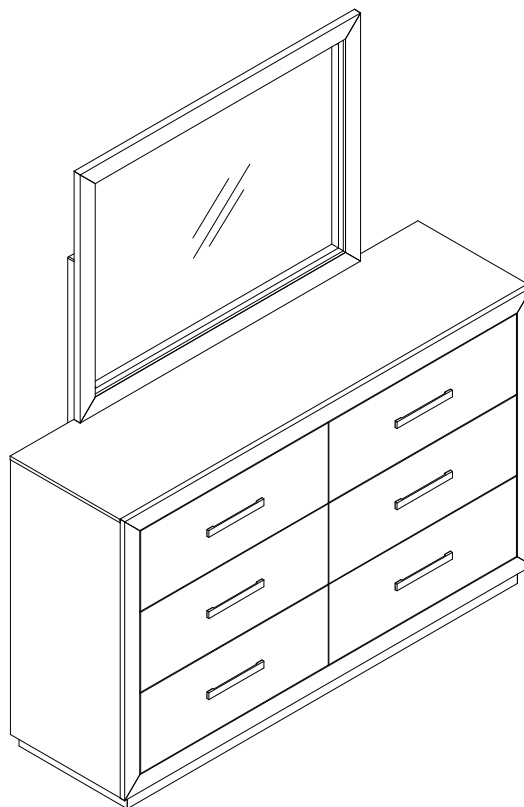

ITEM: **224854**

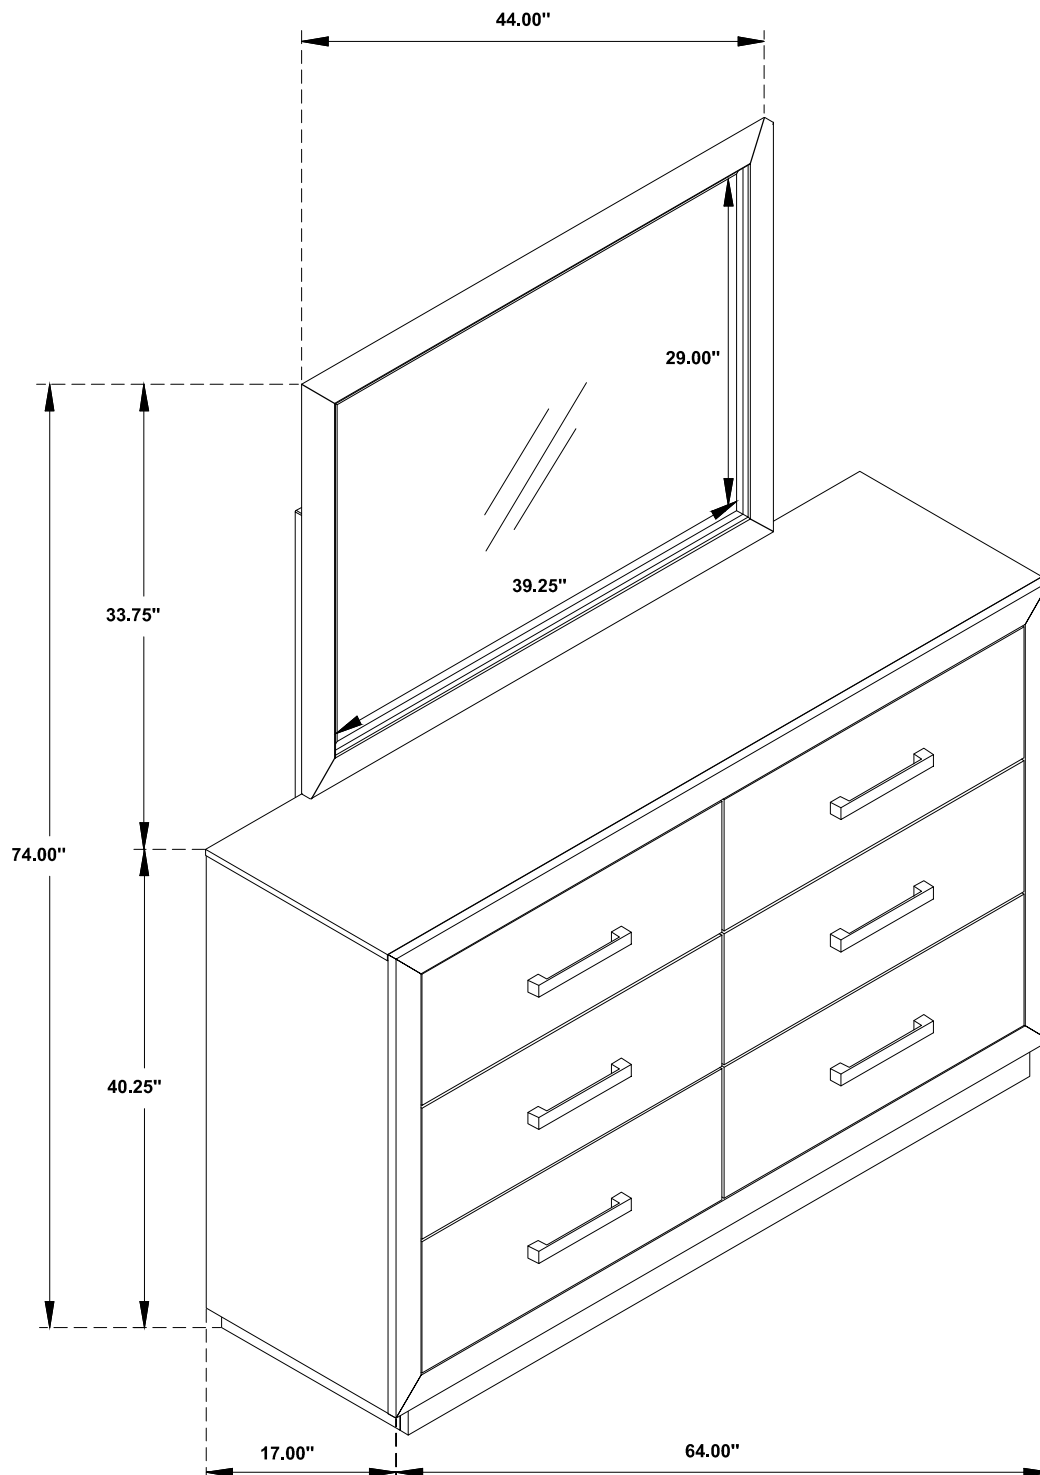

**Note: Dimension tolerance  $\pm 5\%$**



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**224855**  
**Chest**

REVISION 0 : 08/15/2024  
REVISION 1 : 03/18/2025

PAGE 1 OF 2

COASTERFURNITURE.COM

## ANTI-TIPPING INSTALLATION INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

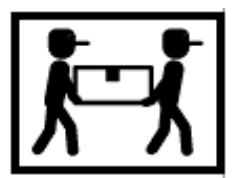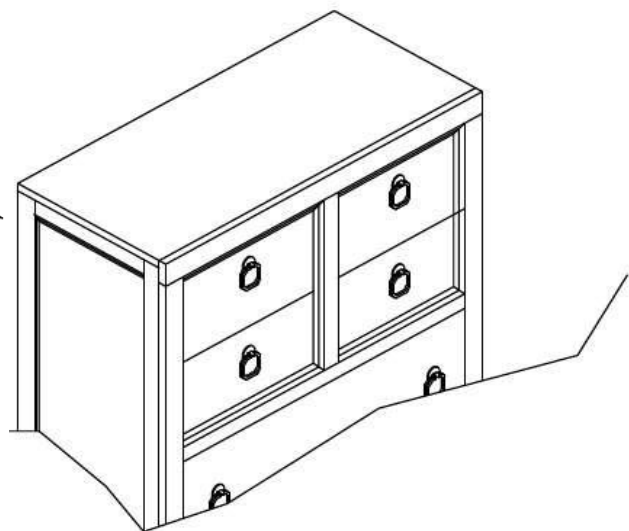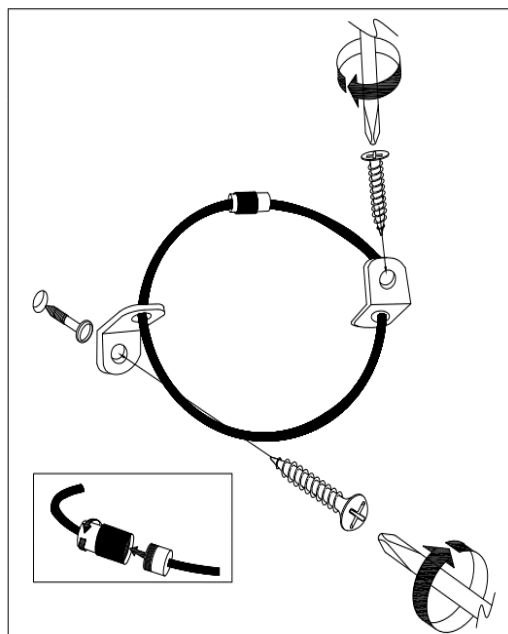

ITEM: **224855**



Inner Size of Drawer : 35.25"W X 12.75"D X 7.00"H X 0.50"T

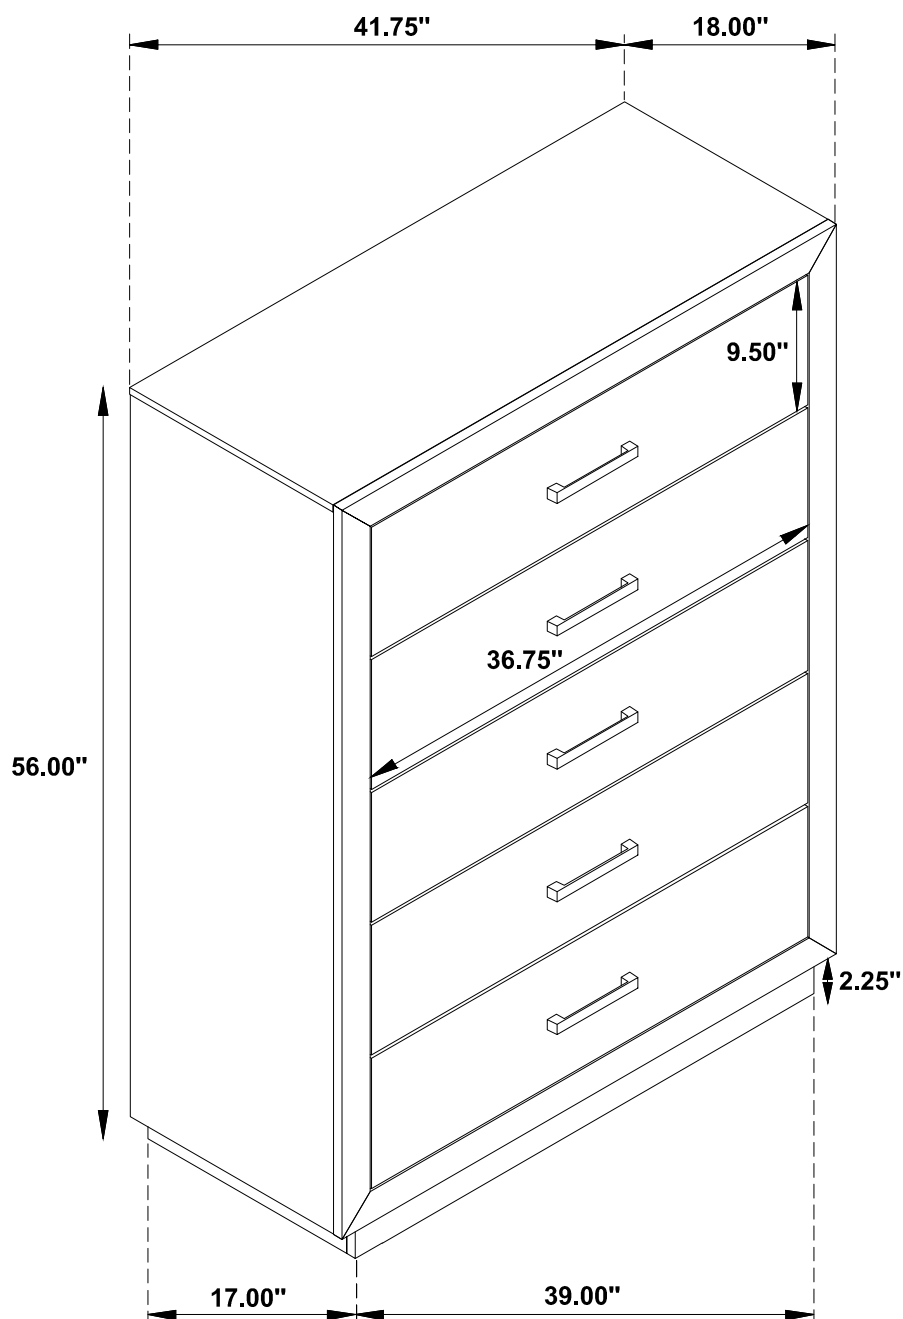

**Note: Dimension tolerance  $\pm 5\%$**