

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224861Q(B1&B2)
Queen Bed

ITEM: 224861Q(B1&B2)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

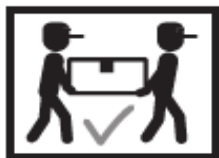


ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD PANEL

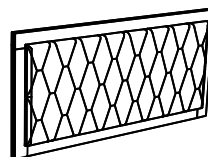

1PC

B FOOTBOARD



1PC

C LEFT HEADBOARD LEG



1PC

D RIGHT HEADBOARD LEG



1PC

E BED SLAT



4PCS

F BED SLAT SUPPORT WITH LEVELER



4PCS


B2 (BOX 2)

G BED RAIL




2PCS

HB 224861Q(B1) FROM BOX 1
HEADBOARD COMPLETE

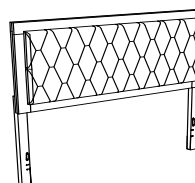

1PC

B 224861Q(B1) FROM BOX 1
FOOTBOARD



1PC

ITEM: 224861Q(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 224861Q (B1)

| | | | |
|---|--|--|------|
| 1 | BOLT (M6 x 35mm - BLK) |  | 6PCS |
| 2 | LOCK WASHER (1/4" - BLK) |  | 6PCS |
| 3 | FLAT WASHER (1/4" x 13mm - BLK) |  | 6PCS |
| 4 | FLAT HEAD SCREW (M4 x 32mm - RBW) |  | 8PCS |
| 5 | SMALL ALLEN WRENCH (M4 x 65mm - BLK) |  | 1PC |
| 6 | BIG ALLEN WRENCH (M5 x 65mm - BLK) |  | 1PC |

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **224861Q(B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 1


Note : Please put item on soft surface.

Please take note of the marking sticker (L&R) on the leg.

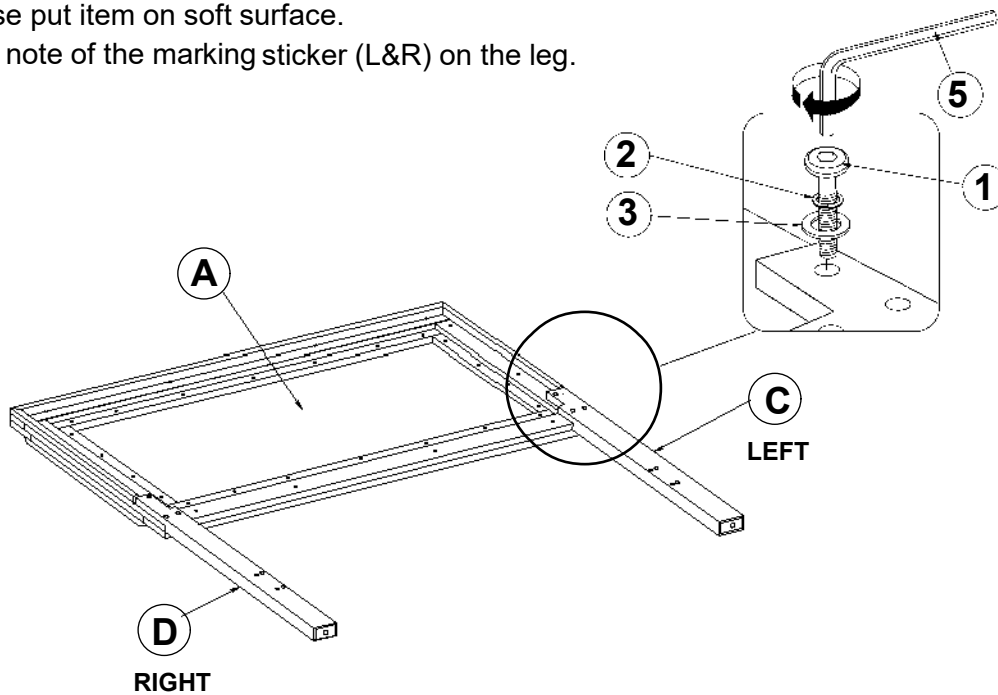

****BACK VIEW****

STEP 2

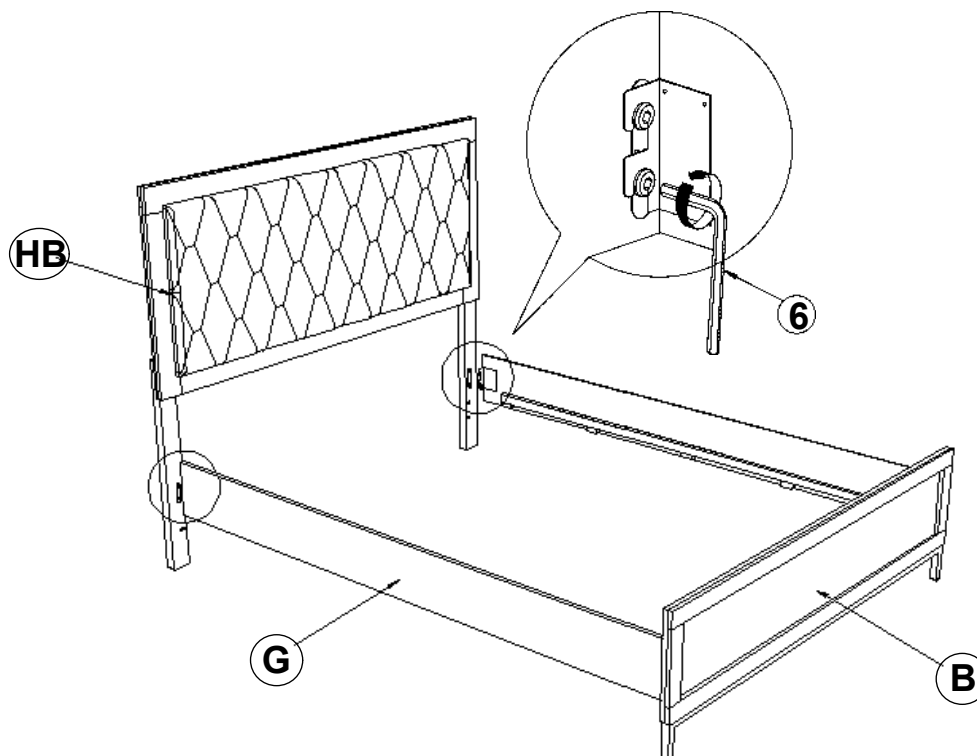


ITEM: **224861Q(B1&B2)**





ASSEMBLY INSTRUCTIONS

STEP 3

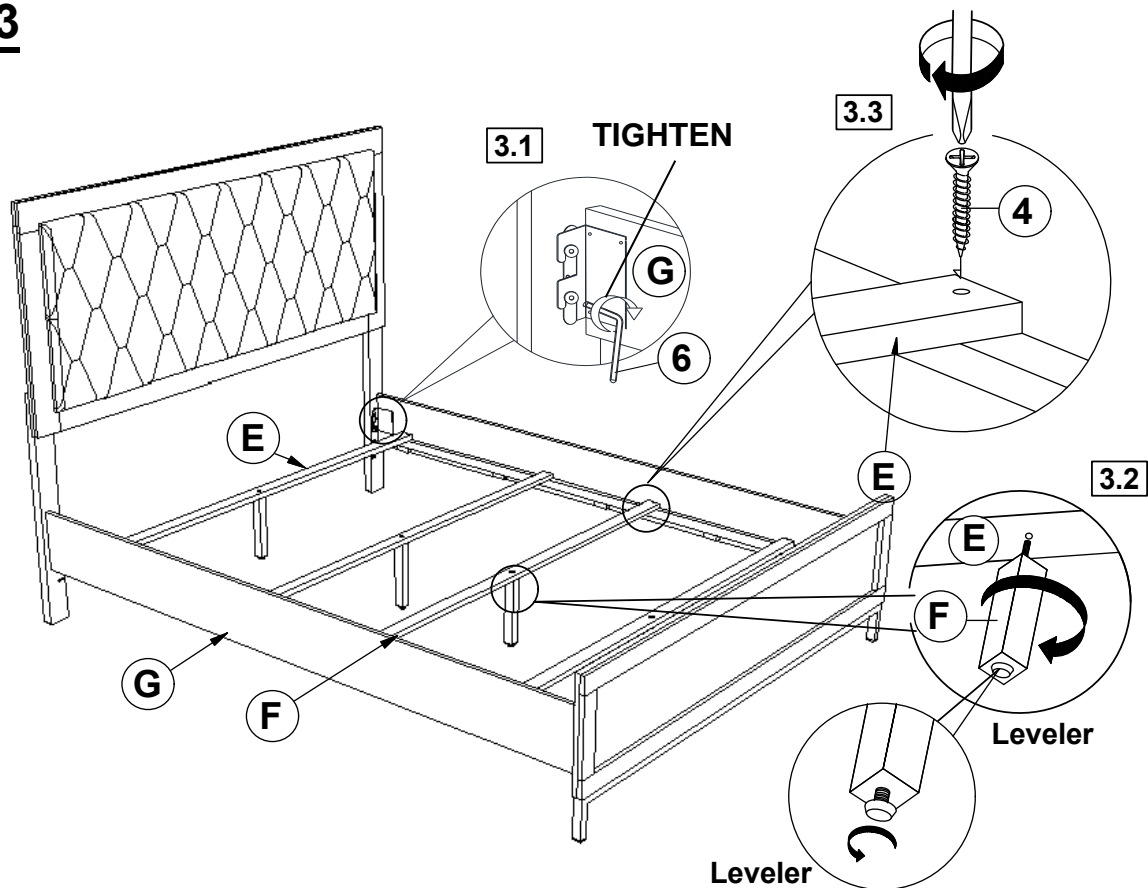


STEP 4 **COMPLETE**

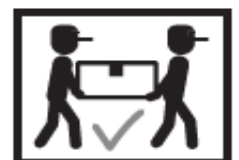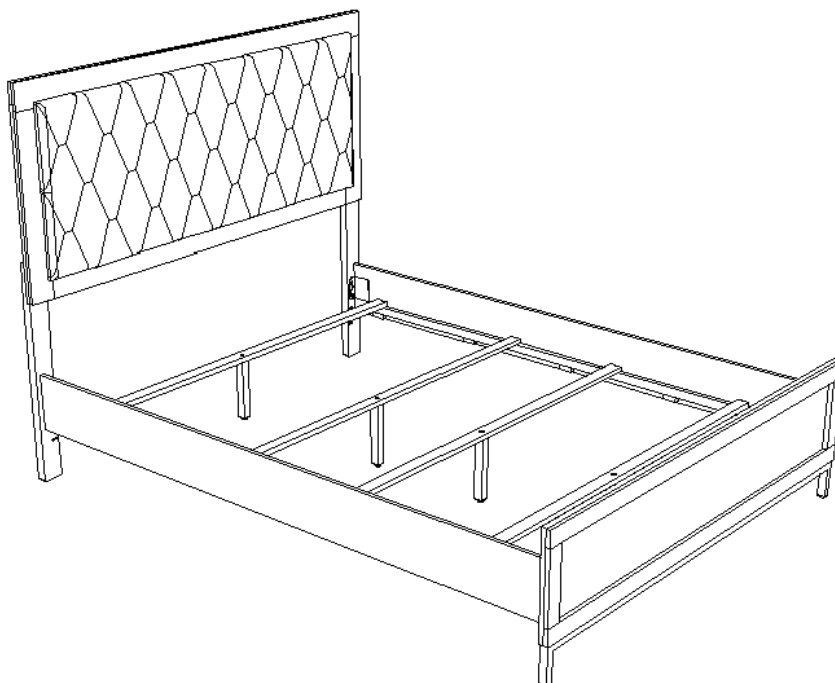

ITEM: **224861Q(B1&B2)**



Inner Size : 60.75"W x 81.00"D

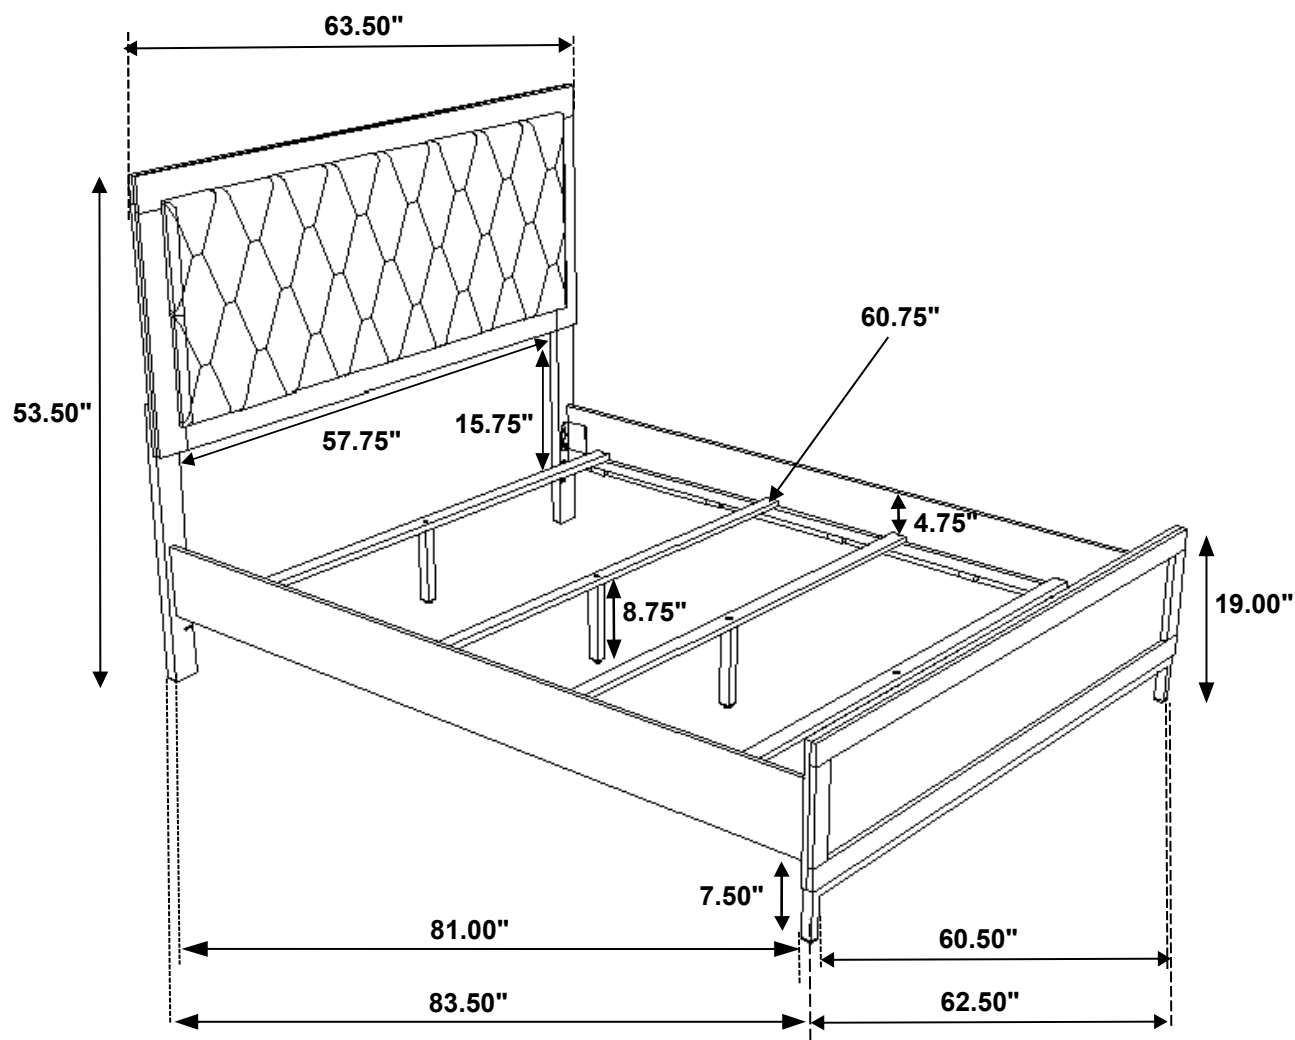

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

224862
Nightstand

ITEM: **224862**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES


PARTS IDENTIFICATION

A NIGHTSTAND

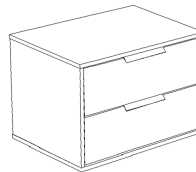


1PC

B LEG FRAME



2PCS

C UPPER CROSSBAR



2PCS

D LOWER CROSSBAR



1PC


HARDWARE IDENTIFICATION

1 LONG BOLT
(M6 x 40mm - BLK)




6PCS

2 SHORT BOLT
(M6 x 30mm - BLK)



2PCS

3 ALLEN WRENCH
(M4 x 60mm - BLK)



1PC

4 PAN HEAD SCREW
(M4 x 32mm - BLK)



4PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **224862**

ASSEMBLY INSTRUCTIONS

STEP 1

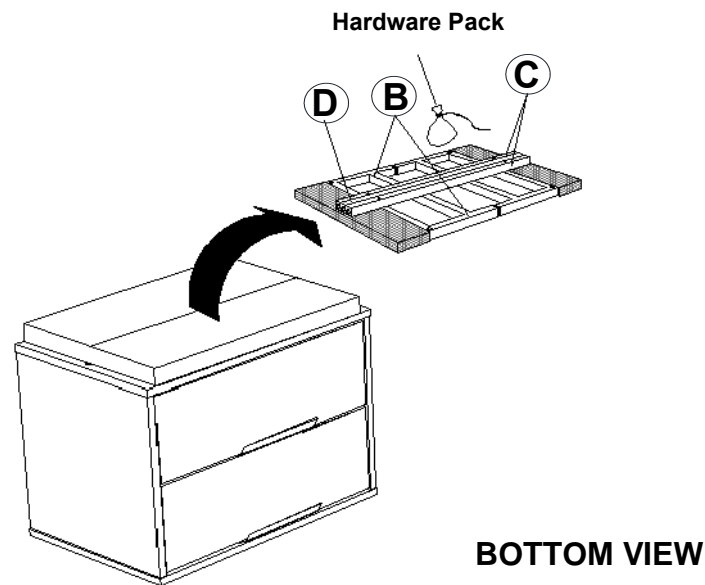


STEP 2

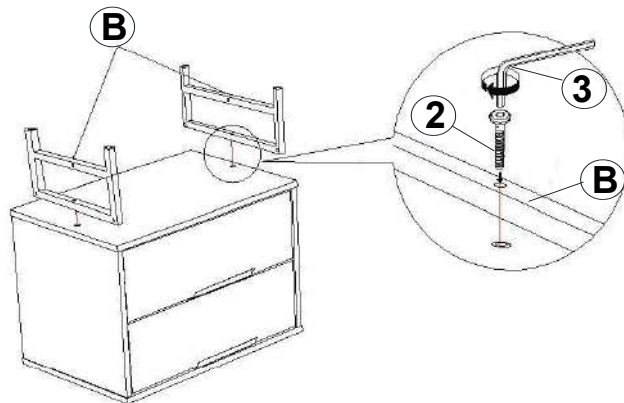

NOTE: DO NOT FULLY TIGHTEN IN THIS STEP.

STEP 3

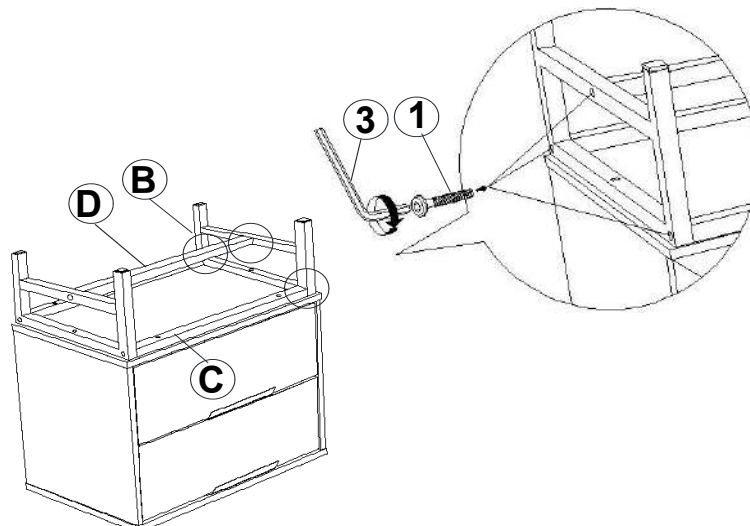


NOTE: FULLY TIGHTEN IN THIS STEP.

ITEM: **224862**





ASSEMBLY INSTRUCTIONS

STEP 4

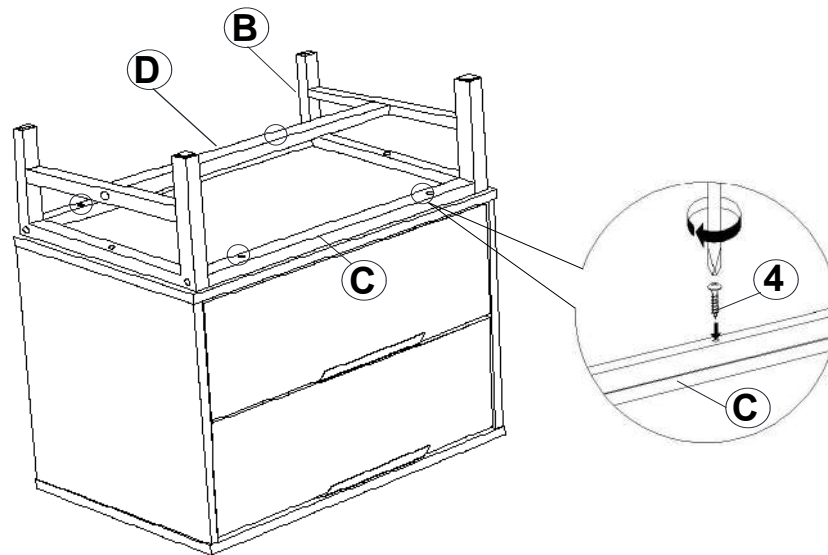

NOTE: FULLY TIGHTEN IN THIS STEP.


STEP 5 COMPLETE

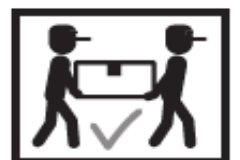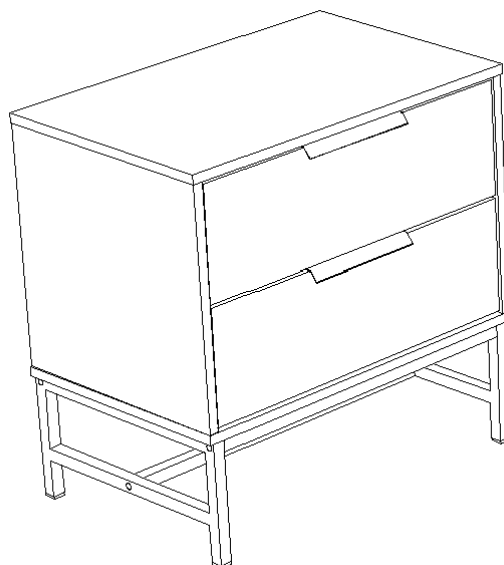

ITEM: **224862**



Inner Size of Drawer : 20.50"W x 11.00"D x 3.25"H x 0.25"T

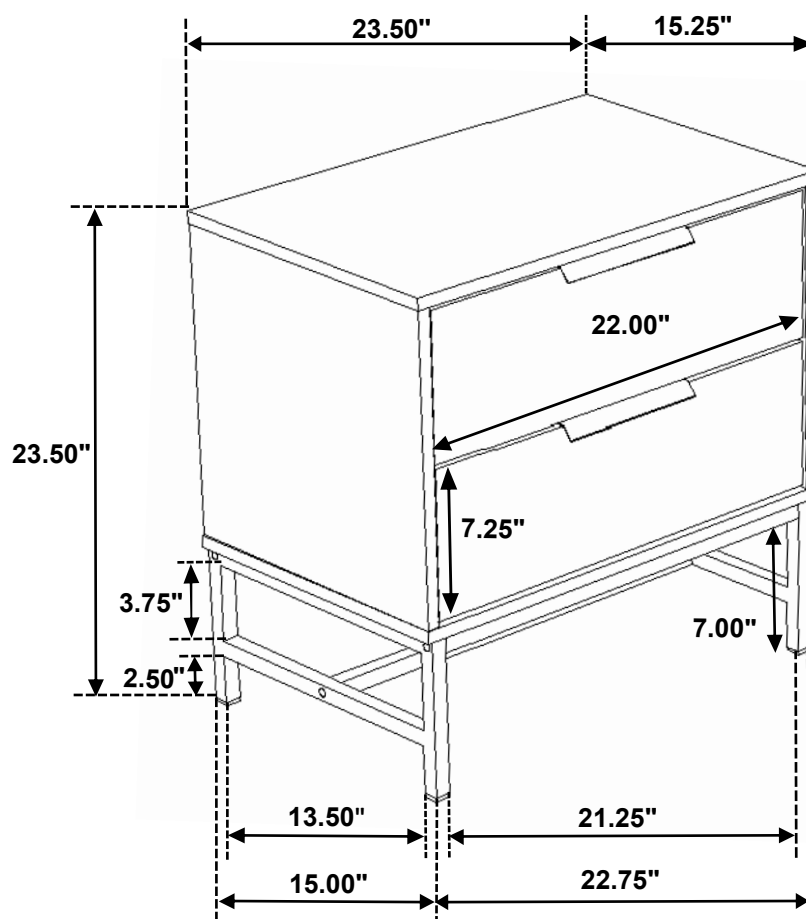

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

224863
Dresser

ITEM: **224863**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!





1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

| | | | |
|---|----------------|---|------|
| A | DRESSER |  | 1PC |
| B | LEG FRAME |  | 1PC |
| C | UPPER CROSSBAR |  | 2PCS |
| D | LOWER CROSSBAR |  | 1PC |

HARDWARE IDENTIFICATION

| | | | |
|---|-------------------------------------|---|------|
| 1 | LONG BOLT (M6 x 40mm - BLK) |  | 6PCS |
| 2 | SHORT BOLT (M6 x 30mm - BLK) |  | 2PCS |
| 3 | ALLEN WRENCH (M4 x 60mm - BLK) |  | 1PC |
| 4 | PAN HEAD SCREW (M4 x 32mm - BLK) |  | 8PCS |


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **224863**

ASSEMBLY INSTRUCTIONS

STEP 1

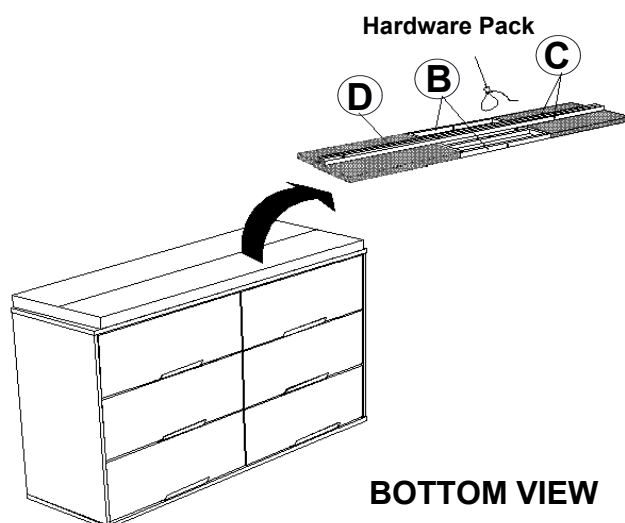


STEP 2

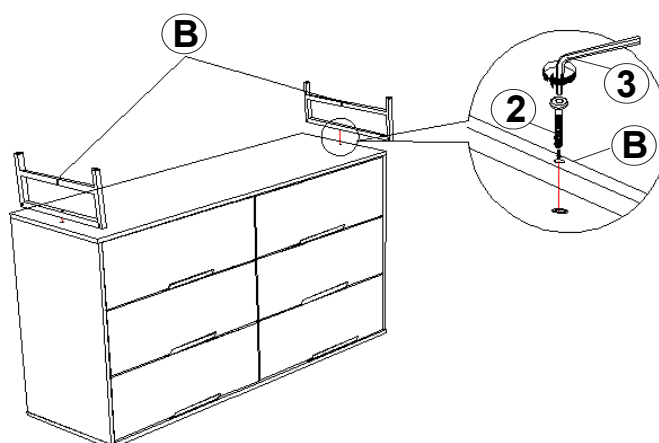

NOTE: DO NOT FULLY TIGHTEN IN THIS STEP.

STEP 3

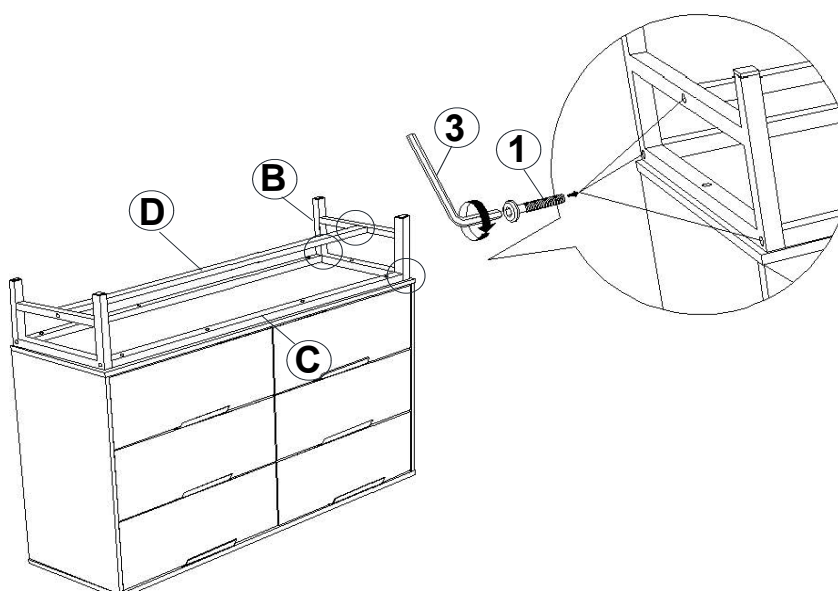


NOTE: FULLY TIGHTEN IN THIS STEP.

ITEM: **224863**



ASSEMBLY INSTRUCTIONS

STEP 4

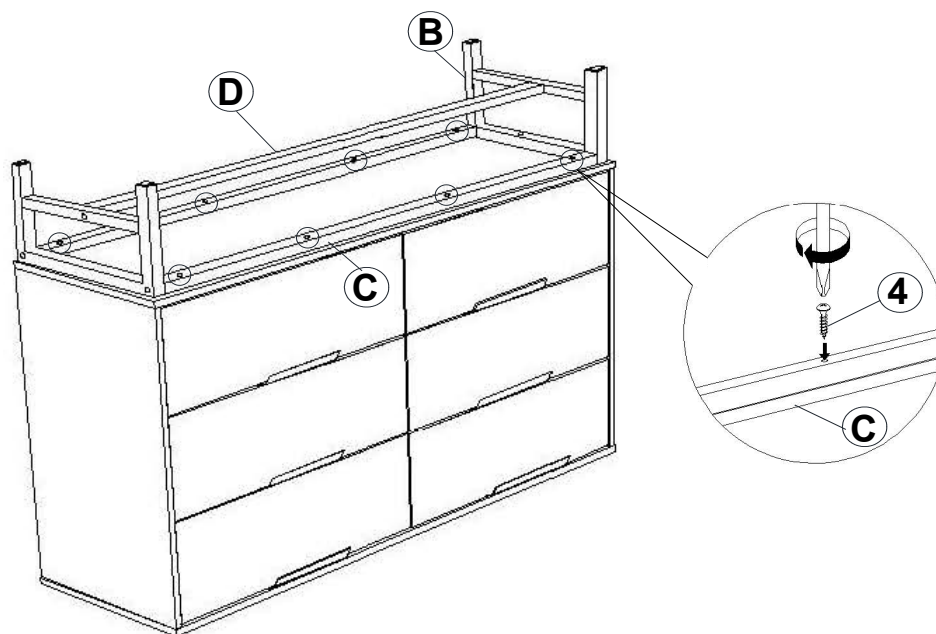

NOTE: FULLY TIGHTEN IN THIS STEP.


STEP 5 COMPLETE



ITEM:224863



Inner Size of Drawer : 25.75"W x 11.25"D x 5.25"H x 0.25"H

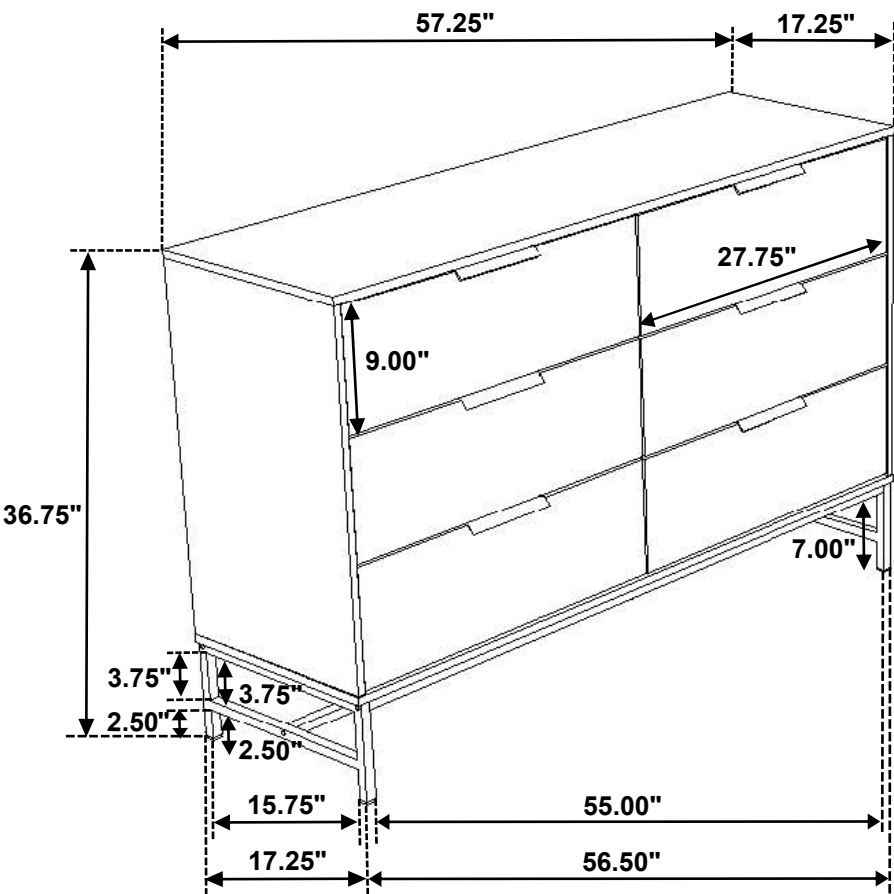

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

224864
Mirror

ITEM: **224864**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A MIRROR

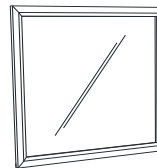

1PC

B DRESSER FROM
BOX ITEM #224863



1PC

C MIRROR SUPPORT
(PACKED WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW
(M4 x 32mm - RBW)



10PCS



NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **224864**


ASSEMBLY INSTRUCTIONS

STEP 1

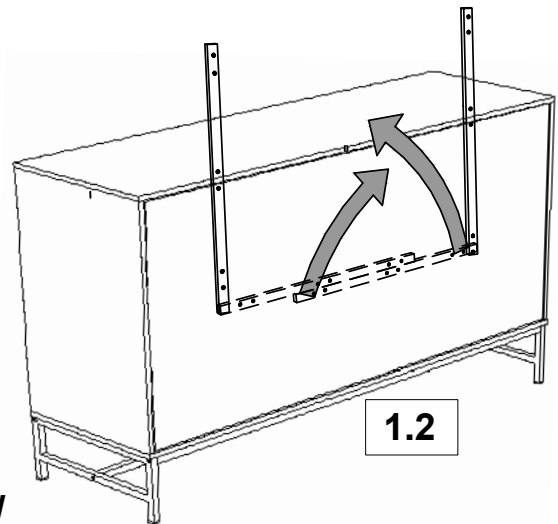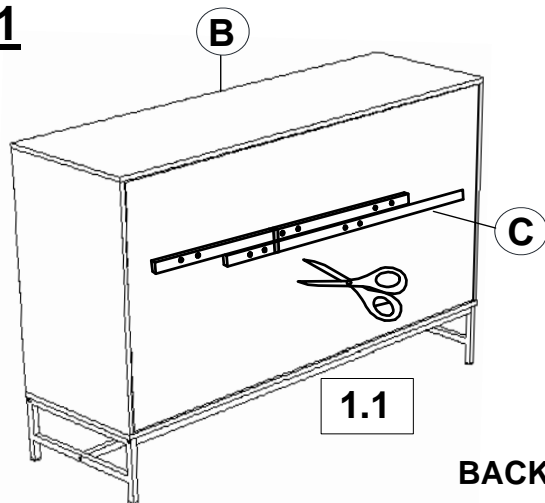


BACK VIEW

STEP 2

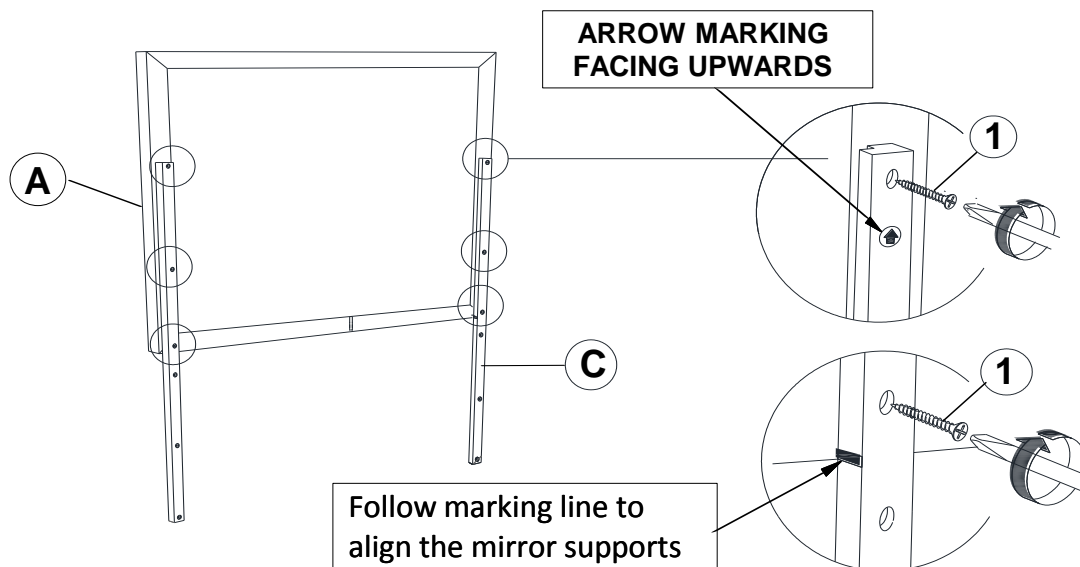


STEP 3

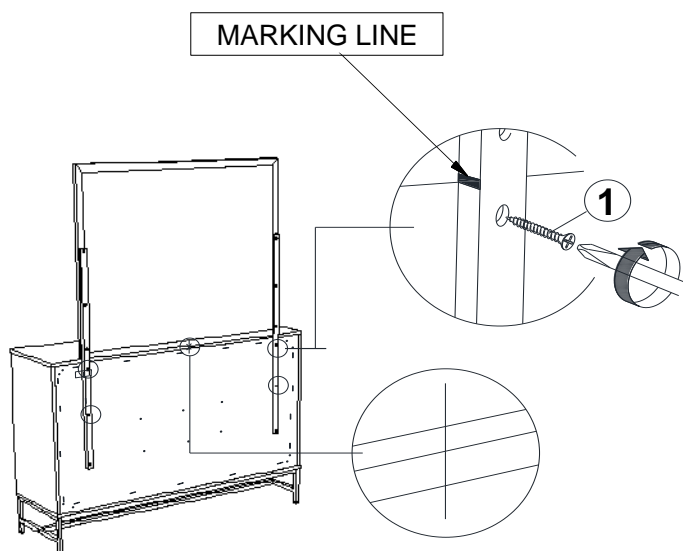


REMARK:
LINE MARKING MUST BE ALIGNED

STEP 4 COMPLETE

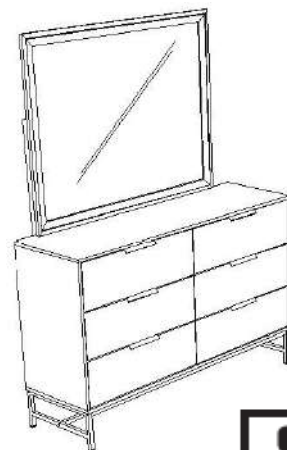

ITEM: **224864**

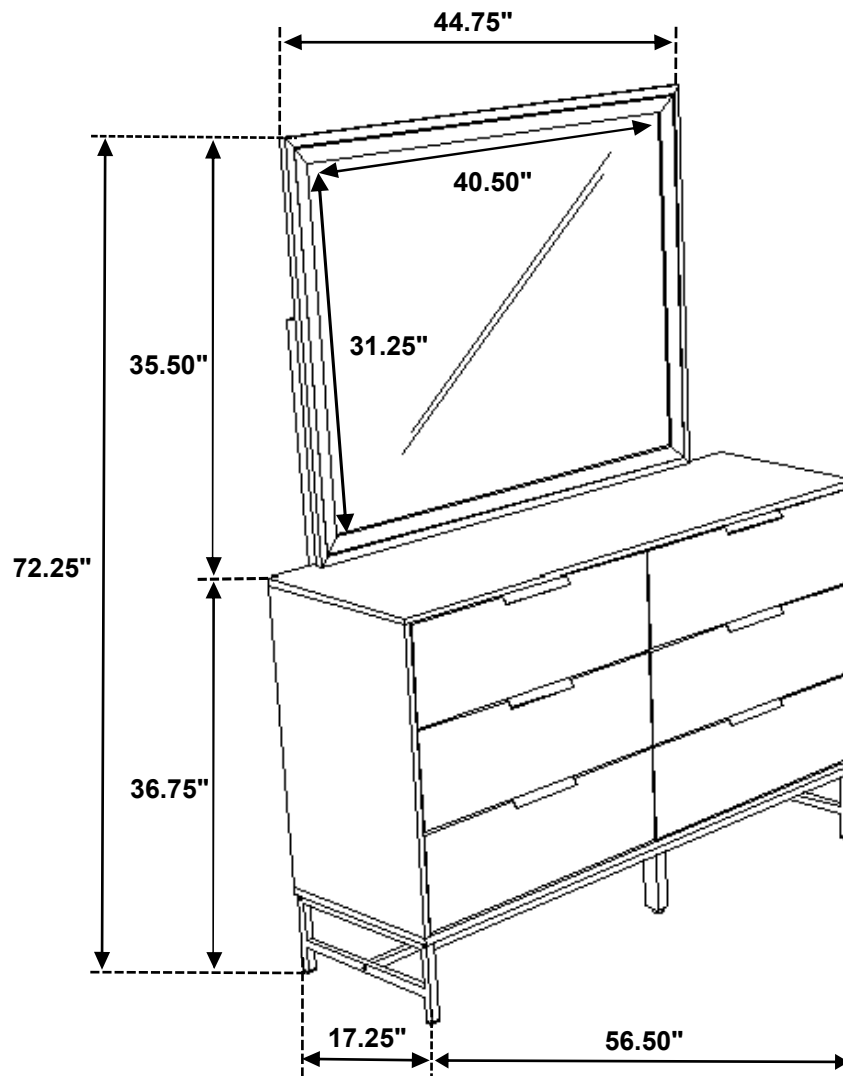

Note : Dimension tolerance $\pm 5\%$