




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

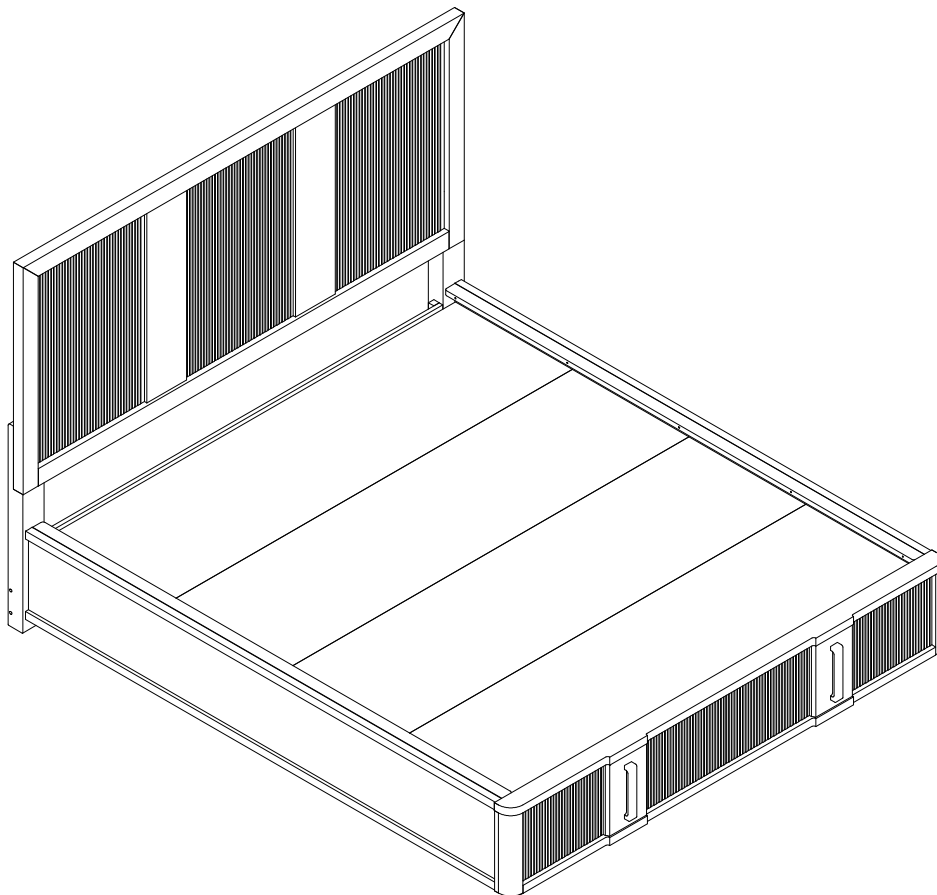

Fine Furniture for every stage of life

224900KW (B1-B3)
California King Bed

ITEM: 224900KW(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.







ASSEMBLY TIME






20 MINUTES

PARTS IDENTIFICATION





B1 (BOX 1)

A	HEADBOARD PANEL		1PC	C	RIGHT HEADBOARD LEG		1PC
B	LEFT HEADBOARD LEG		1PC	D	HEADBOARD BOTTOM RAIL		1PC

B2 (BOX 2)

E	STORAGE FOOTBOARD		1PC	H	BED SLAT SUPPORT WITH LEVELER		6PCS
F	ROLL SLAT (13PCS)		1SET	I	CONCEAL PANEL		4PCS
G	CENTER RAIL SUPPORT WITH LEVELER		3PCS				

B3 (BOX 3)

J	BED RAIL		2PCS	K	CENTER RAIL		1PC
HB	224900KW (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	E	224900KW (B2) FROM BOX 2 FOOTBOARD		1PC

ITEM: 224900KW(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.






WARNING

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION









Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224900KW (B1)

1	BOLT (5/16" x 38mm - RBW)		12PCS	3	FLAT WASHER (5/16" x 19 x 1.5mm - RBW)		12PCS
2	LOCK WASHER (5/16" - RBW)		12PCS	4	ALLEN WRENCH (74 x 30 x 4mm - RBW)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224900KW (B2)

5	FLAT HEAD SCREW (4 x 32mm - RBW)		6PCS
---	--	---	------

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224900KW (B3)

6	THREADED BOLT (5/16" x 75mm - RBW)		8PCS	10	BOLT (1/4 x 25mm - RBW)		2PCS
7	U-SQUARE WASHER (25 x 15 x 2mm - RBW)		8PCS	11	LOCK WASHER (1/4" - RBW)		2PCS
8	HEX NUT (5/16" x 17mm - RBW)		8PCS	12	FLAT WASHER (1/4" x 19 x 1.5mm - RBW)		2PCS
9	WRENCH (13MM - RBW)		1PC	13	ALLEN WRENCH (74 x 30 x 4mm - RBW)		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ITEM: 224900KW(B1-B3)

ASSEMBLY INSTRUCTIONS



STEP 1


1.1

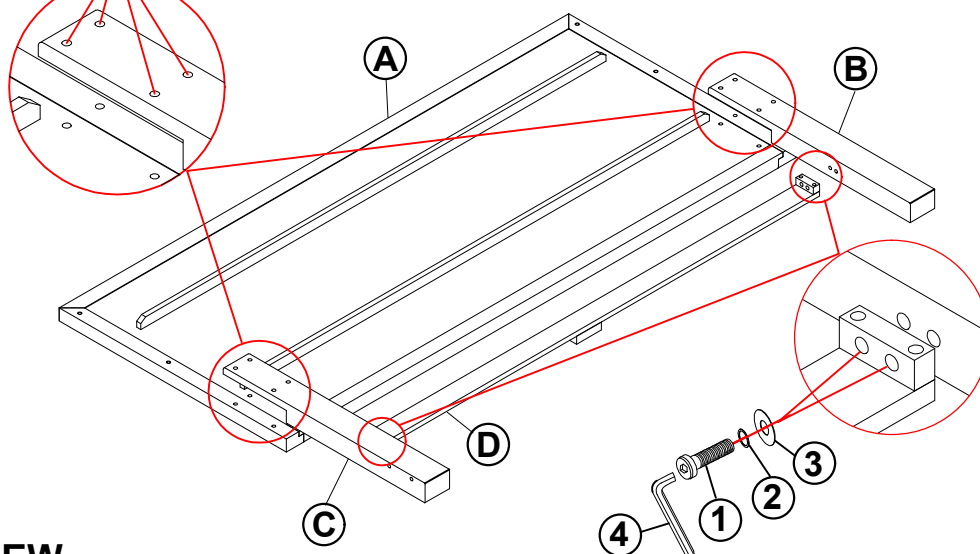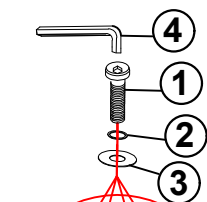

1.2

* BACK VIEW


STEP 2

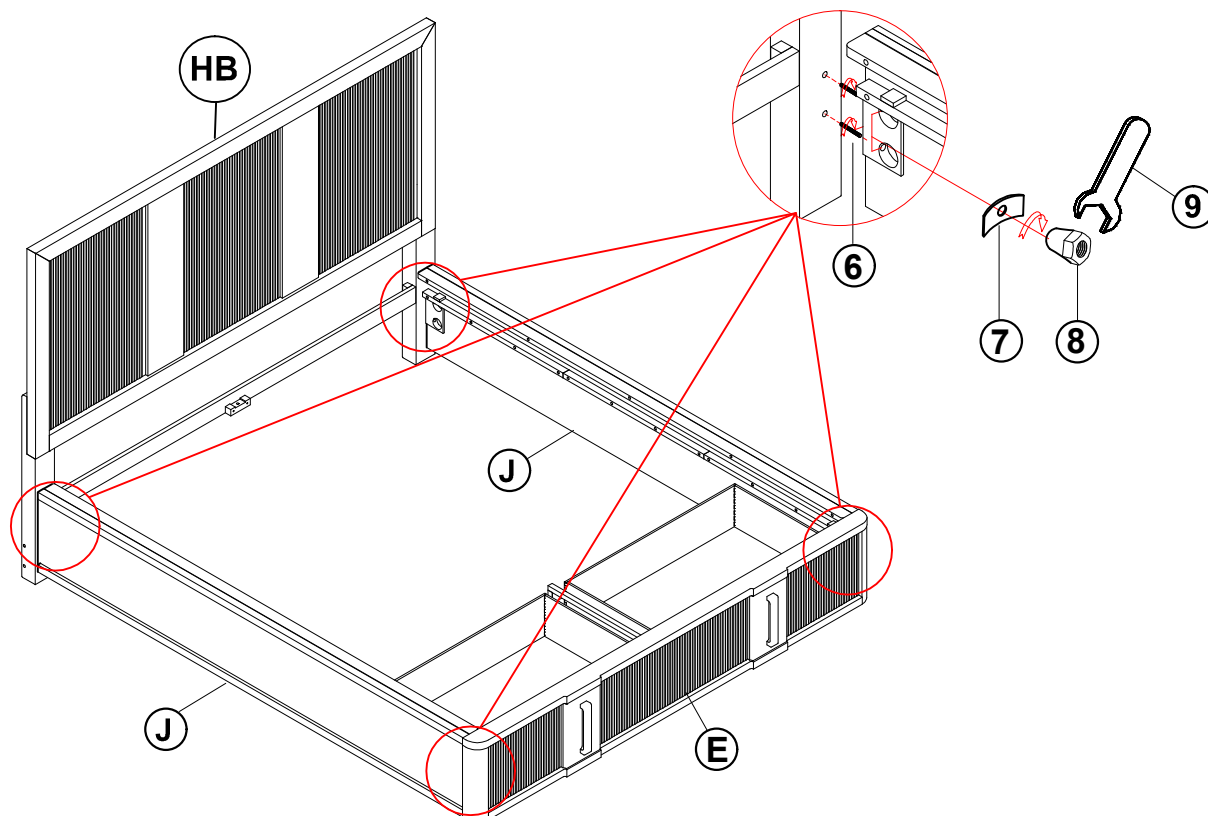


ITEM: **224900KW(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

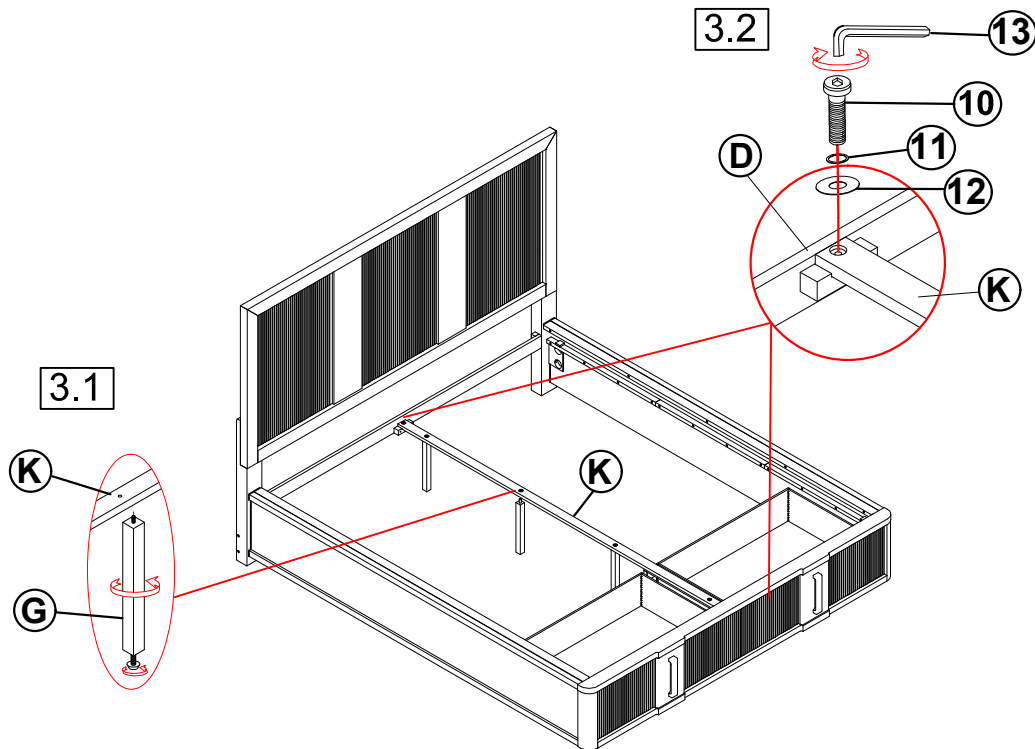

STEP 4

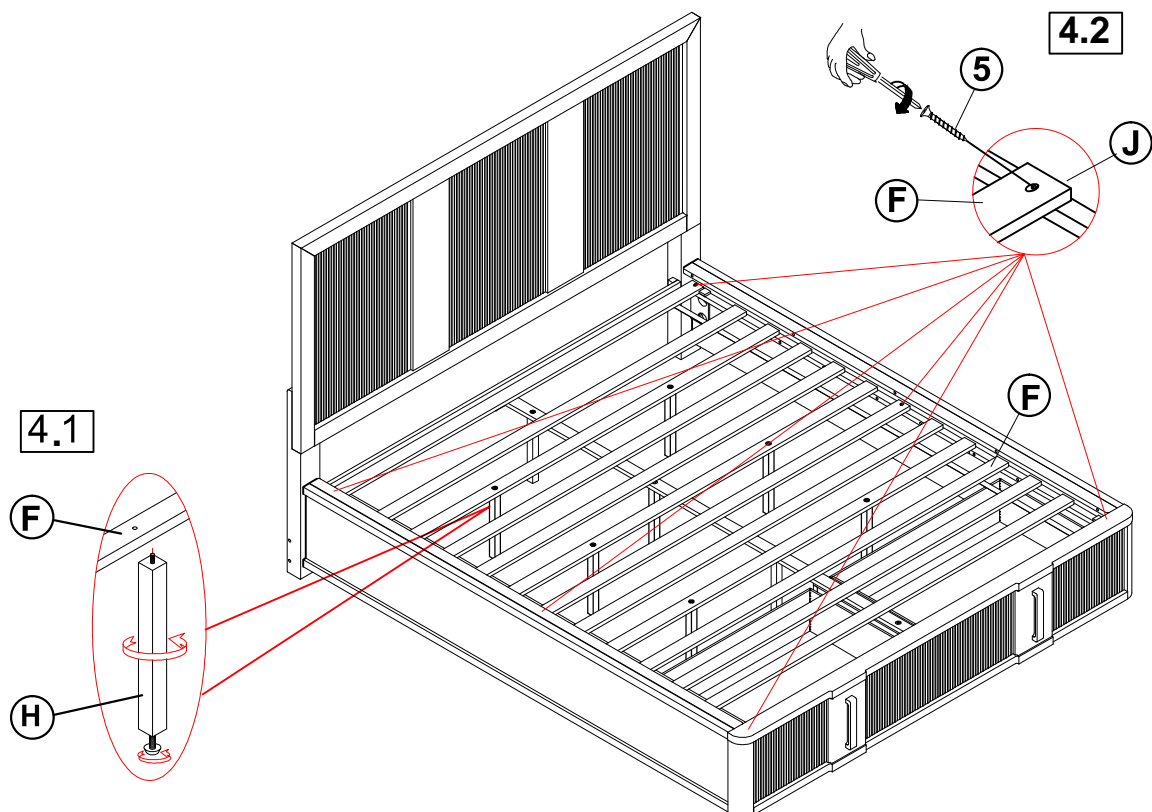


ITEM: **224900KW(B1-B3)**

ASSEMBLY INSTRUCTIONS




STEP 5

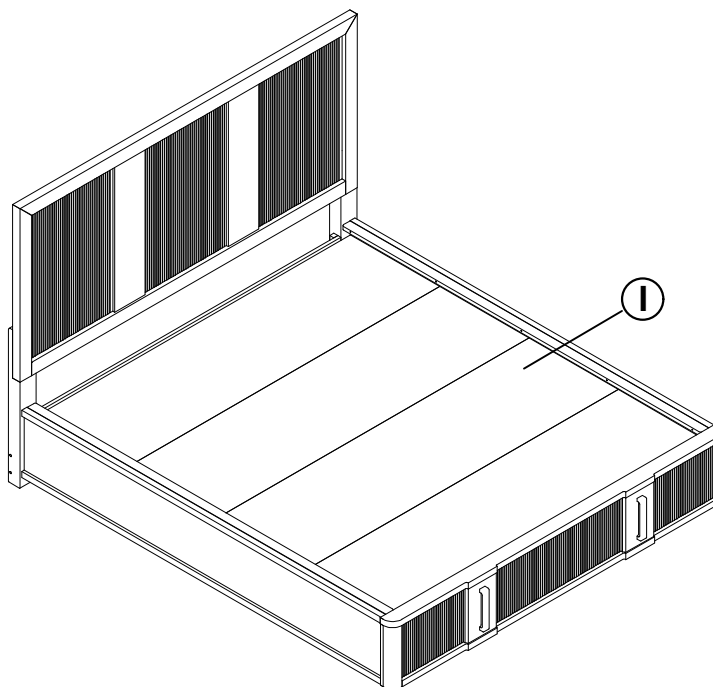

STEP 6

COMPLETE

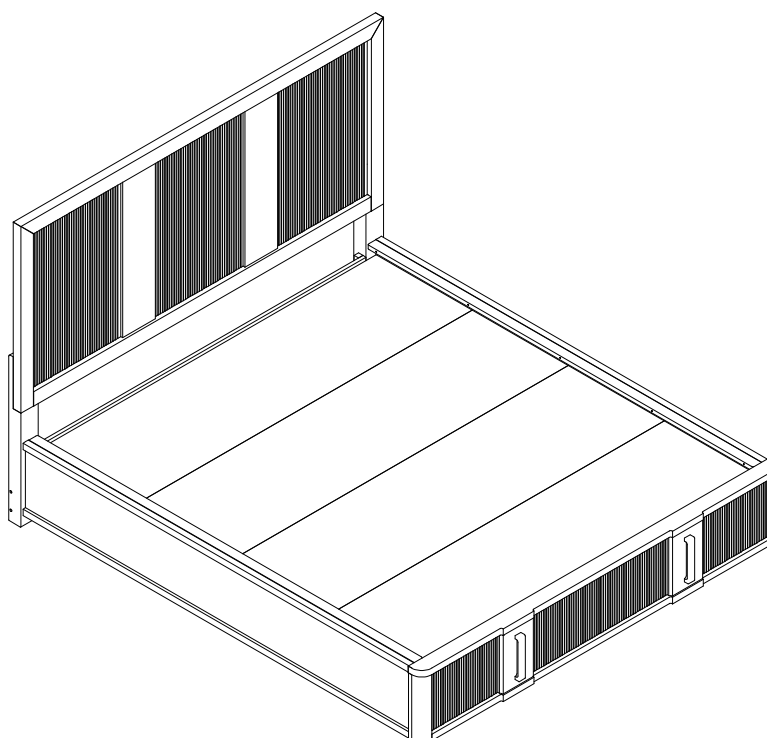


ITEM: **224900KW(B1-B3)**



Inner Size : 77.25"W x 86.00"D

Inner Size of Drawer : 33.75"W x 22.75"D x 7.25"H x 0.25T

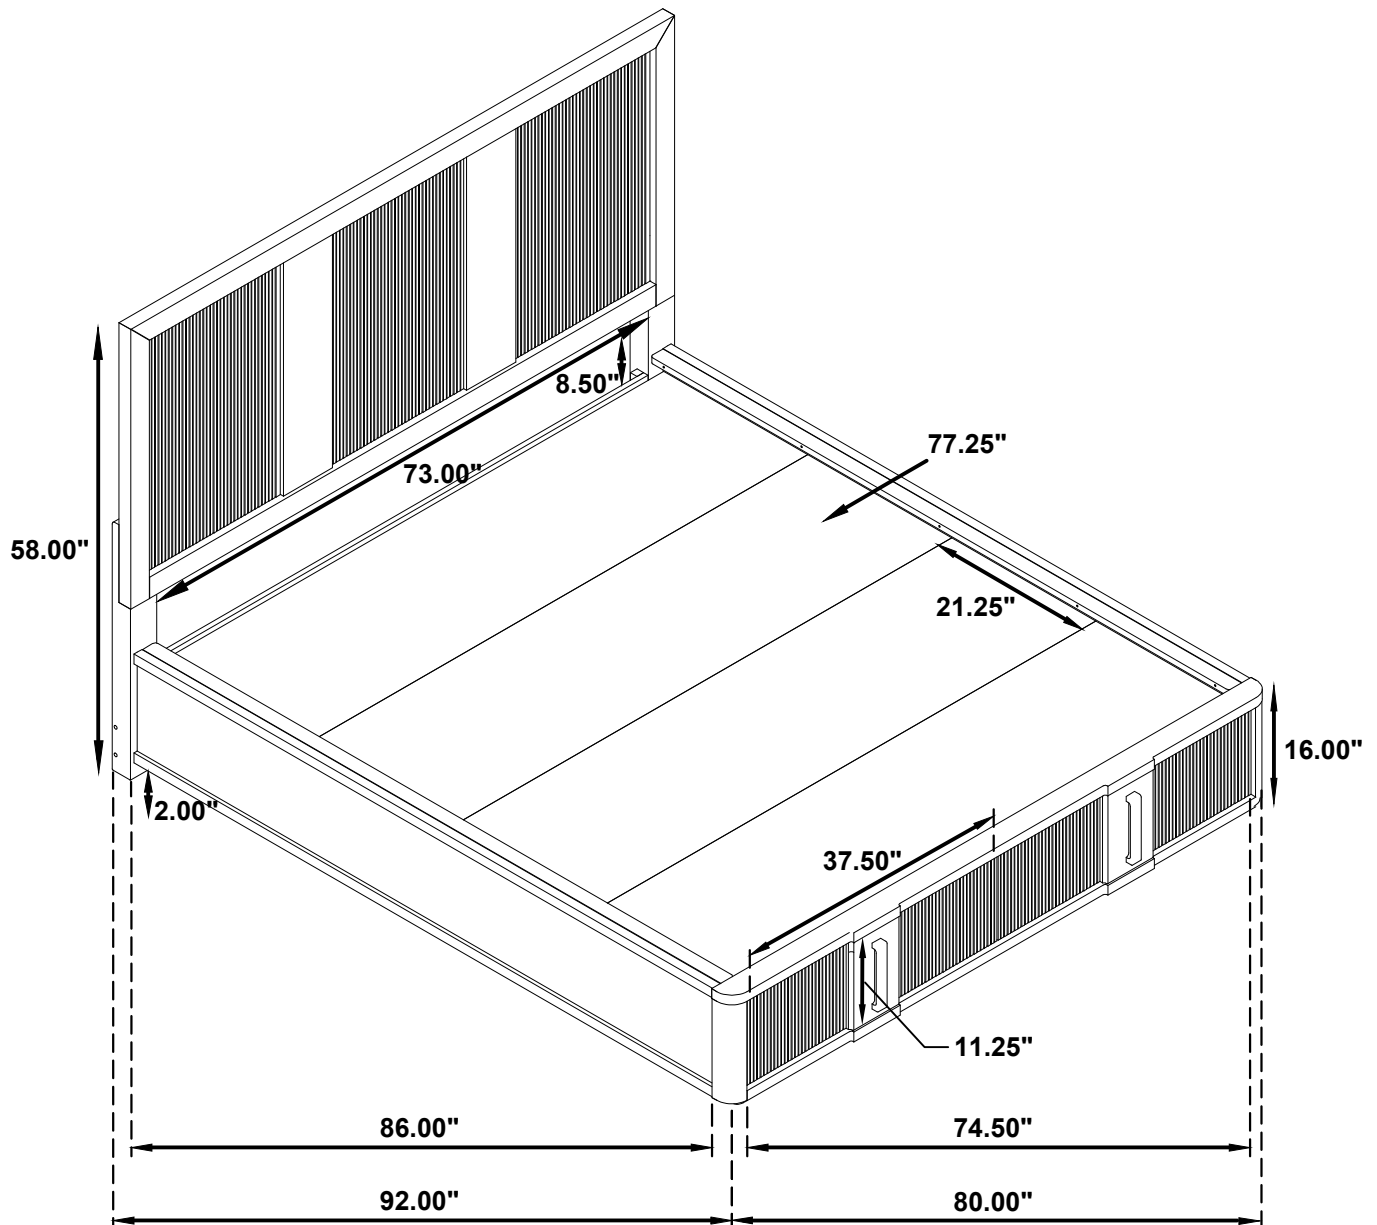

Note : Dimension tolerance $\pm 5\%$