



Fine Furniture for every stage of life

224921KE (B1-B3) Eastern King Bed

REVISION 0: 05/24/2024

PAGE 1 OF 6



COASTERFURNITURE.COM

## **ASSEMBLY INSTRUCTIONS**

## **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

B1 (BOX 1)				
A	HEADBOARD PANEL		1PC	
В	LEFT HEADBOARD LEG		1PC	
С	RIGHT HEADBOARD LEG		1PC	
D	WOOD CLEAT		2PCS	
B2 (BOX 2)				
E	FOOTBOARD		1PC	
F	BED SLAT		4PCS	
G	BED SLAT SUPPORT WITH LEVELER		8PCS	
B3 (BOX 3)				
Н	BED RAIL		2PCS	
нв	224921KE (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC	
D	224921KE (B2) FROM BOX 2 FOOTBOARD		1PC	

PAGE 2 OF 6



## **ASSEMBLY INSTRUCTIONS**

## **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.


## HARDWARE IDENTIFICATION

## Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224921KE (B3)


1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	SHORT BOLT (M6 x 30mm - BLK)	990P	8PCS
3	LONG BOLT (M6 x 60mm - BLK)	(a) <b>(a) (a)</b>	2PCS
4	FLAT HEAD SCREW (#8 x 1 1/8" - BLK)	& THERMAN	8PCS
5	WOOD DOWEL (M8 x 30mm - BLK)		4PCS


### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

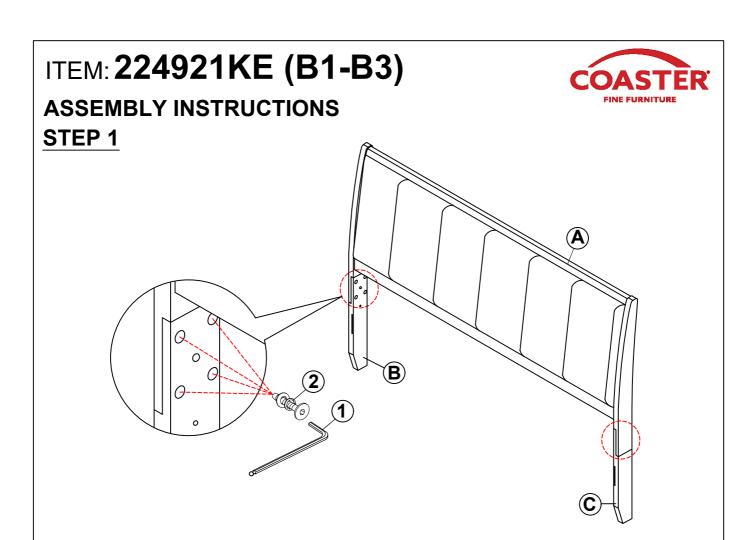



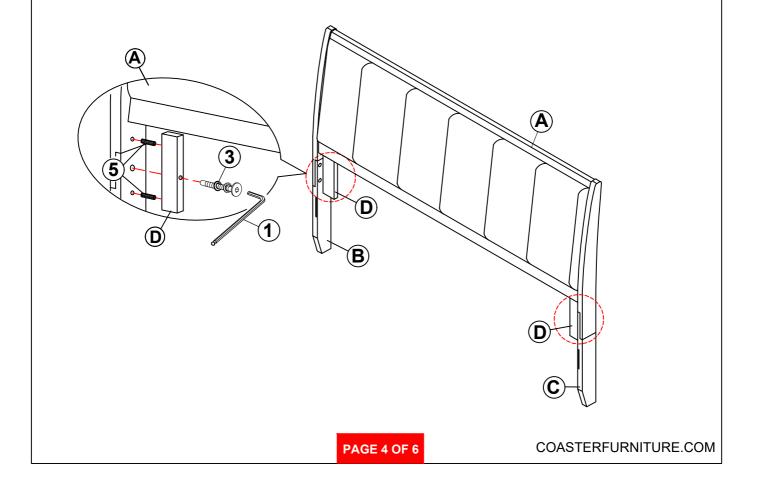

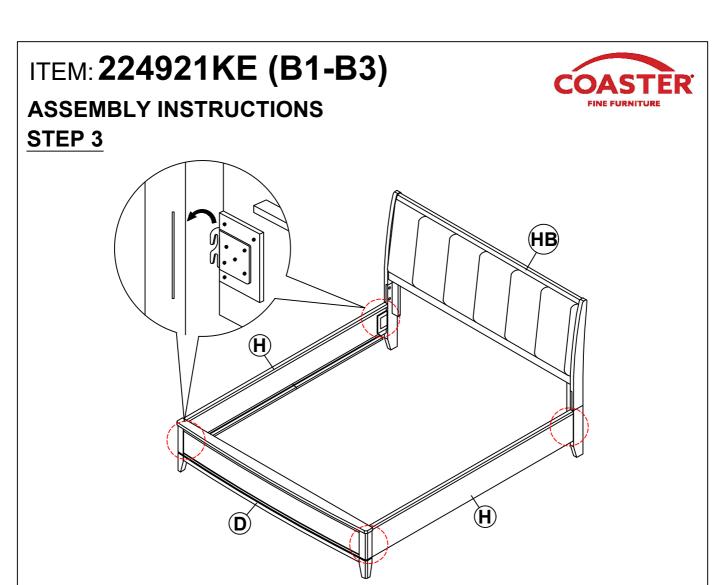

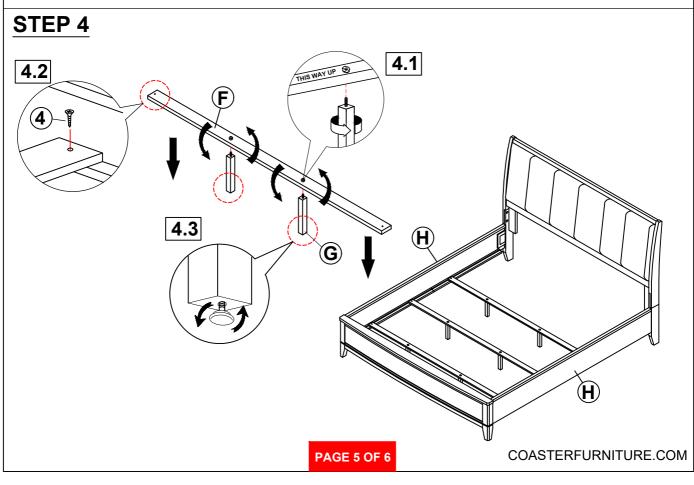

# COASTER'

ASSEMBLY INSTRUCTIONS STEP 5


COMPLETE








Inner Size: 77.00"W x 81.00"D

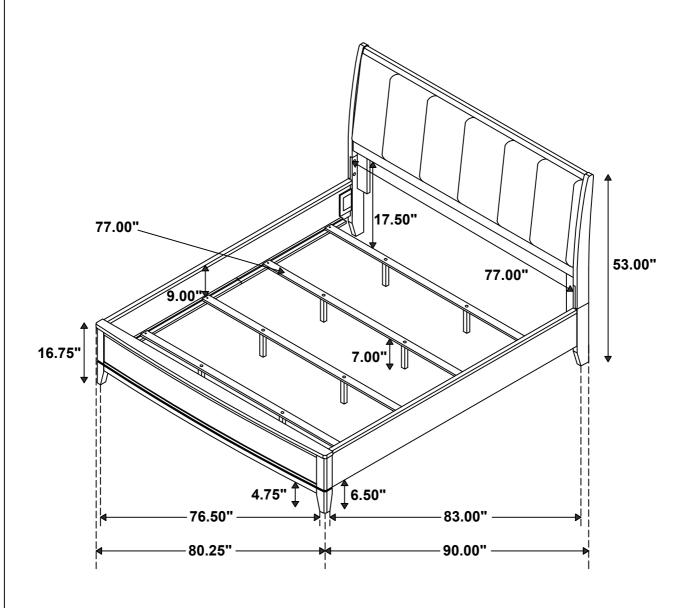

Note: Dimension tolerance ±5%



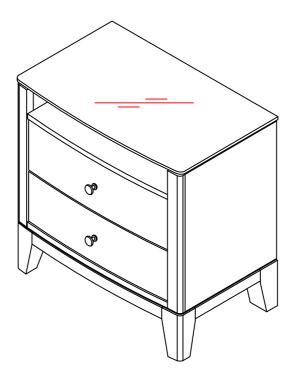

Fine Furniture for every stage of life

224922 Nightstand

REVISION 0: 05/24/2024

PAGE 1 OF 5



## **ASSEMBLY INSTRUCTIONS**

## **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A NIGHTSTAND



1PC

B TOP GLASS



1PC

## HARDWARE IDENTIFICATION

1 THREADED BOLT (8 x 30mm - BLK)




4PCS

## NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



# ASSEMBLY INSTRUCTIONS STEP 1

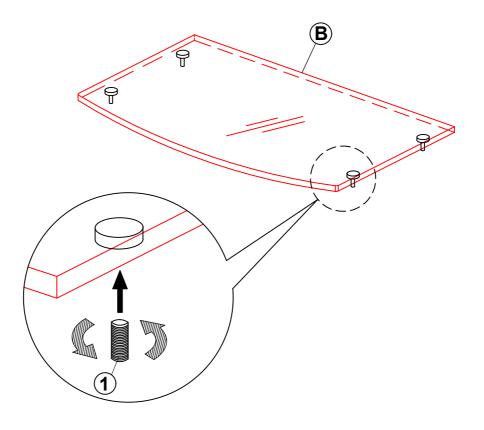


## STEP 2

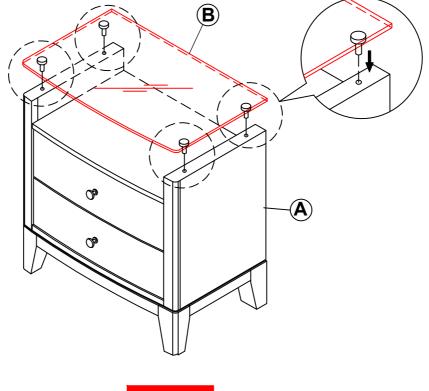

PAGE 3 OF 5



# ASSEMBLY INSTRUCTIONS STEP 3 COMPLETE

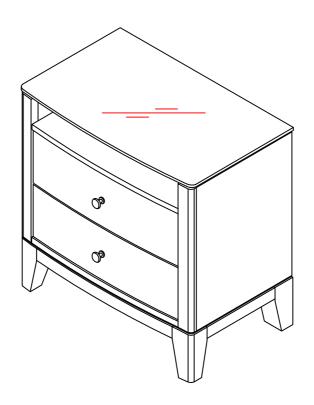



## ANTI-TIPPING INSTALLMENT INSTRUCTIONS



## **FURNITURE TIPPING RESTRAINT**

## **WARNING**

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

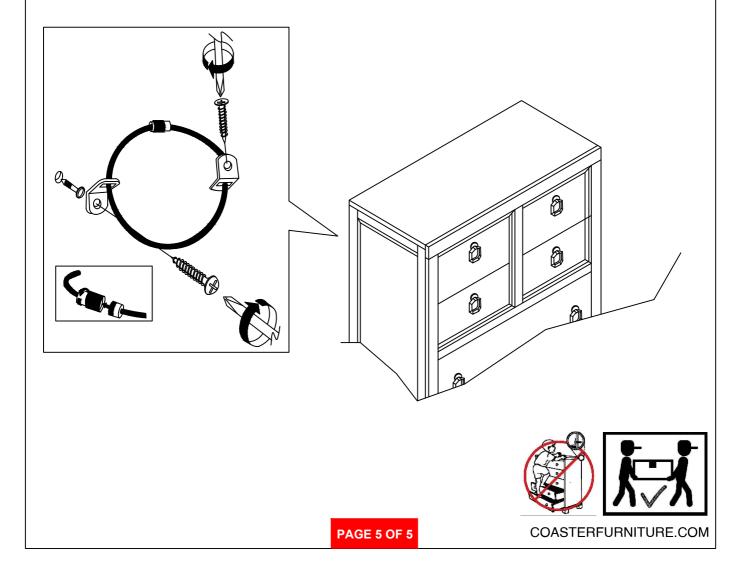



Inner Size of Drawer: 18.00"W x 12.25"D x 4.75"H x 0.50"T

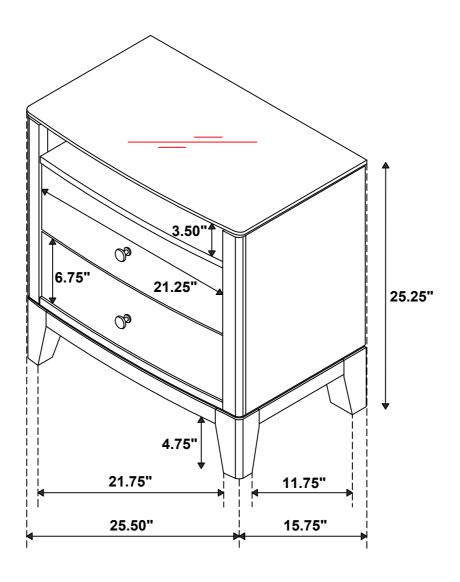

Note: Dimension tolerance ±5%





Fine Furniture for every stage of life

224923 Dresser

REVISION 0: 05/24/2024

PAGE 1 OF 3



## **ASSEMBLY INSTRUCTIONS**

## **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



## **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


## PARTS IDENTIFICATION

A DRESSER



1PC

# ASSEMBLY INSTRUCTIONS STEP 1 COMPLETE

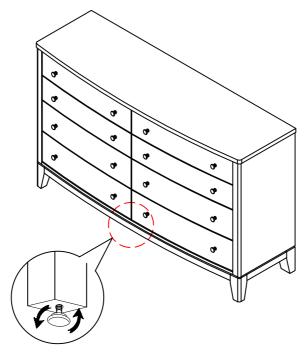



COASTERFURNITURE.COM

PAGE 2 OF 3



## **ANTI-TIPPING INSTALLMENT INSTRUCTIONS**

## **FURNITURE TIPPING RESTRAINT**

## **WARNING**

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

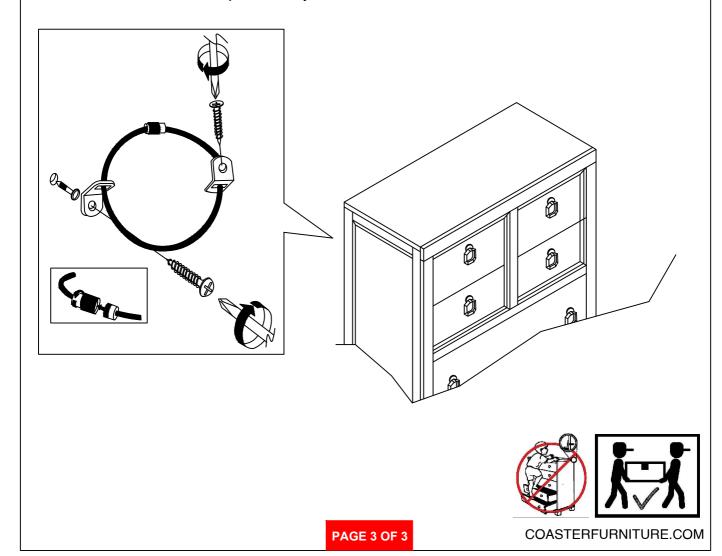




Inner Size of Drawer A: 25.25"W x 13.75"D x 4.00"H x 0.50"T Inner Size of Drawer B: 25.25"W x 13.75"D x 5.50"H x 0.50"T

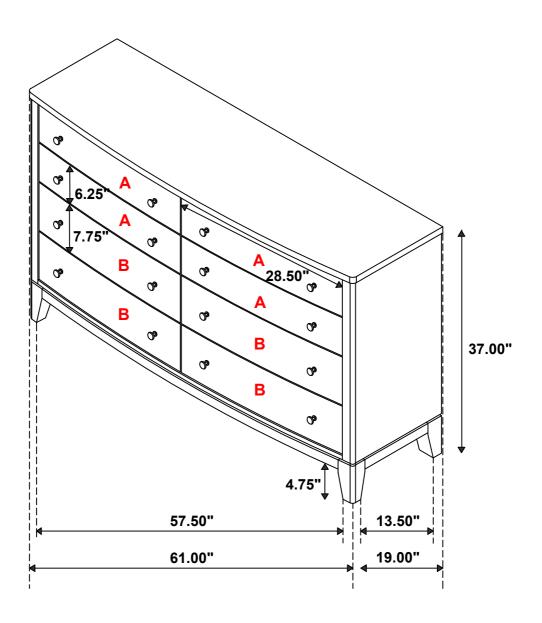

Note: Dimension tolerance ±5%



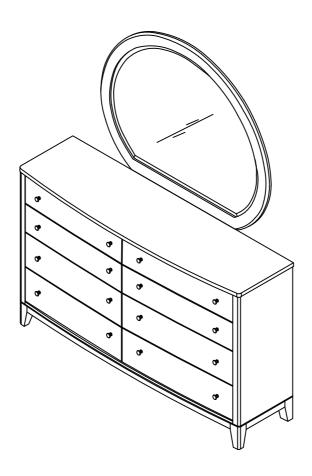

Fine Furniture for every stage of life

**224924 Mirror** 

REVISION 0: 05/24/2024

PAGE 1 OF 3



## **ASSEMBLY INSTRUCTIONS**

## **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

A MIRROR 1PC

B DRESSER \* FROM BOX ITEM #224923

C MIRROR SUPPORT (PACKED WITH DRESSER) 2PCS

## HARDWARE IDENTIFICATION

1 SHORT FLAT HEAD SCREW
(M4 x 32mm - BLK)

4PCS

LONG FLAT HEAD SCREW
(M4 x 45mm - BLK)

4PCS


## NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ASSEMBLY INSTRUCTIONS STEP 1


B



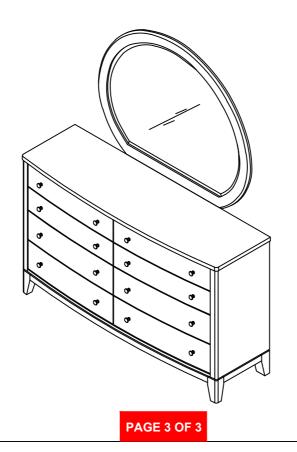





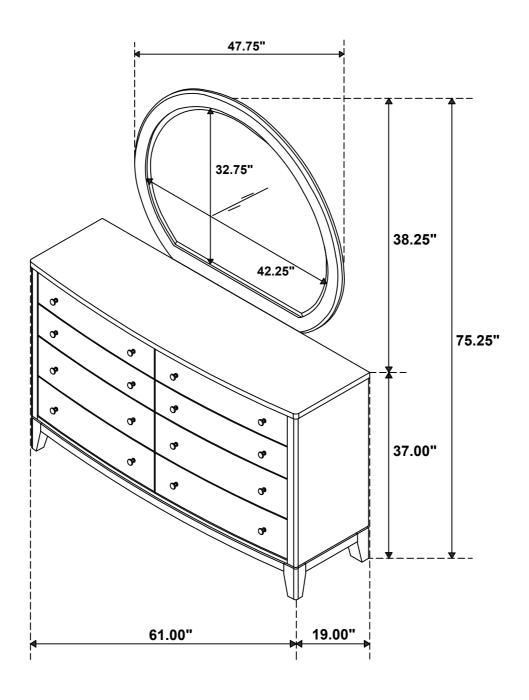

Note : Dimension tolerance ±5%