

Fine Furniture for every stage of life

224931KE(B1&B2) Eastern King Bed

REVISION 0: 05/09/2024

PAGE 1 OF 6

ITEM: 224931KE (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)					
Α	HEADBOARD PANEL		1PC		
В	FOOTBOARD PANEL		1PC		
С	TOP CANOPY BAR		2PCS		
D	BED SLAT		4PCS		
E	BED SLAT SUPPORT WITH LEVELER		8PCS		
F	WOOD CLEAT		2PCS		
B2 (BOX 2)					
G	BED RAIL		2PCS		
н	LEFT HEADBOARD POST		1PC		
ı	RIGHT HEADBOARD POST		1PC		
J	LEFT FOOTBOARD POST	8	1PC		
ĸ	RIGHT FOOTBOARD POST		1PC		
L	SIDE CANOPY BAR		2PCS		
НВ	224931KE (B1&B2) FROM BOX 1&2 HEADBOARD COMPLETE		1PC		
FB	224931KE (B1&B2) FROM BOX 1&2 FOOTBOARD COMPLETE		1PC		
		PAGE 2 OF 6	COASTERFURNITURE.COM		

ITEM: 224931KE (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.


HARDWARE IDENTIFICATION


Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224931KE (B2)


1	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
2	SHORT BOLT (M6 x 25mm - BLK)	(a) DDP	8PCS
3	LONG BOLT (M6 x 60mm - BLK)	O TOPONO	10PCS
4	WOOD DOWEL (M10 x 40mm)		14PCS
5	SHORT FLAT HEAD SCREW (M3.5 x 16mm - BLK)	1 min	20PCS
6	LONG FLAT HEAD SCREW (#8 x 1 1/8" - BLK)	& Turning	8PCS
7	BRACKET (35H x 18W x 35Lmm - BLK)		8PCS
8	MEDIUM BOLT (M6 x 50mm - BLK)	9799DD	2PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

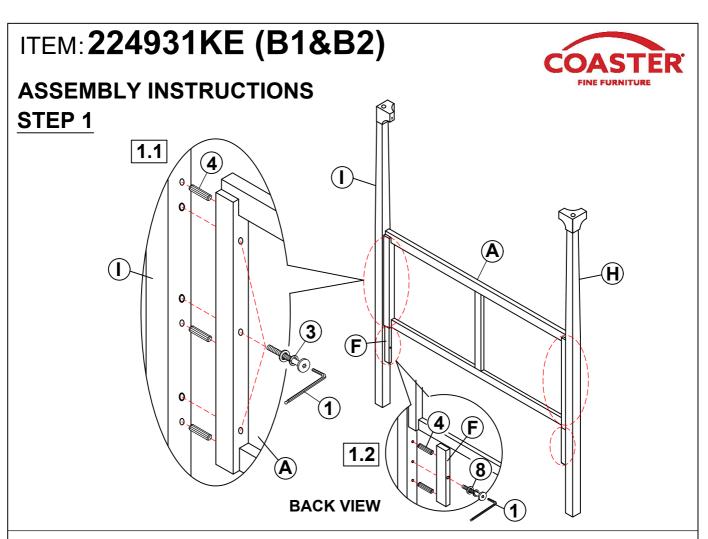


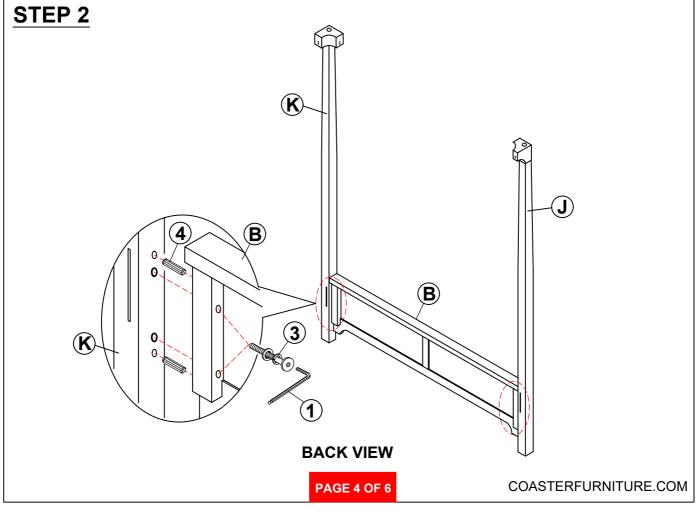

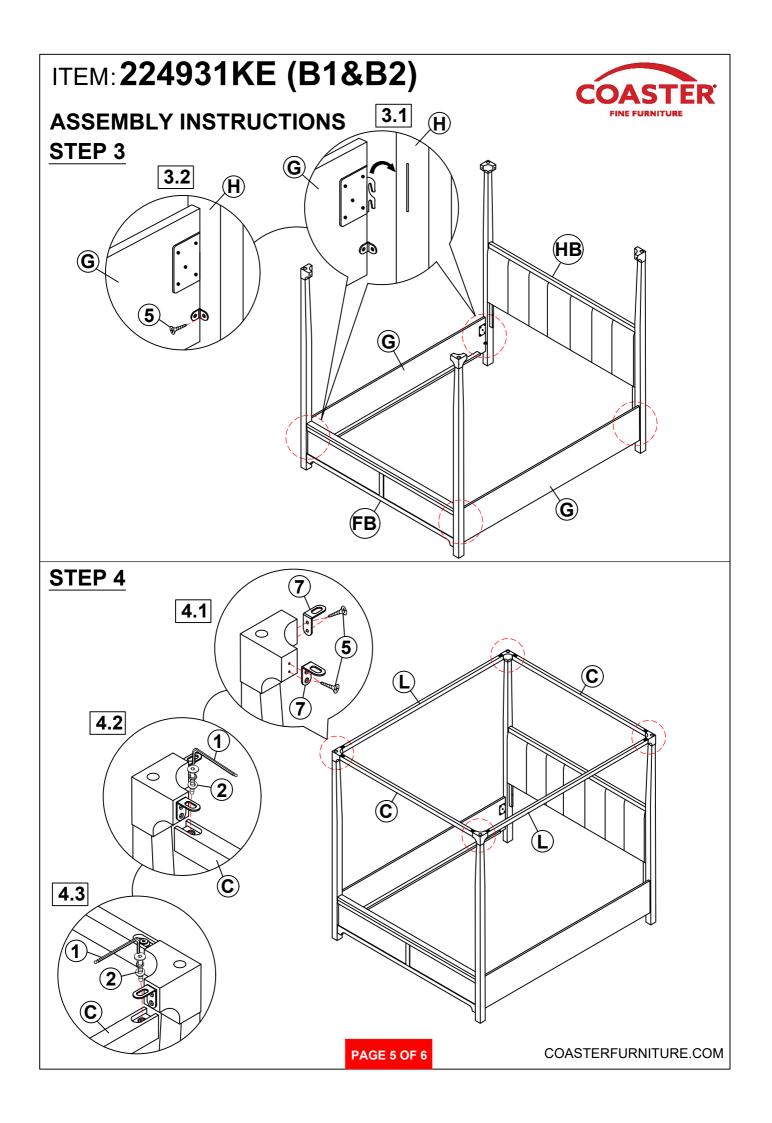

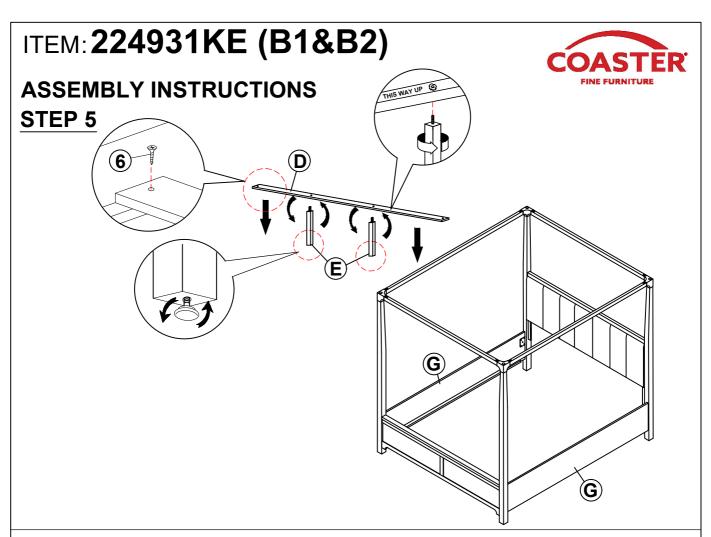


STEP 6 COMPLETE

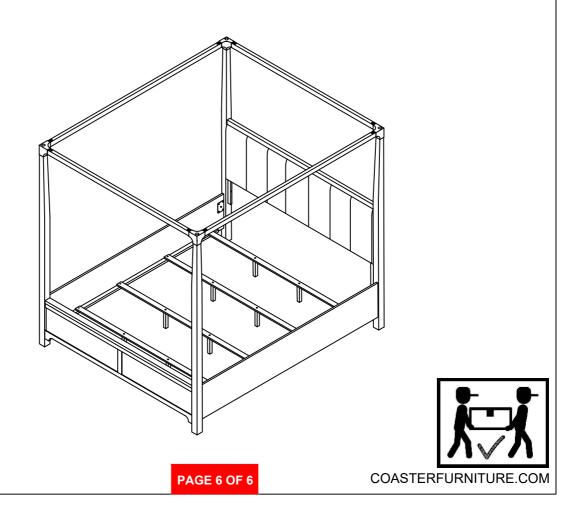

ITEM: **224931KE (B1&B2)**




Inner Size: 77.00"W x 81.00"D

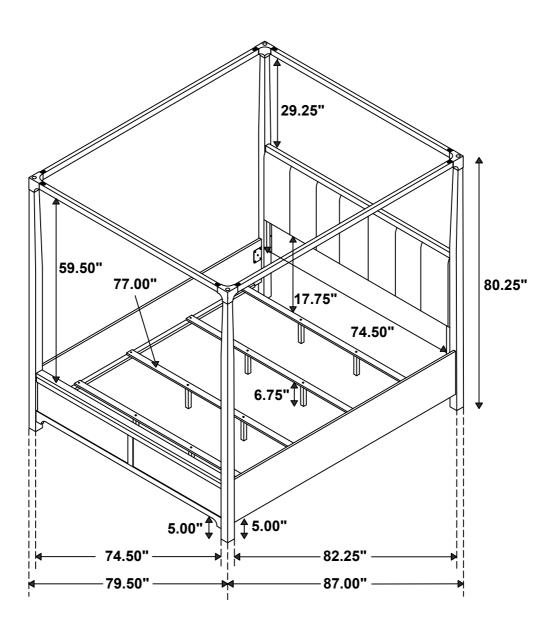

Note: Dimension tolerance ±5%



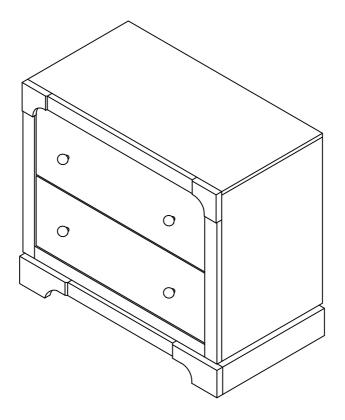

Fine Furniture for every stage of life

224932 Nightstand



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

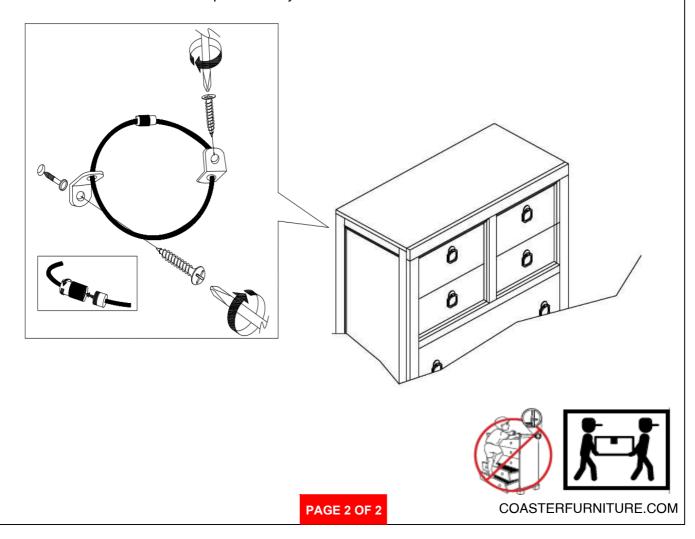




Inner Size of Drawer : 21.00"W x 12.25"D x 5.50"H x 0.50"T

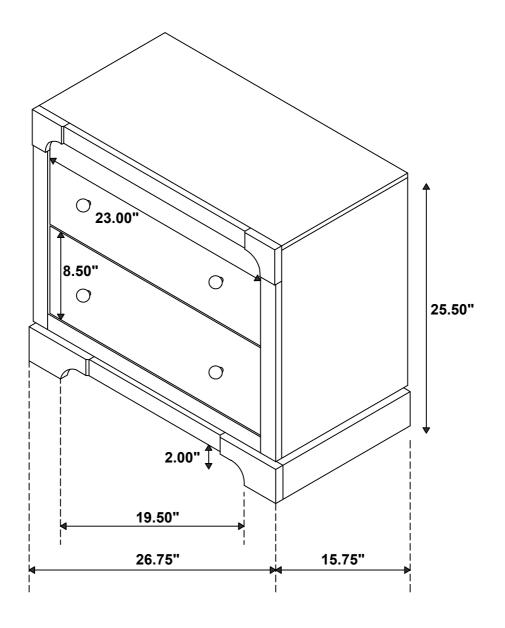

Note: Dimension tolerance ±5%



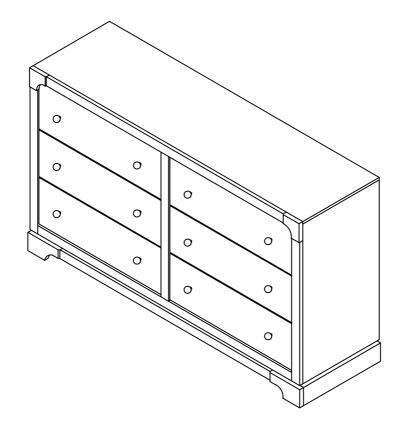

Fine Furniture for every stage of life

224933 Dresser

REVISION 0: 05/09/2024

PAGE 1 OF 3



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES


PARTS IDENTIFICATION


A DRESSER



1PC

ASSEMBLY INSTRUCTIONS STEP 1 COMPLETE

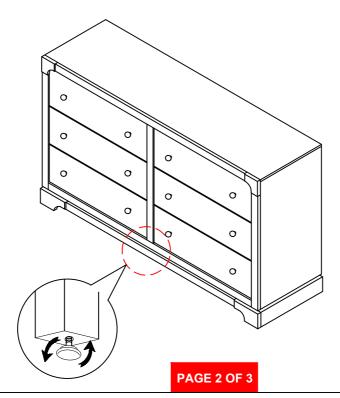





ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

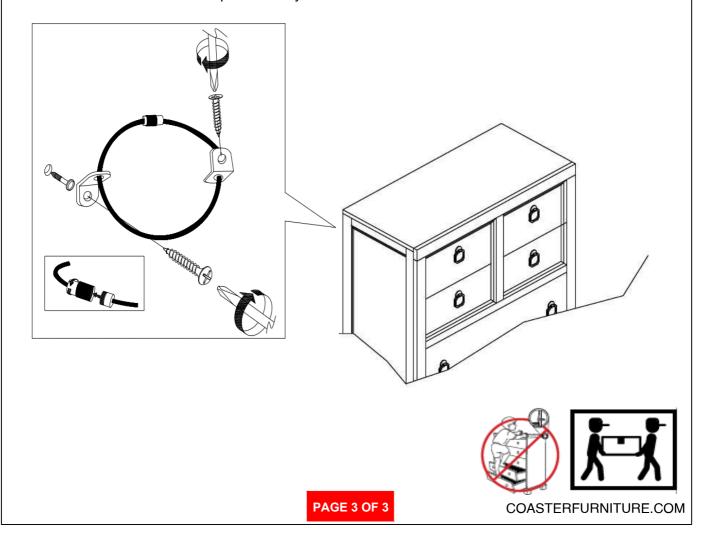




Inner Size of Drawer : 25.75"W x 12.75"D x 5.50"H x 0.50"T

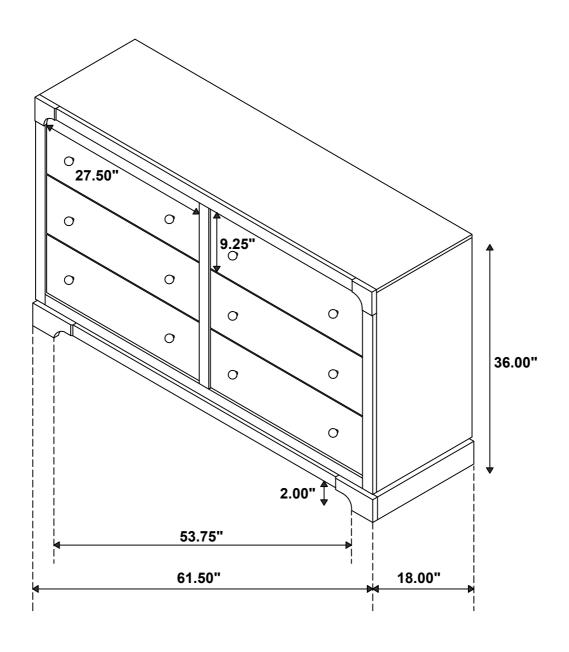

Note: Dimension tolerance ±5%



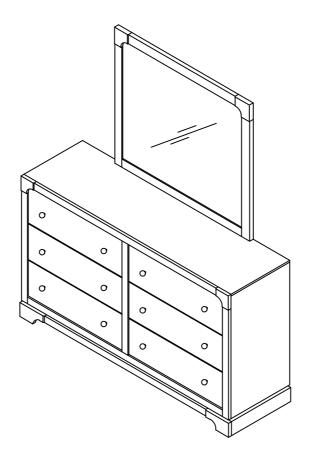

Fine Furniture for every stage of life

224934 *Mirror*

REVISION 0: 05/09/2024

PAGE 1 OF 3



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

SHORT FLAT HEAD SCREW

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR

DRESSER
* FROM BOX ITEM #224933

TPC

MIRROR SUPPORT
(PACKED WITH DRESSER)

2PCS

HARDWARE IDENTIFICATION

1 (M4 x 32mm - BLK)


2 LONG FLAT HEAD SCREW
(M4 x 45mm - BLK)

4PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


4PCS

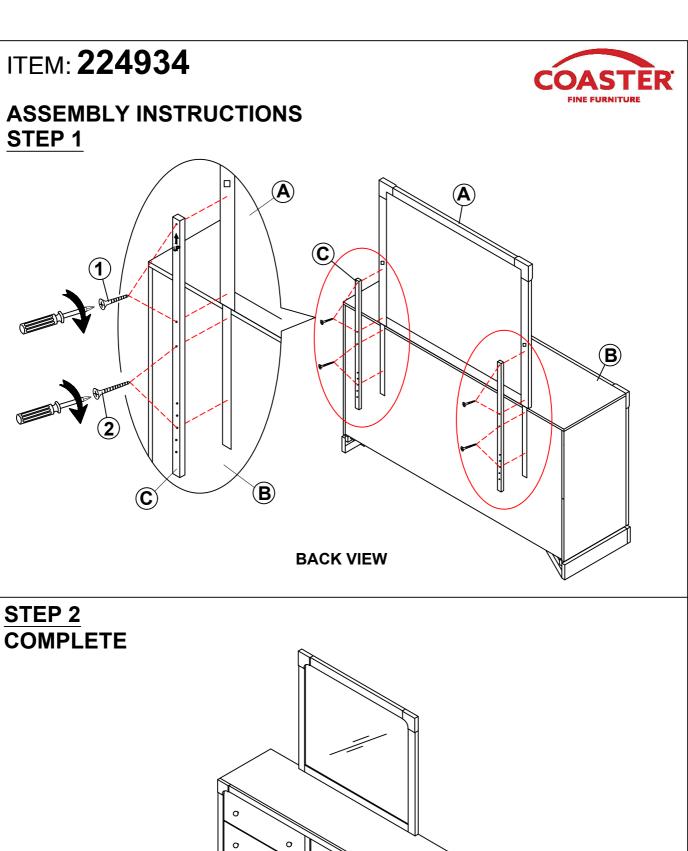








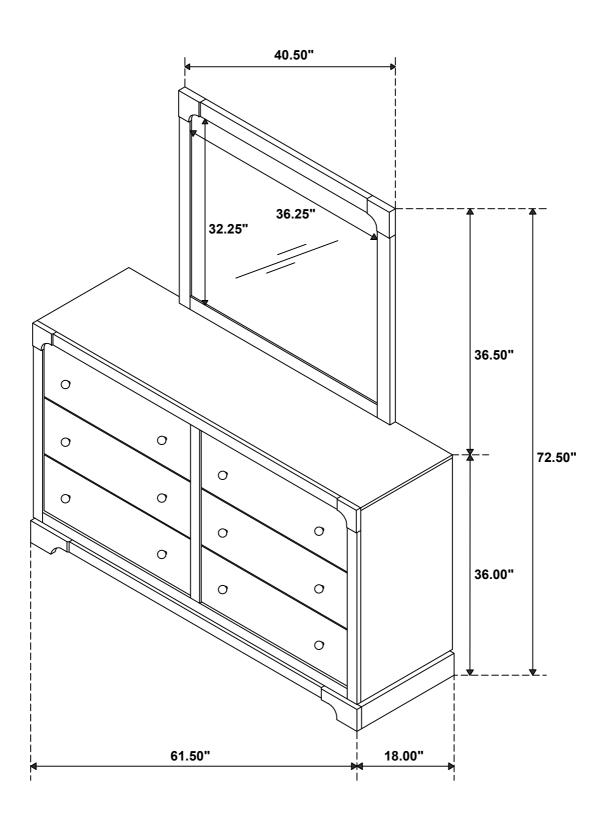

Note: Dimension tolerance ±5%



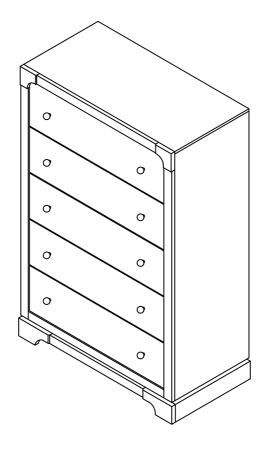

Fine Furniture for every stage of life

224935 Chest



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

- 1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
- 2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
- 3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
- 4. Attach the bracket over the plastic wall anchor using the long screw.
- 5. Place the unit against the wall, both brackets need to be facing each other.
- 6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
- 7. Ensure that the restraint strap is securely laced and locked.

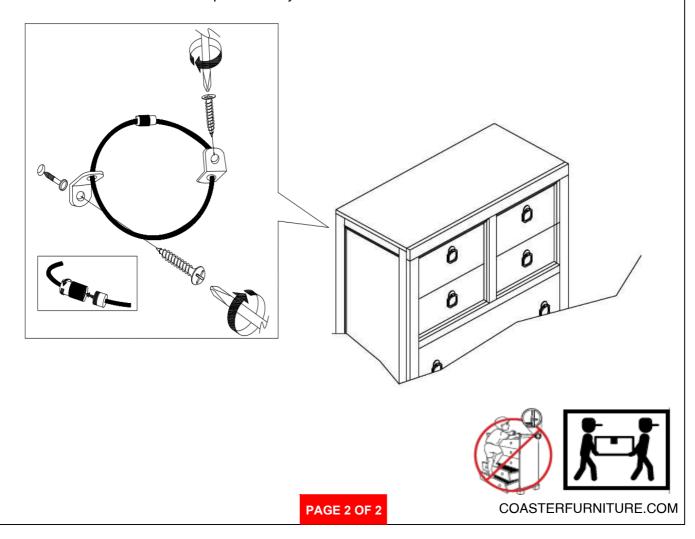



Inner Size of Drawer: 30.75"W x 12.75"D x 5.50"H x 0.50"T

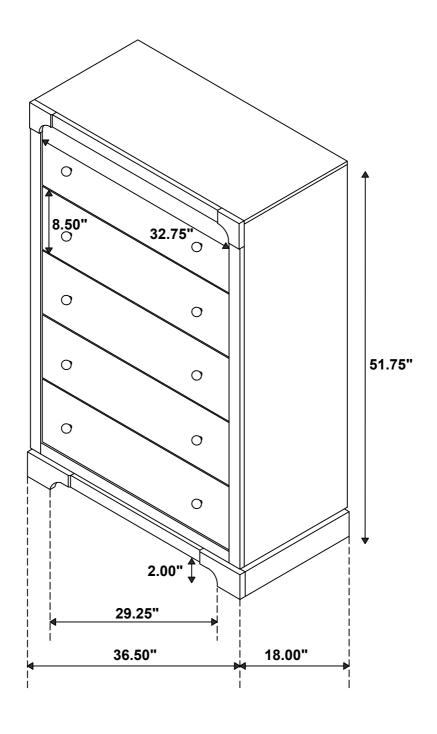

Note: Dimension tolerance ±5%