

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224951KE (B1-B3) Eastern King Bed

REVISION 0: 06/20/2024 REVISION 1: 02/25/2025

PAGE 1 OF 6

ITEM: 224951KE (B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL



1PC

C RIGHT HEADBOARD LEG



1PC

B LEFT HEADBOARD LEG



D ADAPTER



1PC

B2 (BOX 2)

E FOOTBOARD PANEL



1PC

G BED SLAT



4PCS

F FOOTBOARD FOOT



2PCS

H BED SLAT SUPPORT



8PCS

B3 (BOX 3)

I BED RAIL




2PCS

HB 224951KE(B1) FROM BOX 1 HEADBOARD COMPLETE



1PC

FB 224951KE(B2) FROM BOX 2 FOOTBOARD COMPLETE



1PC

ITEM: 224951KE (B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224951KE (B1)

1	BOLT (M6 x 40mm - RBW)	6PCS
2	LOCK WASHER (M6 x 12mm - RBW)	6PCS
3	FLAT WASHER (M6 x 13mm - RBW)	6PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)	1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224951KE (B2)

5	BOLT (M6 x 35mm - RBW)		8PCS
6	LOCK WASHER (M6 x 12mm - RBW)		8PCS
7	FLAT HEAD SCREW (M3.5 x 32mm - RBW)	Ø IIIIIIIII	8PCS
8	ADJUSTABLE LEVELER (M6 x 39mm)		8PCS
9	ALLEN WRENCH (M4 x 60mm - BLK)		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM:224951KE (В1-В3)


ASSEMBLY INSTRUCTIONS





COASTERFURNITURE.COM

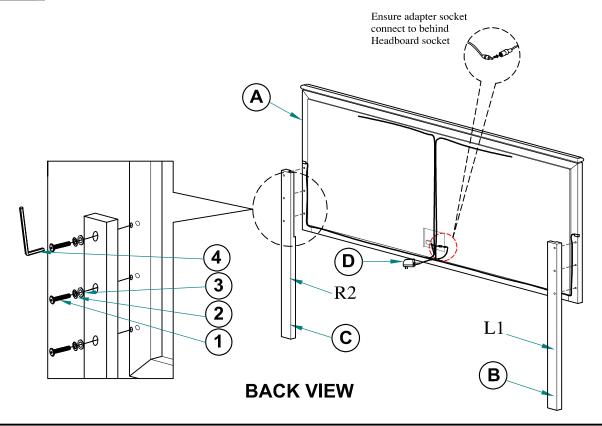

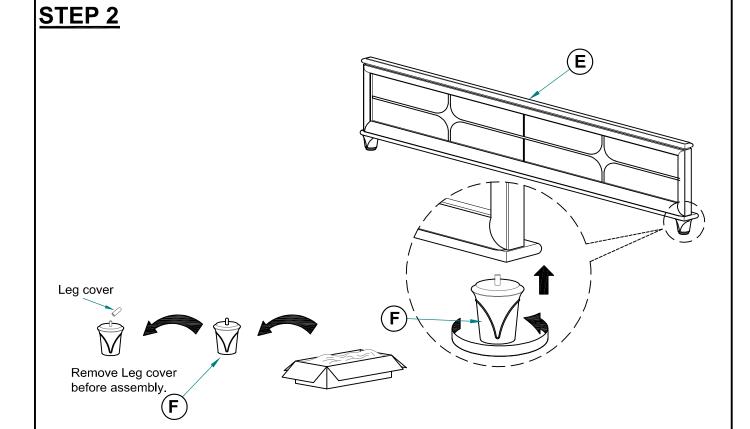


PAGE 4 OF 6

ITEM:224951KE (В1-В3)


ASSEMBLY INSTRUCTIONS



STEP 3

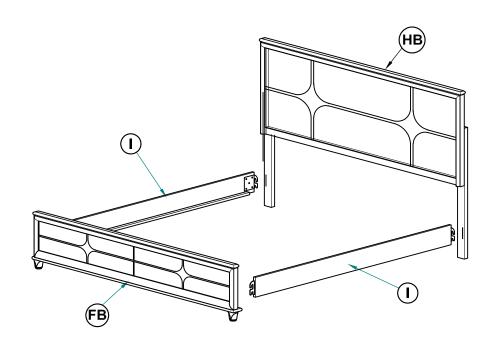

STEP 4

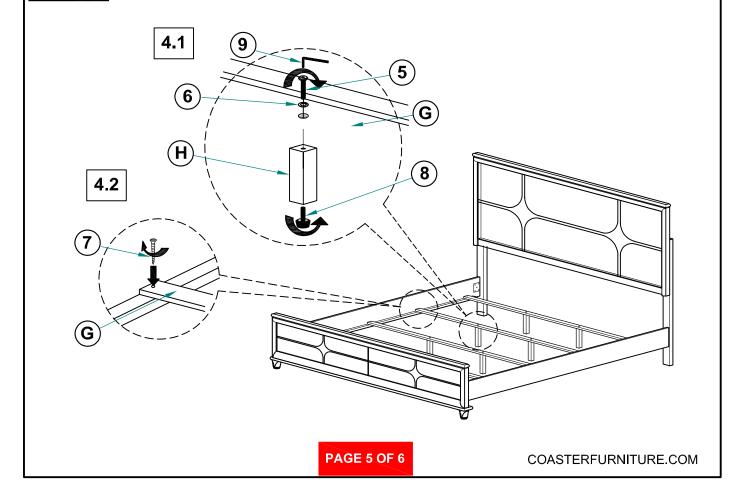


ITEM:**224951KE (В1-В3)**

ASSEMBLY INSTRUCTIONS



STEP 5 COMPLETE

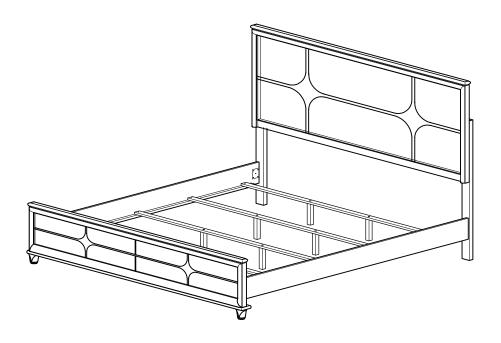




ITEM: 224951KE (B1-B3)




Inner Size of Bed: 76.50"W x 81.00"D

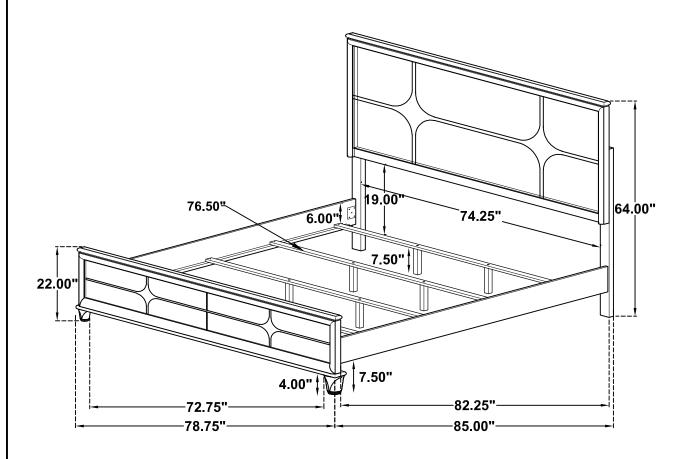

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

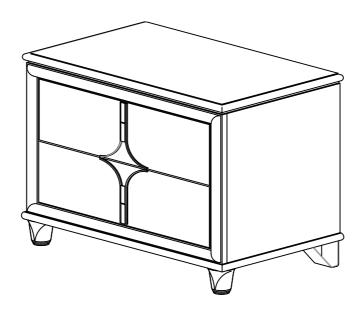

Fine Furniture for every stage of life

224952 Nightstand

REVISION 0: 06/20/2024

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

4 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND



1PC

B FRONT LEG



2PCS

C BACK LEG

(M4 x 60mm - BLK)



2PCS

HARDWARE IDENTIFICATION


1	BOLT (M6 x 20mm - RBW)	4PCS
2	LOCK WASHER (M6 x 12mm - RBW)	4PCS
3	FLAT WASHER (M6 x 13mm - RBW)	4PCS
1	ALLEN WRENCH	

1PC


ASSEMBLY INSTRUCTIONS




STEP 1

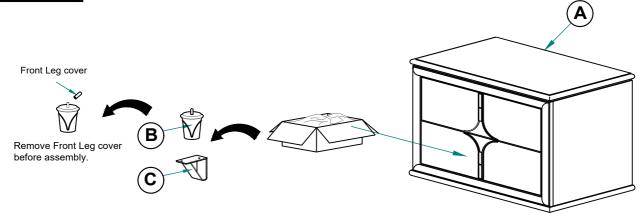

STEP 2

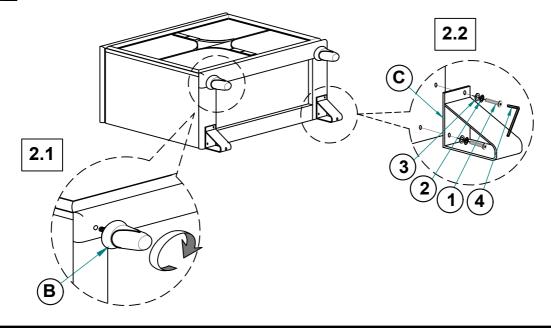

STEP 3 COMPLETE

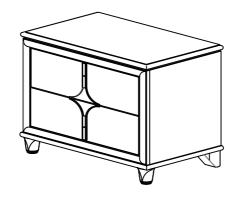





ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

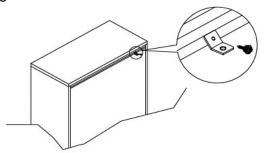


STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

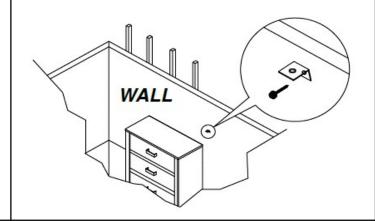

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

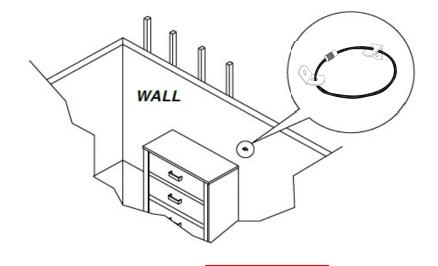






PAGE 4 OF 4




Inner Size of Drawer : 23.25"W x 13.00"D x 5.00"H x 0.50"T

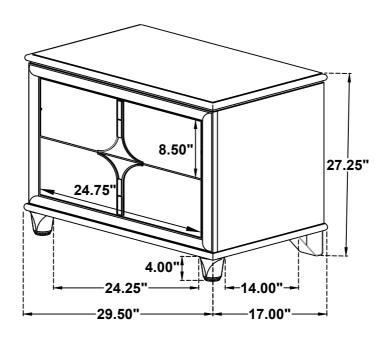

Note: Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

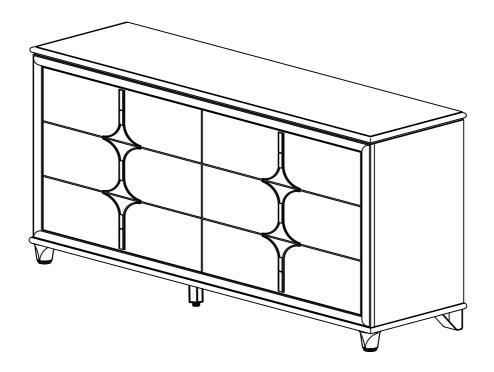

Fine Furniture for every stage of life

224953 <u>Dresser</u>

REVISION 0: 06/20/2024

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

4 MINUTES

PARTS IDENTIFICATION

A DRESSER



1PC

B FRONT LEG



2PCS

C BACK LEG



2PCS

D CENTER SUPPORT LEG WITH LEVELER



1PC

HARDWARE IDENTIFICATION


1	BOLT	4PCS
•	(M6 x 20mm - RBW)	4603

2 LOCK WASHER (M6 x 12mm - RBW) 4PCS


3 FLAT WASHER (M6 x 13mm - RBW) 4PCS

4 ALLEN WRENCH
(M4 x 60mm - BLK)

1PC

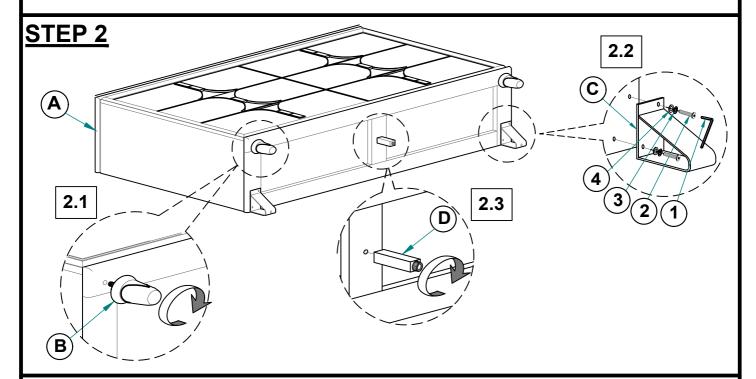

STEP 3 COMPLETE

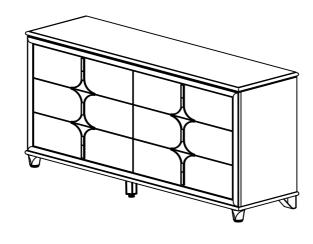



PAGE 3 OF 4 COAS



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

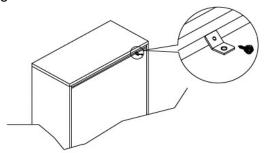


STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

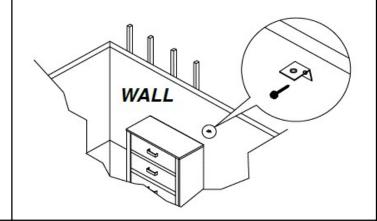

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

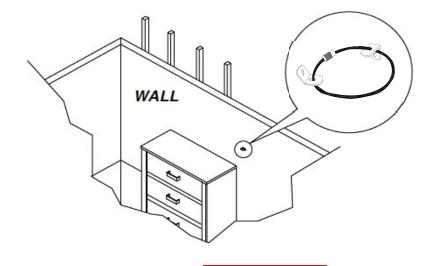






PAGE 4 OF 4




Inner Size of Drawer A: 27.25"W x 13.00"D x 4.00"H x 0.50"T Inner Size of Drawer B: 27.25"W x 13.00"D x 5.50"H x 0.50"T

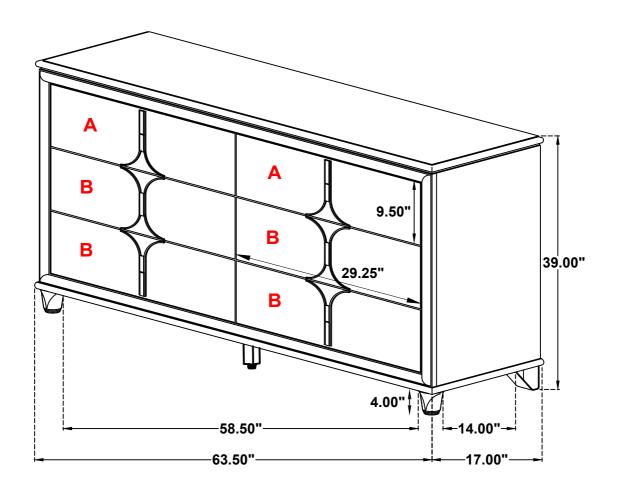

Note : Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

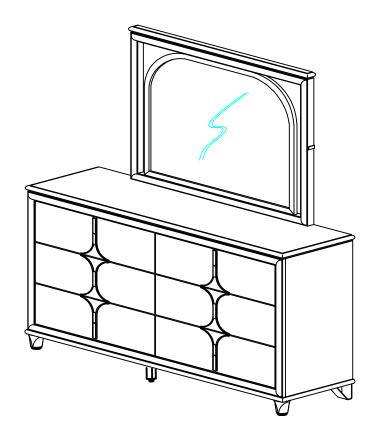

Fine Furniture for every stage of life

224954 *Mirror*

REVISION 0: 06/20/2024






ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

8 MINUTES

PARTS IDENTIFICATION

A DRESSER
* FROM BOX
ITEM # 224953

B MIRROR

C MIRROR SUPPORT
(PACKED WITH MIRROR)

1PC

1PC


HARDWARE IDENTIFICATION

1	BOLT (M6 x 35mm - RBW)	8PCS
2	LOCK WASHER (M6 x 12mm - RBW)	8PCS
3	FLAT WASHER (1/4" x 19mm - RBW)	8PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)	1PC


COASTER

ASSEMBLY INSTRUCTIONS



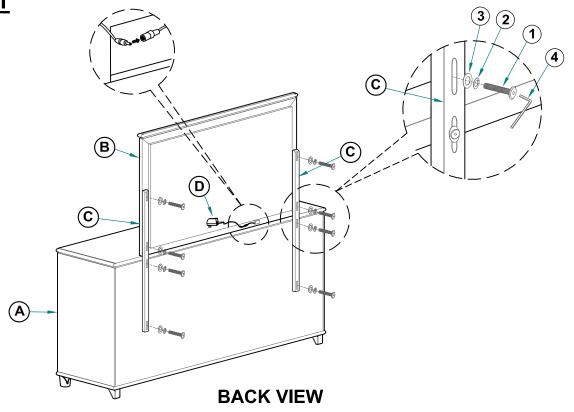


STEP 2 COMPLETE

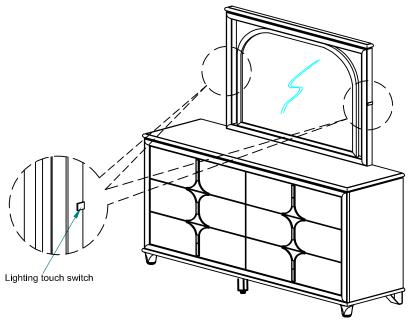

COASTERFURNITURE.COM

PAGE 3 OF 3




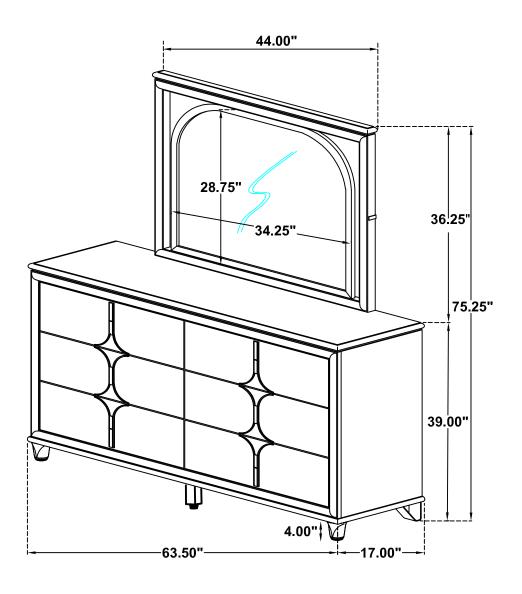

Note : Dimension tolerance ±5%



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

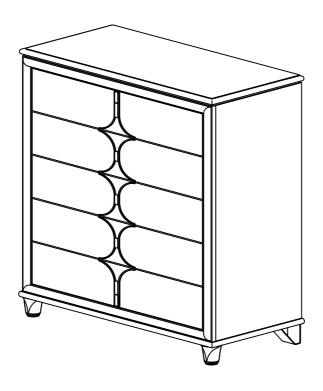

Fine Furniture for every stage of life

224955 Chest

REVISION 0: 06/20/2024

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

4 MINUTES

PARTS IDENTIFICATION

A CHEST



1PC

B FRONT LEG



2PCS

C BACK LEG

(M4 x 60mm - BLK)



2PCS

HARDWARE IDENTIFICATION


1	BOLT (M6 x 20mm - RBW)	4PCS
2	LOCK WASHER (M6 x 12mm - RBW)	4PCS
3	FLAT WASHER (M6 x 13mm - RBW)	4PCS
4	ALLEN WRENCH	4DC

1PC


ASSEMBLY INSTRUCTIONS



STEP 1

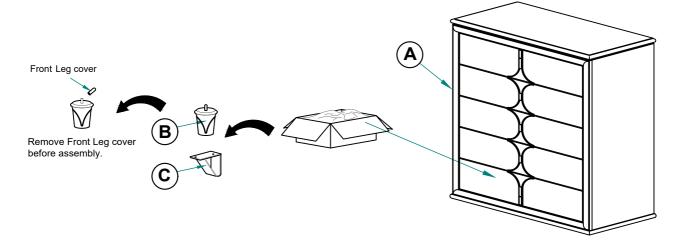


STEP 2

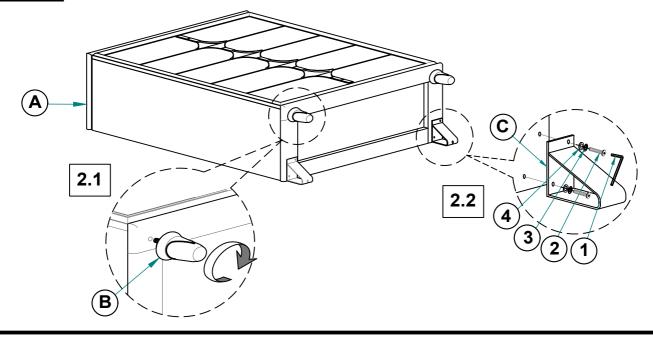

STEP 3 COMPLETE





PAGE 3 OF 4



ANTI-TIPPING INSTALLATION INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

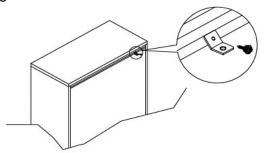


STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

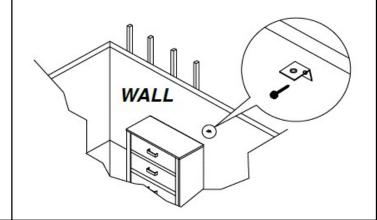

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

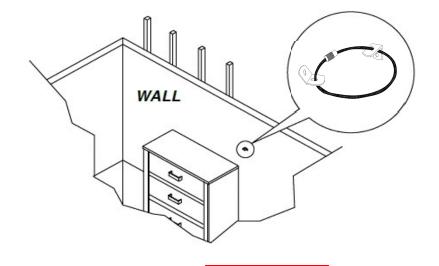






PAGE 4 OF 4



Inner Size of Drawer: 31.25"W x 13.00"D x 4.50"H x 0.50"T

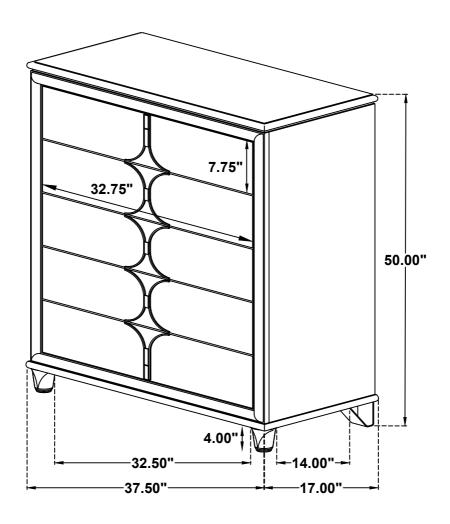

Note: Dimension tolerance ±5%