




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

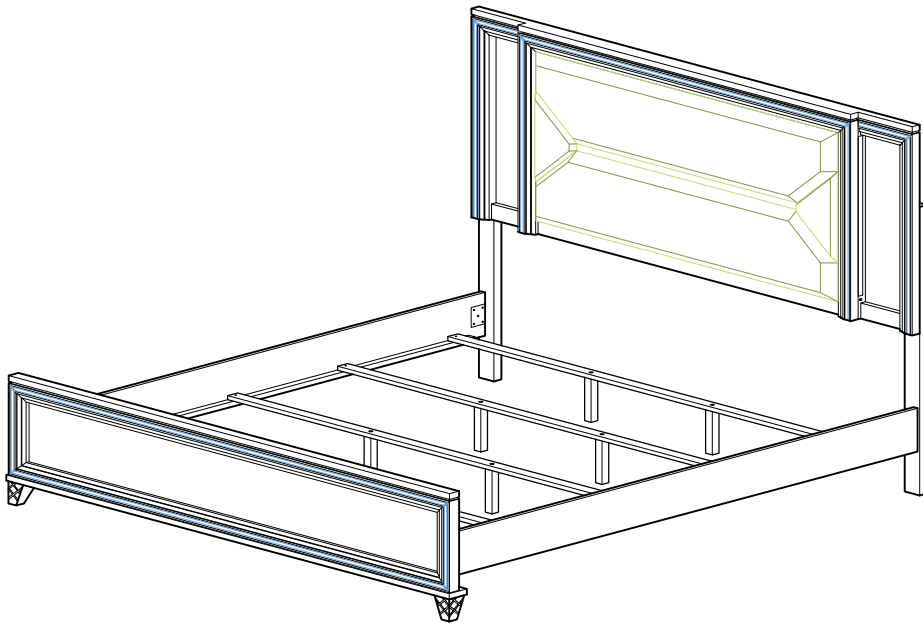

Fine Furniture for every stage of life

224961KE (B1-B3) Eastern King Bed

ITEM: 224961KE (B1-B3)

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

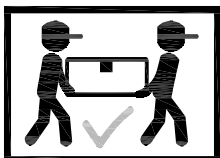


ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL



1PC

B LEFT HEADBOARD LEG



1PC

C RIGHT HEADBOARD LEG



1PC


D ADAPTER



1PC

B2 (BOX 2)

E FOOTBOARD PANEL



1PC

F FOOTBOARD FOOT



2PCS

G BED SLAT



4PCS


H BED SLAT SUPPORT



8PCS


B3 (BOX 3)

I BED RAIL




2PCS

HB
224961KE(B1)
FROM BOX 1
HEADBOARD
COMPLETE

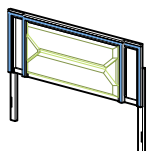

1PC

FB
224961KE(B2)
FROM BOX 2
FOOTBOARD
COMPLETE



1PC

ITEM: 224961KE (B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







WARNING!






1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224961KE (B1)

1	BOLT (M6 x 40mm - RBW)		6PCS
2	LOCK WASHER (M6 x 12mm - RBW)		6PCS
3	FLAT WASHER (M6 x 13mm - RBW)		6PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224961KE (B2)

5	BOLT (M6 x 35mm - RBW)		8PCS
6	LOCK WASHER (M6 x 12mm - RBW)		8PCS
7	FLAT HEAD SCREW (M3.5 x 32mm - RBW)		8PCS
8	ADJUSTABLE LEVELER (M6 x 39mm)		8PCS
9	ALLEN WRENCH (M4 x 60mm - BLK)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 224961KE (B1-B3)

ASSEMBLY INSTRUCTIONS




STEP 1

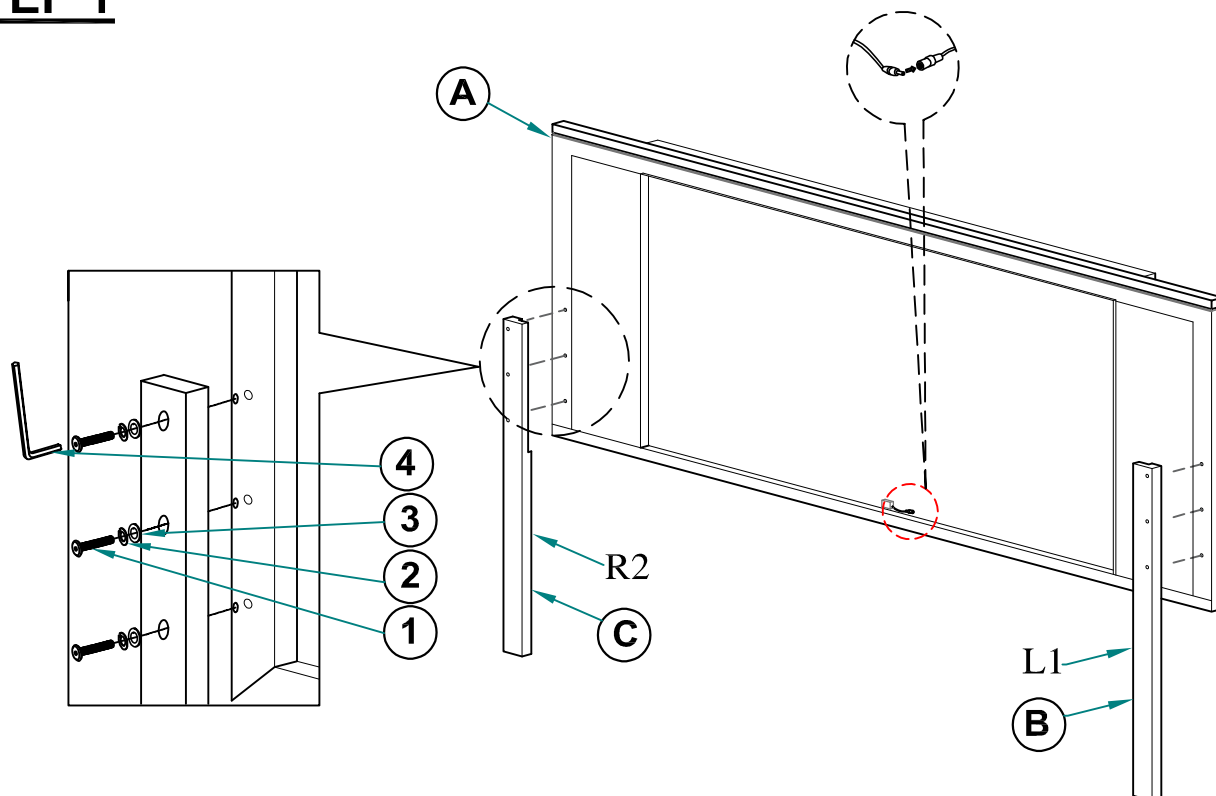

BACK VIEW

STEP 2

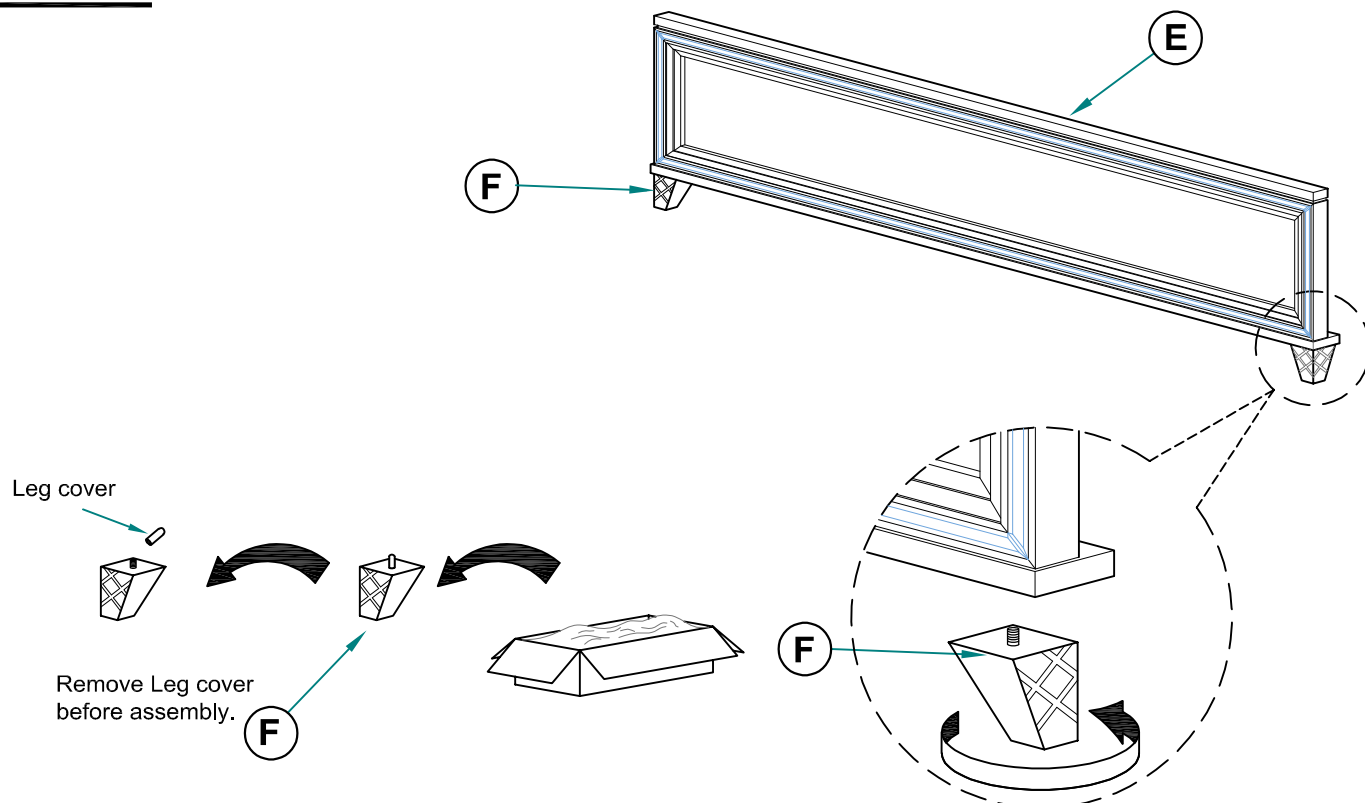


ITEM: **224961KE (B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 3

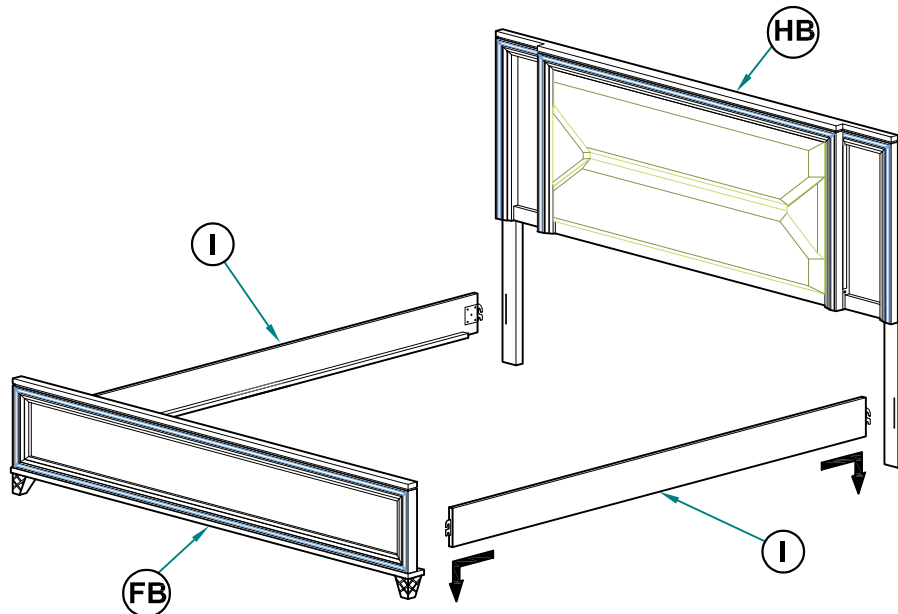

STEP 4


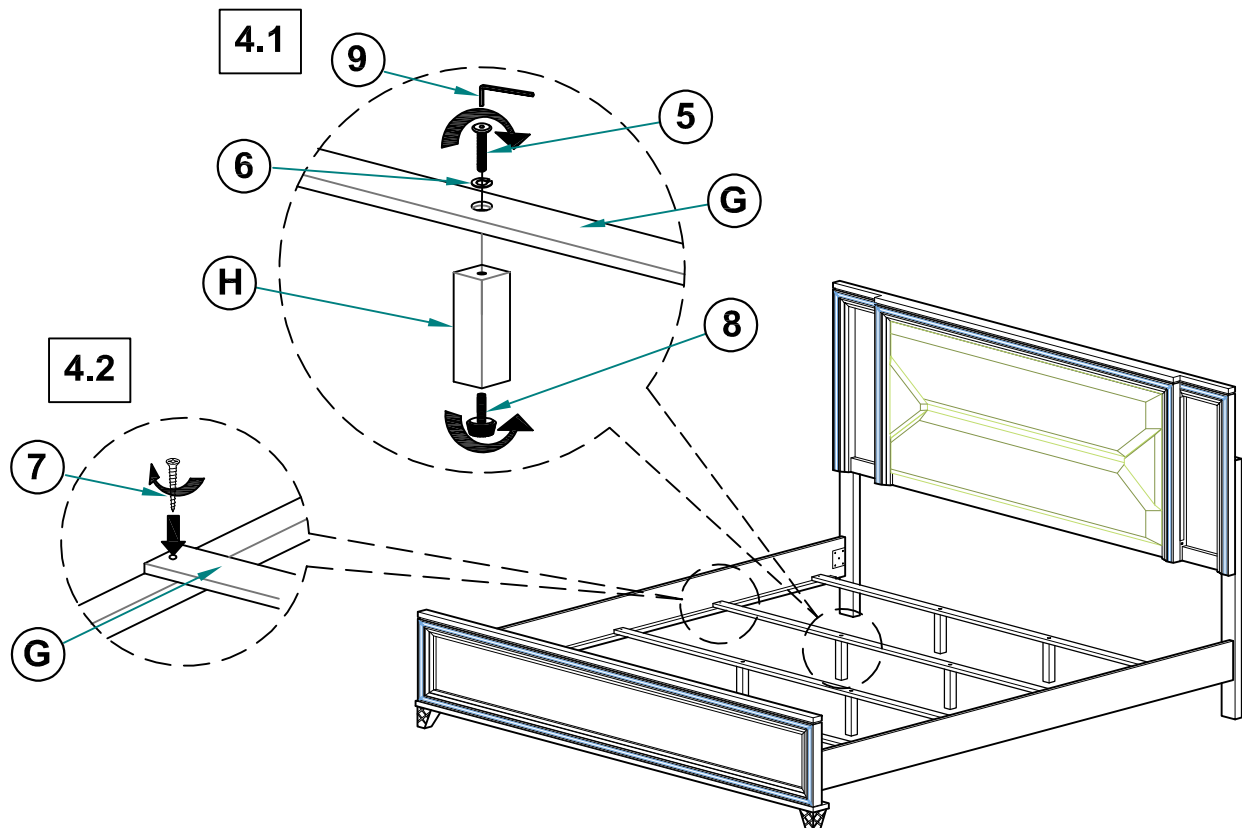


ITEM: **224961KE (B1-B3)**

ASSEMBLY INSTRUCTIONS




STEP 5 **COMPLETE**

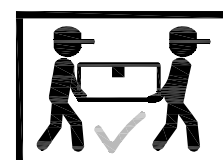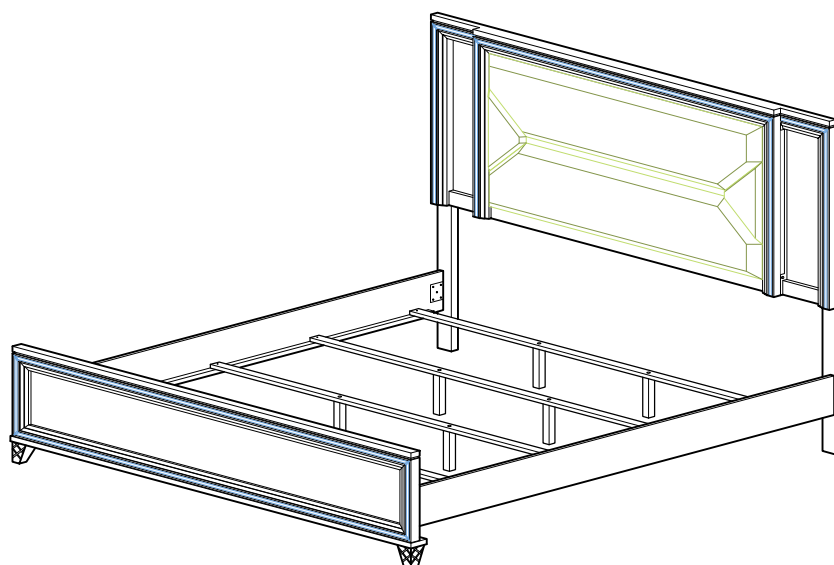

ITEM: **224961KE (B1-B3)**




Inner Size : 76.50"W x 80.25"D

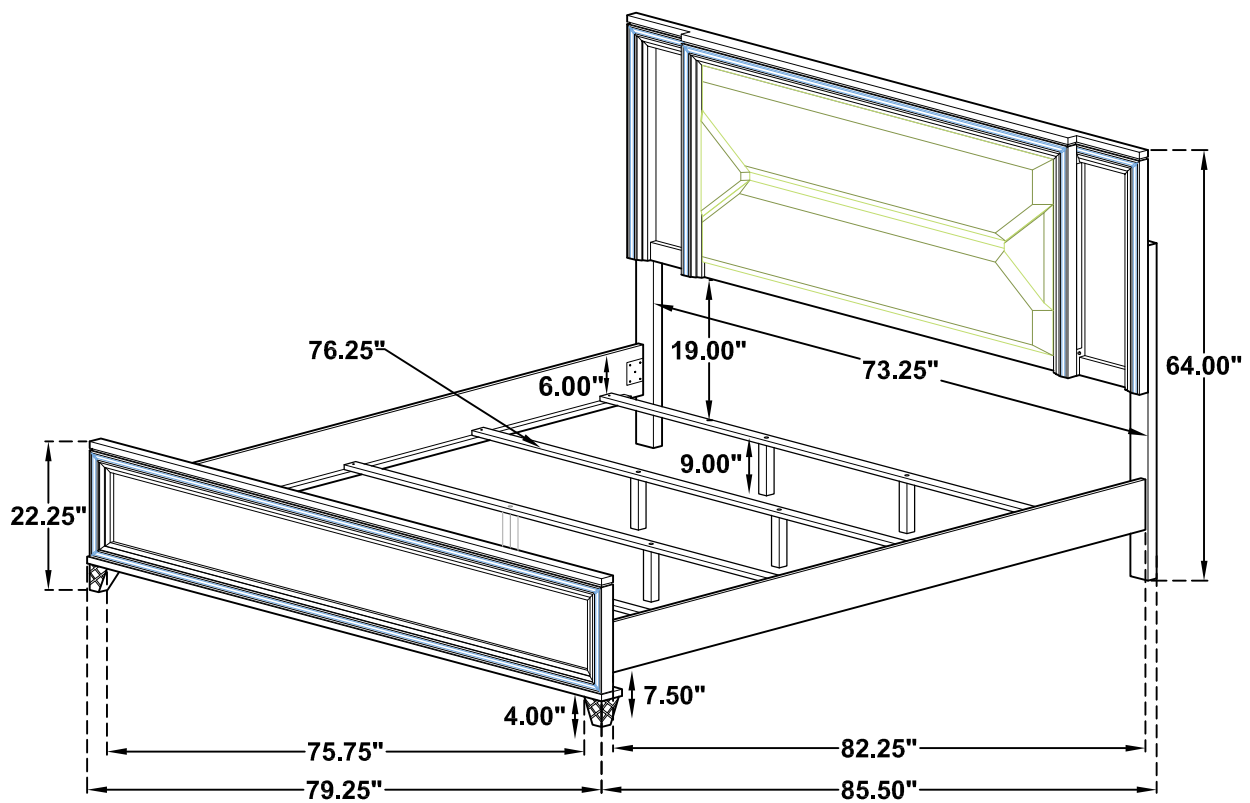

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

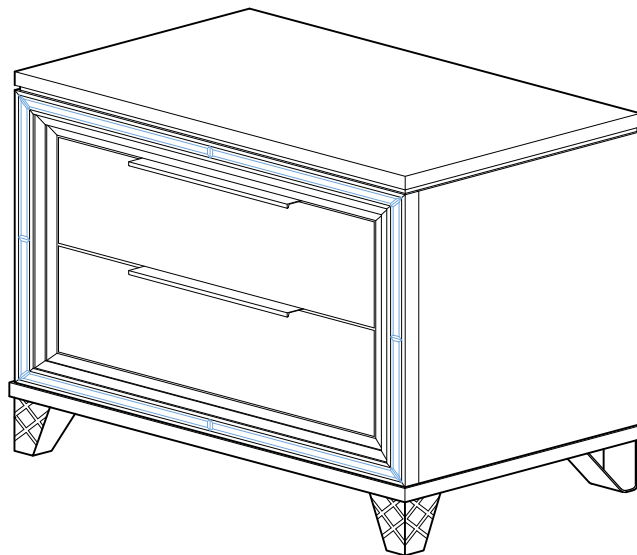

Fine Furniture for every stage of life

224962
Nightstand

ITEM: **224962**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

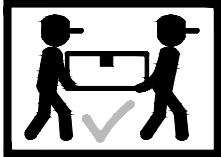


ASSEMBLY TIME

4 MINUTES

PARTS IDENTIFICATION

A

NIGHTSTAND

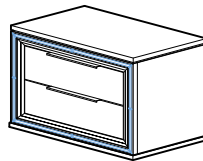

1PC

B

FRONT LEG



2PCS

C

BACK LEG



2PCS

HARDWARE IDENTIFICATION

1

BOLT
(M6 x 20mm - RBW)



4PCS

2

LOCK WASHER
(M6 x 12mm - RBW)



4PCS

3

FLAT WASHER
(M6 x 13mm - RBW)



4PCS

4

ALLEN WRENCH
(M4 x 60mm - BLK)




1PC

ITEM: **224962**


ASSEMBLY INSTRUCTIONS





STEP 1

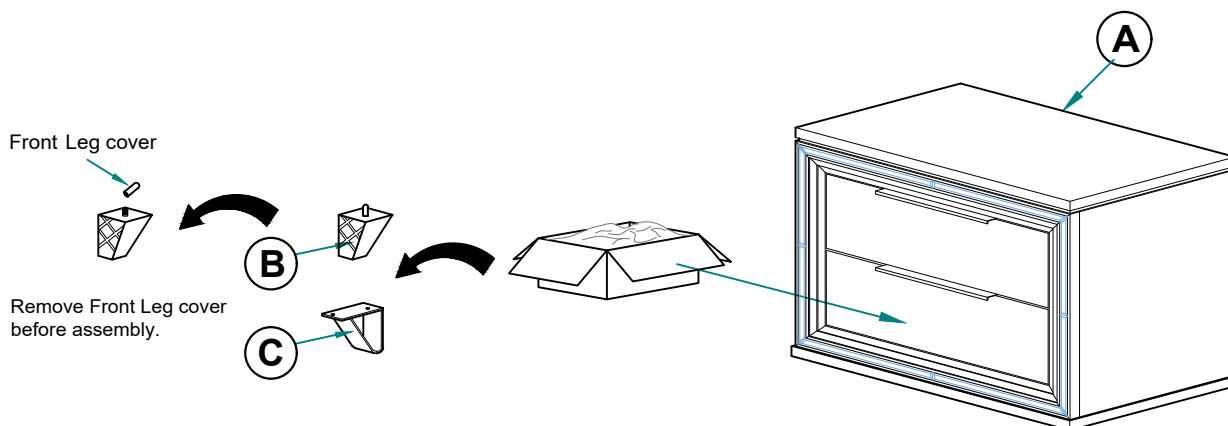

STEP 2

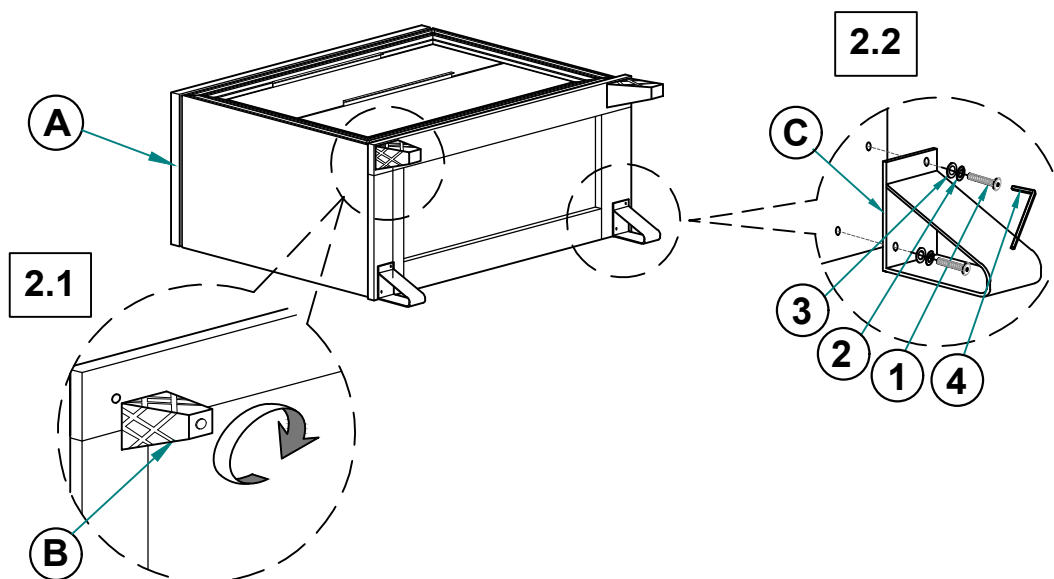

STEP 3 COMPLETE

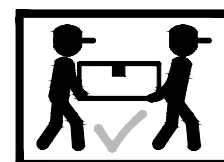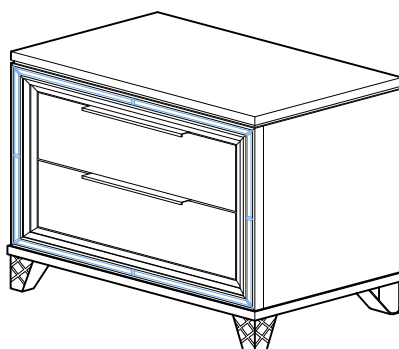

ITEM: **224962**



ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.



This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

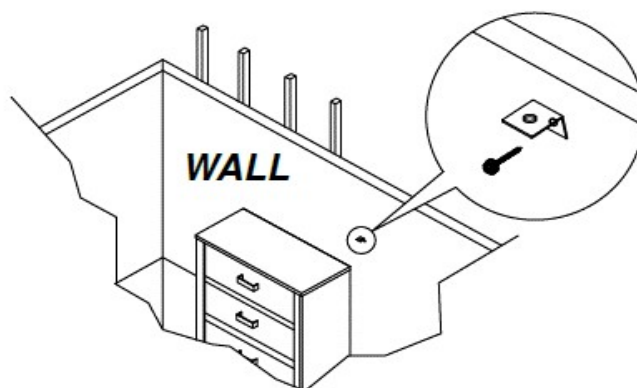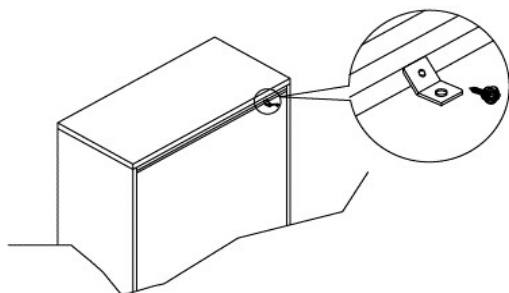

STEP 3


Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

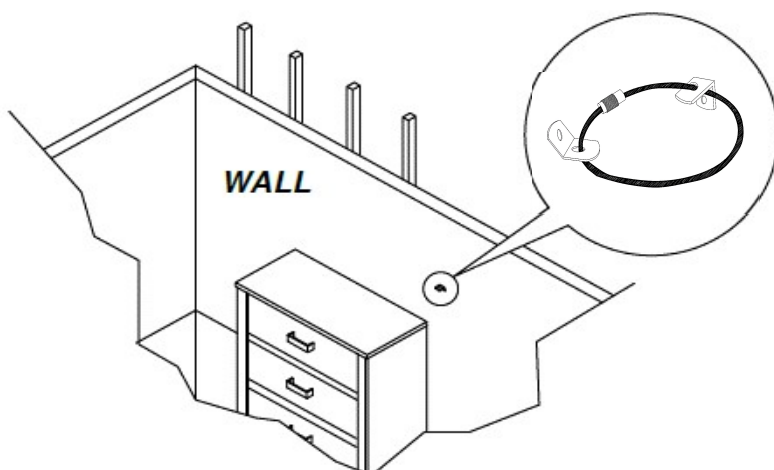

ITEM: **224962**




Inner Size of Drawer : 22.00"W x 13.00"D x 4.50"H x 0.50"T

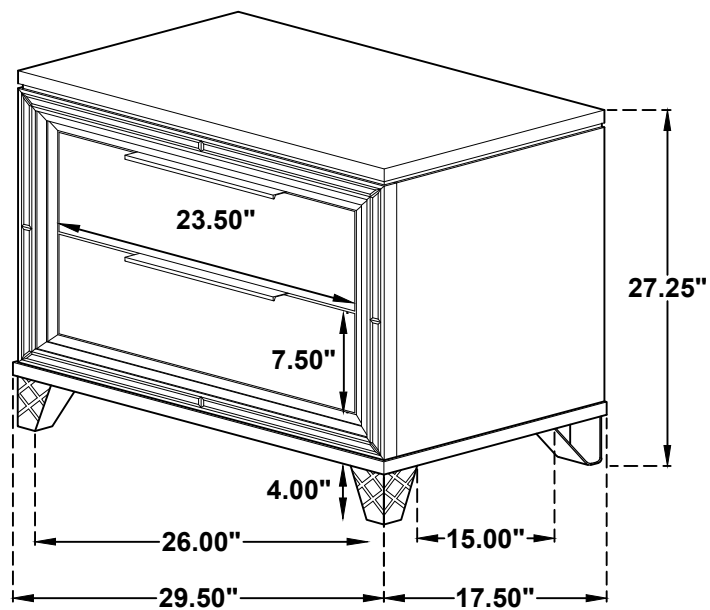

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

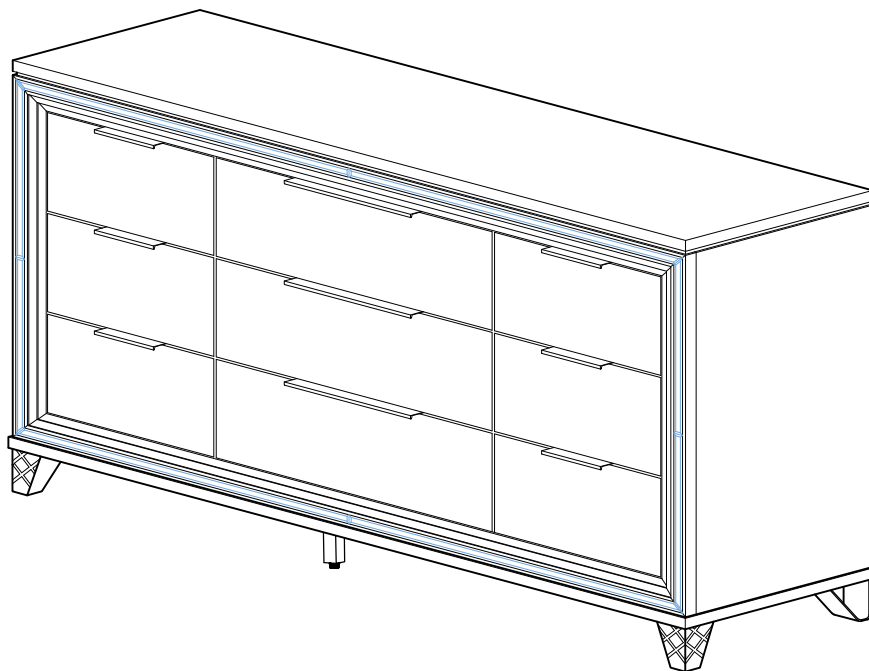

Fine Furniture for every stage of life

224963
Dresser

ITEM: **224963**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

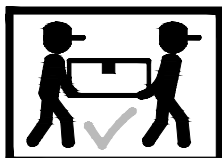


ASSEMBLY TIME

4 MINUTES

PARTS IDENTIFICATION

A DRESSER

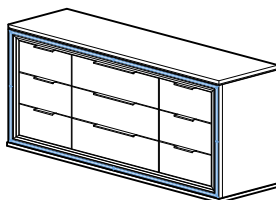

1PC

B FRONT LEG



2PCS

C BACK LEG



2PCS

D CENTER SUPPORT LEG
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1

BOLT
(M6 x 20mm - RBW)



4PCS

2

LOCK WASHER
(M6 x 12mm - RBW)



4PCS

3

FLAT WASHER
(M6 x 13mm - RBW)



4PCS

4

ALLEN WRENCH
(M4 x 60mm - BLK)




1PC

ITEM: **224963**


ASSEMBLY INSTRUCTIONS





STEP 1

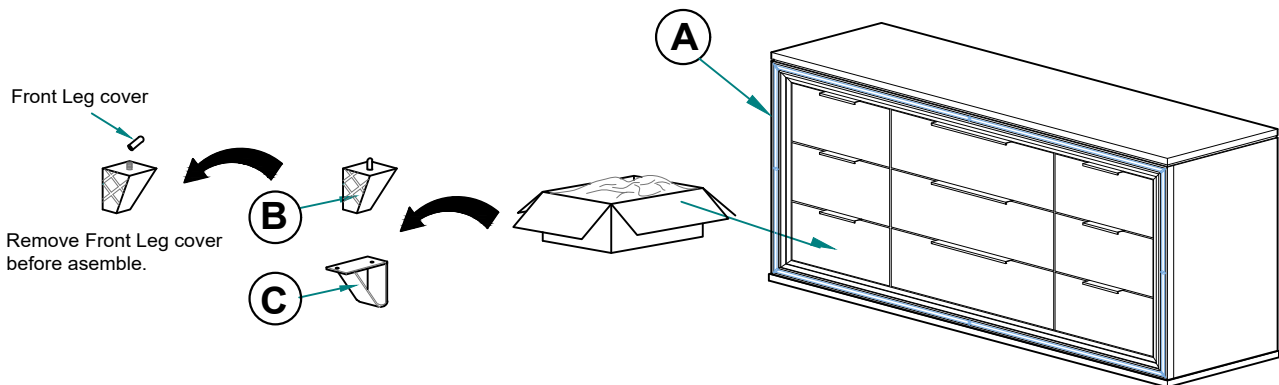

STEP 2

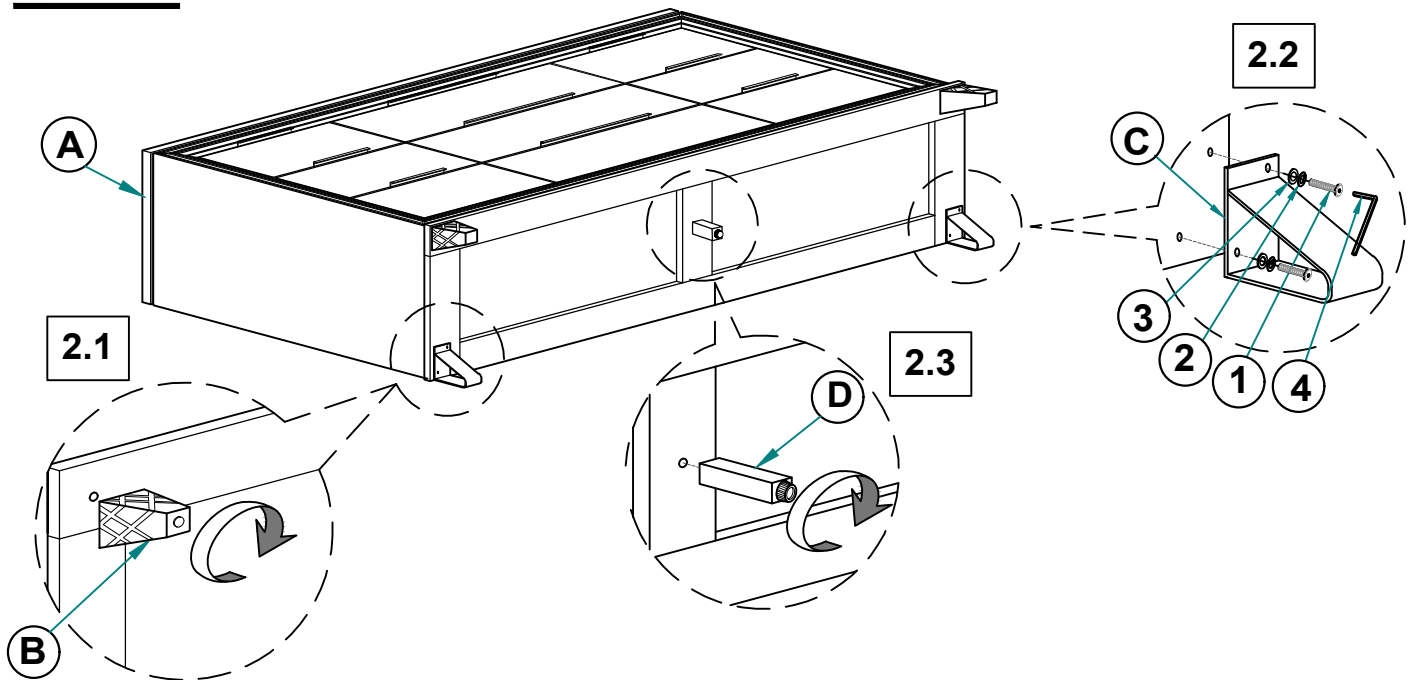

STEP 3 COMPLETE

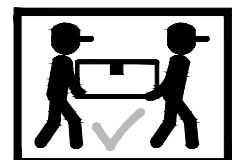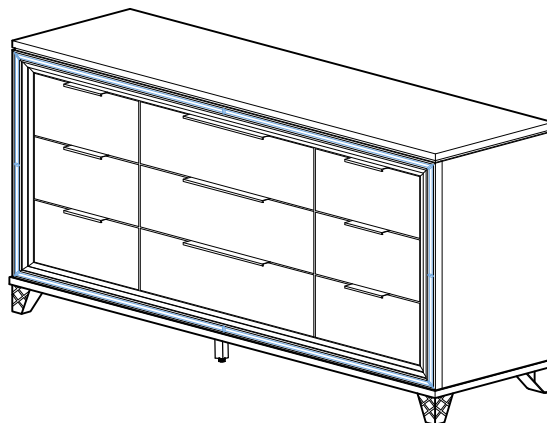

ITEM: **224963**



ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT


WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

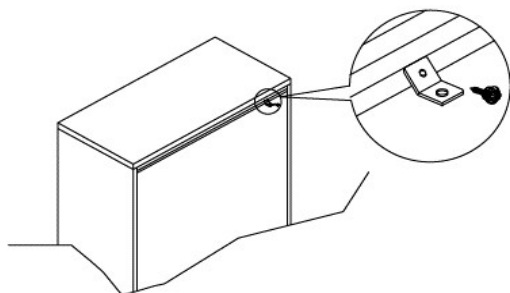



STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

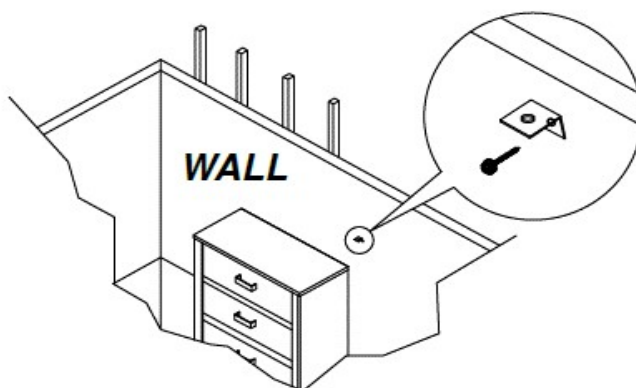

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

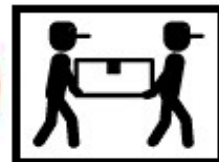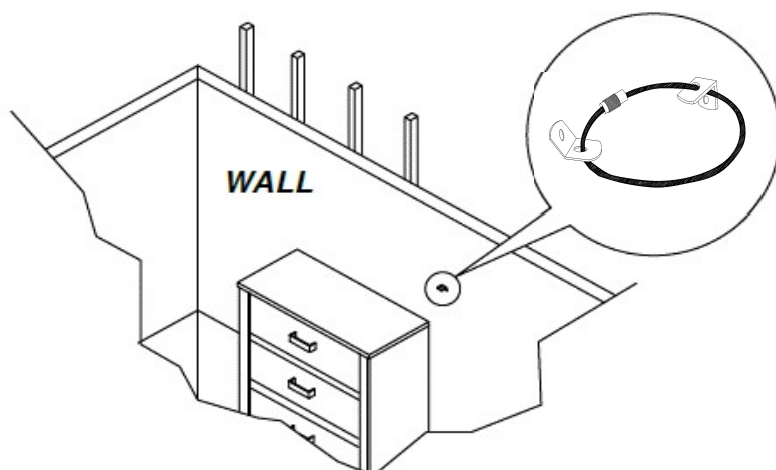


ITEM: **224963**




Inner Size of Drawer A : 13.50"W x 13.00"D x 5.00"H x 0.50"T

Inner Size of Drawer B : 23.25"W x 13.00"D x 5.00"H x 0.50"T

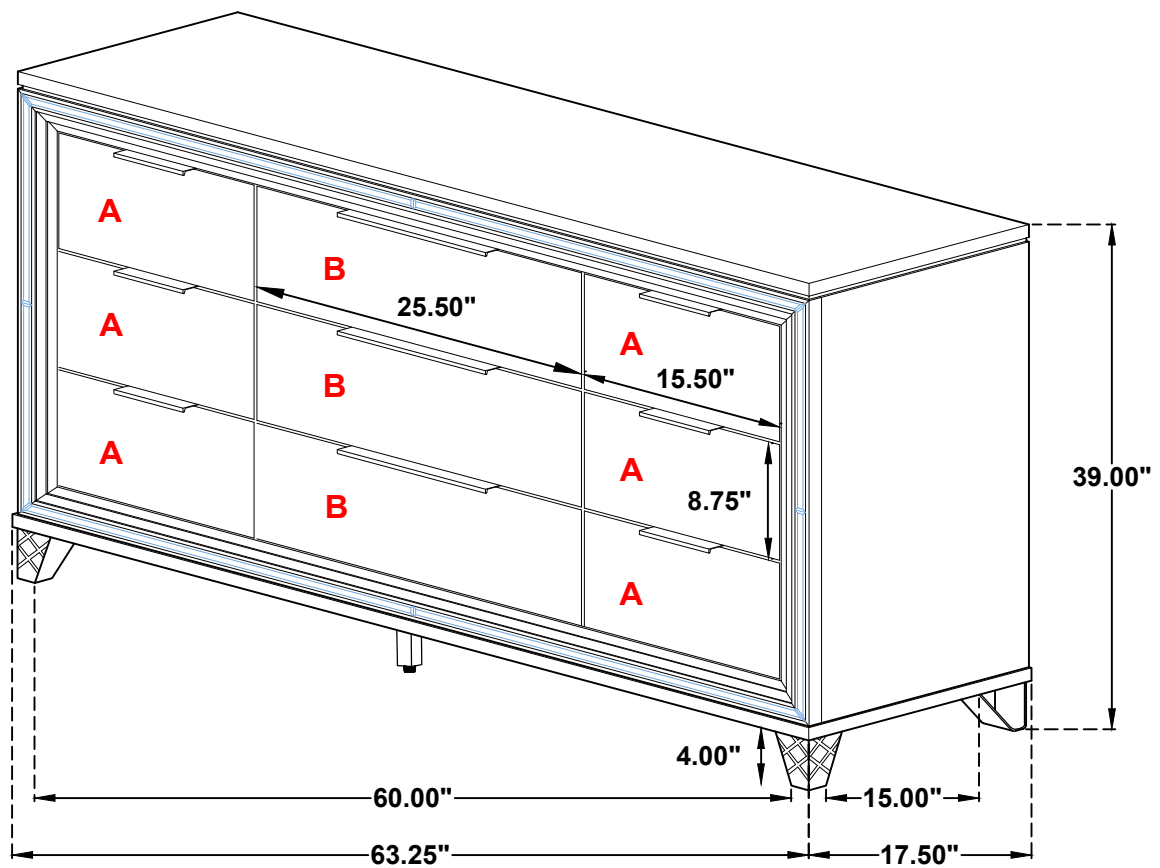

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

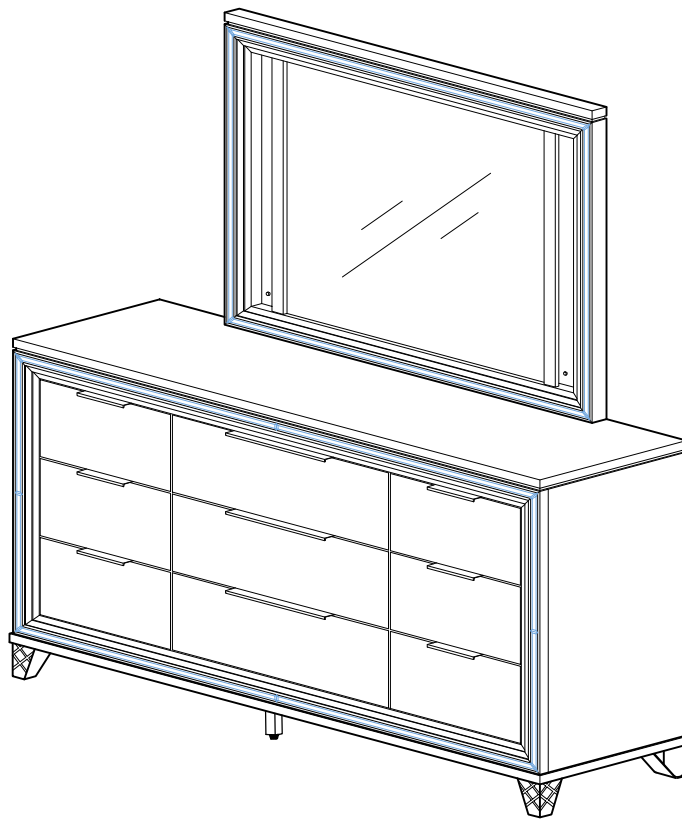

Fine Furniture for every stage of life

224964
Mirror

ITEM: **224964**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


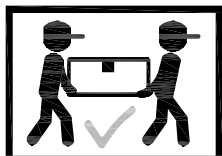


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.





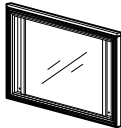

ASSEMBLY TIME

8 MINUTES

PARTS IDENTIFICATION

A	DRESSER * FROM BOX ITEM # 224963		1PC
B	MIRROR		1PC
C	MIRROR SUPPORT (PACKED WITH MIRROR)		2PCS
D	ADAPTER		1PC

HARDWARE IDENTIFICATION


1	BOLT (M6 x 35mm - RBW)		8PCS
2	LOCK WASHER (M6 x 12mm - RBW)		8PCS
3	FLAT WASHER (1/4" x 19mm - RBW)		8PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)		1PC

ITEM: **224964**

ASSEMBLY INSTRUCTIONS





STEP 1

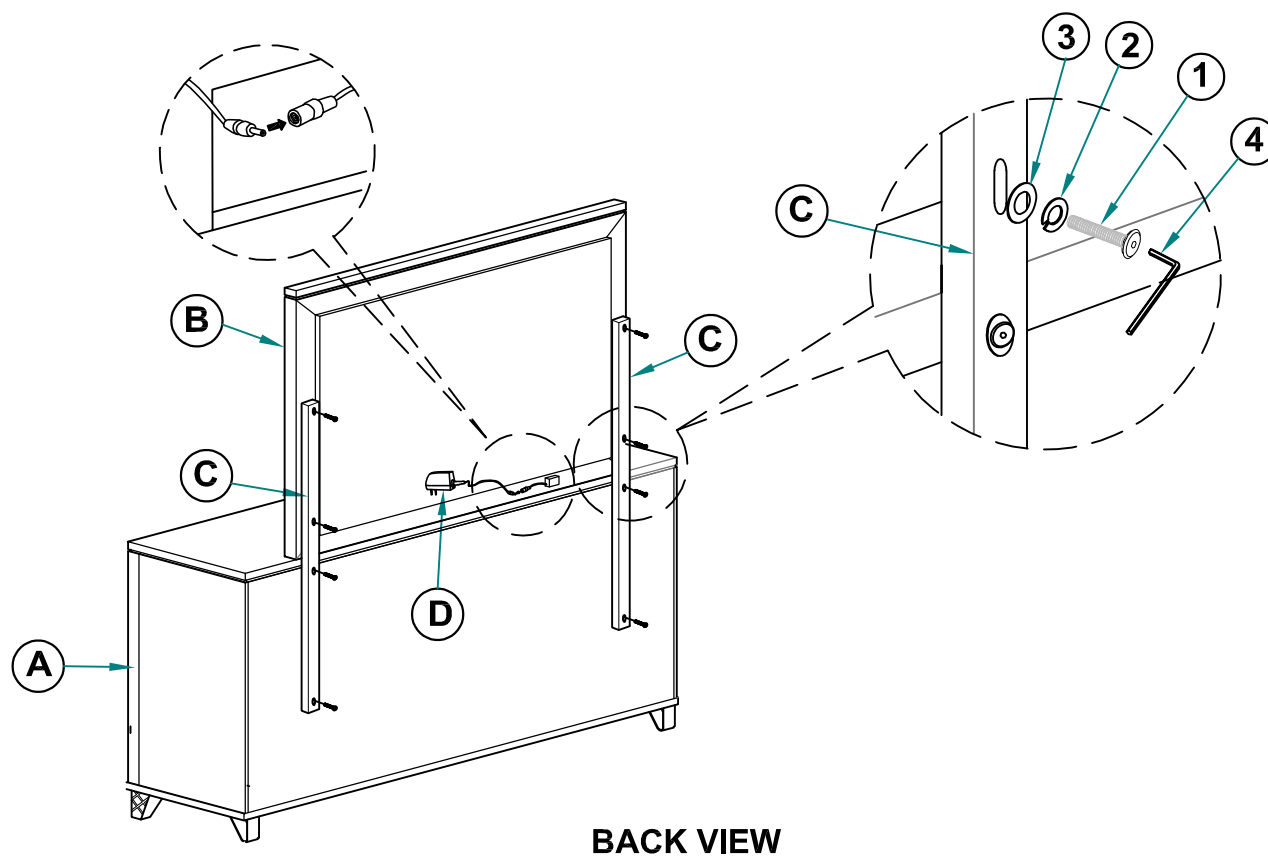


BACK VIEW

STEP 2 COMPLETE

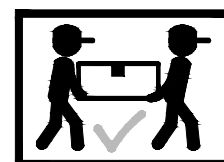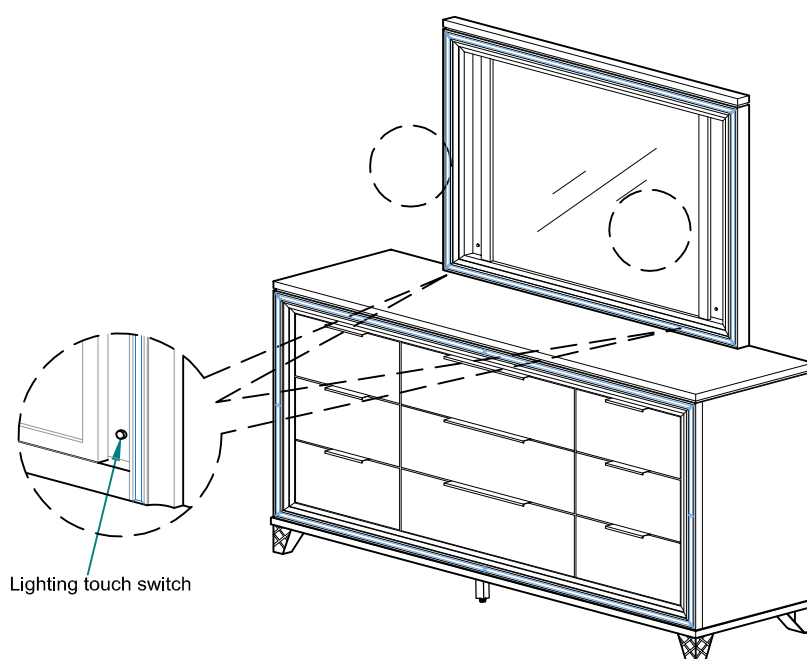


ITEM: **224964**

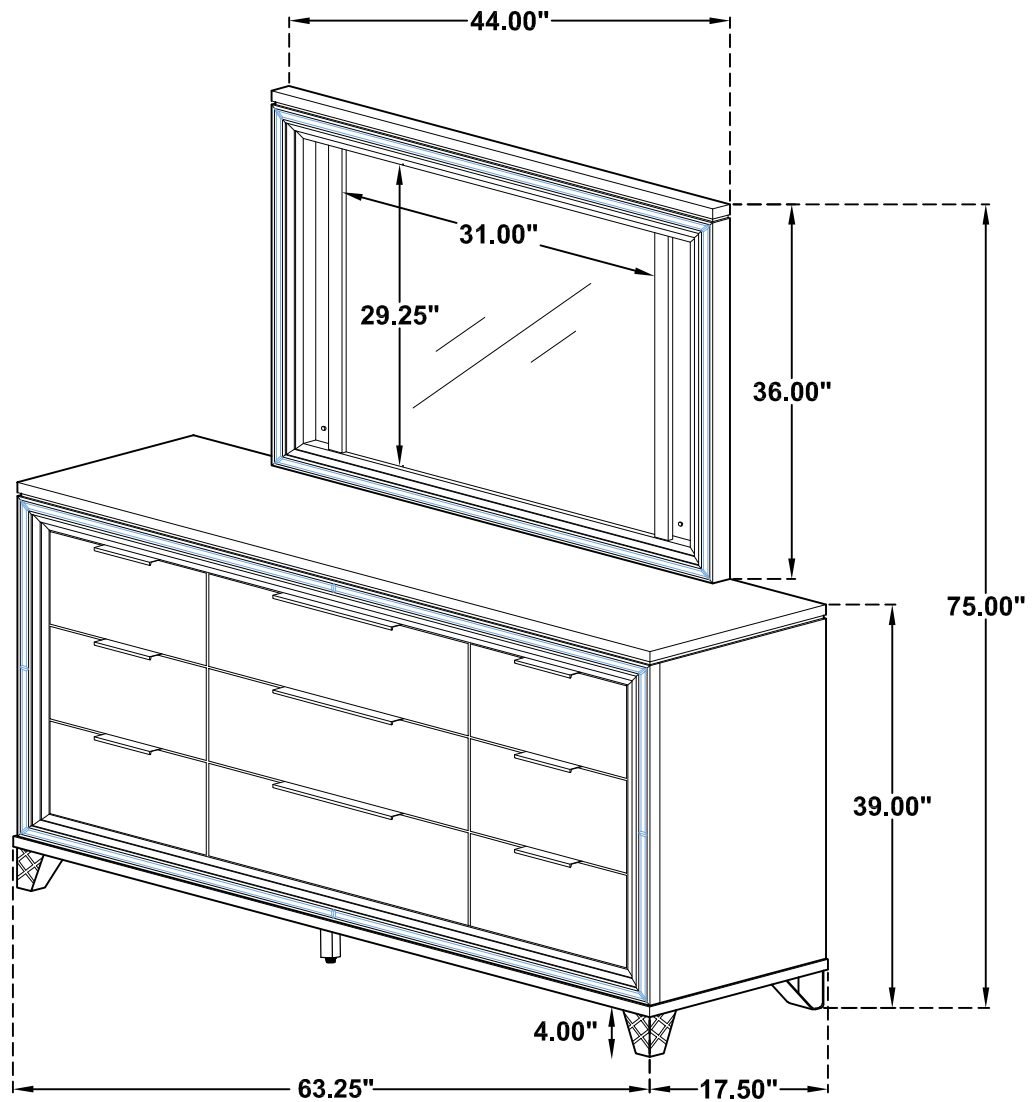

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

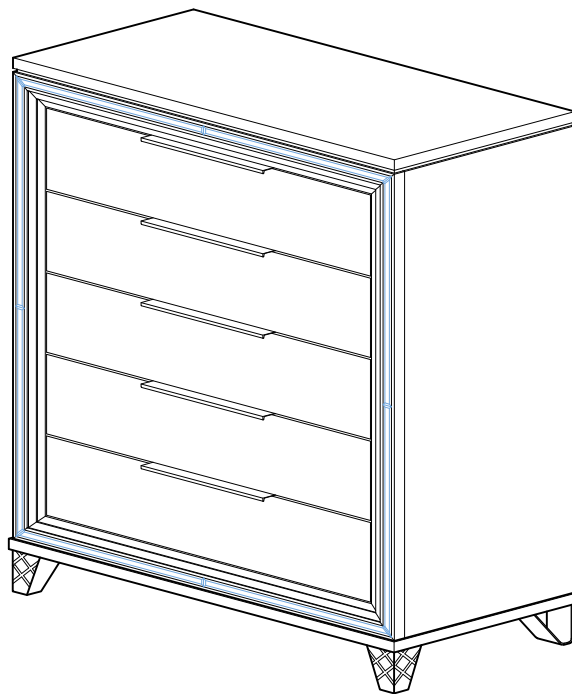

Fine Furniture for every stage of life

224965
Chest

ITEM: **224965**



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

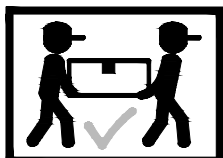


ASSEMBLY TIME

4 MINUTES

PARTS IDENTIFICATION

A CHEST

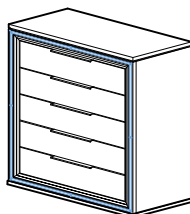

1PC

B FRONT LEG



2PCS

C BACK LEG



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 20mm - RBW)



4PCS

2 LOCK WASHER
(M6 x 12mm - RBW)



4PCS

3 FLAT WASHER
(M6 x 13mm - RBW)



4PCS

4 ALLEN WRENCH
(M4 x 60mm - BLK)




1PC

ITEM: **224965**


ASSEMBLY INSTRUCTIONS





STEP 1

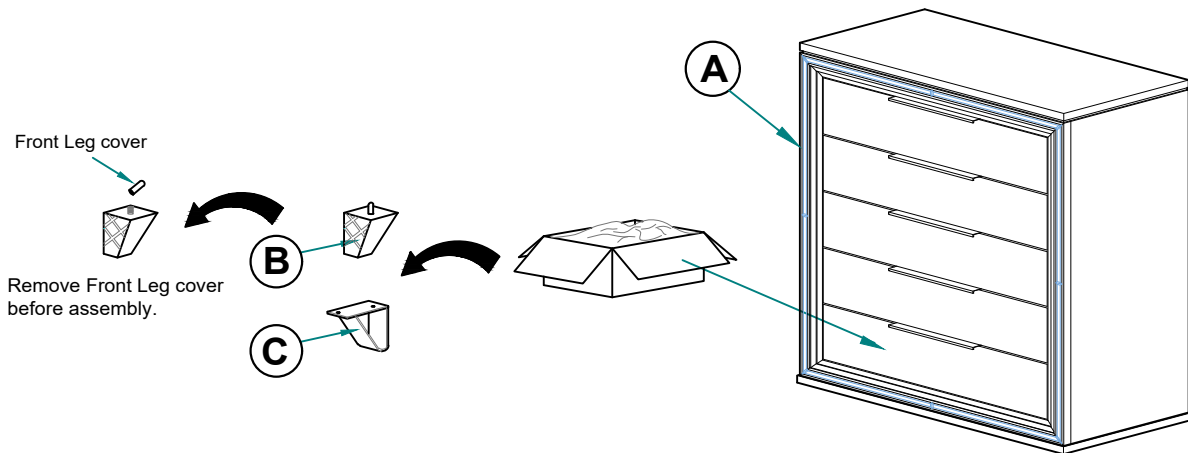

STEP 2

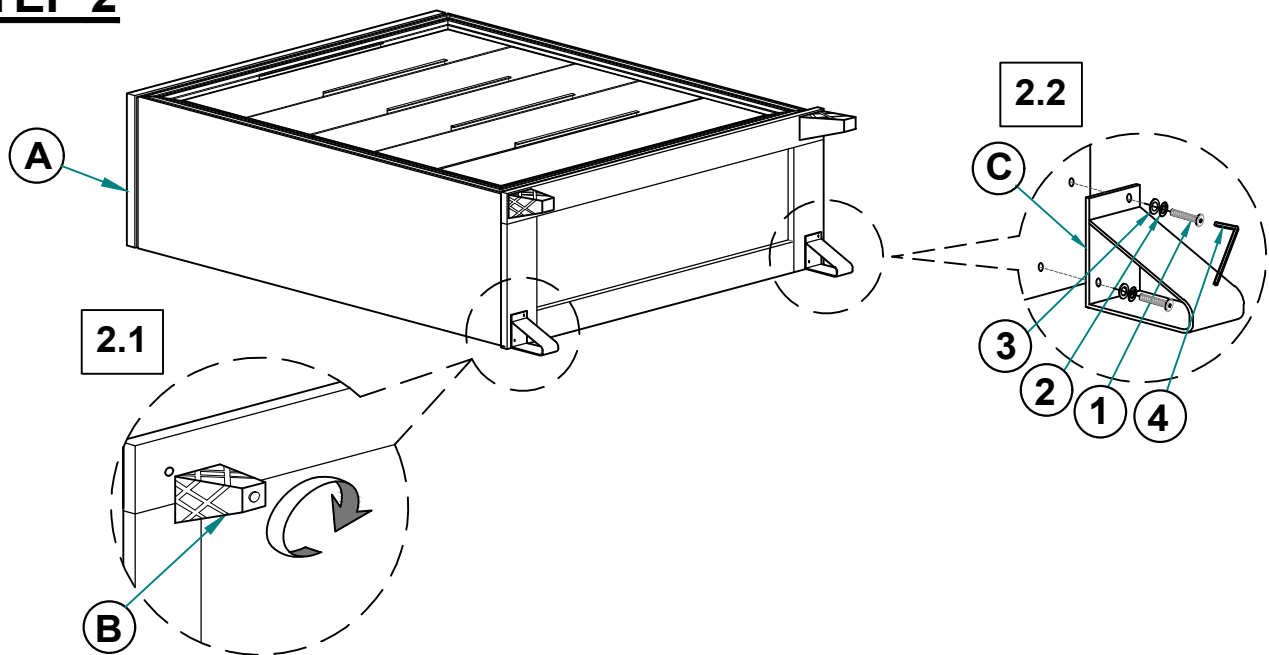

STEP 3 COMPLETE

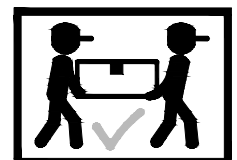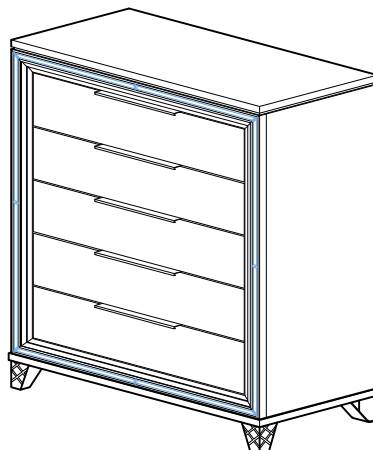

ITEM: **224965**



ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

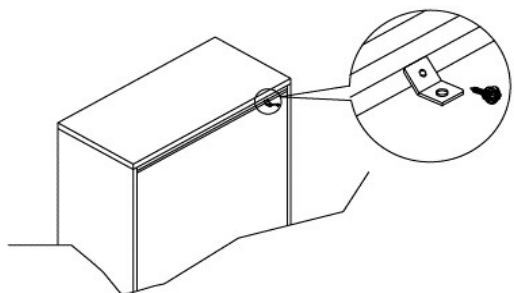


STEP 2

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

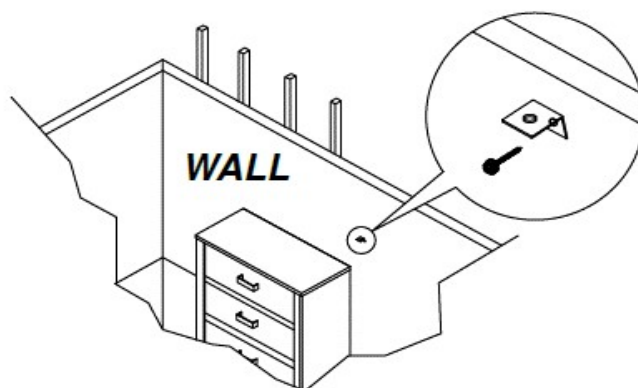

STEP 3


Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

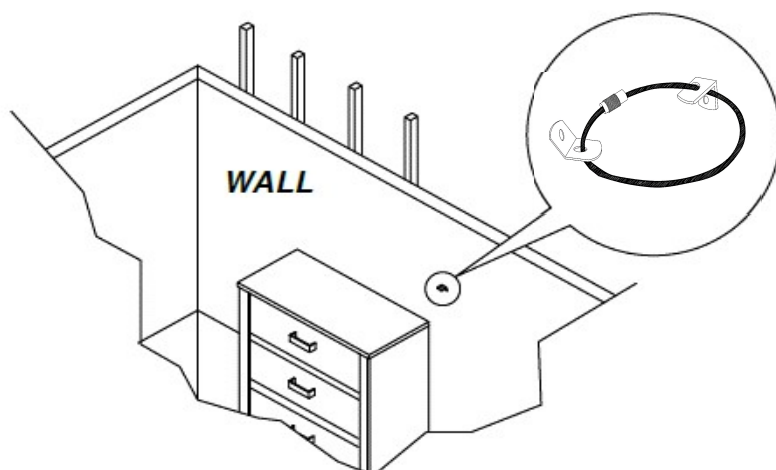

ITEM: **224965**



Inner Size of Drawer : 30.00"W x 13.00"D x 4.00"H x 0.50"T

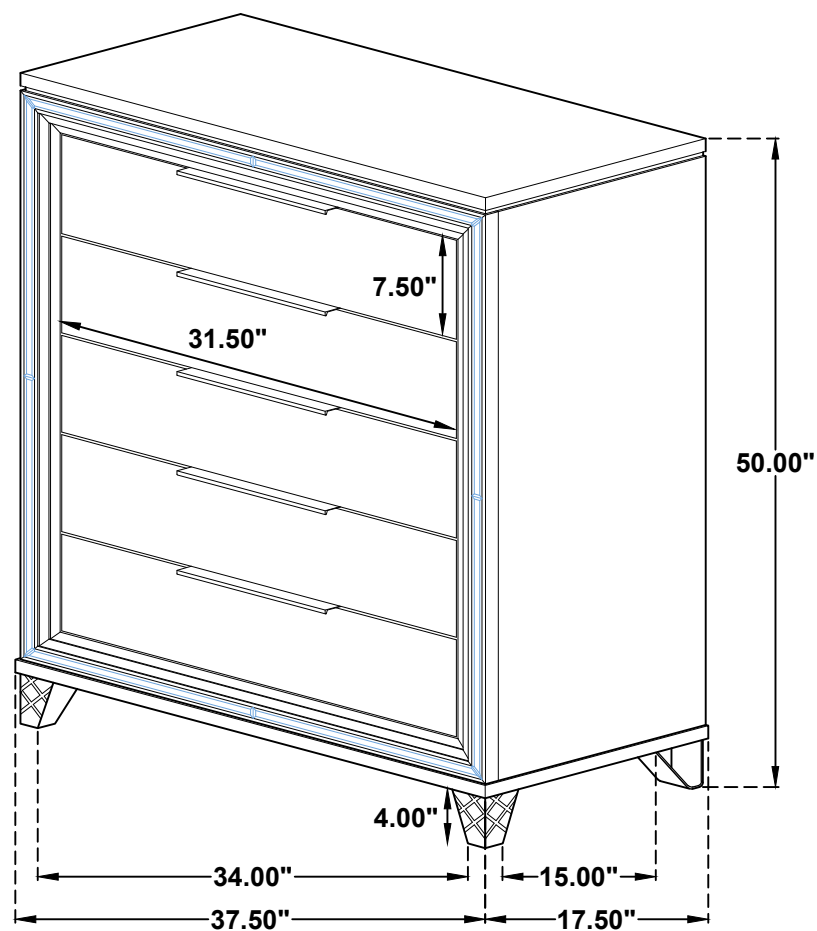

Note : Dimension tolerance $\pm 5\%$