



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

225061Q (B1&B2)

Queen Bed

ITEM: 225061Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD
PANEL



1PC

B FOOTBOARD
PANEL



1PC

C LEFT HEADBOARD
LEG



1PC

D RIGHT HEADBOARD
LEG




1PC

E FOOTBOARD
SUPPORT BAR



1PC

F BED SLAT



4PCS


G BED SLAT
SUPPORT WITH
LEVELER



4PCS

B2 (BOX 2)

H LEFT BED RAIL




1PC

I RIGHT BED RAIL



1PC

HB 225061Q (B1)
FROM BOX 1
HEADBOARD
COMPLETE

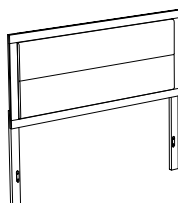

1PC

J FOOTBOARD
LEG



2PCS

FB 225061Q (B1)
FROM BOX 1
FOOTBOARD
PANEL



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 225061Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 225061Q (B1)

1	SMALL ALLEN WRENCH (M4 x 65mm - BLK)		1PC	4	LOCK WASHER (1/4" - BLK)		6PCS
2	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC	5	FLAT WASHER (1/4"ID x 13mm - BLK)		6PCS
3	SHORT BOLT (M6 x 35mm - BLK)		6PCS				

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 225061Q (B2)

6	SMALL ALLEN WRENCH (M4 x 65mm - BLK)		1PC	10	LOCK WASHER (1/4" - BLK)		6PCS
7	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC	11	FLAT WASHER (1/4"ID x 13mm - BLK)		6PCS
8	LONG BOLT (M6 x 80mm - BLK)		2PCS	12	SHORT FLAT HEAD SCREW (M4 x 32mm - RBW)		8PCS
9	MEDIUM BOLT (M6 x 50mm - BLK)		4PCS	13	LONG FLAT HEAD SCREW (M4 x 50mm - RBW)		4PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 225061Q (B1&B2)



ASSEMBLY INSTRUCTIONS


STEP 1

Note : Please take note of the marking sticker (L&R) on the headboard legs.

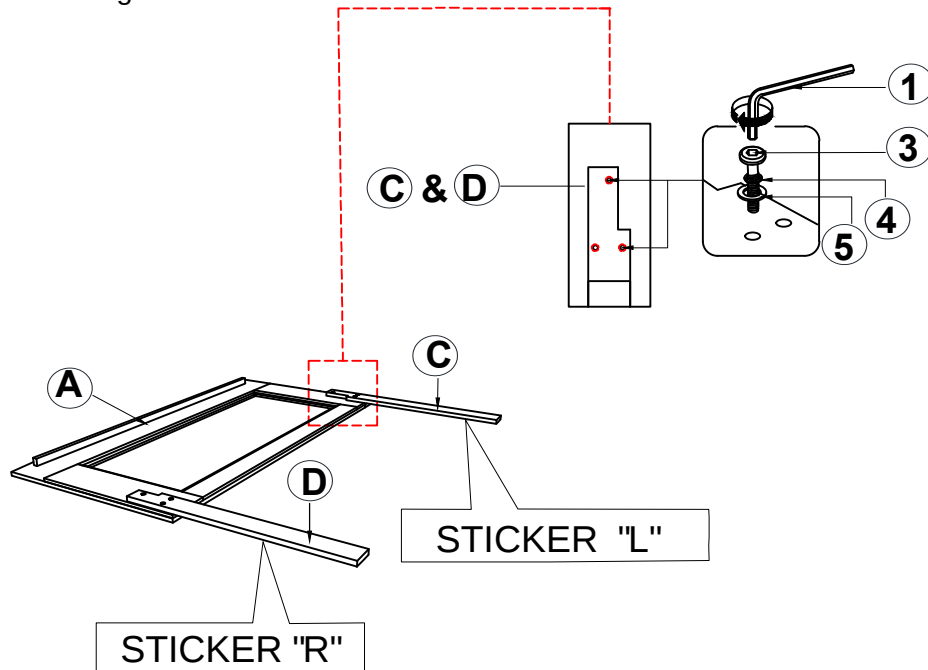

****BACK VIEW****

STEP 2

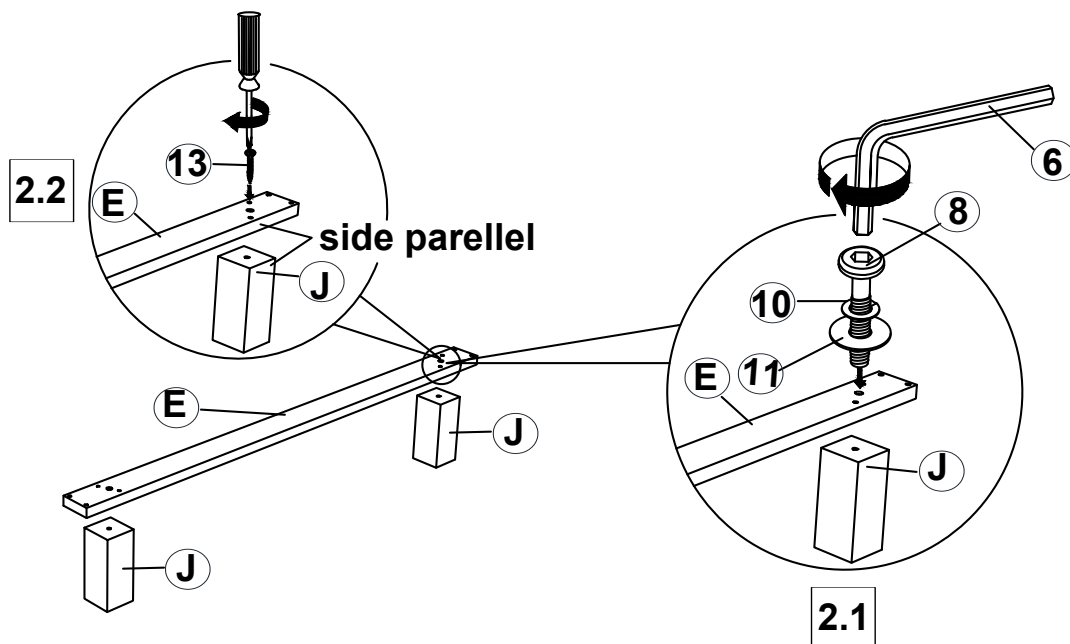


ITEM: **225061Q (B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 3

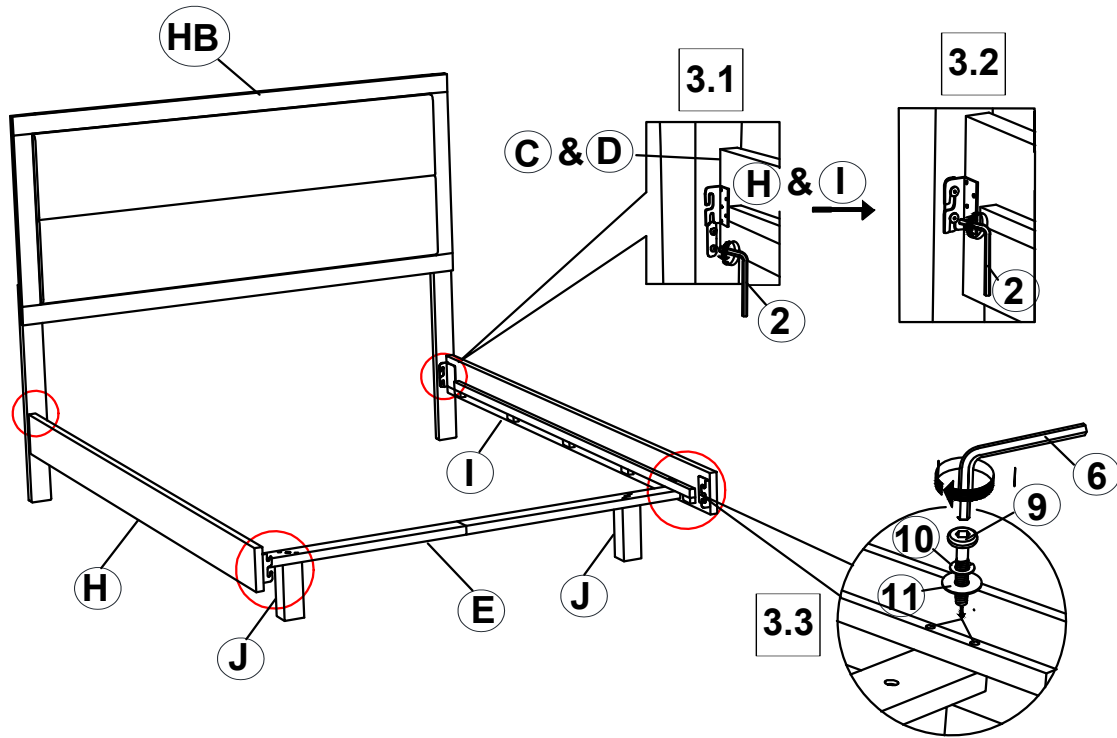

STEP 4

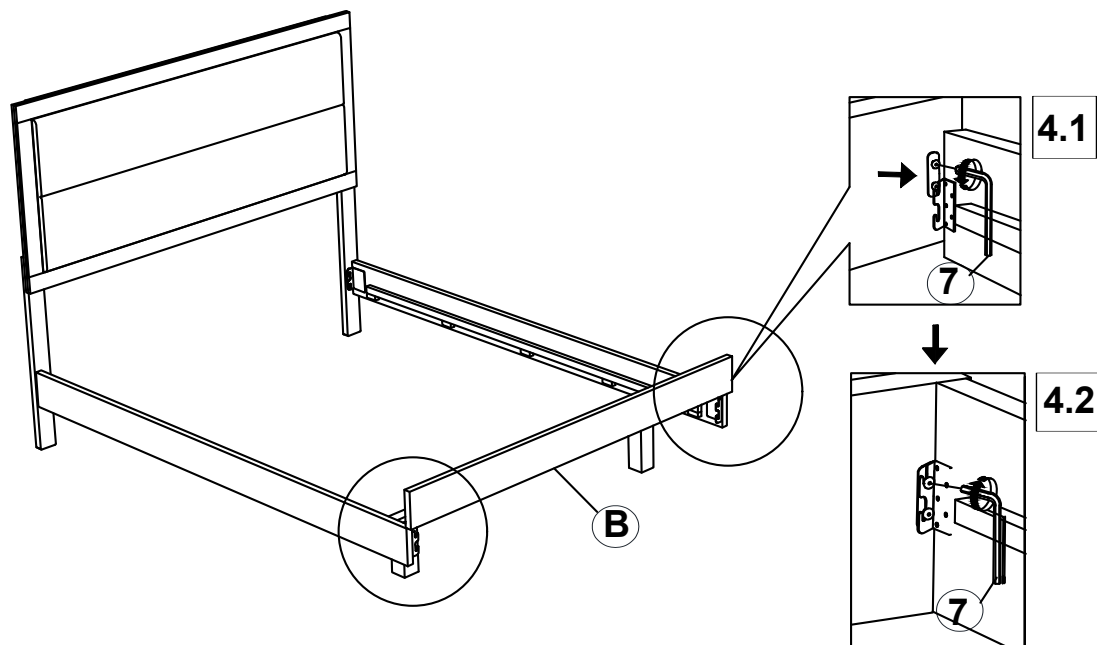


ITEM: **225061Q (B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 5

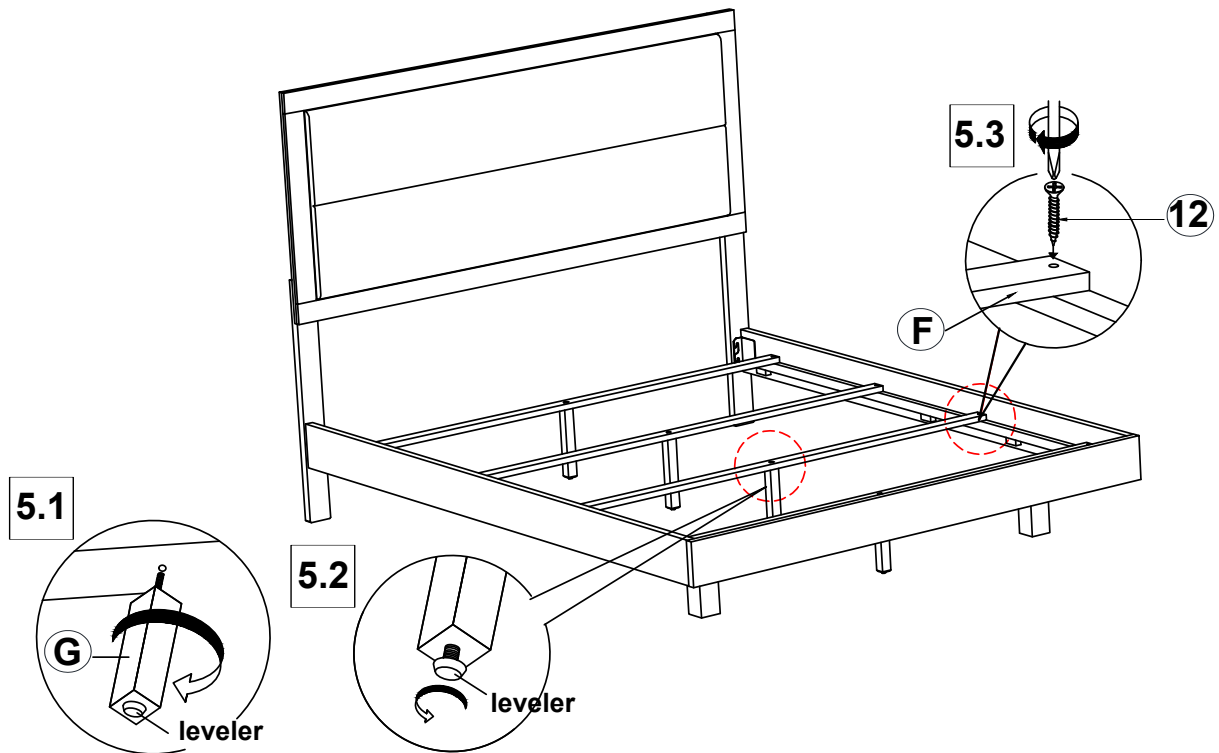


STEP 6 **COMPLETE**

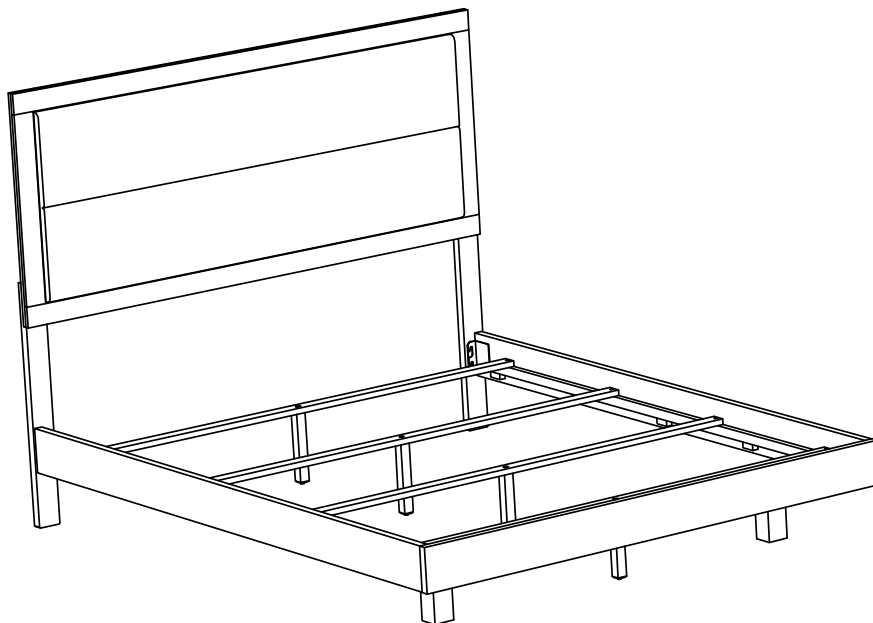

ITEM: **225061Q (B1&B2)**




Inner Size : 61.00"W X 80.50"D

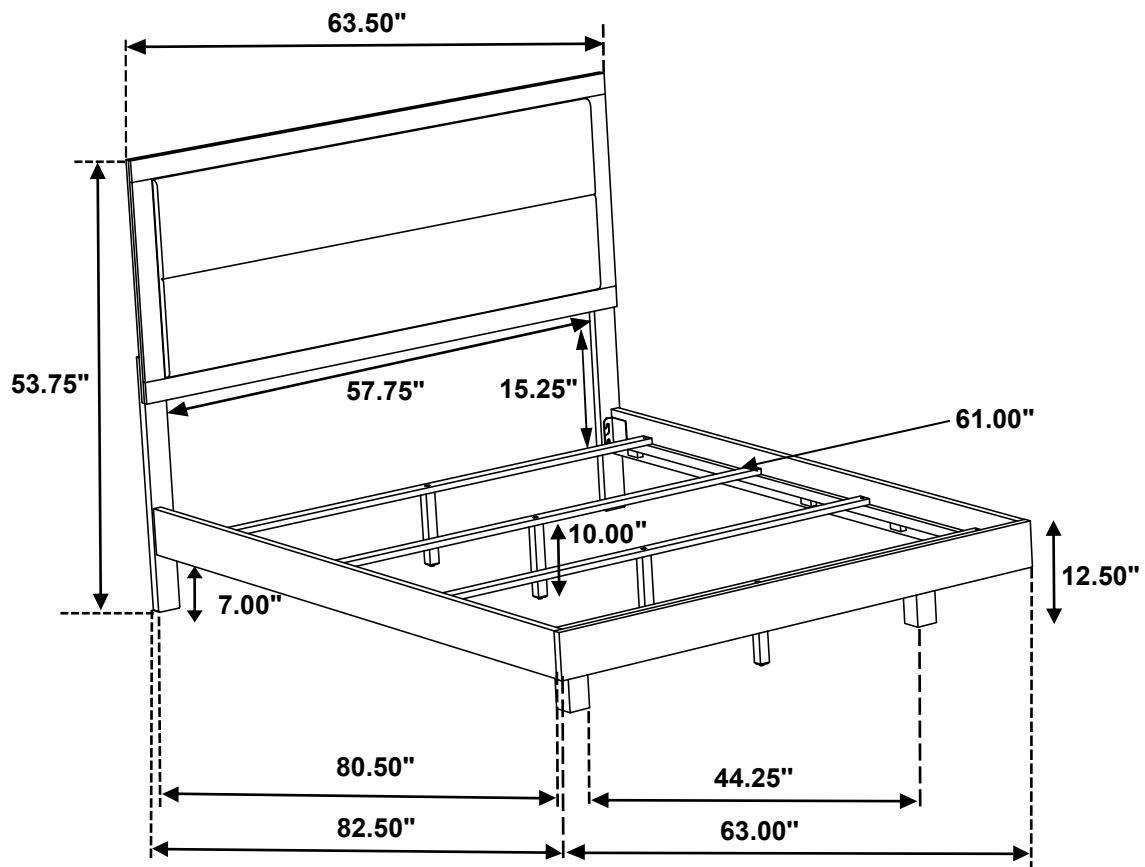

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

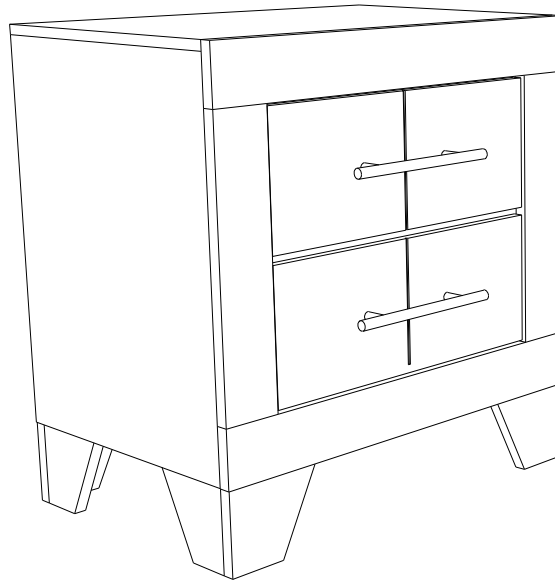

Fine Furniture for every stage of life

225062
Nightstand

ITEM: **225062**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

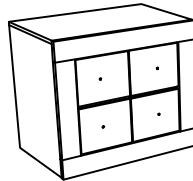

1PC

B LEG WITH LABEL "R"



2PCS


C LEG WITH LABEL "L"



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 35mm - BLK)



4PCS

2 LOCK WASHER
(1/4" - BLK)



4PCS

3 FLAT WASHER
(1/4"ID x 19mm - BLK)



4PCS

4 WOOD DOWEL
(8 x 20mm)



4PCS

5 ALLEN WRENCH
(M4 x 60mm - BLK)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM:225062

ASSEMBLY INSTRUCTIONS

STEP 1

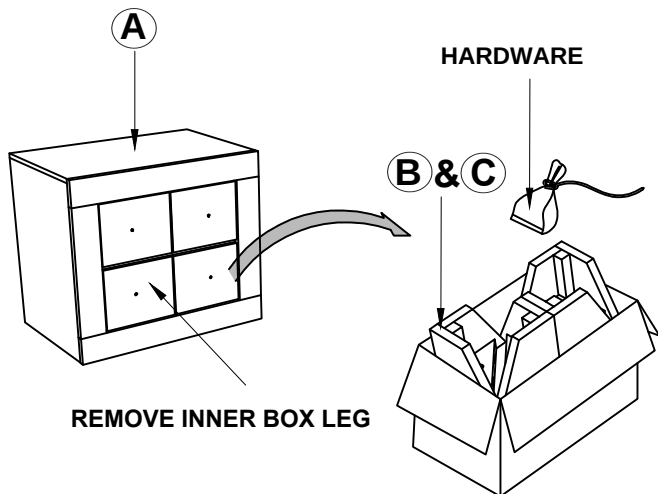


STEP 2

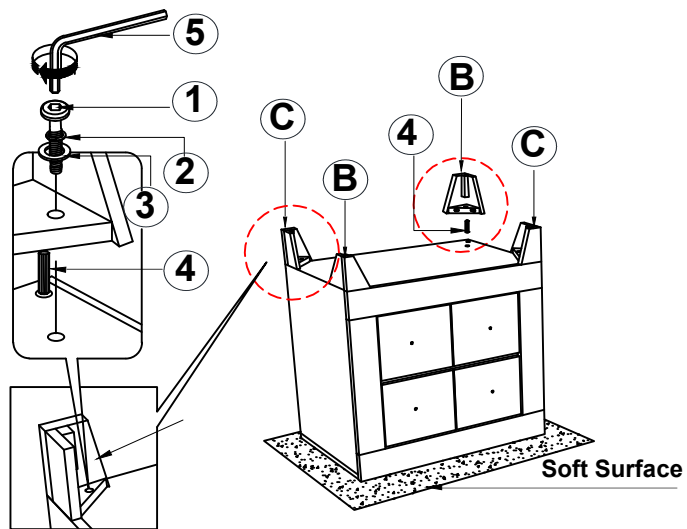


Bottom View

STEP 3

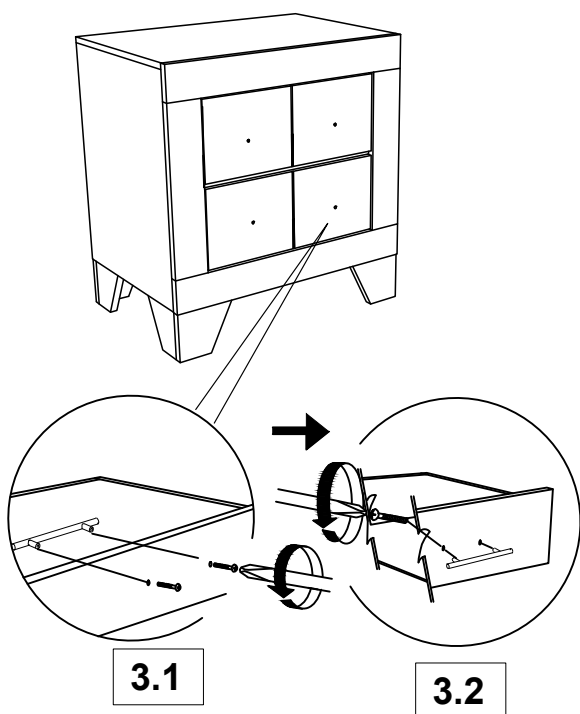


STEP 4
COMPLETE

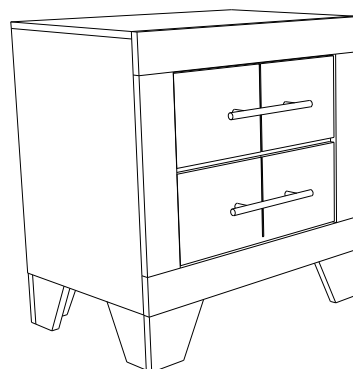

ITEM: **225062**



Inner Size of Drawer : 12.75"W x 11.25"D x 4.25"H x 0.25"T

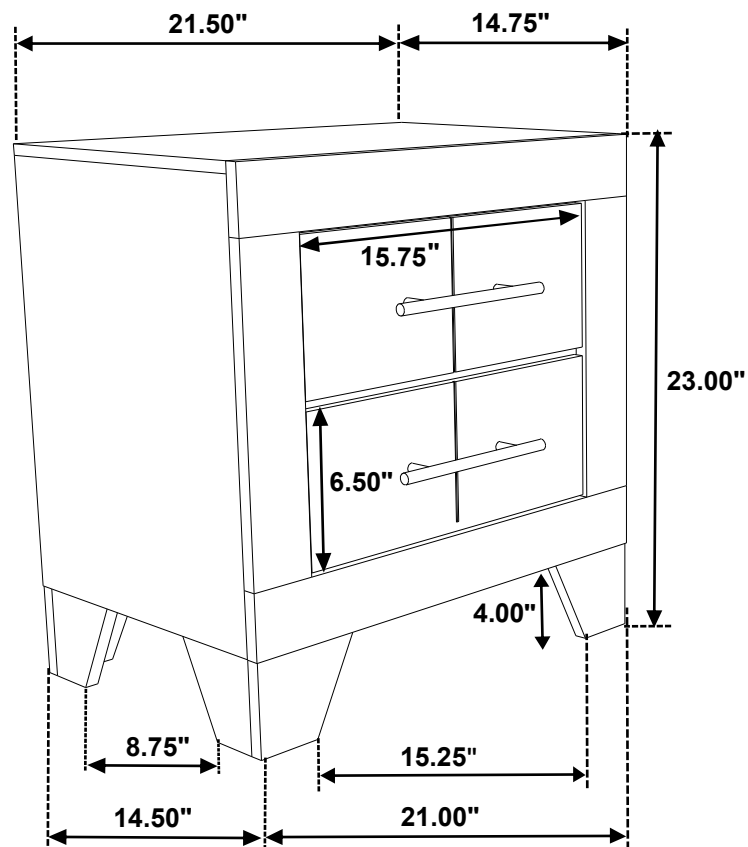

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225063
Dresser

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.


ASSEMBLY TIME
5 MINUTES

PARTS IDENTIFICATION

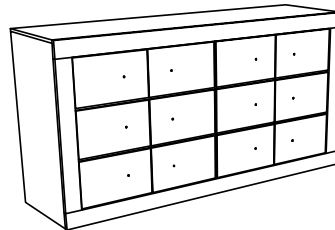A DRESSER
1PC

B LEG WITH LABEL "R"
2PCS

C LEG WITH LABEL "L"
2PCS

D CENTER SUPPORT LEG WITH LEVELER
1PC


HARDWARE IDENTIFICATION

1 BOLT
(M6 x 35mm - BLK)

4PCS


2 LOCK WASHER
(1/4" - BLK)

4PCS

3 FLAT WASHER
(1/4"ID x 19mm - BLK)

4PCS

4 WOOD DOWEL
(8 x 20mm)

4PCS

5 ALLEN WRENCH
(M4 x 60mm - BLK)

1PC


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **225063**


ASSEMBLY INSTRUCTIONS



STEP 1

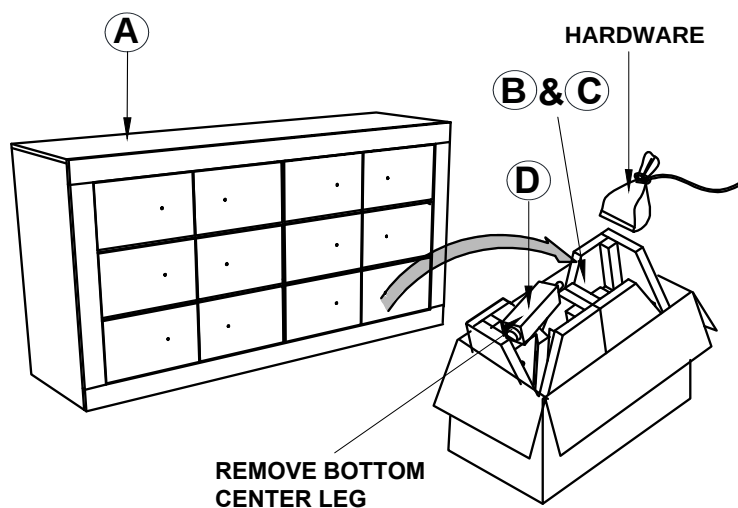


STEP 2

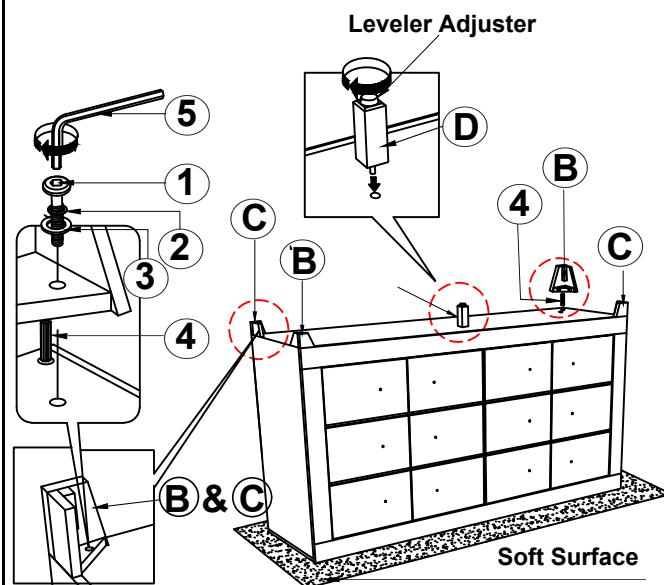

Bottom View

STEP 3

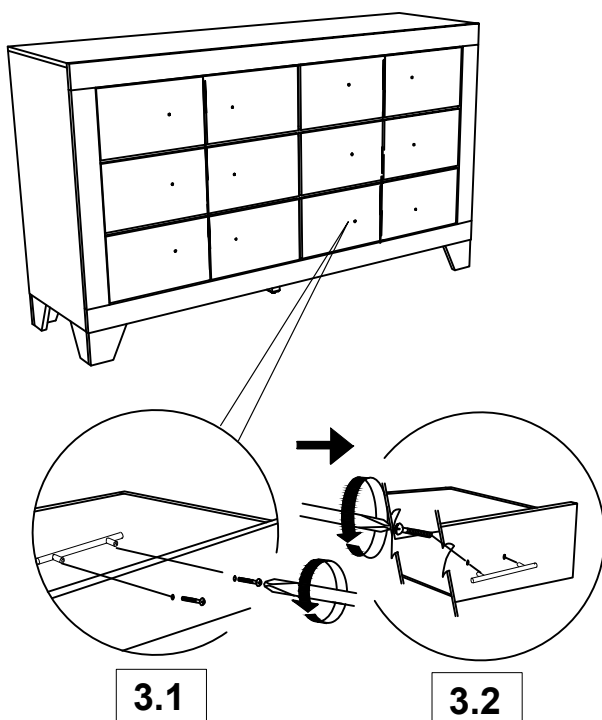


STEP 4 COMPLETE



ITEM: **225063**



Inner Size of Drawer : 23.25"W x 11.25"D x 5.25"H x 0.25"T

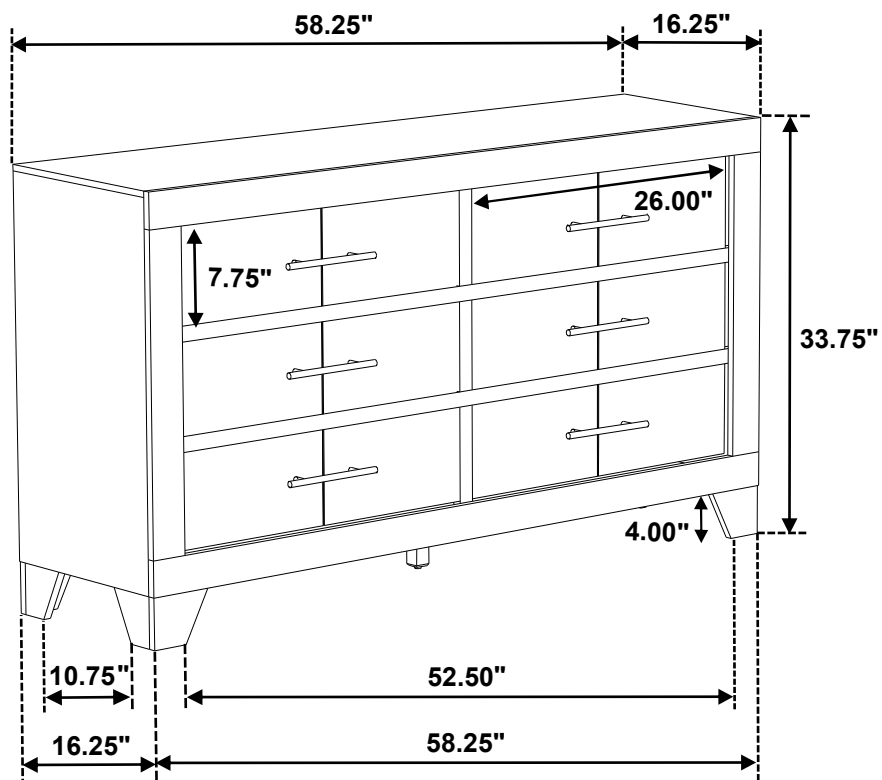

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225064
Mirror

ITEM: 225064



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR

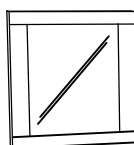

1PC

B **DRESSER FROM
BOX ITEM #225063**



1PC

**C MIRROR SUPPORT
(PACK WITH DRESSER)**



2PCS

HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW
(M4 x 32mm - RBW)



10PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **225064**

ASSEMBLY INSTRUCTIONS

STEP 1

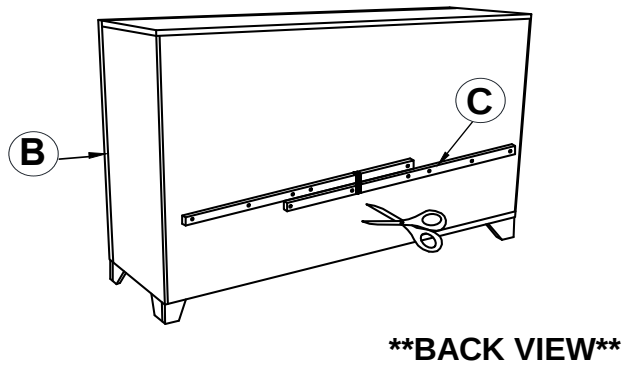


STEP 2

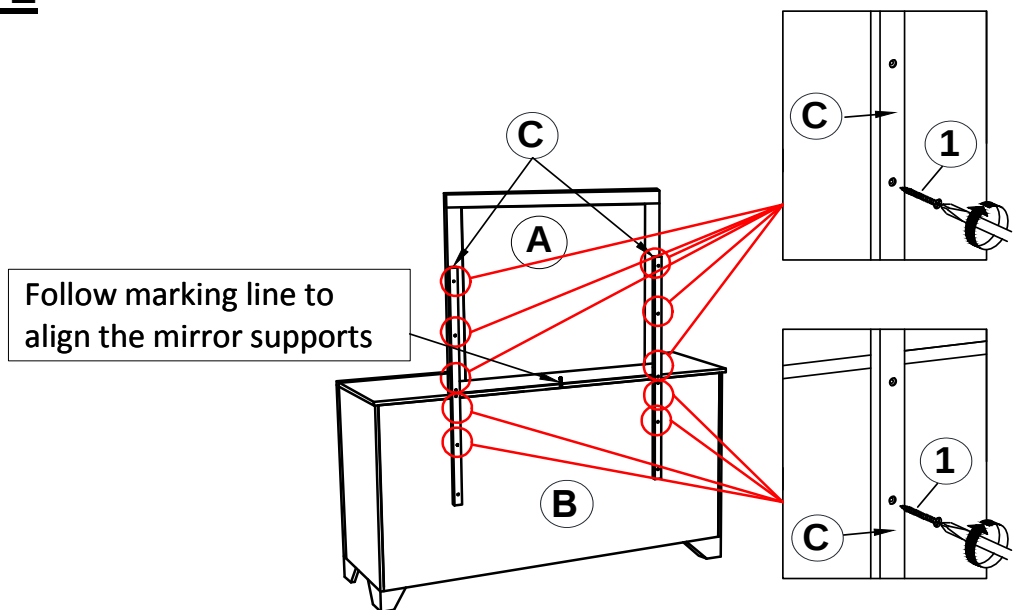

STEP 3
COMPLETE



ITEM: **225064**

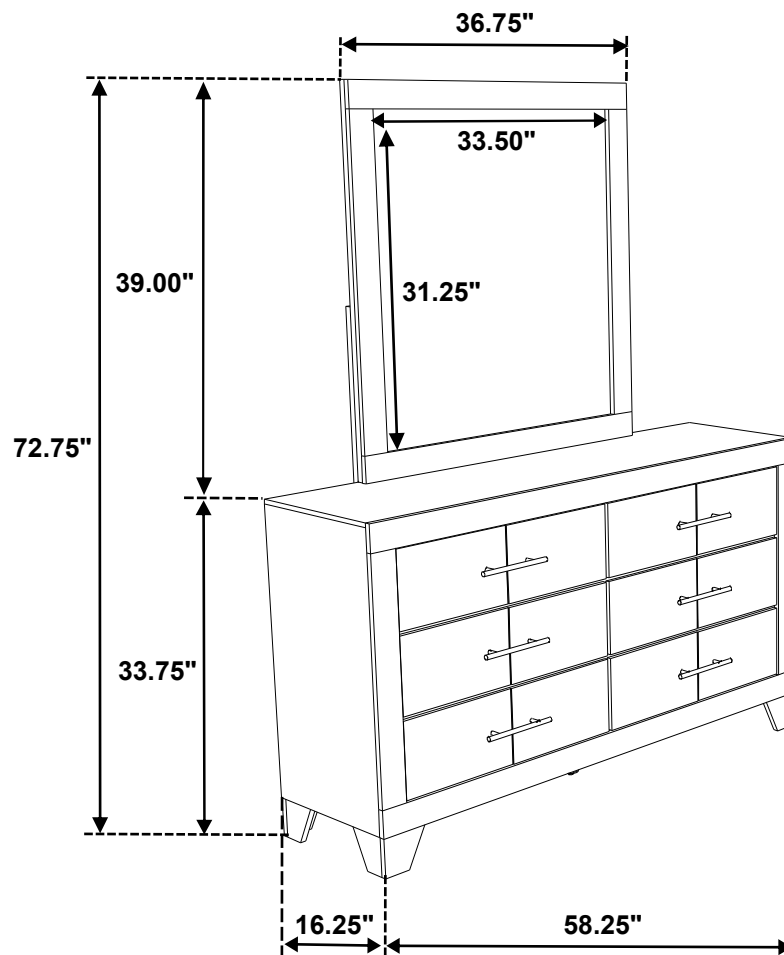

Note : Dimension tolerance $\pm$ 5%

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225065
Chest

ITEM: **225065**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A

CHEST

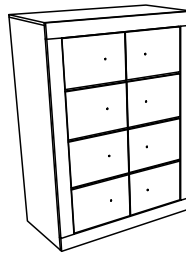

1PC

B

LEG WITH LABEL "R"



2PCS

C

LEG WITH LABEL "L"



2PCS

HARDWARE IDENTIFICATION

1

BOLT
(M6 x 35mm - BLK)



4PCS

2

LOCK WASHER
(1/4" - BLK)



4PCS

3


FLAT WASHER
(1/4"ID x 19mm - BLK)



4PCS

4

WOOD DOWEL
(8 x 20mm)



4PCS

5

ALLEN WRENCH
(M4 x 60mm - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **225065**




ASSEMBLY INSTRUCTIONS

STEP 1

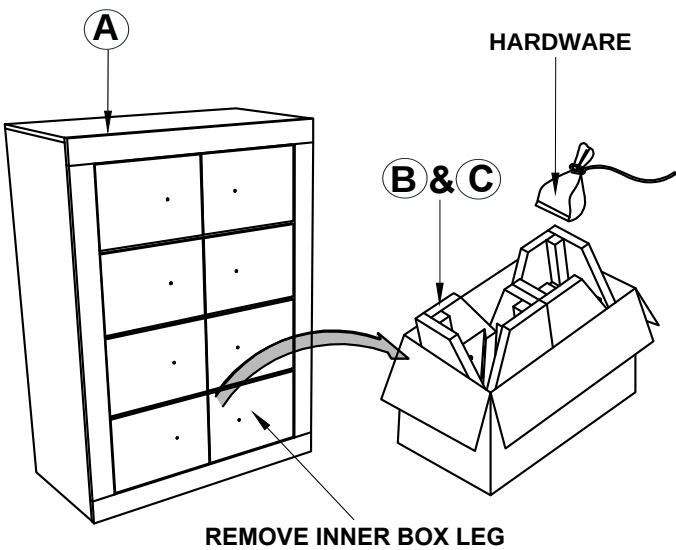


STEP 2

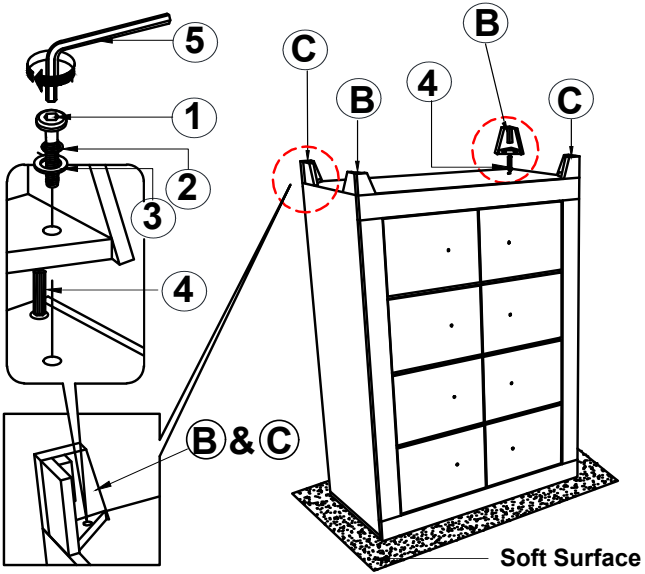

Bottom View

STEP 3

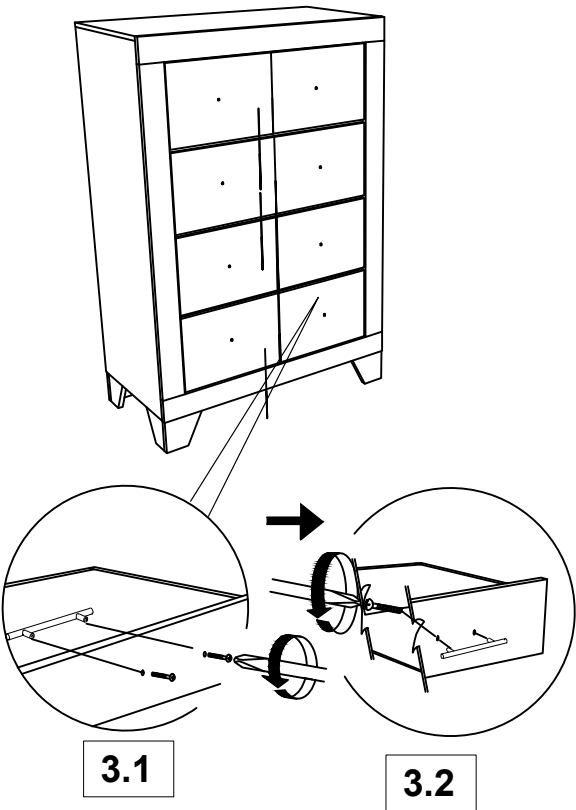


STEP 4
COMPLETE



ITEM: **225065**



Inner Size of Drawer : 23.25"W x 11.25"D x 6.25"H x 0.25"T

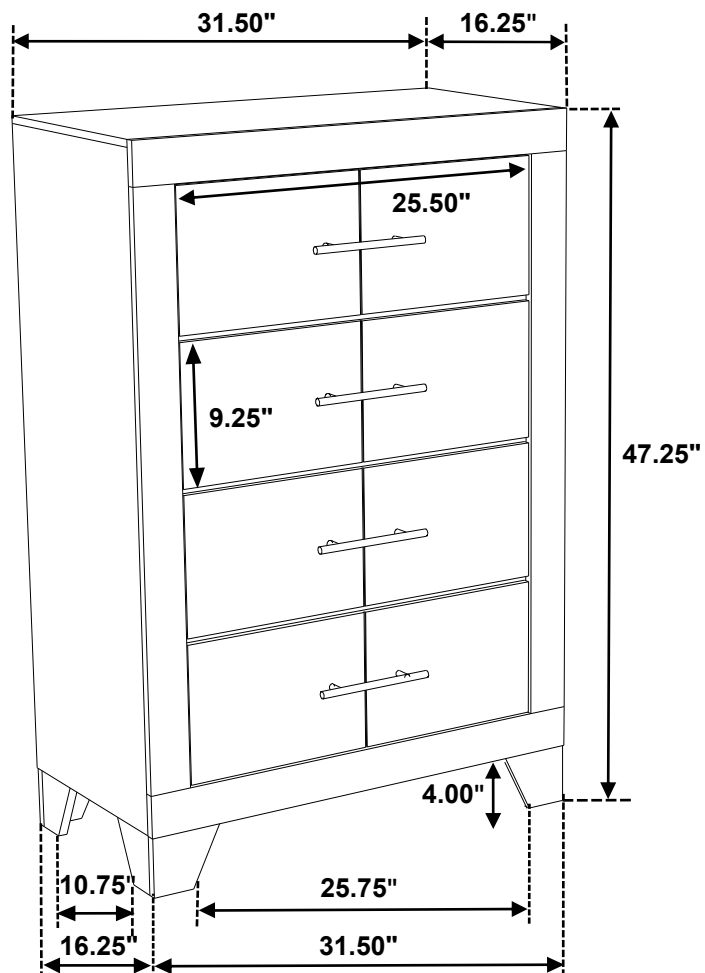

Note : Dimension tolerance $\pm$ 5%