

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225111Q (B1&B2)
Queen Bed

ITEM: 225111Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD
PANEL

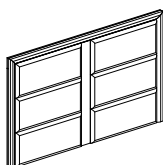


1PC

D FOOTBOARD PANEL



1PC

B LEFT HEADBOARD
LEG (WITH "L" LABEL)




1PC

E BED SLAT



4PCS

C RIGHT HEADBOARD
LEG (WITH "R" LABEL)



1PC


F BED SLAT SUPPORT
WITH LEVELER



4PCS

B2 (BOX 2)

G BED RAIL



2PCS

I RIGHT FOOTBOARD
LEG (WITH "R" LABEL)



1PC

H LEFT FOOTBOARD LEG
(WITH "L" LABEL)



1PC

ITEM: 225111Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE IS LOCATED IN 225111Q (B1)

1	BOLT 1 (M8 x 16MM - RBW)		8 PCS
2	BOLT 2 (M8 x 40MM - RBW)		8 PCS
3	BIG LOCK WASHER (5/16" x 14Ø - RBW)		8 PCS
4	BIG FLAT WASHER (5/16" x 22Ø - RBW)		8 PCS
5	BIG ALLEN WRENCH (M5 x 68MM - BLK)		1 PC
6	BOLT 3 (M6 x 40MM - RBW)		4 PCS
7	SMALL LOCK WASHER (1/4" x 13Ø - RBW)		4 PCS
8	SMALL FLAT WASHER (1/4" x 19Ø - RBW)		4 PCS
9	SMALL ALLEN WRENCH (M4 x 68MM - BLK)		1 PC
10	FLAT HEAD SCREW (M4 x 32MM - BLK)		8 PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **225111Q (B1&B2)**
ASSEMBLY INSTRUCTIONS




STEP 1

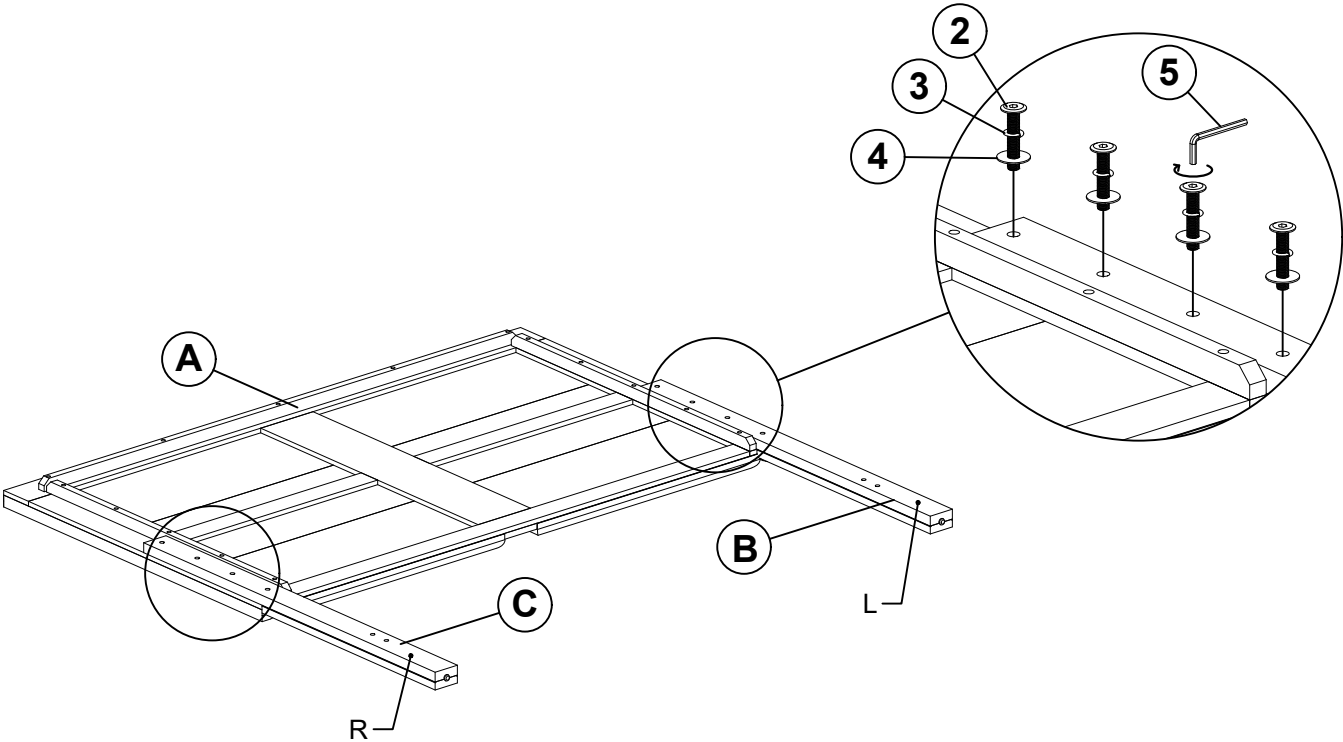

**** BACK VIEW**

STEP 2

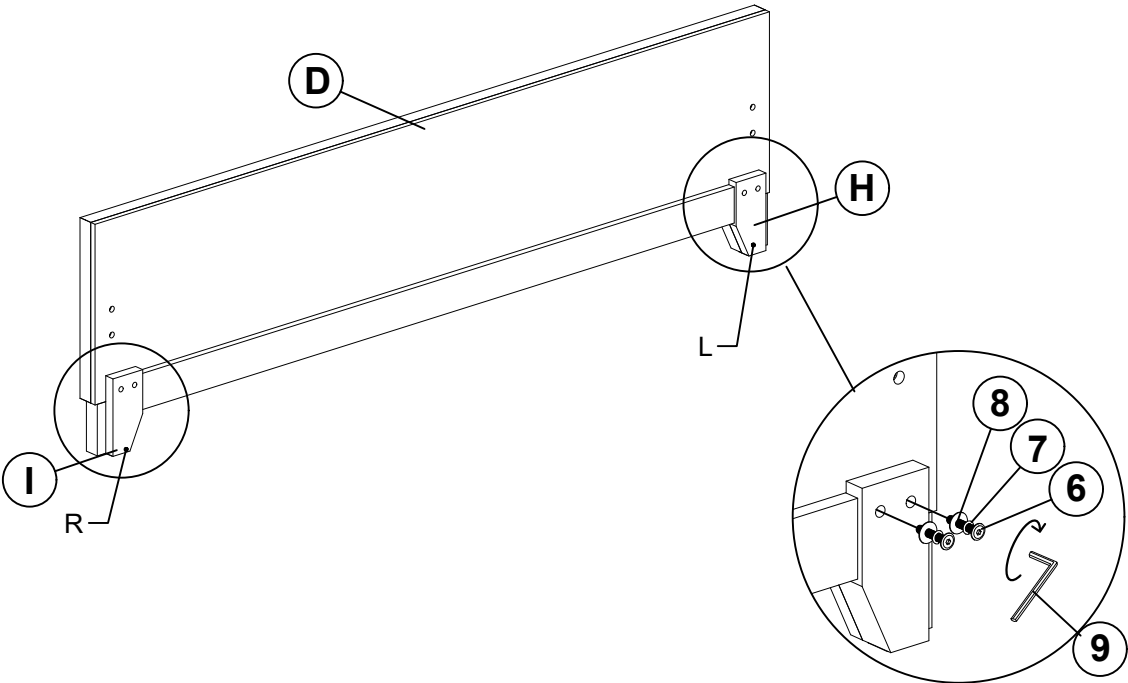


**** BACK VIEW**

ITEM: **225111Q (B1&B2)**


ASSEMBLY INSTRUCTIONS



STEP 3

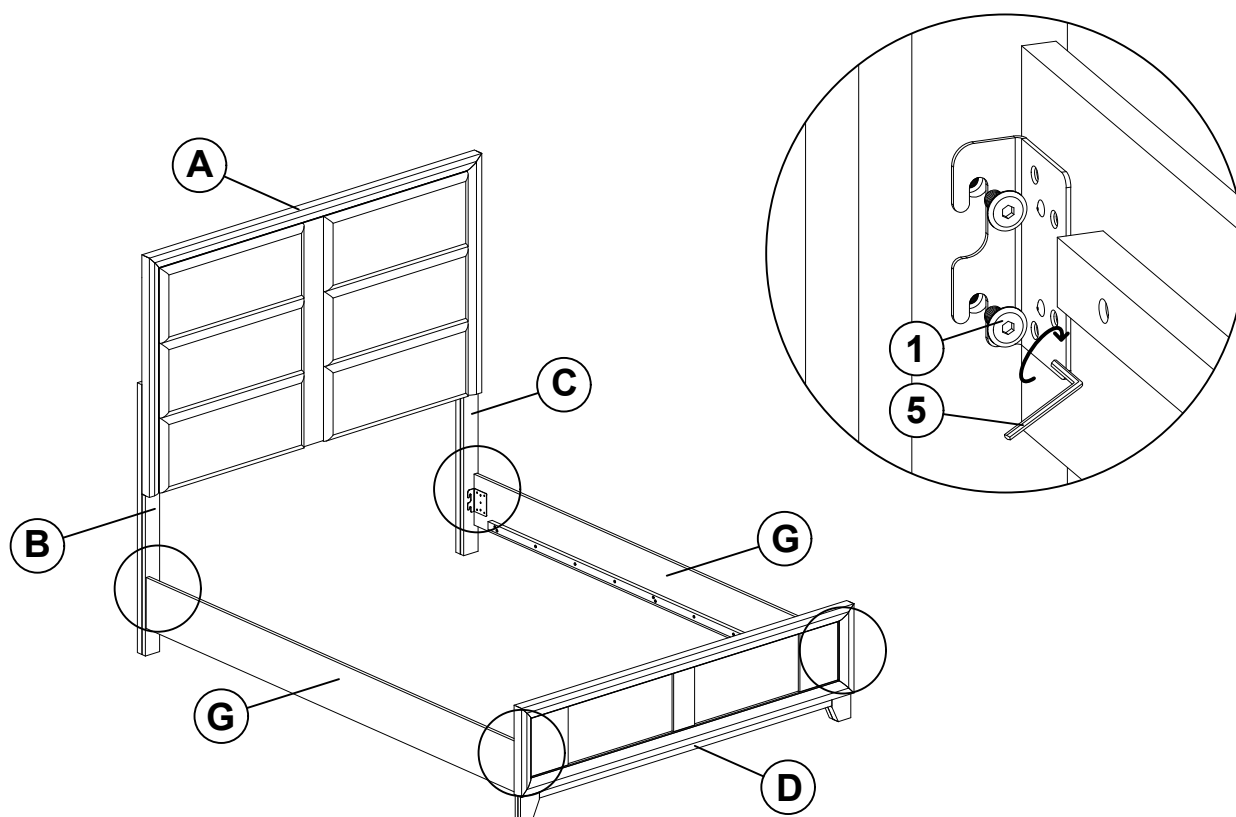


STEP 4

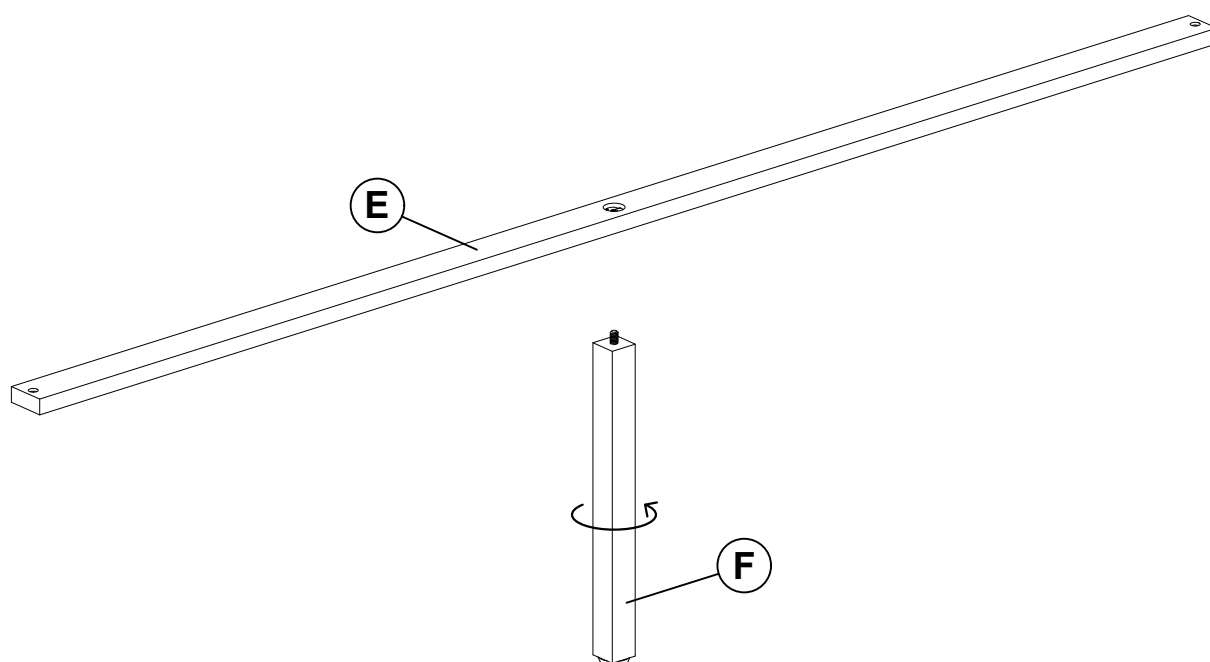


ITEM: **225111Q (B1&B2)**
ASSEMBLY INSTRUCTIONS



STEP 5

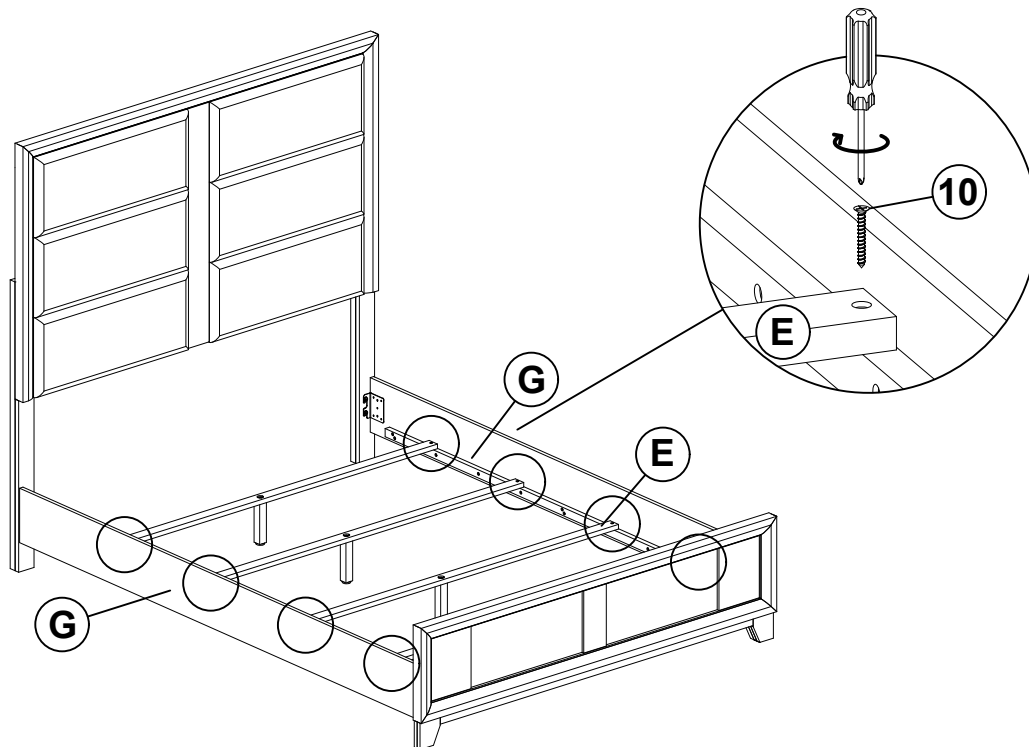


STEP 6
COMPLETE

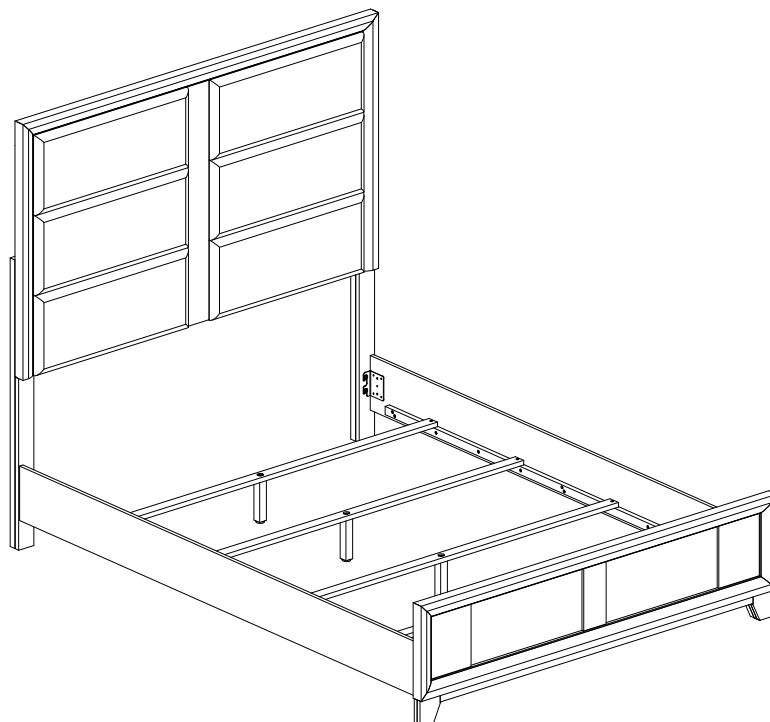

ITEM: **225111Q (B1&B2)**



Inner Size : 60.75"W X 80.75"D

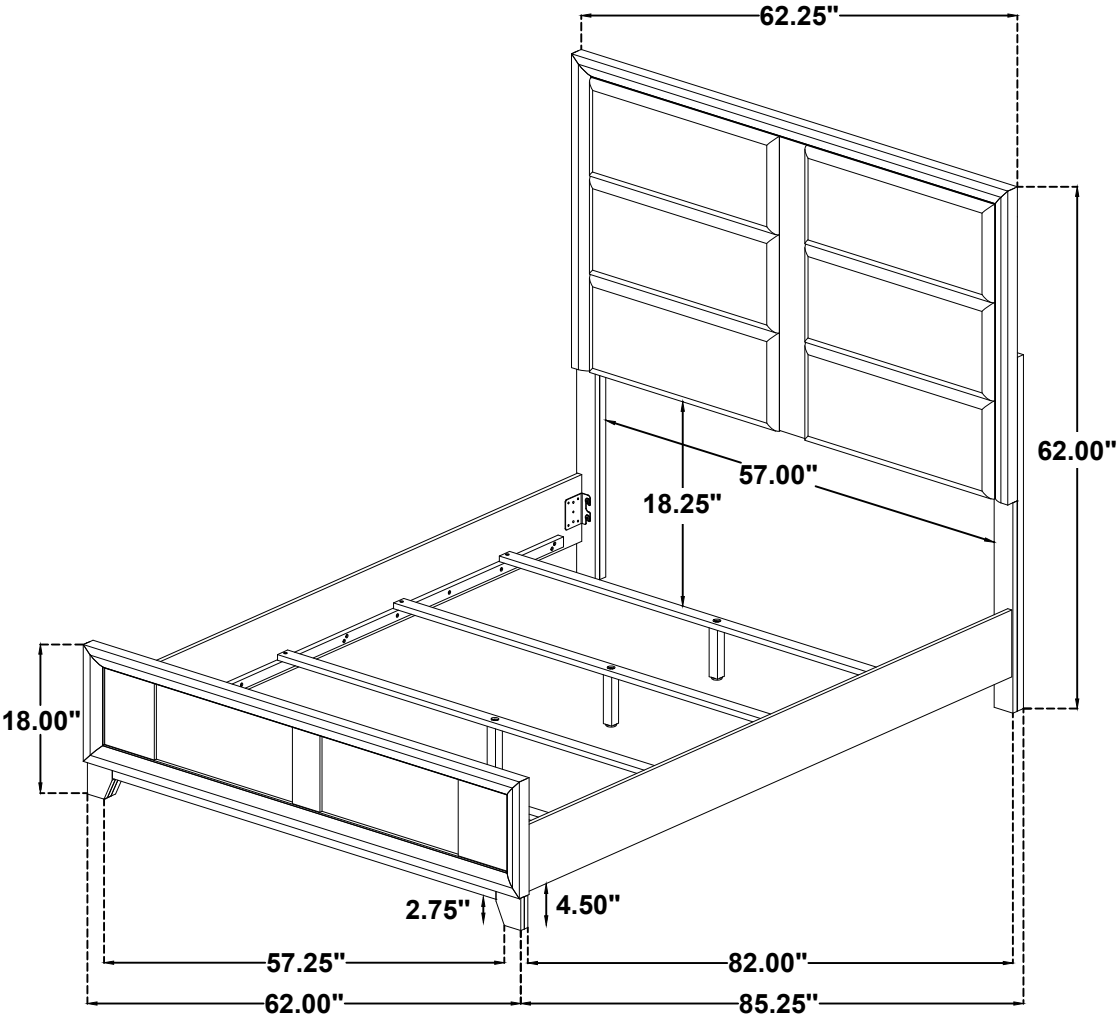

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225112
Nightstand

ITEM: **225112**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

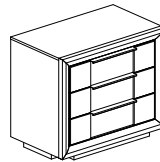

1PC

B LEG (WITH 'B' LABEL)



2PCS

C LEG (WITH 'C' LABEL)



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH
(M4 x 100MM - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **225112**


ASSEMBLY INSTRUCTIONS



STEP 1

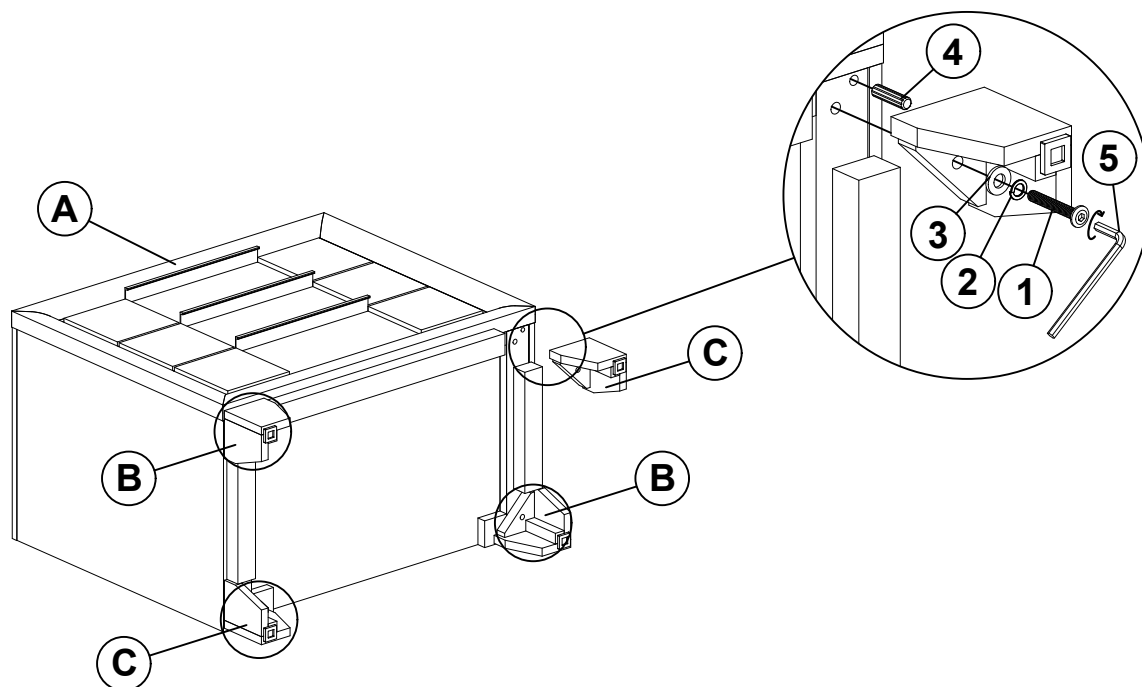


STEP 2 COMPLETE

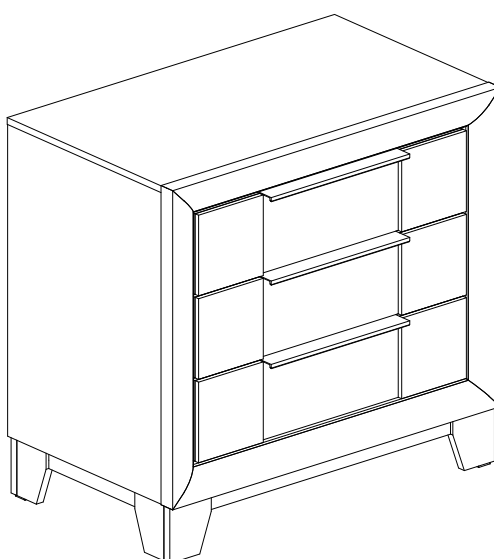

ITEM: **225112**



Inner Size of Drawer : 21.50"W X 14.25"D X 2.75"H X 0.50"T

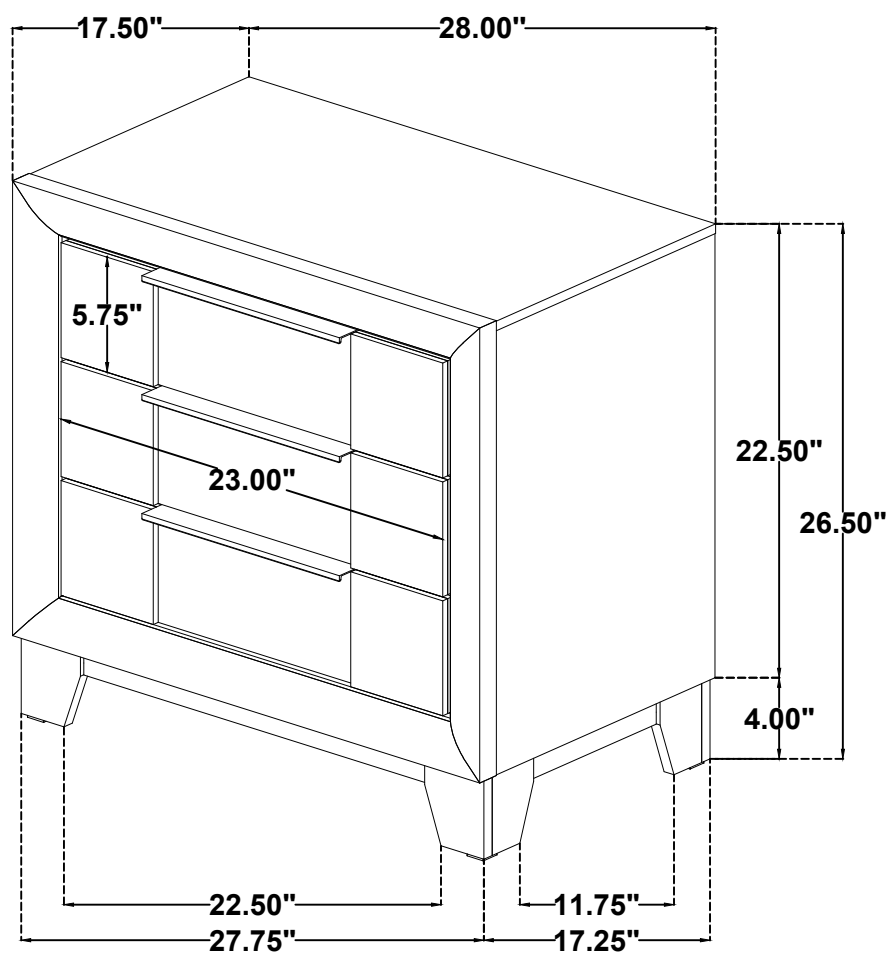

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225113
Dresser

ITEM: **225113**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A DRESSER

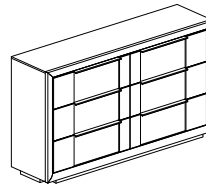

1PC

B LEG (WITH 'B' LABEL)



2PCS

C LEG (WITH 'C' LABEL)



2PCS


D CENTER LEG SUPPORT
WITH LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH
(M4 x 100MM - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **225113**


ASSEMBLY INSTRUCTIONS



STEP 1

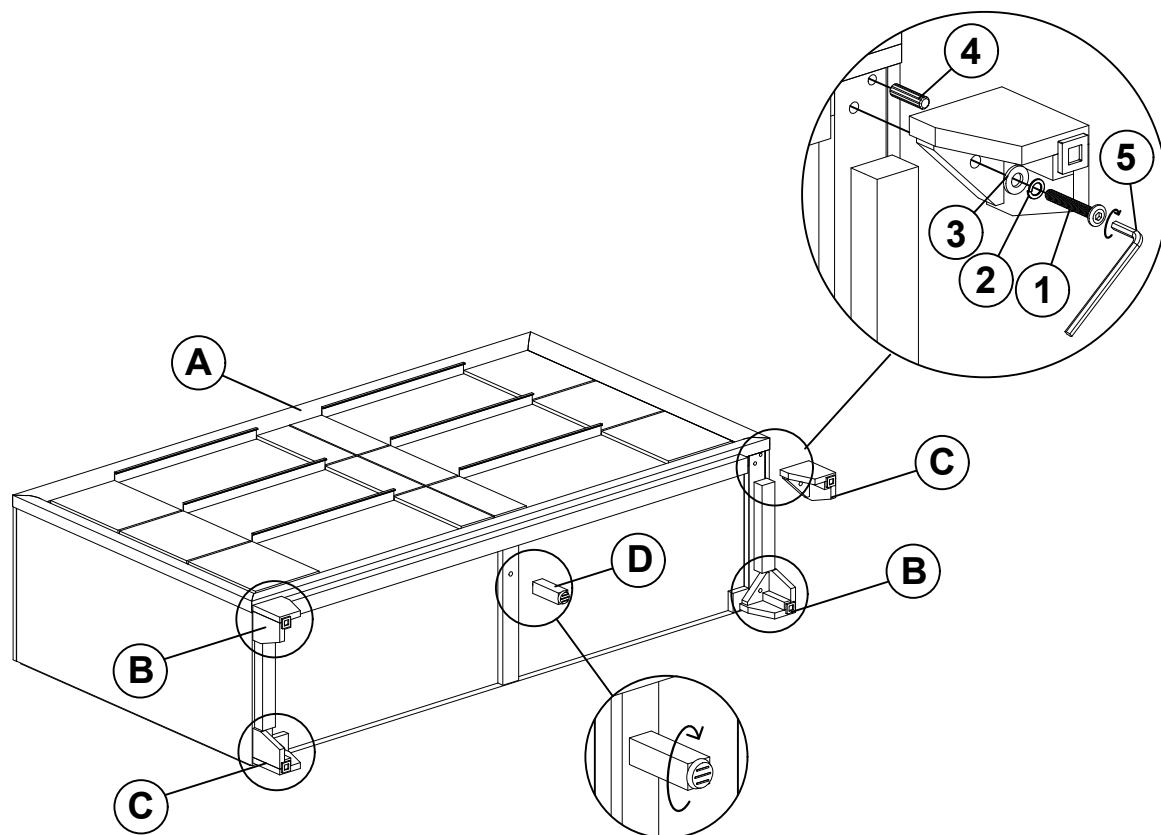

STEP 2 COMPLETE

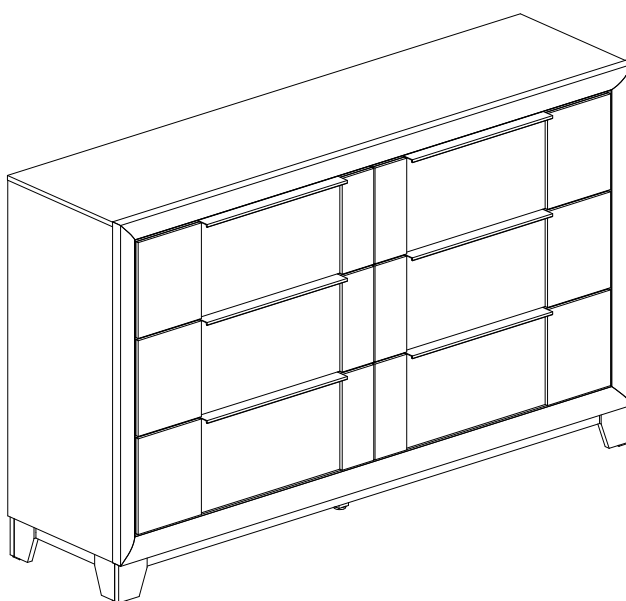

ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be placing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

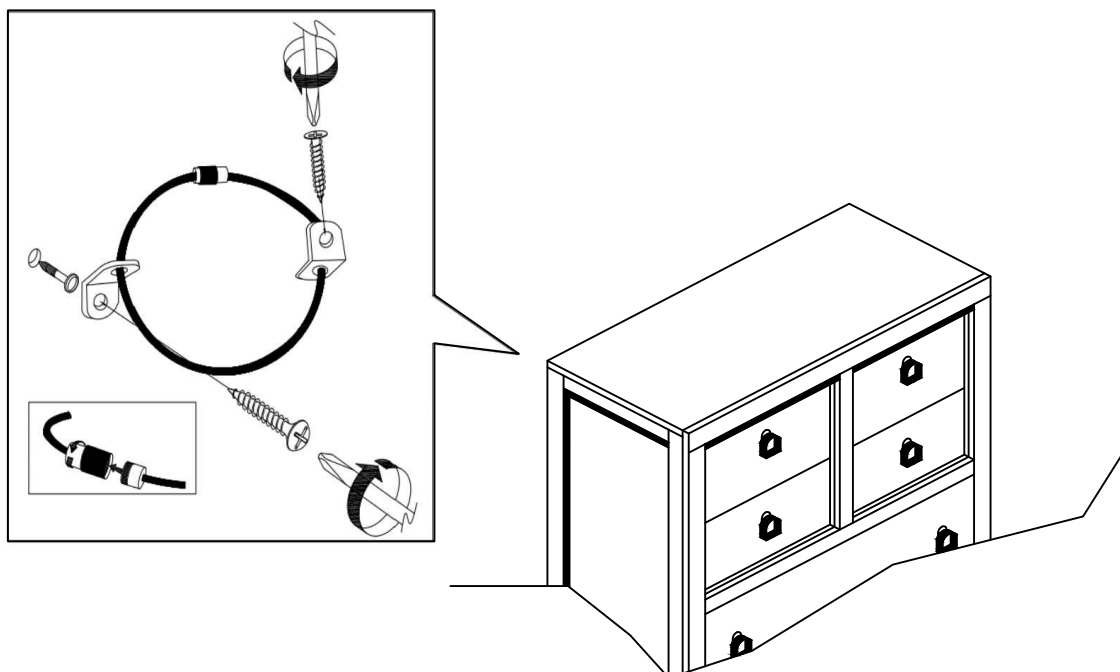

ITEM: **225113**



Inner Size of Drawer : 27.25"W X 14.25"D X 6.00"H X 0.50"T

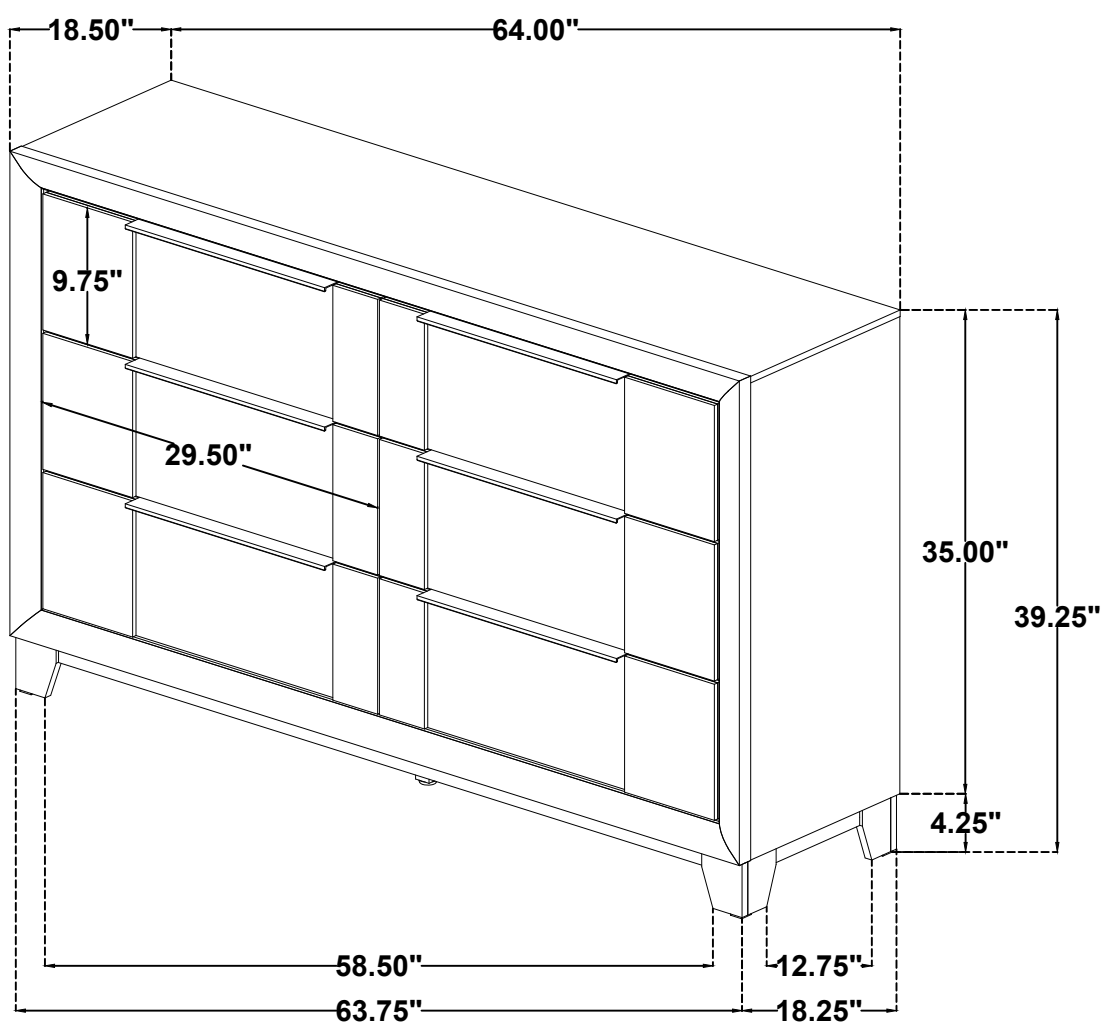

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

225114
Mirror

ITEM: **225114**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES


PARTS IDENTIFICATION

A MIRROR




1PC

B MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS


C DRESSER
*FROM BOX ITEM 225113

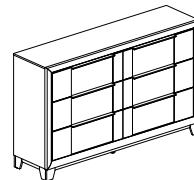

1PC

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 40MM - RBW)



8PCS

2 LOCK WASHER
(1/4" x 13Ø - RBW)



8PCS

3 FLAT WASHER
(1/4" x 19Ø - RBW)



8PCS

4 ALLEN WRENCH
(M4 x 110MM - BLK)




1PC

ITEM: **225114**


ASSEMBLY INSTRUCTIONS




STEP 1

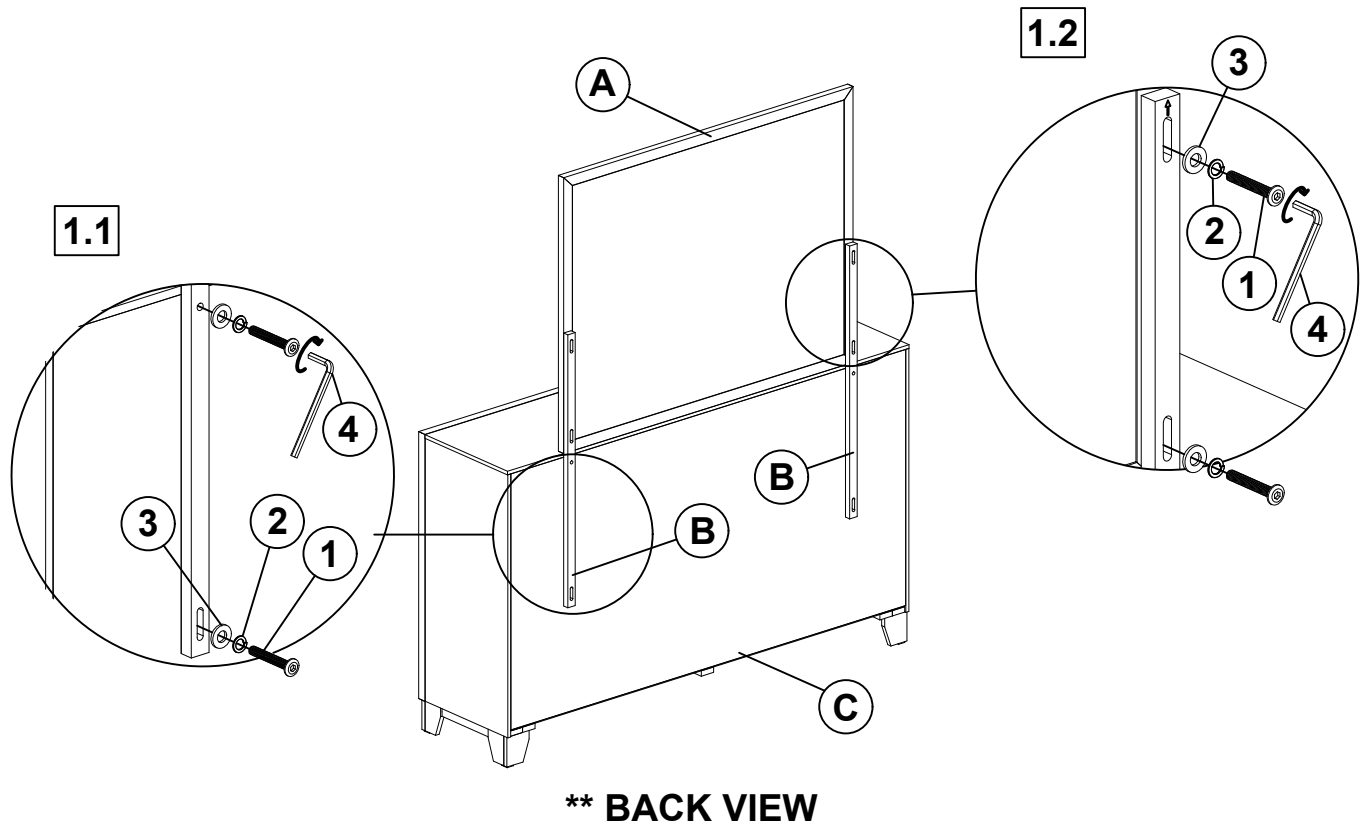

STEP 2 COMPLETE

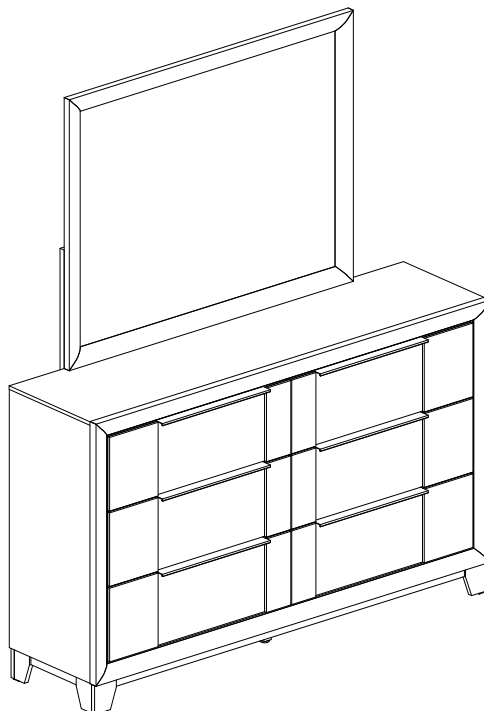

ITEM: **225114**

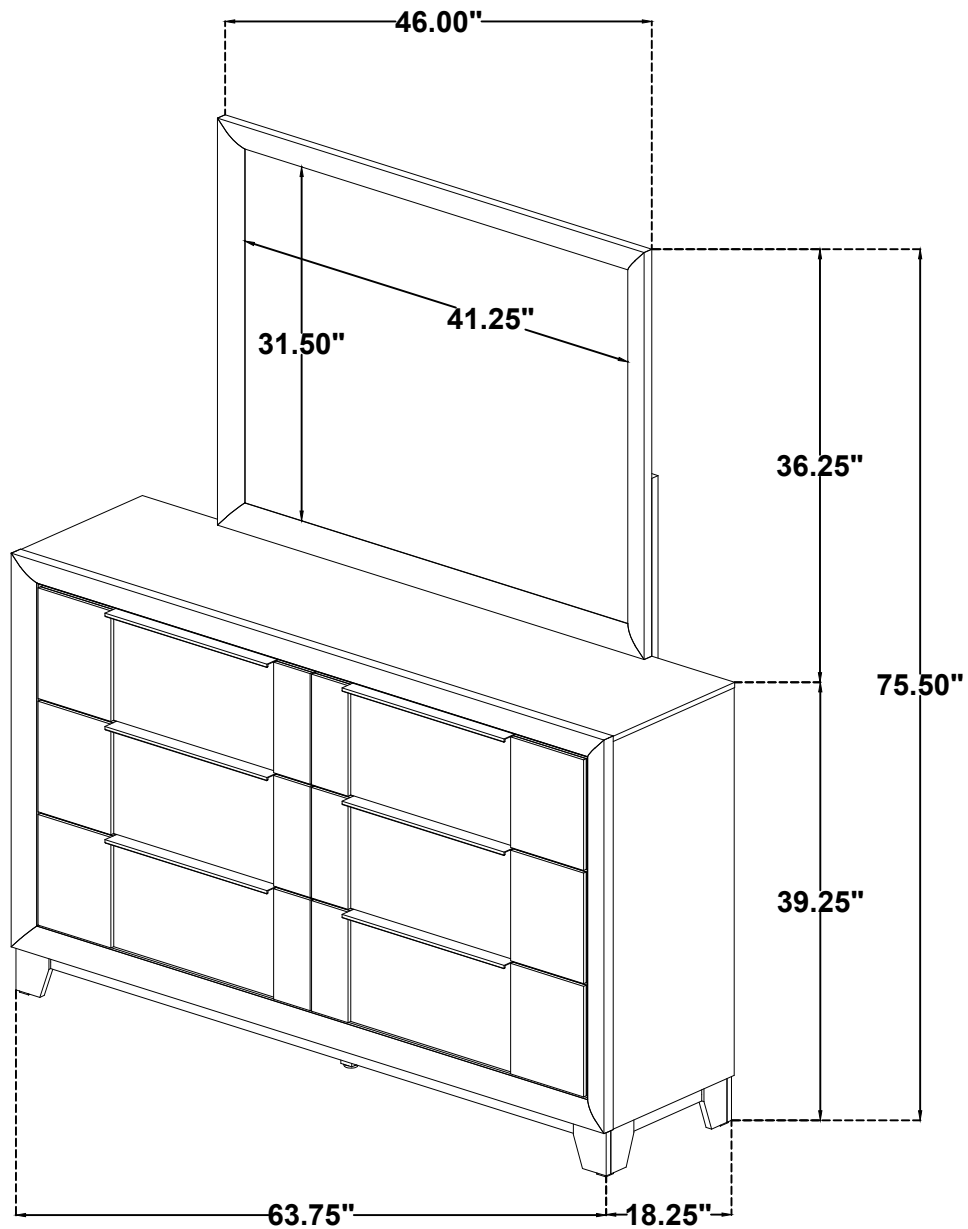

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225115
Chest

ITEM: **225115**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A CHEST

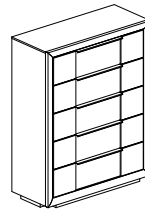

1PC

B LEG (WITH 'B' LABEL)



2PCS


C LEG (WITH 'C' LABEL)



2PCS

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 40MM - RBW)



4PCS

2 LOCK WASHER
(1/4" x 13Ø - RBW)




4PCS

3 FLAT WASHER
(1/4" x 19Ø - RBW)



4PCS

4 WOOD DOWEL
(Ø8 x 30MM)



4PCS

5 ALLEN WRENCH
(M4 x 100MM - BLK)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.


ITEM: **225115**

ASSEMBLY INSTRUCTIONS

STEP 1

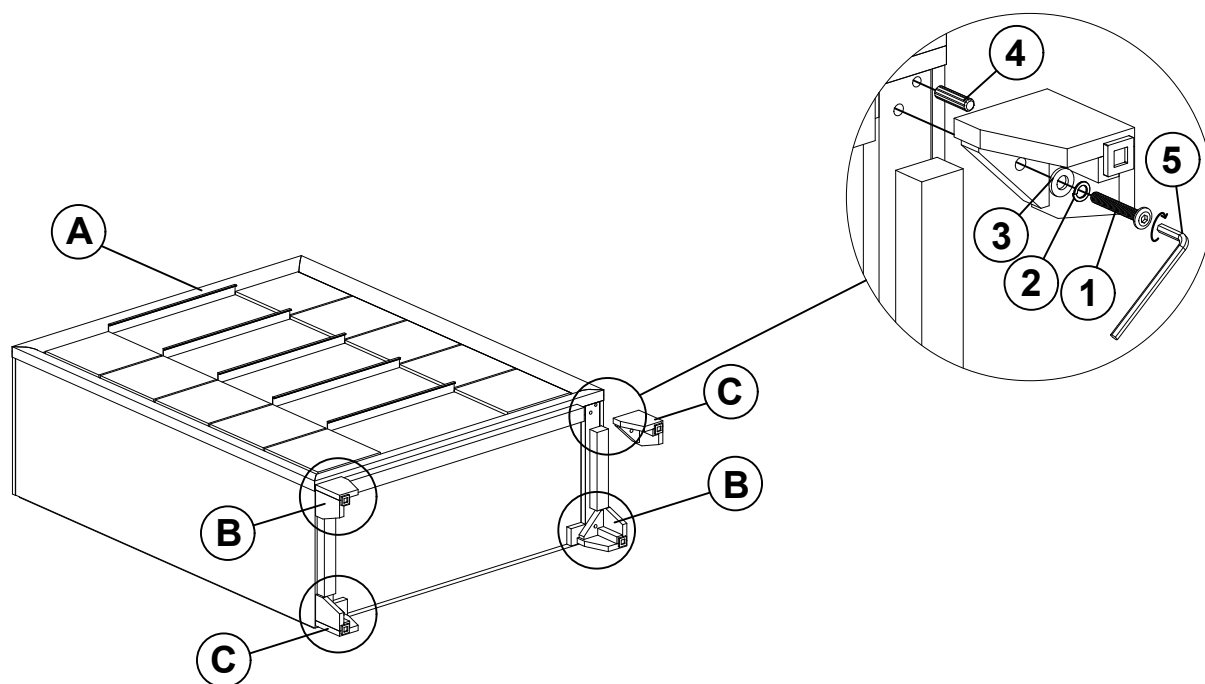

STEP 2 COMPLETE

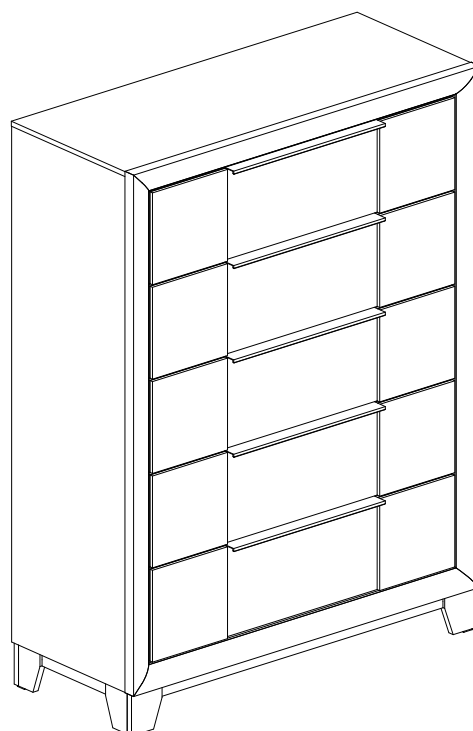

ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be placing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

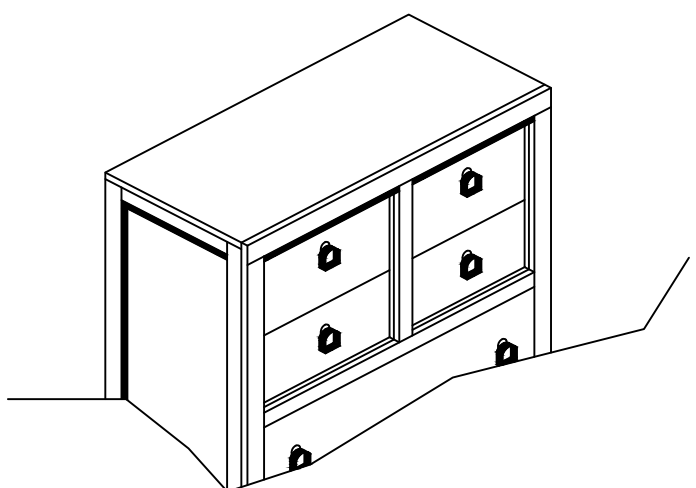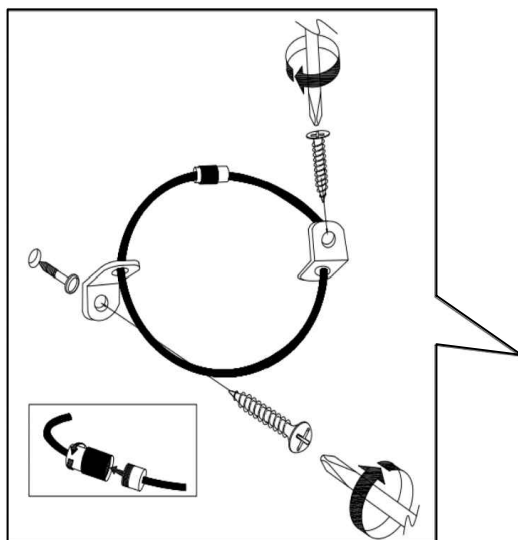

ITEM: **225115**



Inner Size of Drawer : 33.50"W X 14.25"D X 6.00"H X 0.50"T

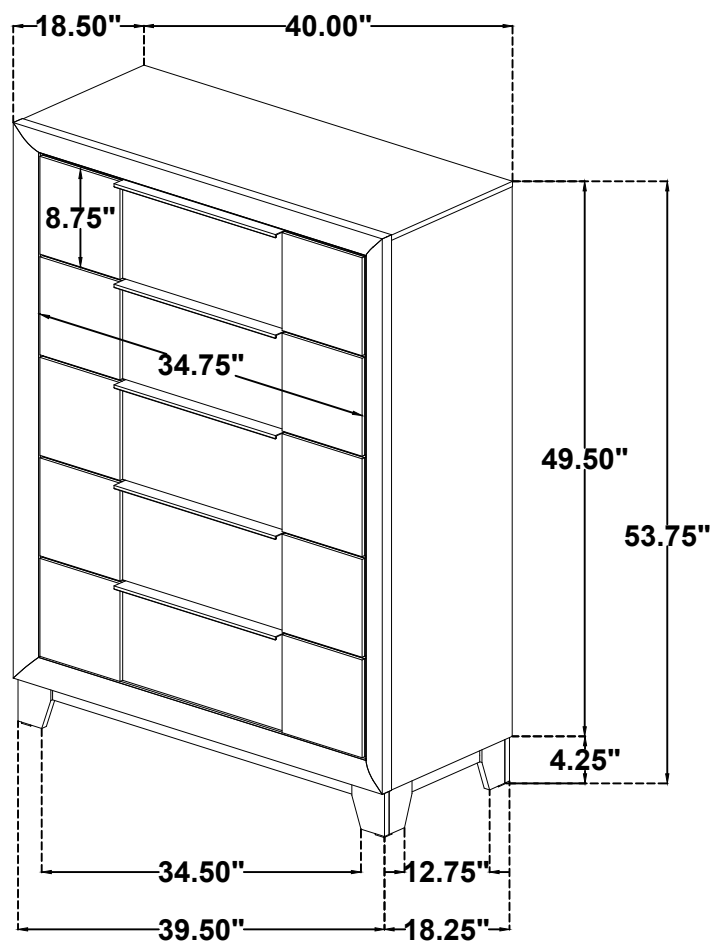

Note : Dimension tolerance $\pm 5\%$