

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225140Q(B1-B3)
Queen Bed

ITEM: 225140Q(B1-B3)

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

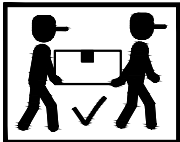


ASSEMBLY TIME

25 MINUTES

PARTS IDENTIFICATION

B1(BOX 1)

A HEADBOARD PANEL



1PC

B LEFT HEADBOARD LEG




1PC

C RIGHT HEADBOARD LEG



1PC


D HEADBOARD BOTTOM RAIL



1PC

B2(BOX 2)

E STORAGE FOOTBOARD

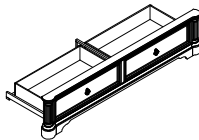


1PC

G CENTER RAIL SUPPORT WITH LEVELER




3PCS

F ROLL SLAT (13 PCS)



1SET


H CONCEAL PANEL



4PCS

B3(BOX 3)

I BED RAIL

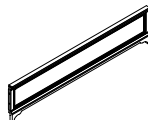


2PCS

J CENTER RAIL




1PC

HB 225140Q(B1) FROM BOX 1 HEADBOARD COMPLETE

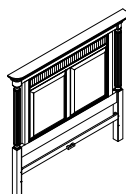

1PC

E 225140Q(B2) FROM BOX 2 FOOTBOARD

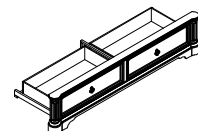

1PC

ITEM: 225140Q(B1-B3)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.






WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION



Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 225140Q(B1)

1	THREADED BOLT (5/16" x 75mm - RBW)		6PCS	5	BOLT (Ø5/16" x 38mm - RBW)		4PCS
2	U-SQUARE WASHER (25 x 15 x 2mm - RBW)		6PCS	6	LOCK WASHER (Ø5/16" - RBW)		4PCS
3	HEX NUT (5/16" x 17mm - RBW)		6PCS	7	FLAT WASHER (Ø5/16" x 19 x 1.5mm - RBW)		4PCS
4	WRENCH (88 x 25 x 2mm - RBW)		1PC	8	ALLEN WRENCH (74 x 30 x 4mm - RBW)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 225140Q(B2)

9	FLAT HEAD SCREW (4 x 32mm - RBW)		6PCS
---	--	---	------


Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 225140Q(B3)

10	THREADED BOLT (5/16" x 75mm - RBW)		8PCS	14	BOLT (Ø1/4" x 32mm - RBW)		2PCS
11	U-SQUARE WASHER (25 x 15 x 2mm - RBW)		8PCS	15	LOCK WASHER (Ø1/4" - RBW)		2PCS
12	HEX NUT (5/16" x 17mm - RBW)		8PCS	16	FLAT WASHER (Ø1/4" x 19 x 1.5mm - RBW)		2PCS
13	WRENCH (88 x 25 x 2mm - RBW)		1PC	17	ALLEN WRENCH (74 x 30 x 4mm - RBW)		1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **225140Q(B1-B3)**
ASSEMBLY INSTRUCTIONS
STEP 1

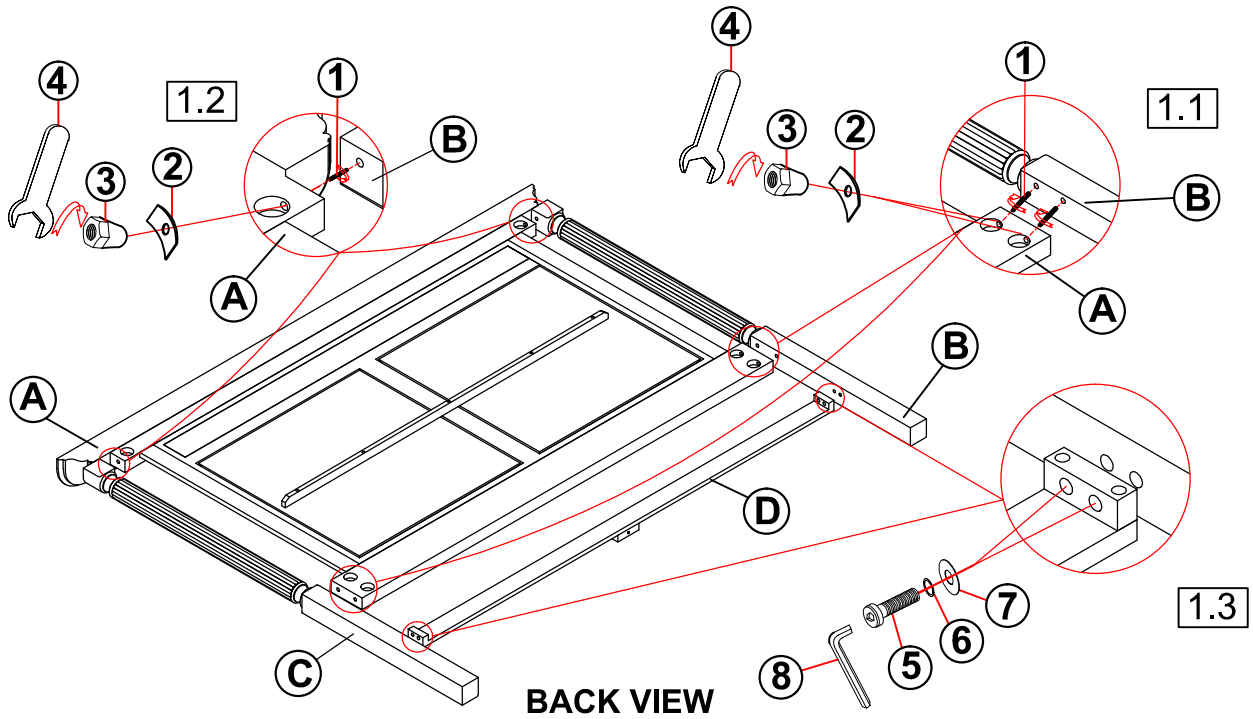


STEP 2

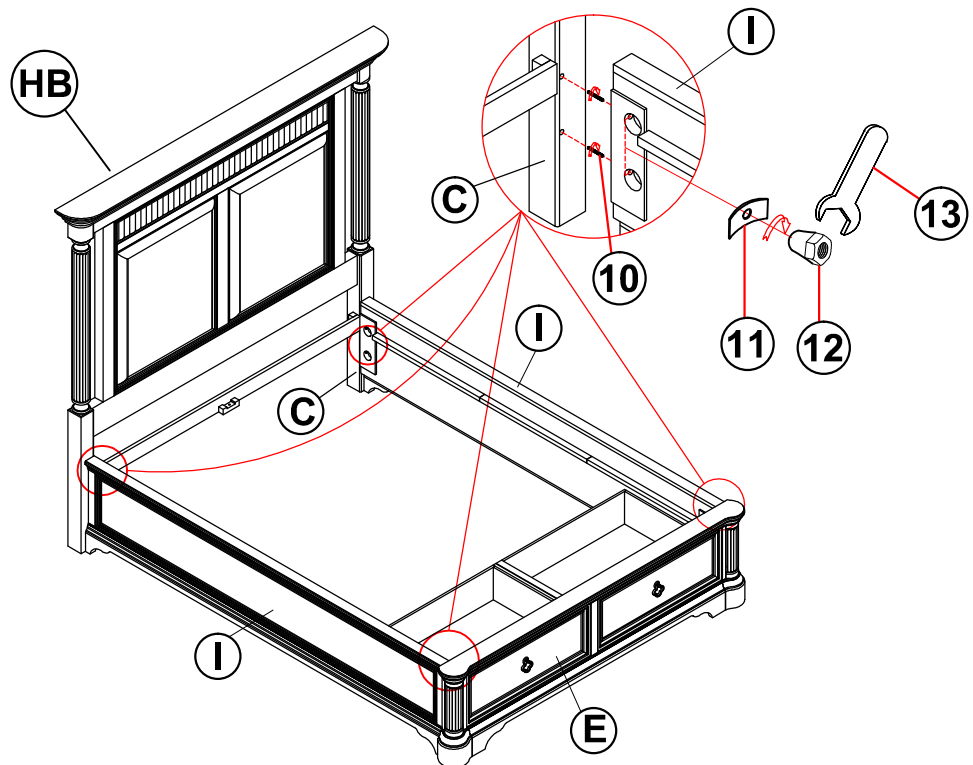


ITEM: **225140Q(B1-B3)**
ASSEMBLY INSTRUCTIONS
STEP 3

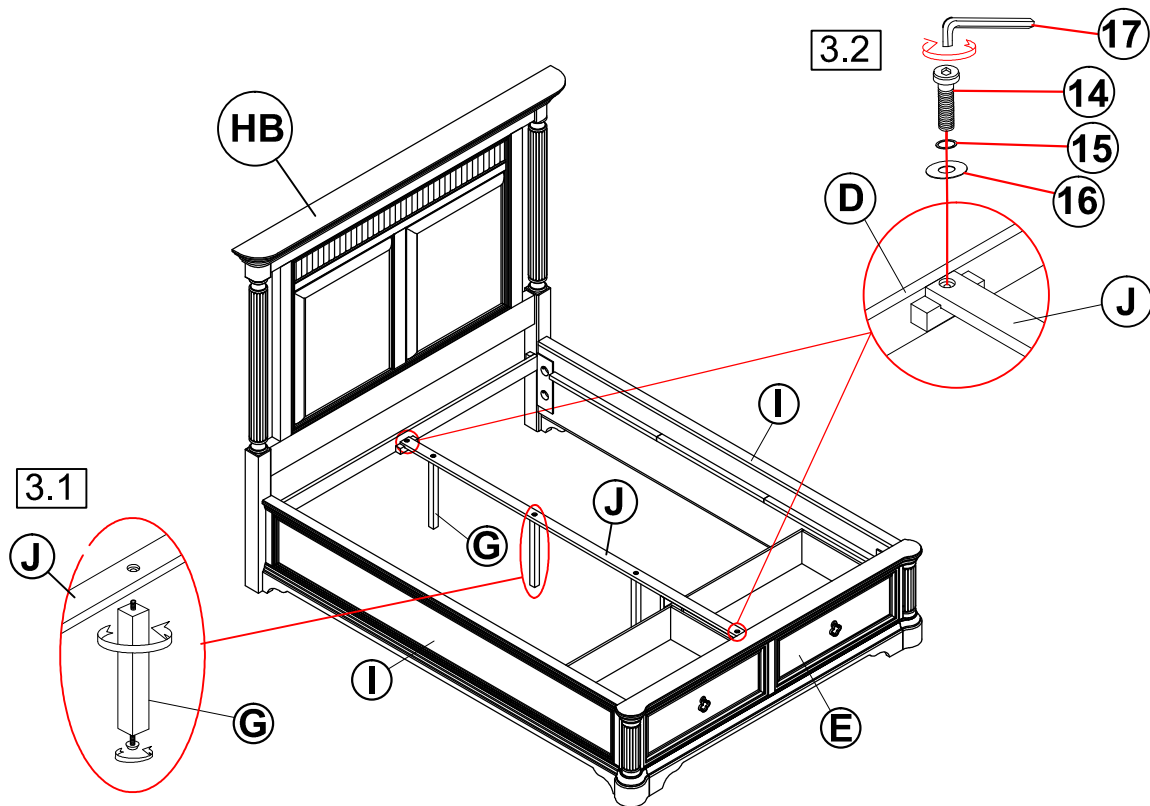



STEP 4

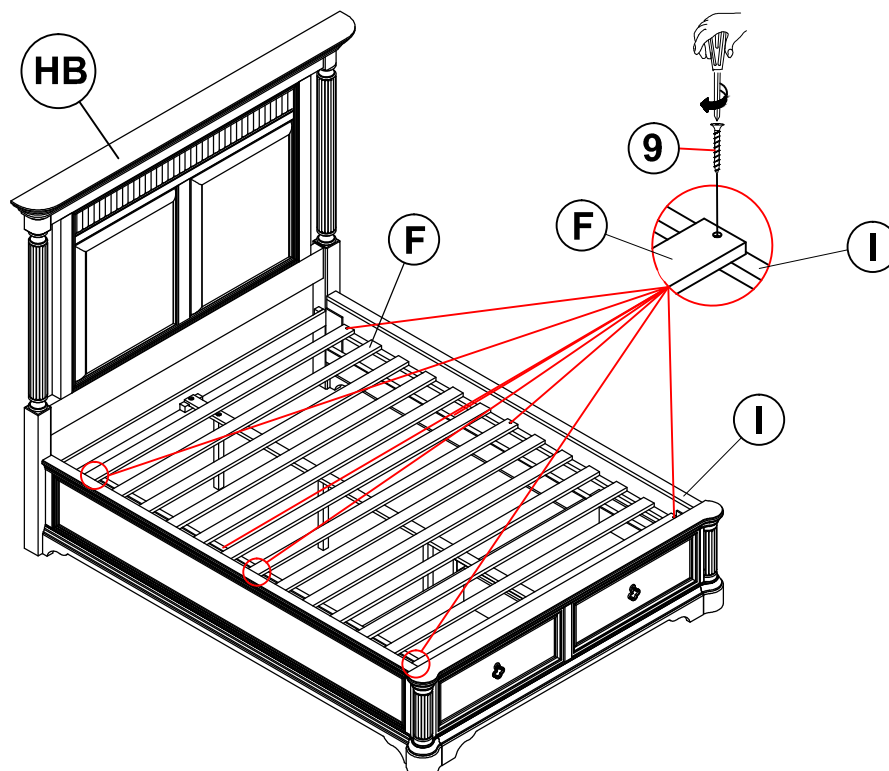

ITEM: **225140Q(B1-B3)**
ASSEMBLY INSTRUCTIONS
STEP 5

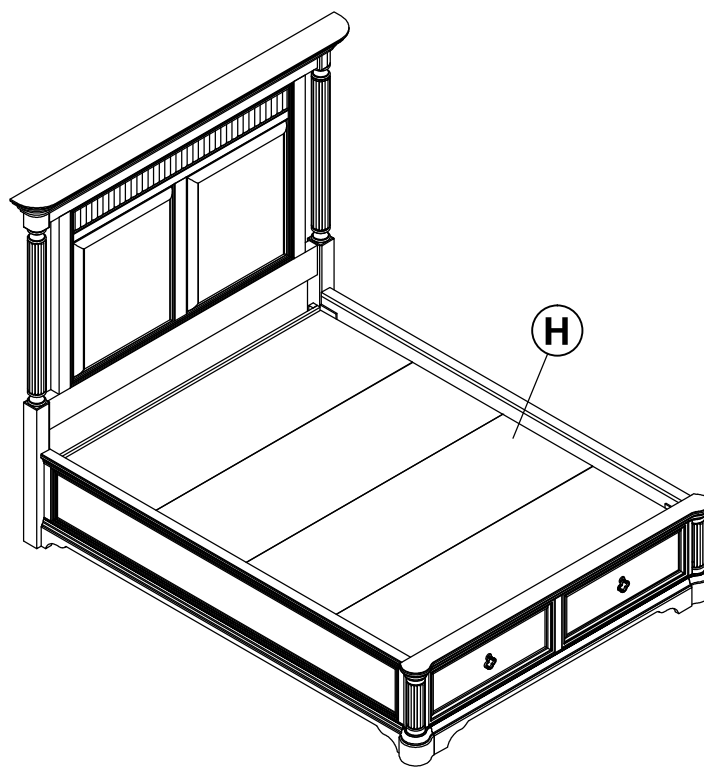

STEP 6
COMPLETE

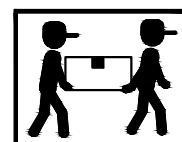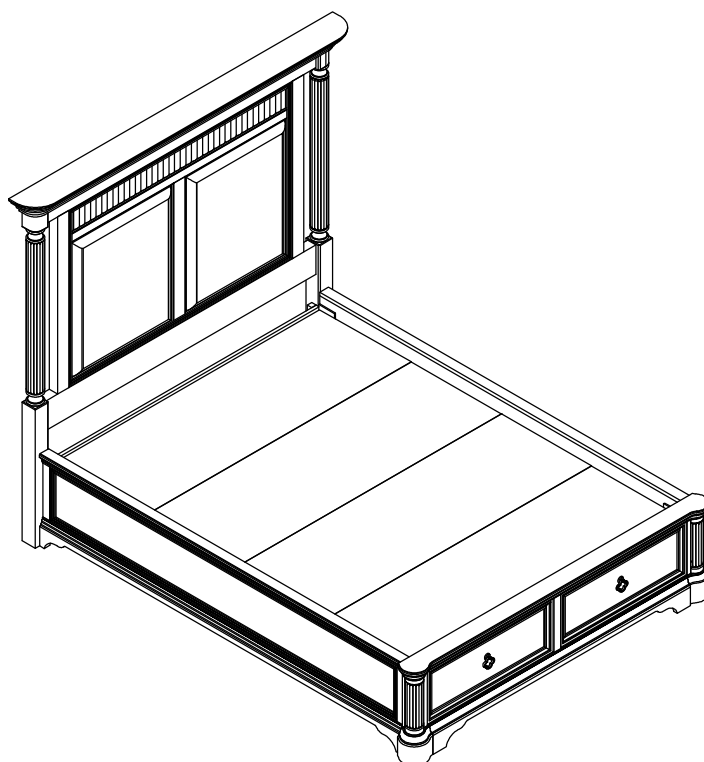


ITEM: **225140Q(B1-B3)**



Inner Size: 61.00"W x 81.75"D

Inner Size of Drawer: 26.25"W x 20.00"D x 6.25"H x 0.50"T

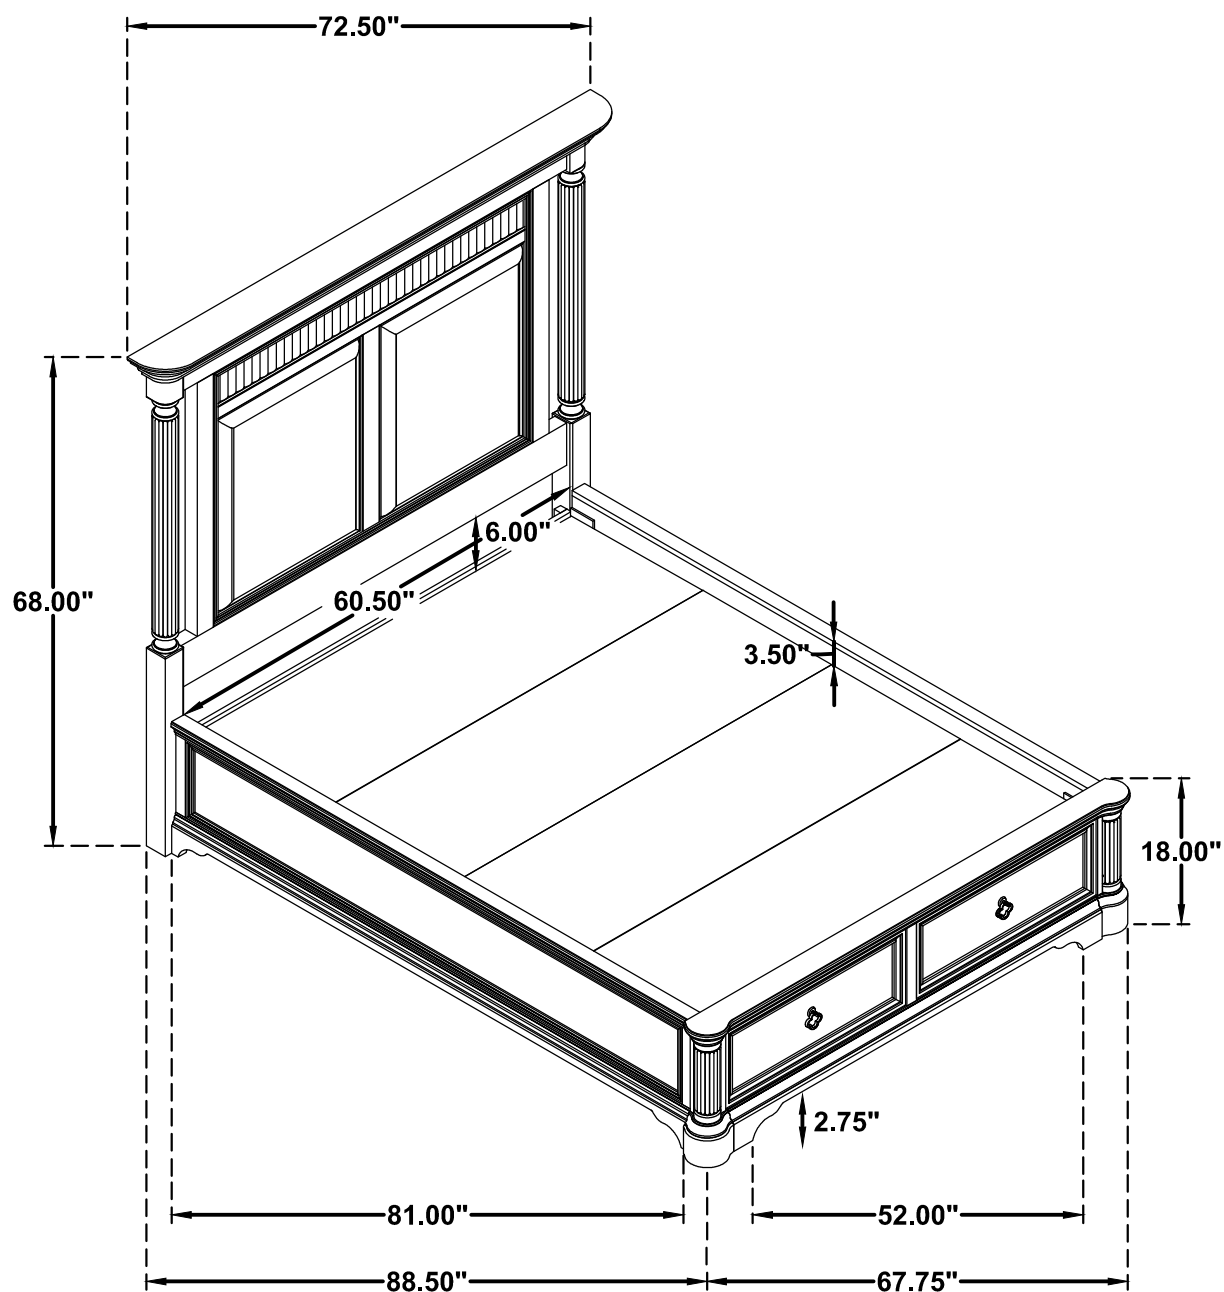

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225142
Nightstand

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

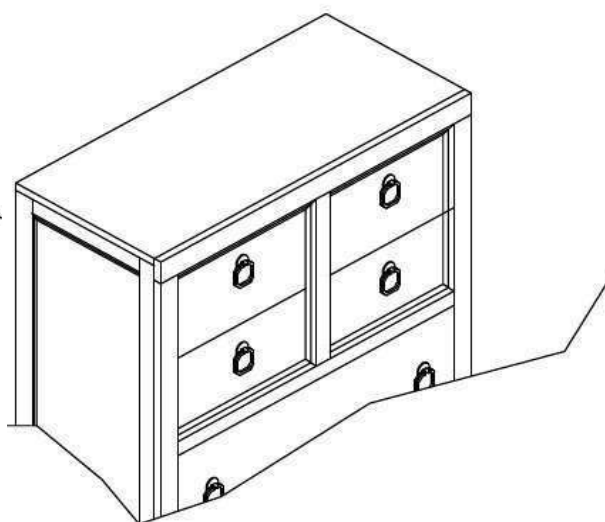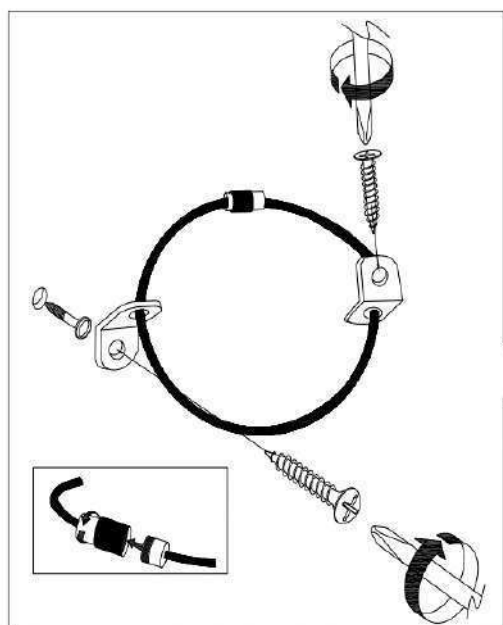


ITEM: **225142**



Inner Size Of Drawer A: 19.00"W x 11.25"D x 2.25"H x 0.50"T

Inner Size Of Drawer B: 19.00"W x 11.25"D x 4.00"H x 0.50"T

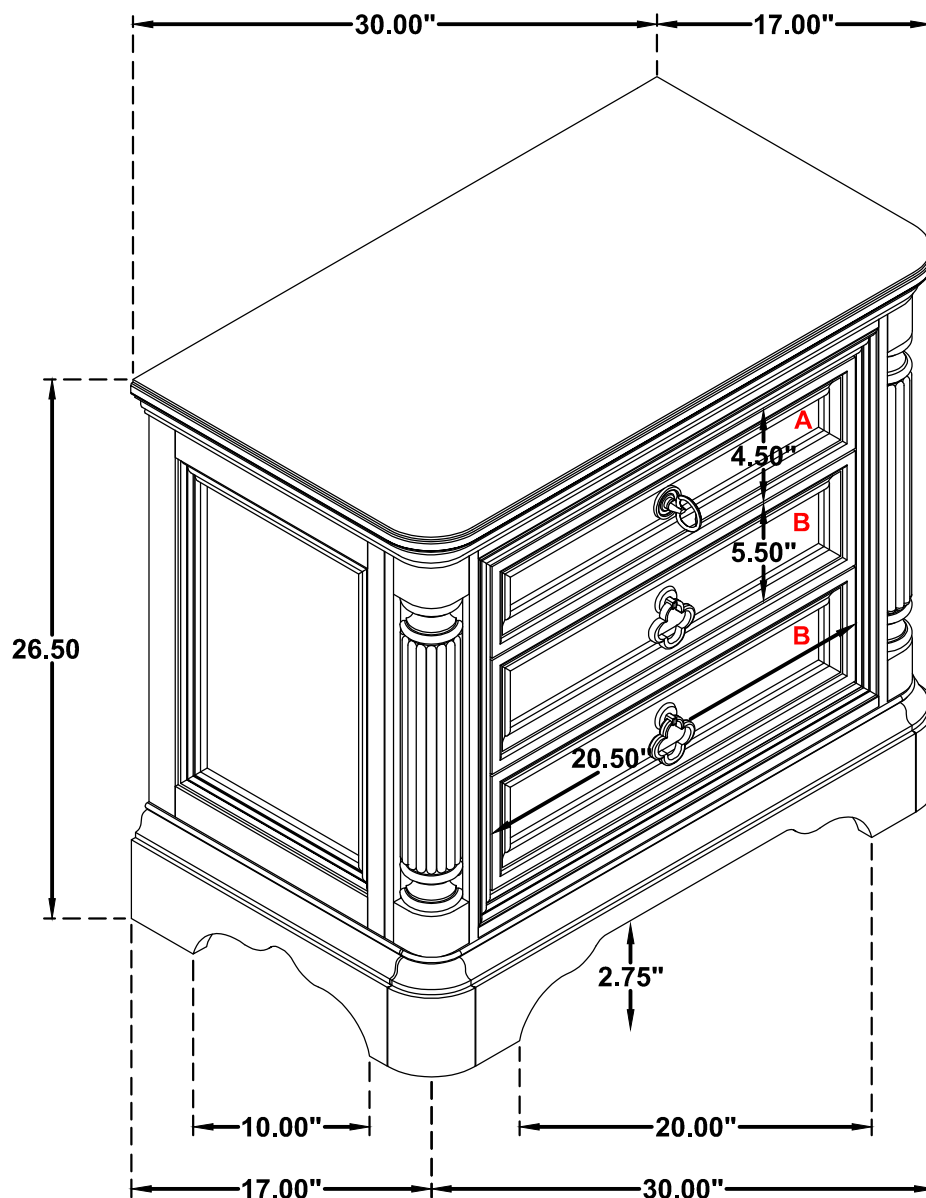

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225143
Dresser

ITEM: 225143

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A

DRESSER

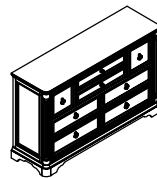


1PC


ITEM: 225143

ASSEMBLY INSTRUCTIONS

STEP 1

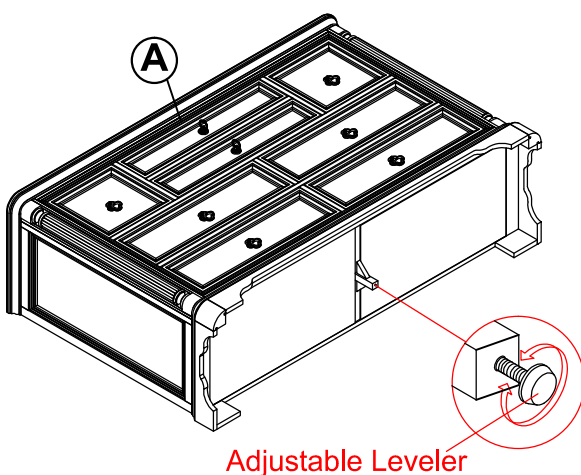

STEP 2 COMPLETE

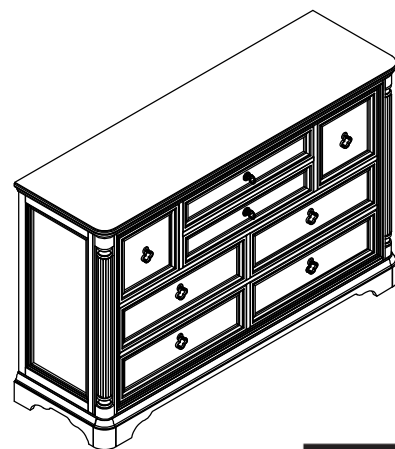

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

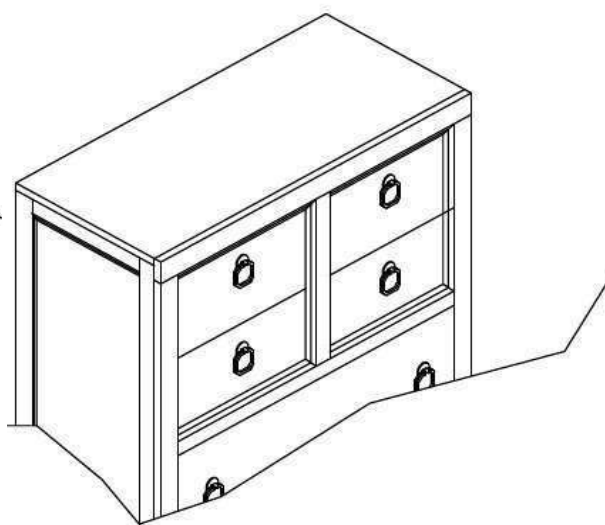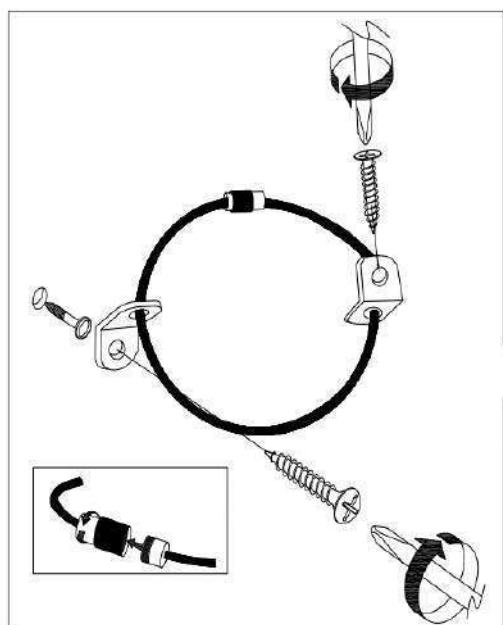

ITEM: **225143**




Inner Size of Drawer A: 11.50"W X 12.75"D X 11.50"H X 0.50"T
Inner Size of Drawer B: 27.25"W X 12.75"D X 4.50"H X 0.50"T
Inner Size of Drawer C: 26.25"W X 12.75"D X 7.25"H X 0.50"T

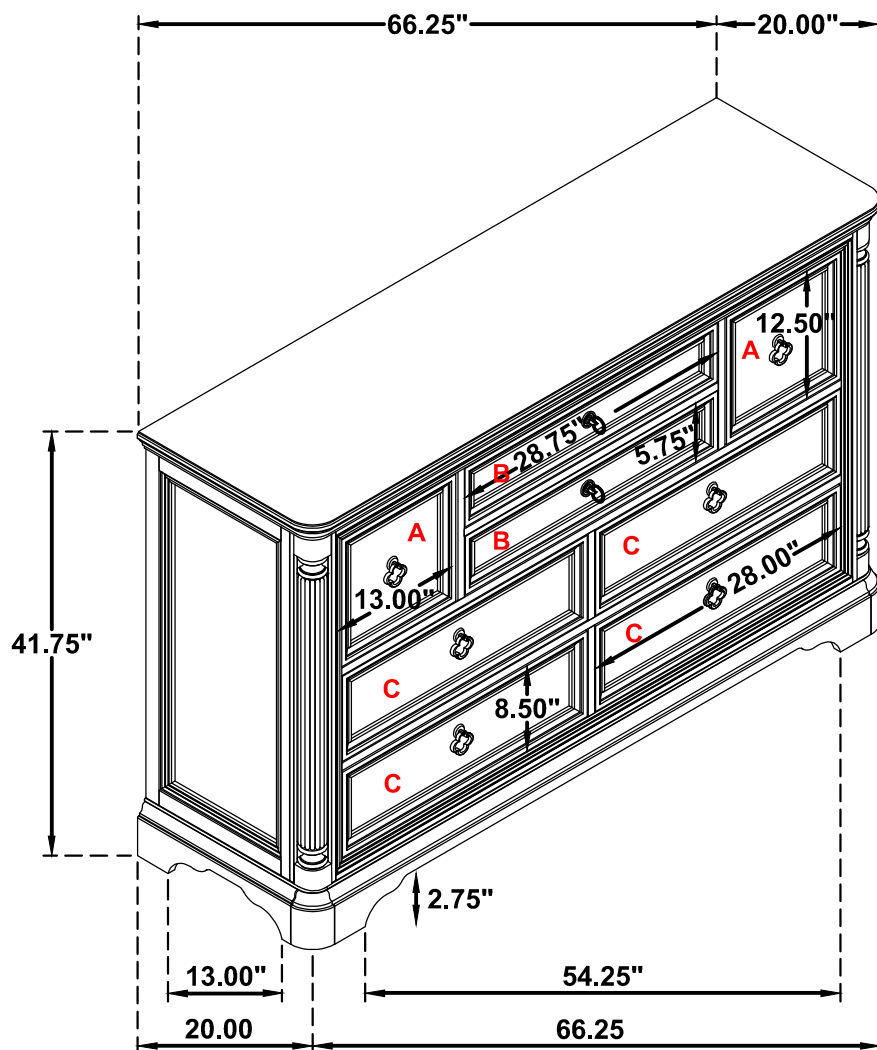

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

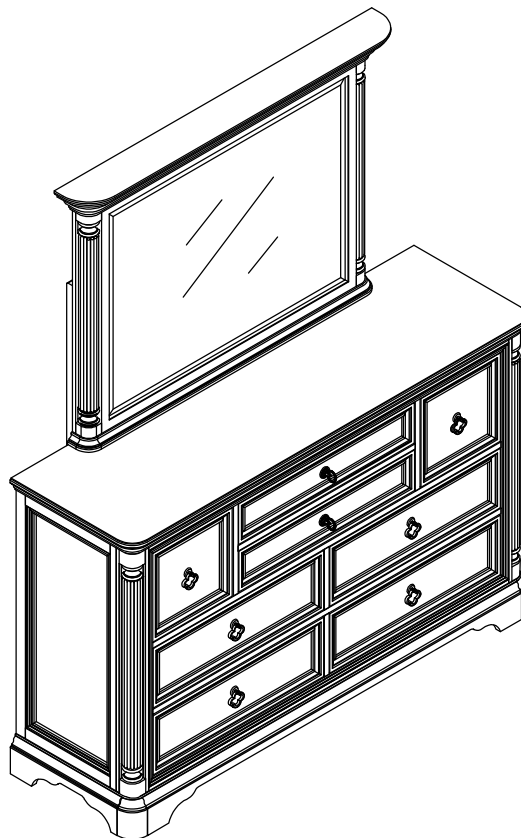

Fine Furniture for every stage of life

225144
Mirror

ITEM: **225144**

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

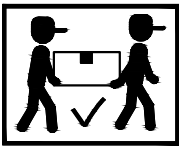


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A	FROM BOX ITEM# 225143 DRESSER		1PC
B	MIRROR		1PC
C	MIRROR SUPPORT (PACKED WITH DRESSER)		2PCS


HARDWARE IDENTIFICATION

1	BOLT (Ø1/4" x 32mm - RBW)		6PCS
2	LOCK WASHER (Ø1/4" - RBW)		6PCS
3	FLAT WASHER (Ø1/4" x 19 x 1.5mm - RBW)		6PCS
4	ALLEN WRENCH (74 x 30 x 4mm - RBW)		1PC

ITEM: **225144**

ASSEMBLY INSTRUCTIONS



STEP 1

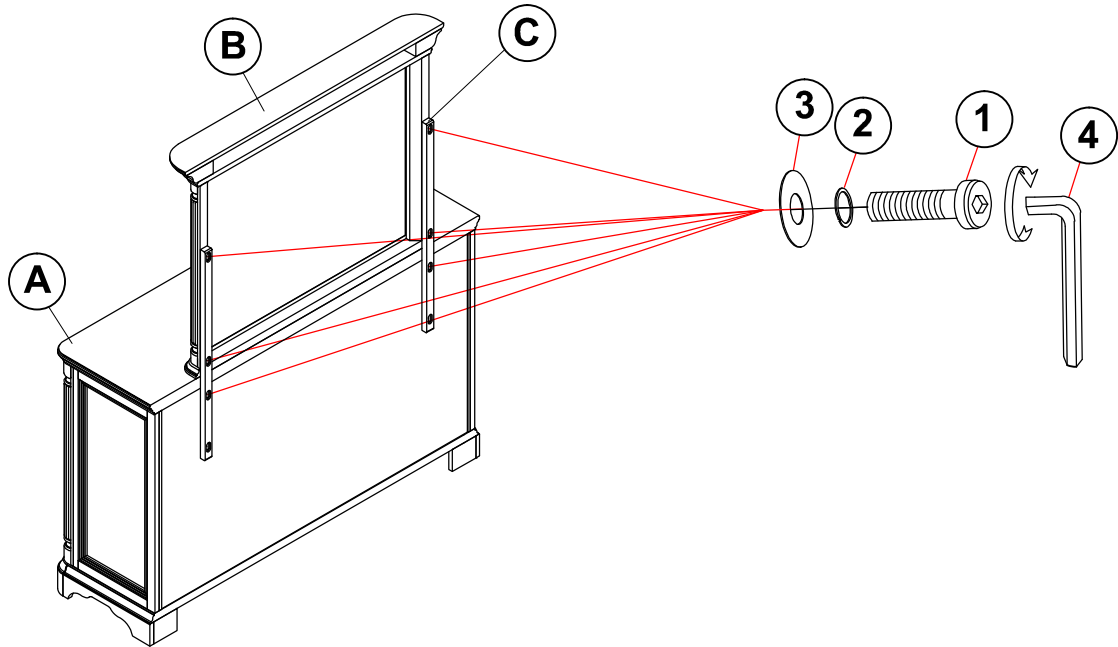


BACK VIEW

STEP 2

COMPLETE

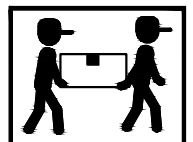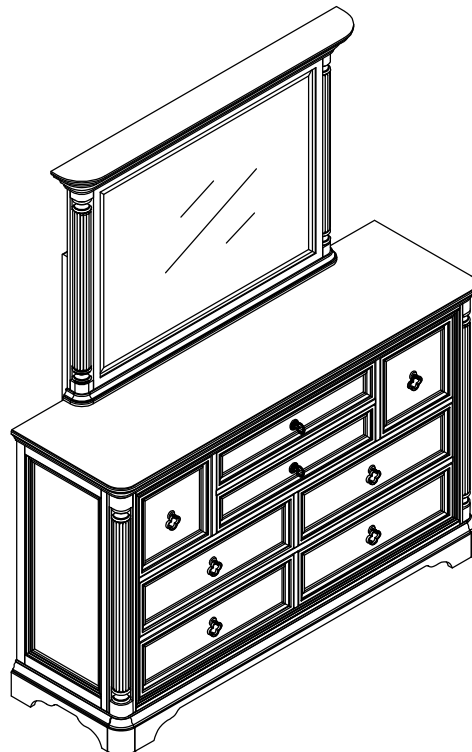

ITEM: **225144**

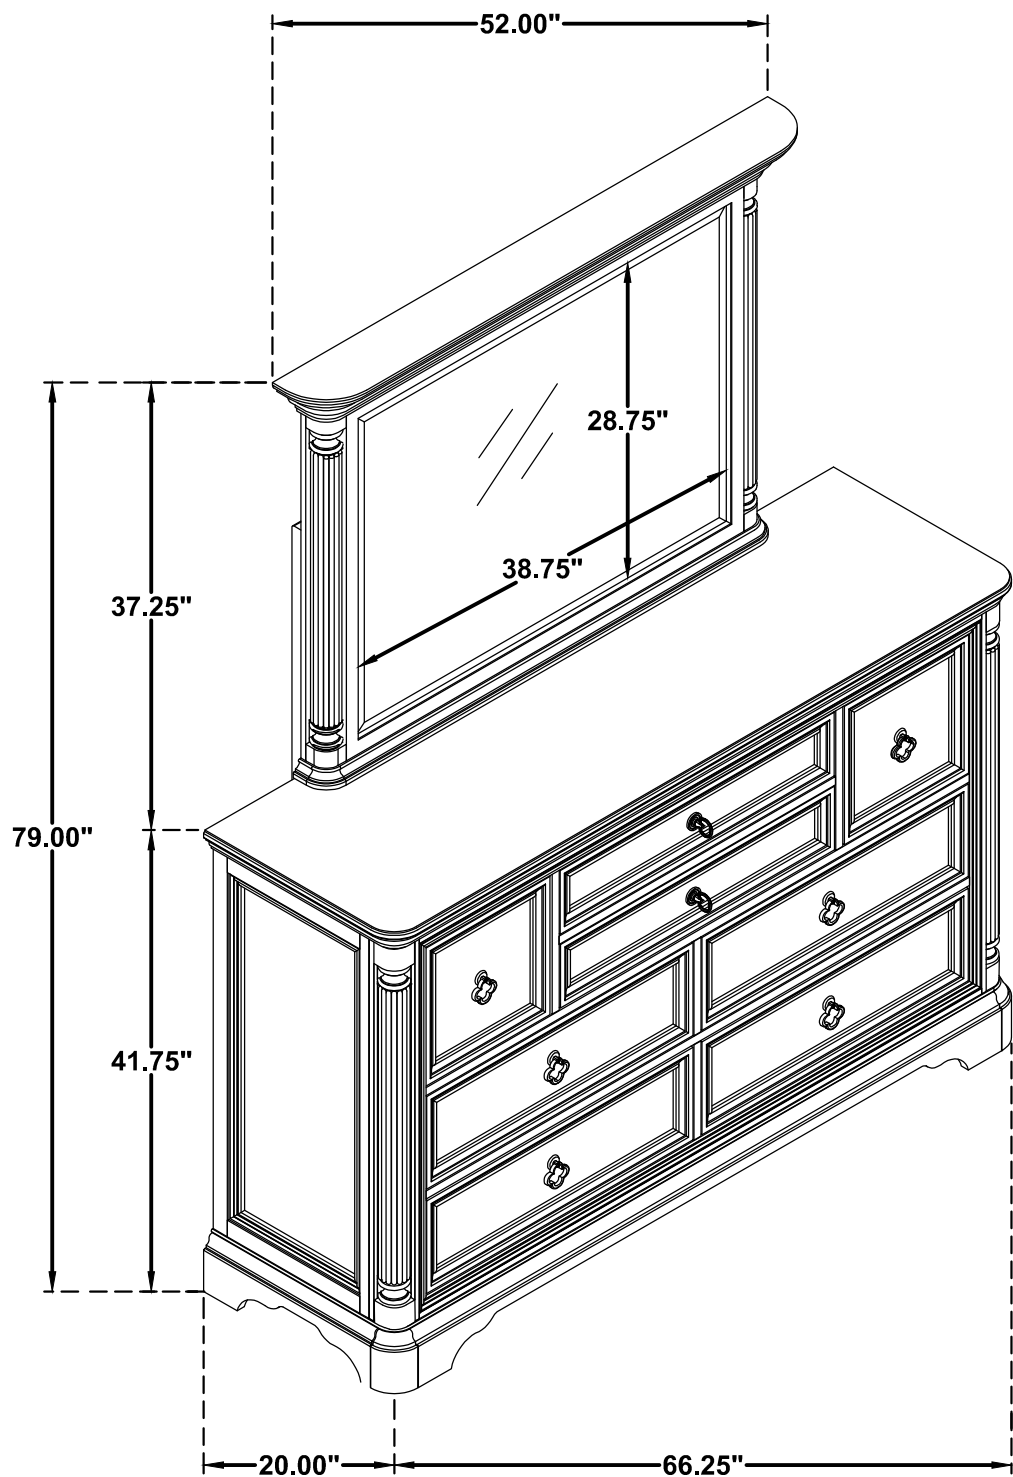

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225145
Chest

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.



This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

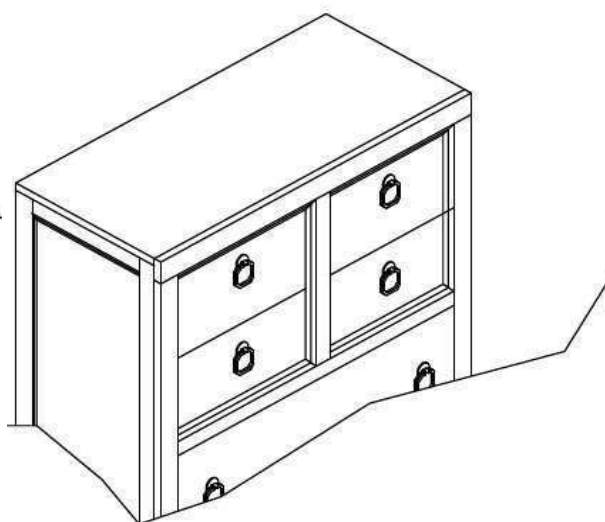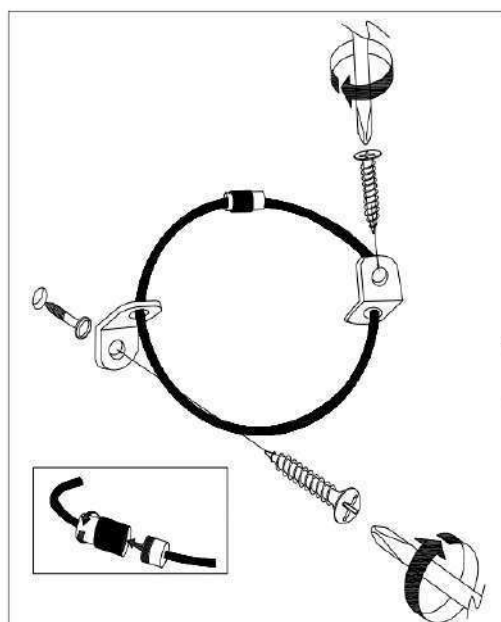


ITEM: **225145**



Inner Size of Drawer A : 29.00"W X 12.75"D X 6.00"H X 0.50"T

Inner Size of Drawer B : 29.00"W X 12.75"D X 7.25"H X 0.50"T

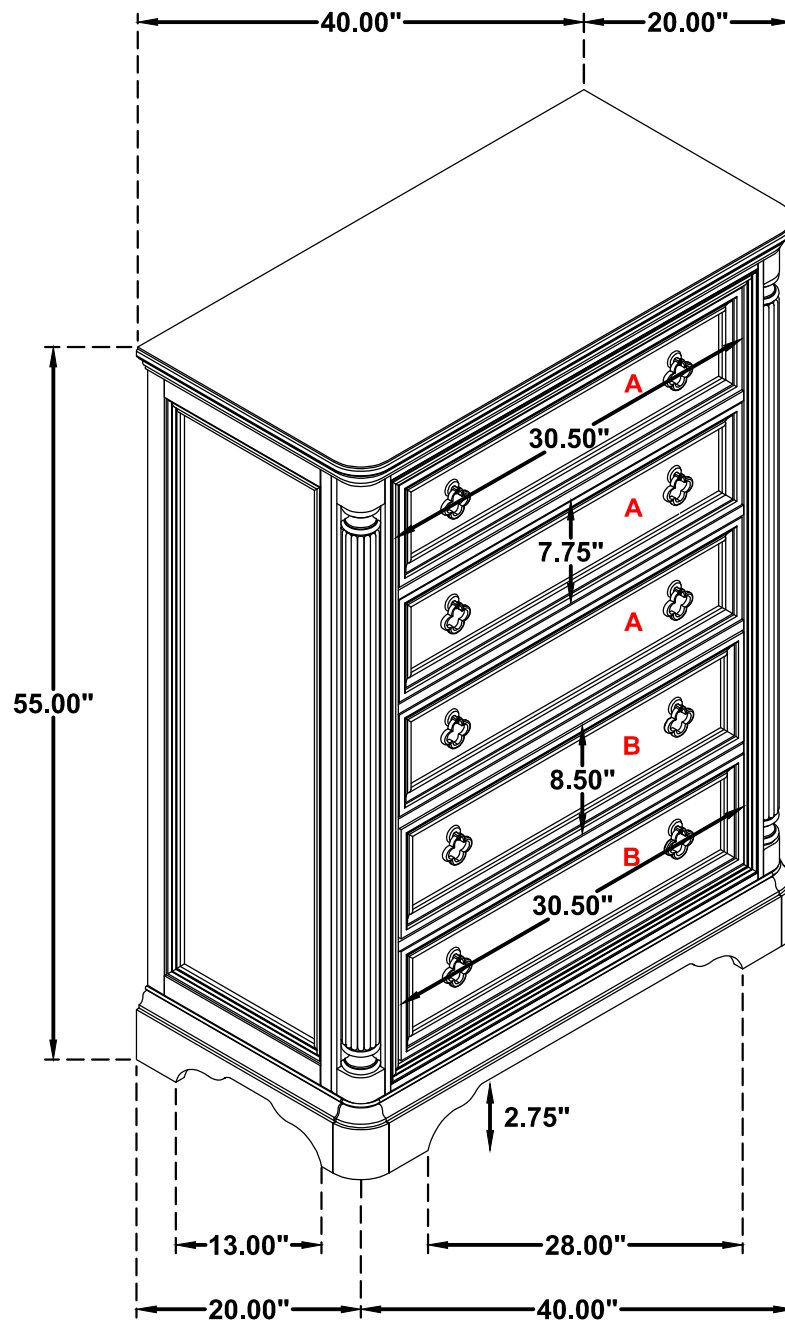

Note: Dimension tolerance $\pm 5\%$