



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225161KW(B1&B2) **California King Bed**

ITEM: 225161KW (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD PANEL

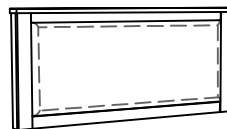

1PC

B FOOTBOARD

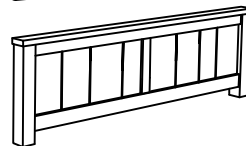


1PC

C LEFT HEADBOARD LEG



1PC

D RIGHT HEADBOARD LEG



1PC

E BED SLAT



4PCS

F BED SLAT SUPPORT WITH LEVELER



8PCS

G HEADBOARD BOTTOM RAIL



1PC


B2 (BOX 2)

H BED RAIL




2PCS

HB 225161KW(B1) FROM BOX 1
HEADBOARD COMPLETE

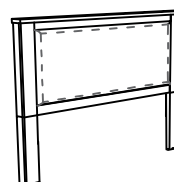

1PC

B 225161KW(B1) FROM BOX 1
FOOTBOARD



1PC

ITEM: 225161KW (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 225161KW (B1)

1	FLAT HEAD SCREW (M4 x 32mm - BLK)		12PCS
2	ALLEN WRENCH (M5 x 65mm - BLK)		1PC

Z-B2(BOX 2) - HARDWARE PACK IS LOCATED IN 225161KW (B2)

3	BRACKET		8PCS
4	PAN HEAD SCREW (M3.5 x 16mm - BLK)		16PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 225161KW (B1&B2)


ASSEMBLY INSTRUCTIONS





STEP 1

Note : Please put item on soft surface.

Please take note of the marking sticker (L&R) on the leg.

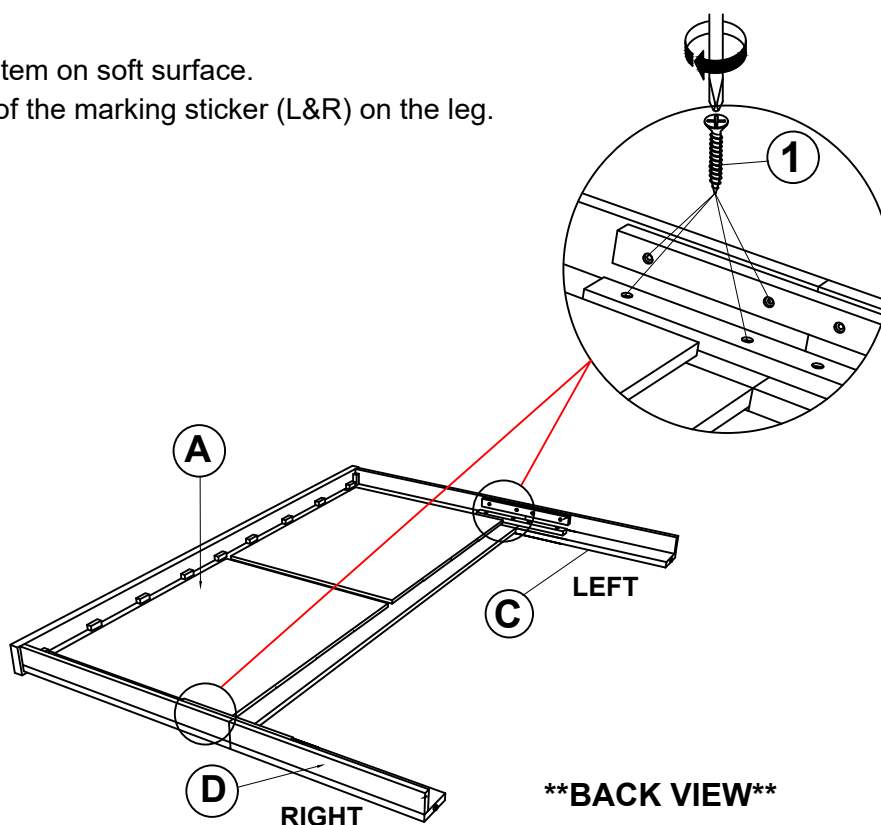

STEP 2

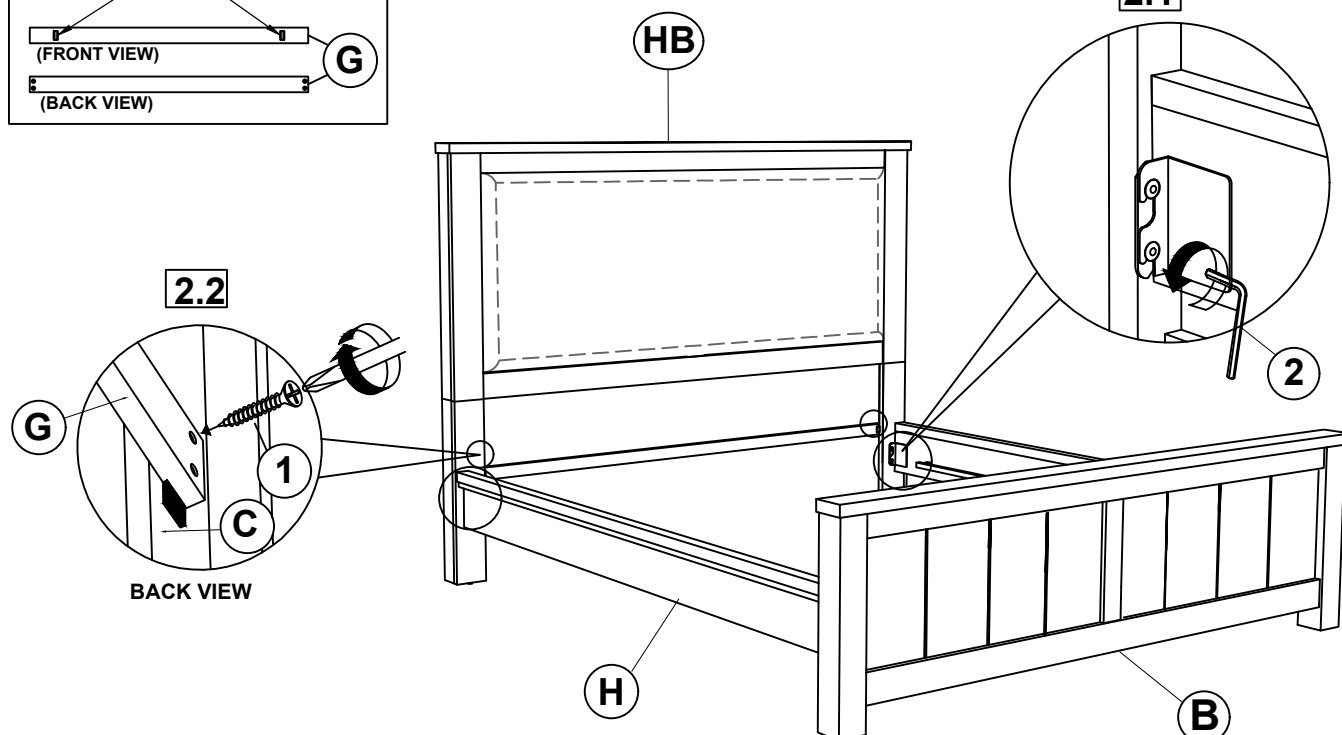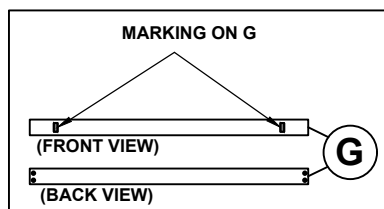


ITEM: 225161KW (B1&B2)

ASSEMBLY INSTRUCTIONS



STEP 3

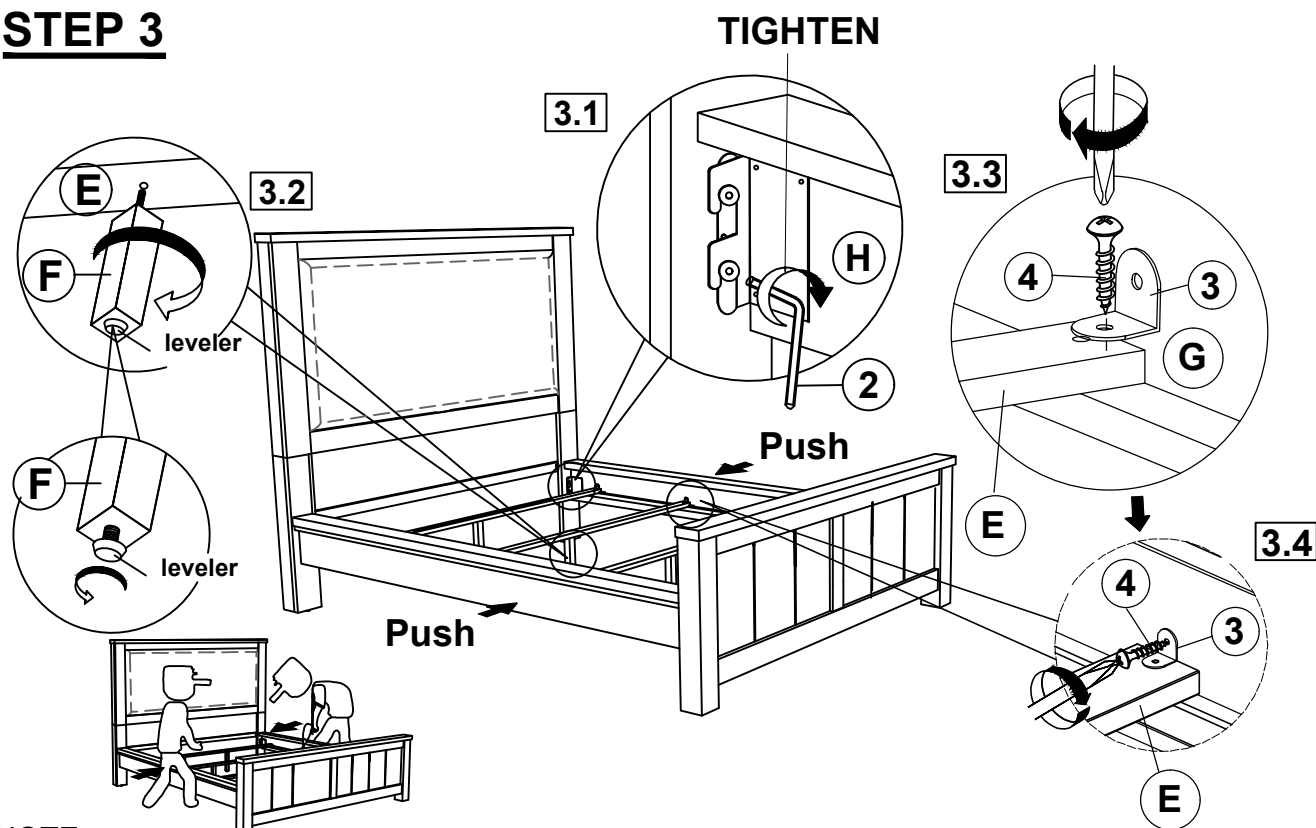


NOTE:

1-Push the side rail inward until the slats are flush and resting on the side rail support then fasten each slat to the side rail support using the provided screw.

2-The side rail warpage is a temporary condition, it will straighten out once the bed is fully assembled.


STEP 4 **COMPLETE**

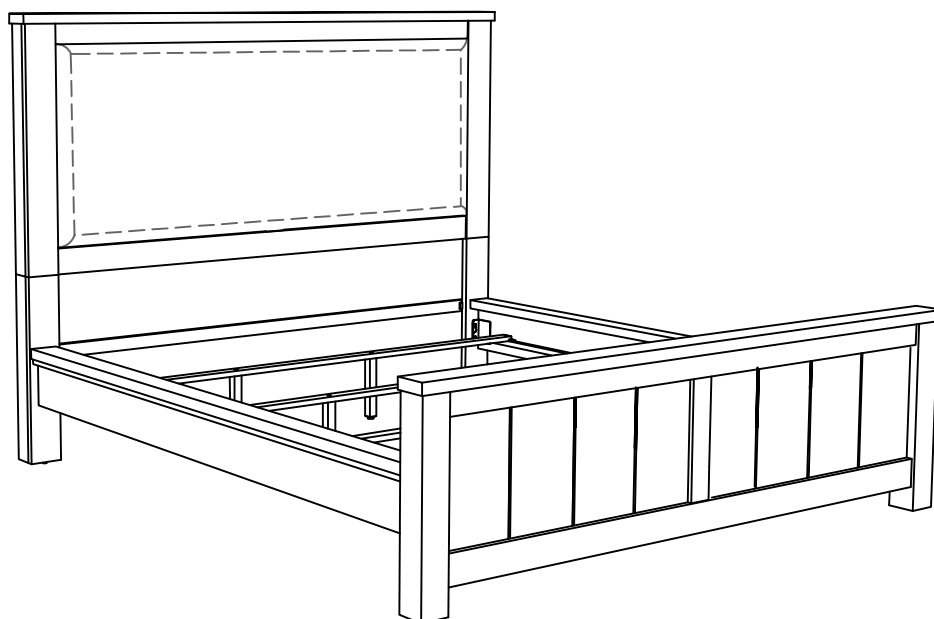

ITEM: **225161KW (B1&B2)**



Inner Size : 73.50"W x 86.00"D

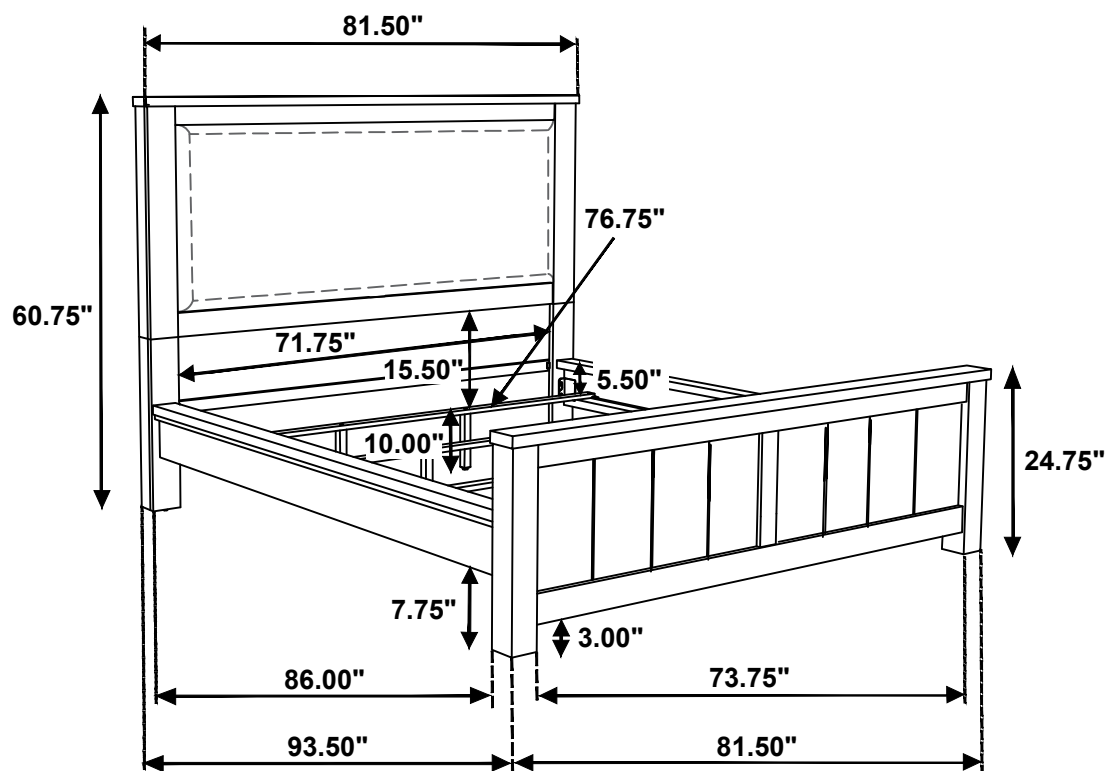

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225164
Mirror

ITEM: **225164**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A MIRROR

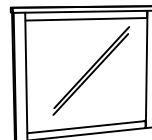


1PC

B DRESSER FROM BOX
ITEM #225163



1PC


C MIRROR SUPPORT
(PACKED WITH DRESSER)



2PCS


HARDWARE IDENTIFICATION

1 SHORT BOLT
(M6 x 35mm - BLK)



4PCS

2 LONG BOLT
(M6 x 40mm - BLK)



4PCS

3 LOCK WASHER
(1/4" - BLK)



8PCS

4 FLAT WASHER
(1/4 x 19mm" - BLK)



8PCS

5 ALLEN WRENCH
(M4 x 65mm - BLK)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **225164**


ASSEMBLY INSTRUCTIONS

STEP 1

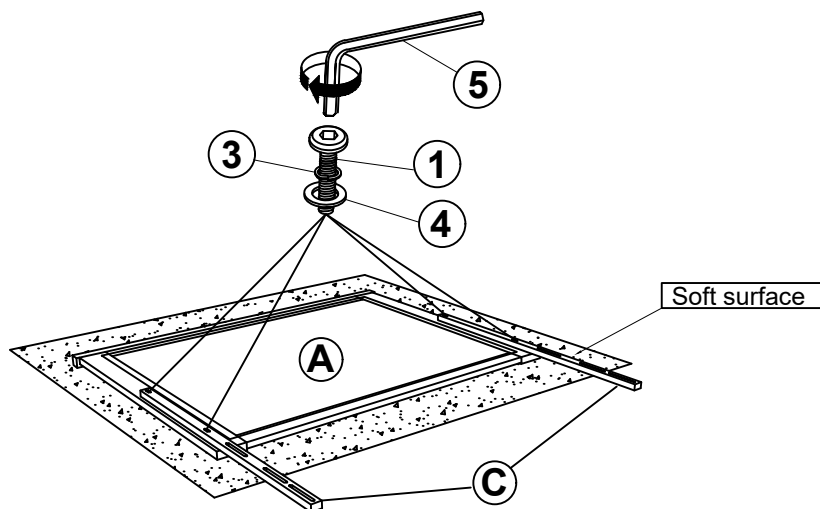


Back View

STEP 2

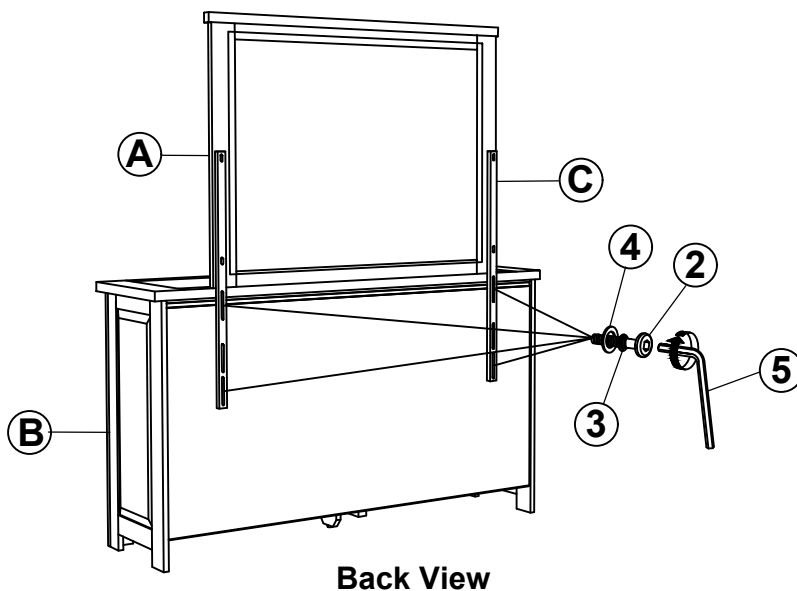


Back View

STEP 3 COMPLETE

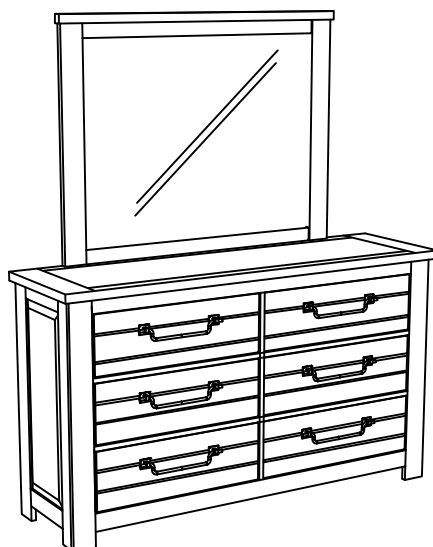

ITEM: **225164**

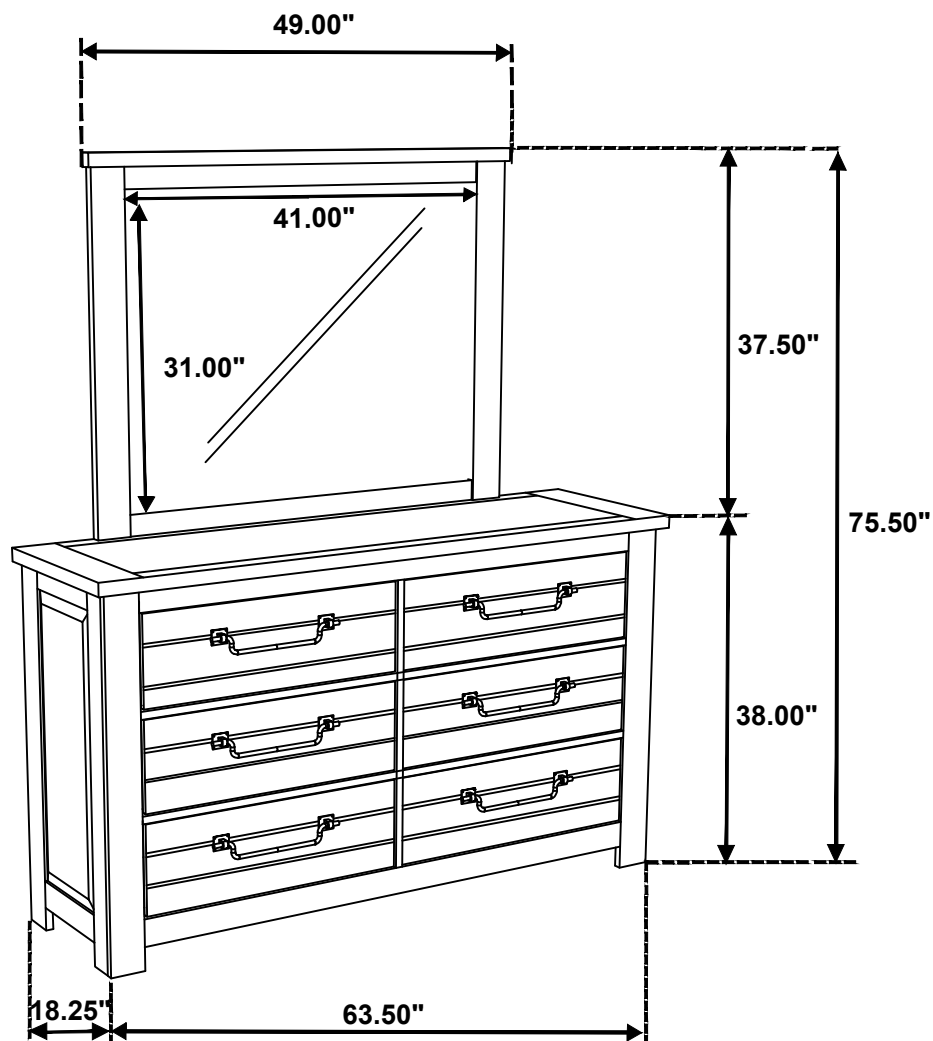

Note: Dimension tolerance $\pm 5\%$