



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225161Q (B1&B2)
Queen Bed

ITEM: 225161Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.






ASSEMBLY TIME



20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

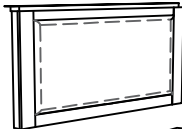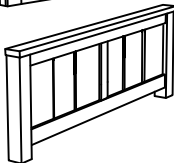A	HEADBOARD PANEL		1PC
B	FOOTBOARD		1PC
C	LEFT HEADBOARD LEG		1PC
D	RIGHT HEADBOARD LEG		1PC
E	BED SLAT		4PCS
F	BED SLAT SUPPORT WITH LEVELER		4PCS
G	HEADBOARD BOTTOM RAIL		1PC

B2 (BOX 2)

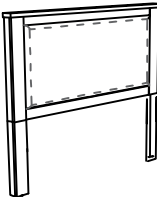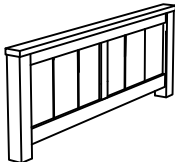H	BED RAIL		2PCS
HB	225161Q(B1) FROM BOX 1 HEADBOARD COMPLETE		1PC
B	225161Q(B1) FROM BOX 1 FOOTBOARD		1PC

ITEM: 225161Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 225161Q (B1)

1	FLAT HEAD SCREW (M4 x 32mm - BLK)		20PCS
2	ALLEN WRENCH (M5 x 65mm - BLK)		1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 225161Q (B1&B2)


ASSEMBLY INSTRUCTIONS



STEP 1



Note : Please put item on soft surface.

Please take note of the marking sticker (L&R) on the leg.

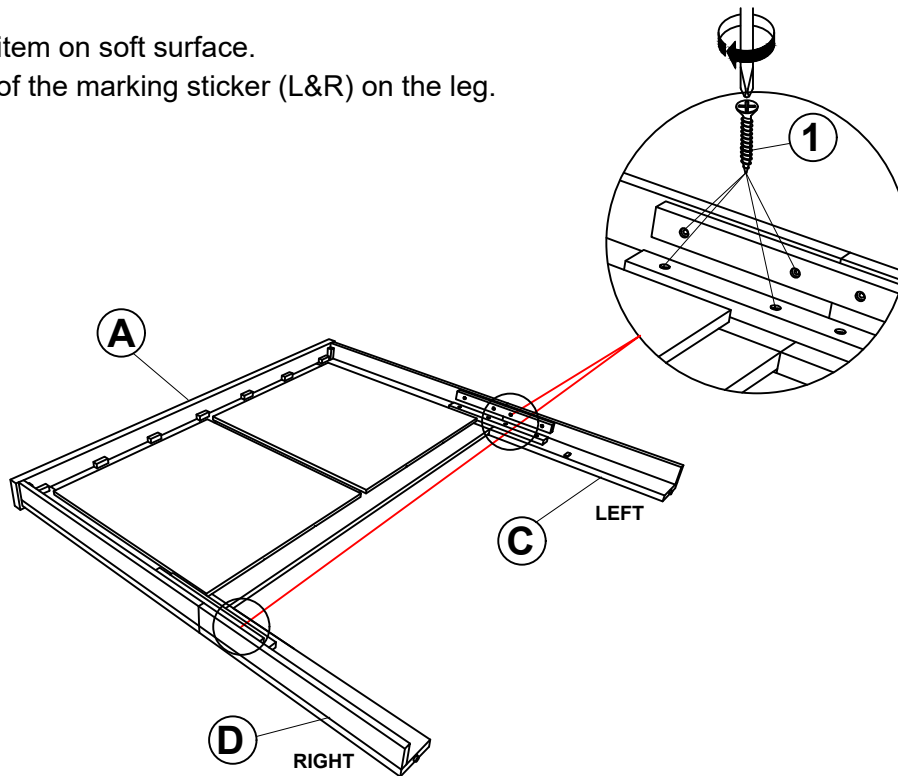

****BACK VIEW****


STEP 2

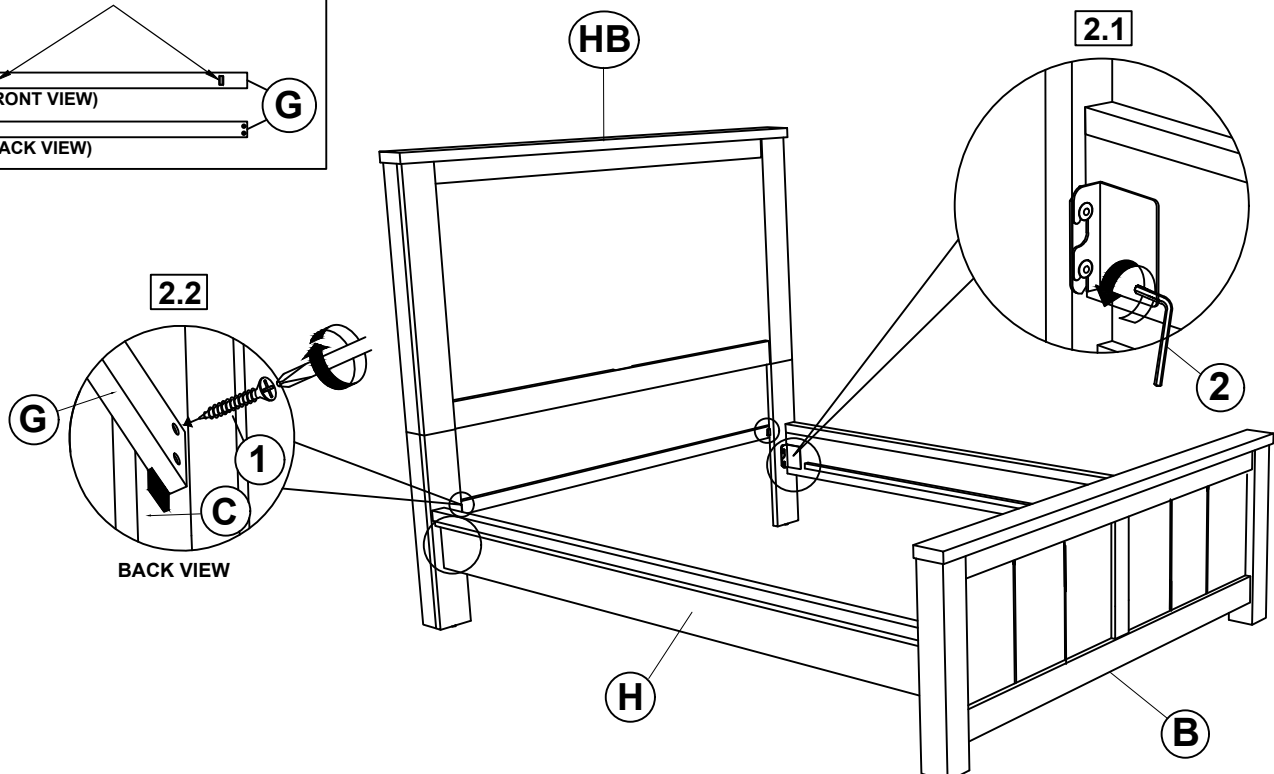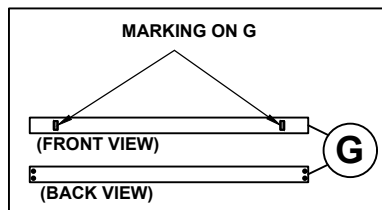

ITEM: 225161Q (B1&B2)

ASSEMBLY INSTRUCTIONS



STEP 3

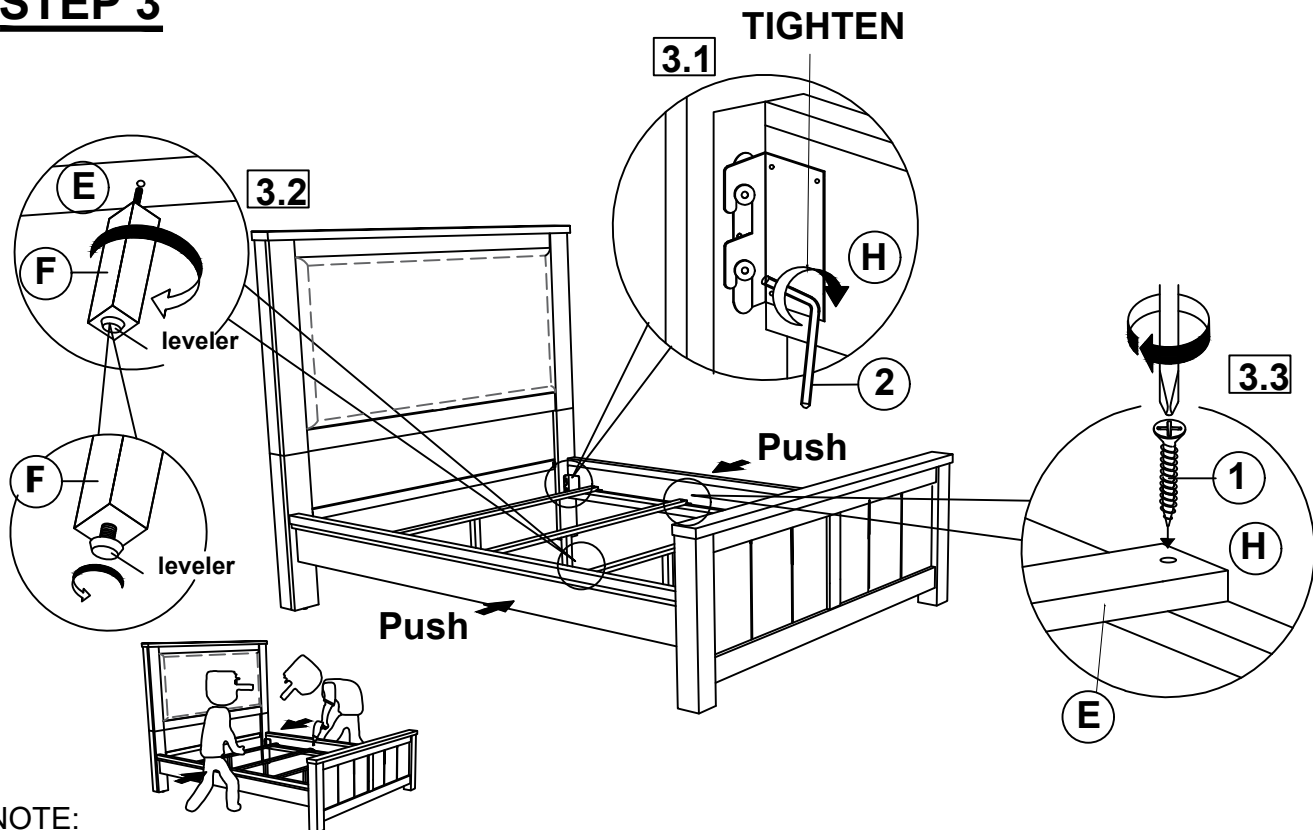

NOTE:

- 1-Push the side rail inward until the slats are flush and resting on the side rail support then fasten each slat to the side rail support using the provided screw.
- 2-The side rail warpage is a temporary condition, it will straighten out once the bed is fully assembled.


STEP 4 COMPLETE

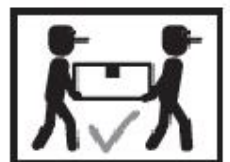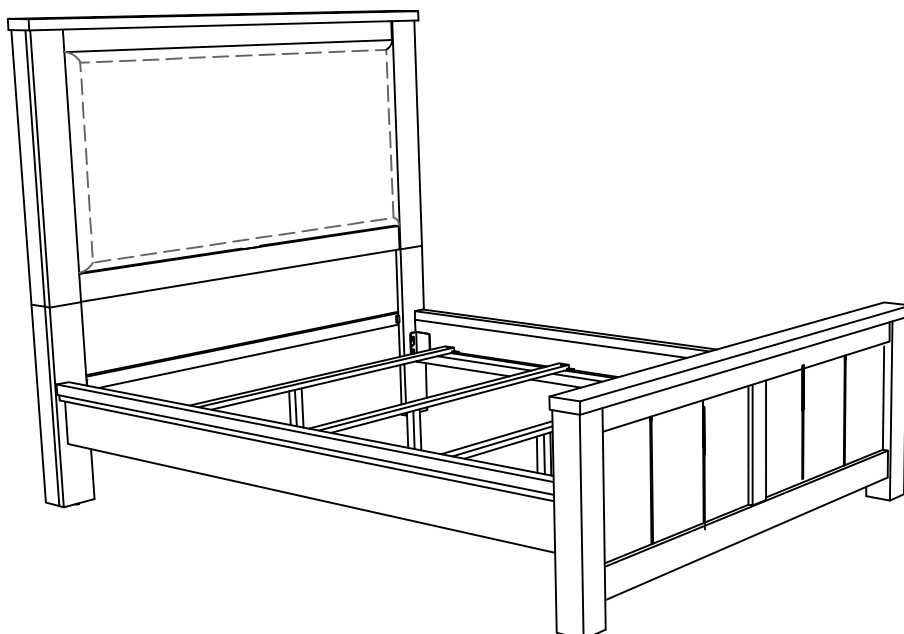

ITEM: **225161Q (B1&B2)**



Inner Size : 60.75"W x 81.00"D

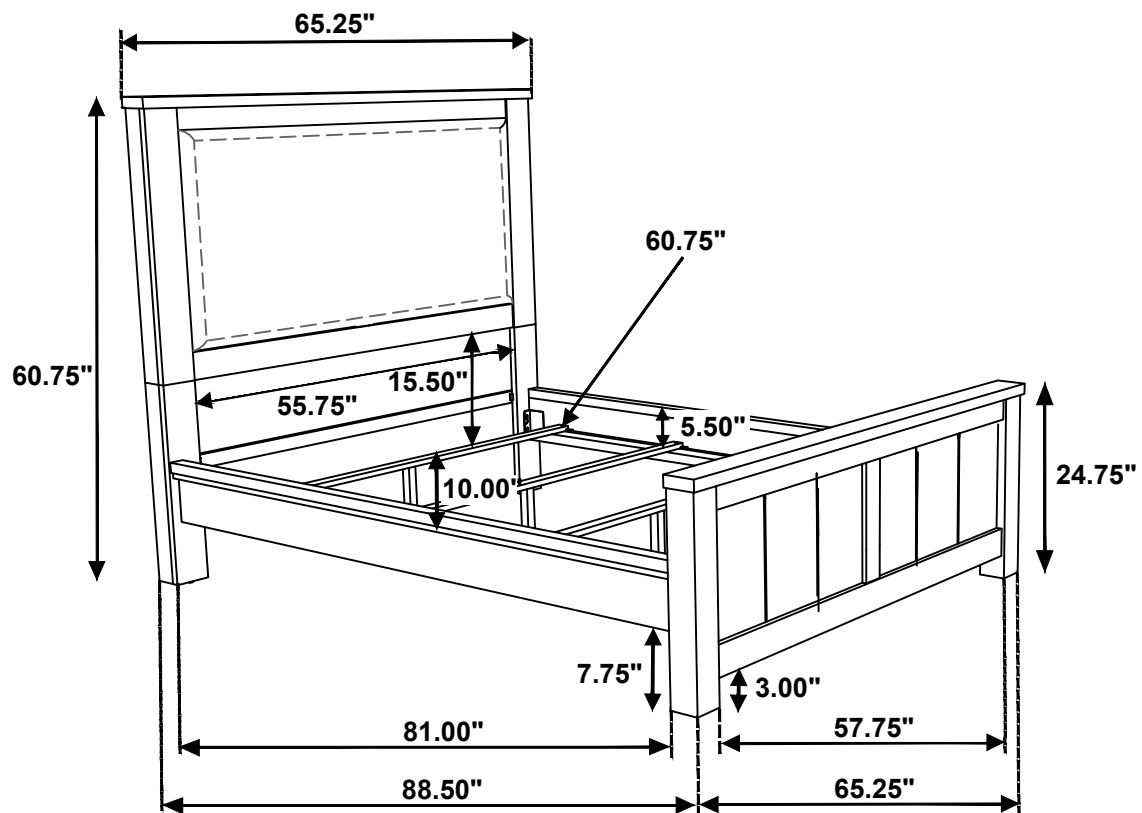

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

225164
Mirror

ITEM: **225164**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A MIRROR

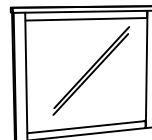


1PC

B DRESSER FROM BOX
ITEM #225163



1PC


C MIRROR SUPPORT
(PACKED WITH DRESSER)



2PCS


HARDWARE IDENTIFICATION

1 SHORT BOLT
(M6 x 35mm - BLK)



4PCS

2 LONG BOLT
(M6 x 40mm- BLK)



4PCS

3 LOCK WASHER
(1/4" - BLK)



8PCS

4 FLAT WASHER
(1/4 x 19mm" - BLK)



8PCS

5 ALLEN WRENCH
(M4 x 65mm - BLK)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **225164**


ASSEMBLY INSTRUCTIONS

STEP 1

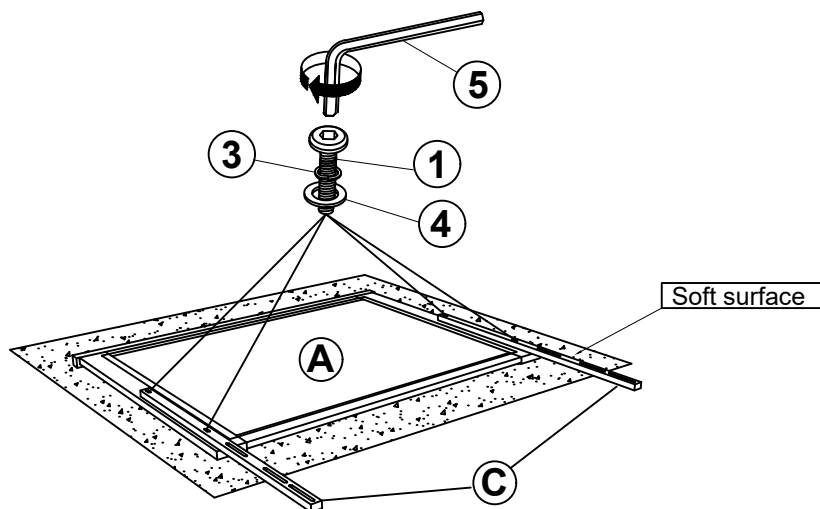


Back View

STEP 2

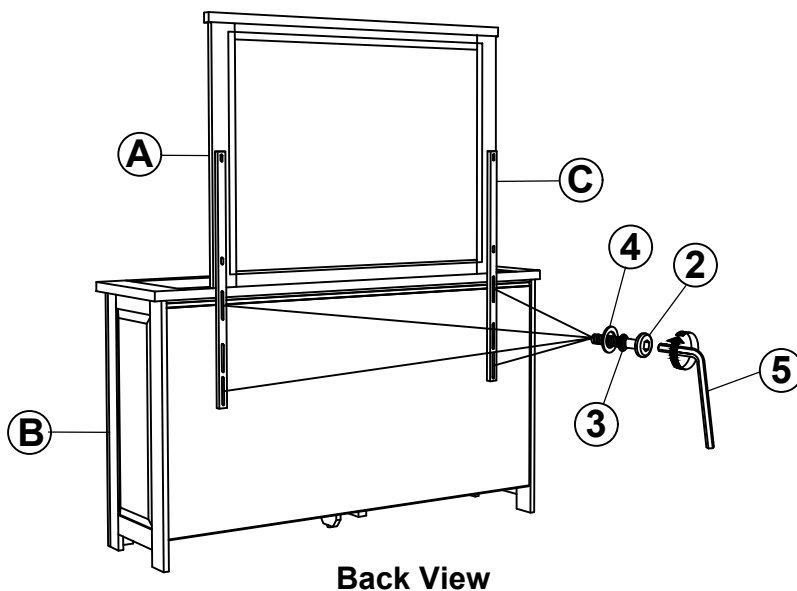


Back View

STEP 3 COMPLETE

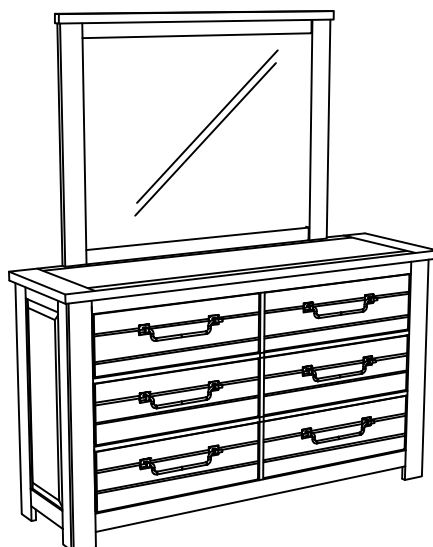

ITEM: **225164**

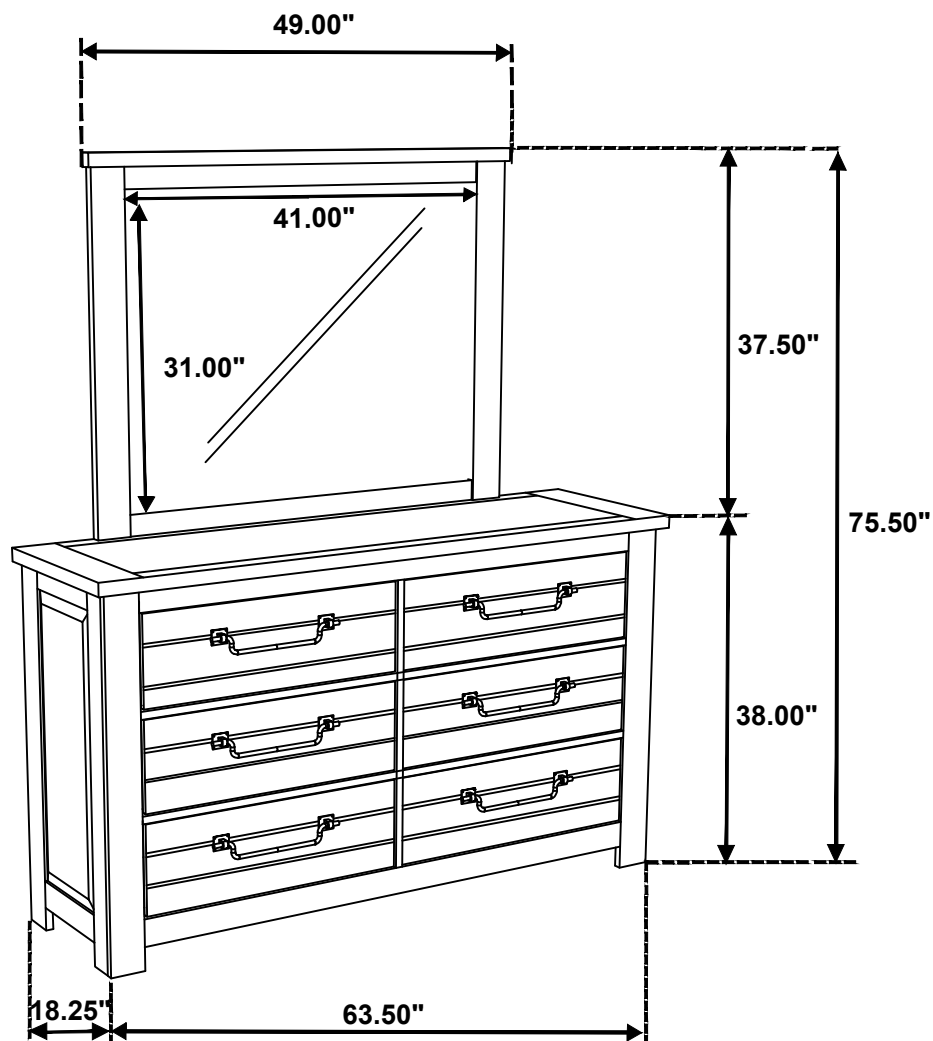

Note: Dimension tolerance $\pm 5\%$