ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

225320Q (B1-B3)
Queen Storage Bed

REVISION 0: 09/30/2026

ITEM: 225320Q (B1-B3)


ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!








1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

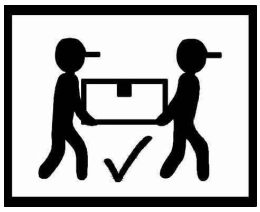


ASSEMBLY TIME	30 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

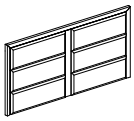A	HEADBOARD PANEL		1PC		
B	LEFT HEADBOARD LEG (WITH "L" LABEL)		1PC		
C	RIGHT HEADBOARD LEG (WITH "R" LABEL)		1PC		
D	ROLL SLAT (9PCS)		1SET		
E	CENTER RAIL		1PC		
F	BED SLAT SUPPORT WITH LEVELER		4PCS		
G	FRONT ROLL SLAT (3PCS)		1SET		
H	CONCEAL PANEL		4PCS		

B2 (BOX 2)

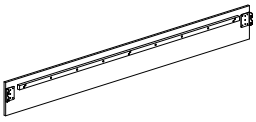I	BED RAIL		2PCS

B3 (BOX 3)

J	STORAGE FOOTBOARD		1PC		
K	LEFT FOOTBOARD LEG (WITH "L" LABEL)		1PC		
L	RIGHT FOOTBOARD LEG (WITH "R" LABEL)		1PC		
M	DRAWER SUPPORT LEG WITH LEVELER		3PCS		

ITEM: 225320Q (B1-B3)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:



1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE IS LOCATED IN 225320Q (B1)

1	BOLT 1 (M8 x 16MM - RBW)		8 PCS
2	BOLT 2 (M8 x 40MM - RBW)		8 PCS
3	BIG LOCK WASHER (5/16" x 14Ø - RBW)		8 PCS
4	BIG FLAT WASHER (5/16" x 22Ø - RBW)		8 PCS
5	BIG ALLEN WRENCH (M5 x 68MM - BLK)		1 PC
6	BOLT 3 (M6 x 40MM - RBW)		4 PCS
7	SMALL LOCK WASHER (1/4" x 13Ø - RBW)		4 PCS
8	SMALL FLAT WASHER (1/4" x 19Ø - RBW)		4 PCS
9	SMALL ALLEN WRENCH (M4 x 65MM - BLK)		1 PC
10	FLAT HEAD SCREW (M4 x 32MM - BLK)		12 PCS


NOTE:

Phillips head screwdriver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 225320Q (B1-B3)


ASSEMBLY INSTRUCTIONS

STEP 1

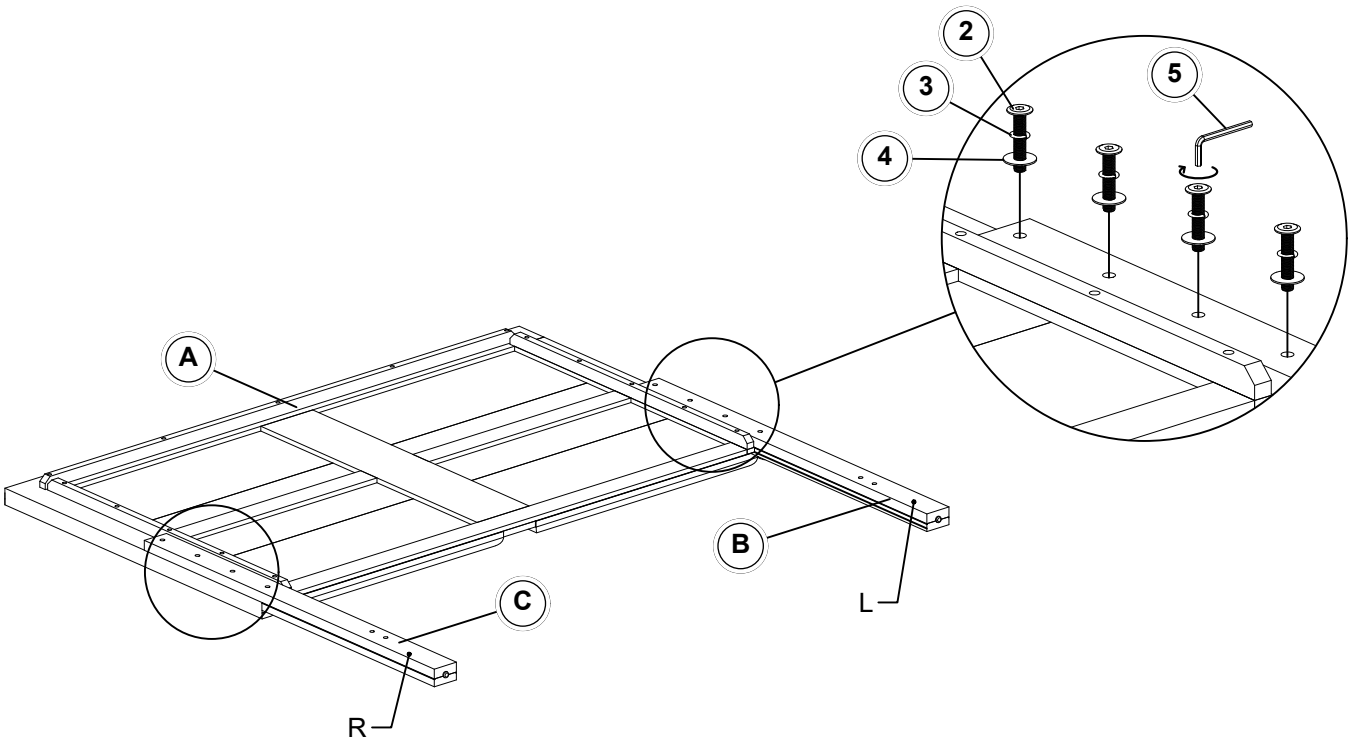

** BACK VIEW

STEP 2

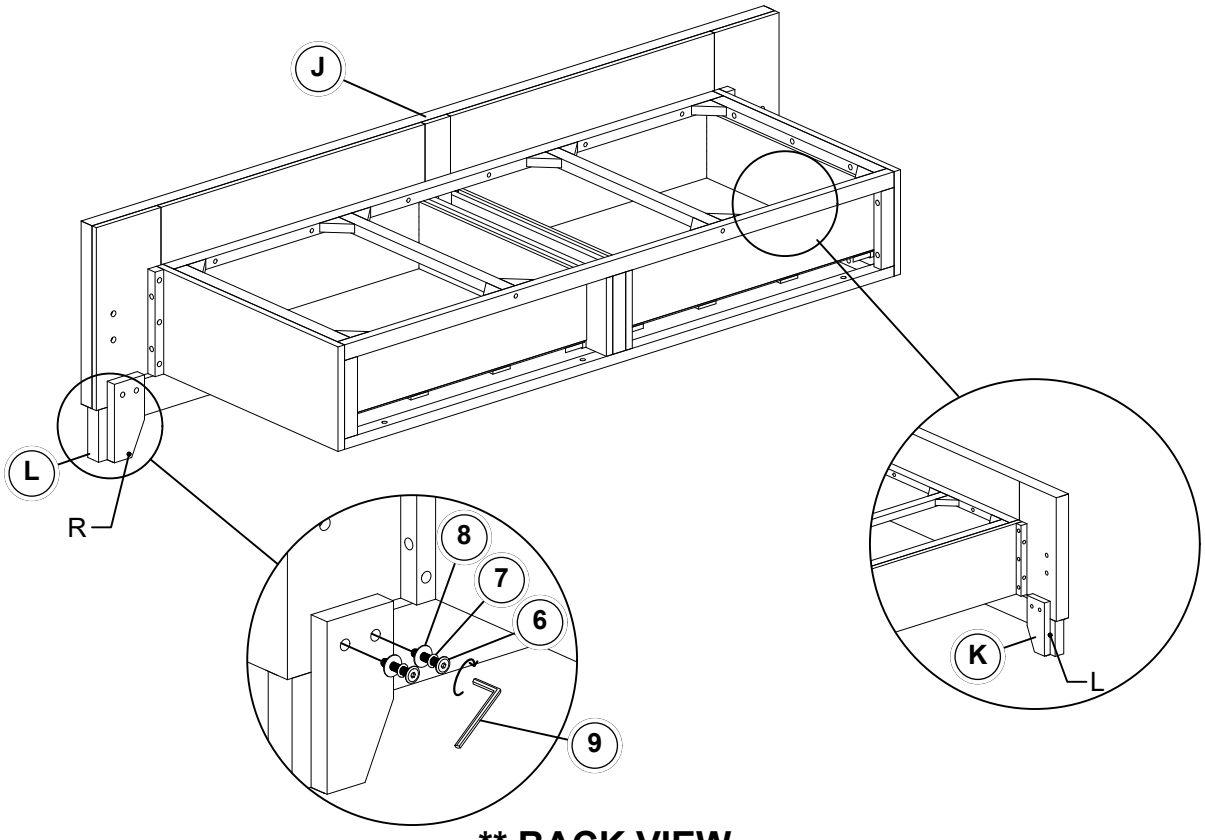


** BACK VIEW


ITEM: 225320Q (B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 3

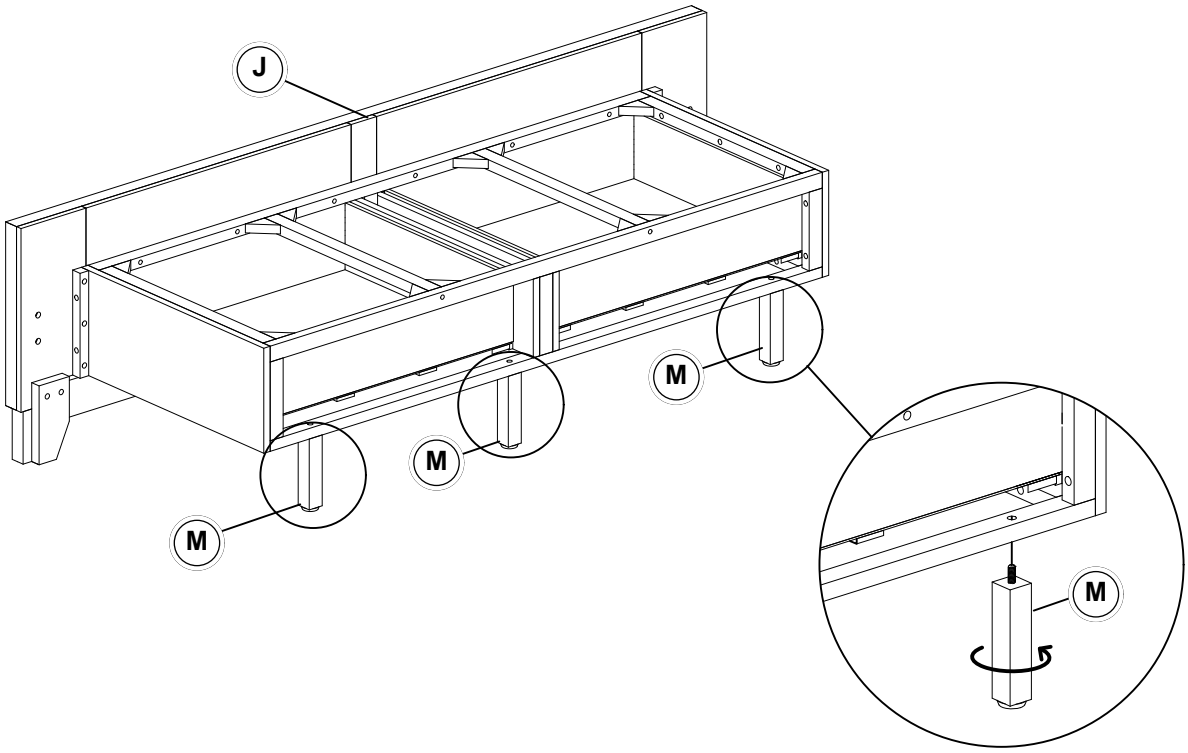


STEP 4

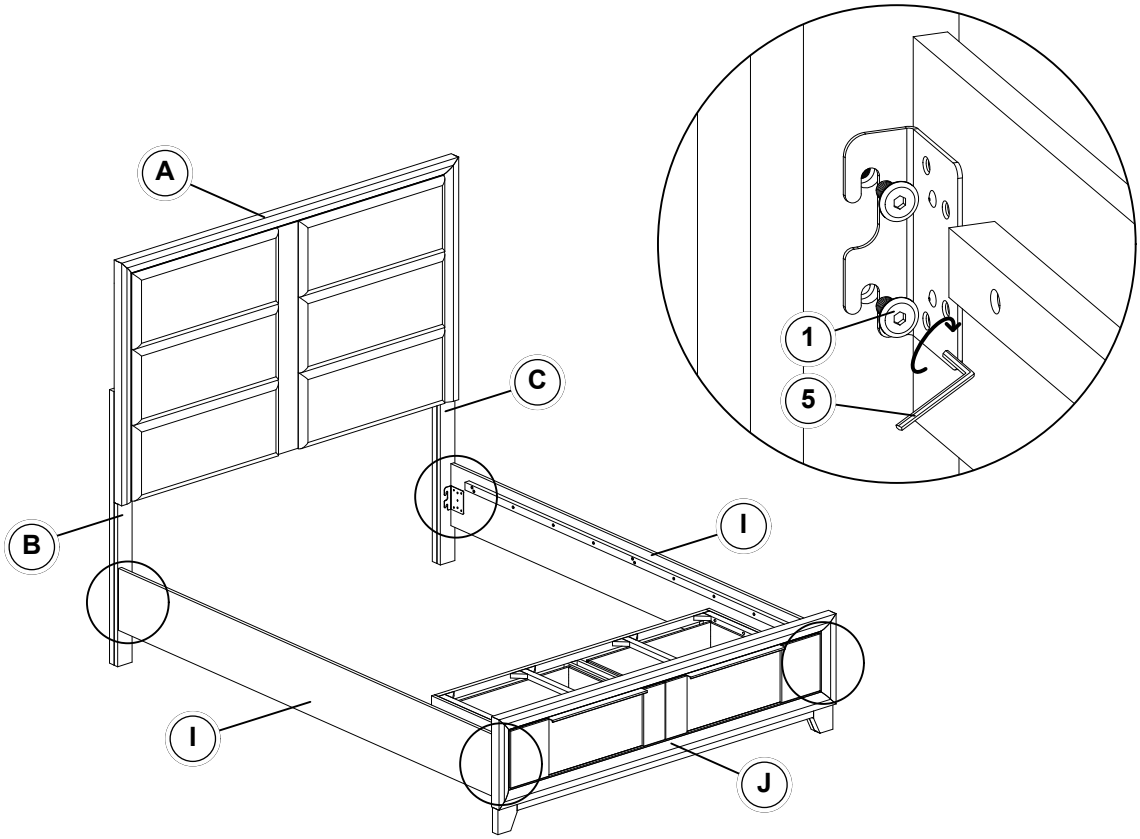


ITEM: 225320Q (B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 5

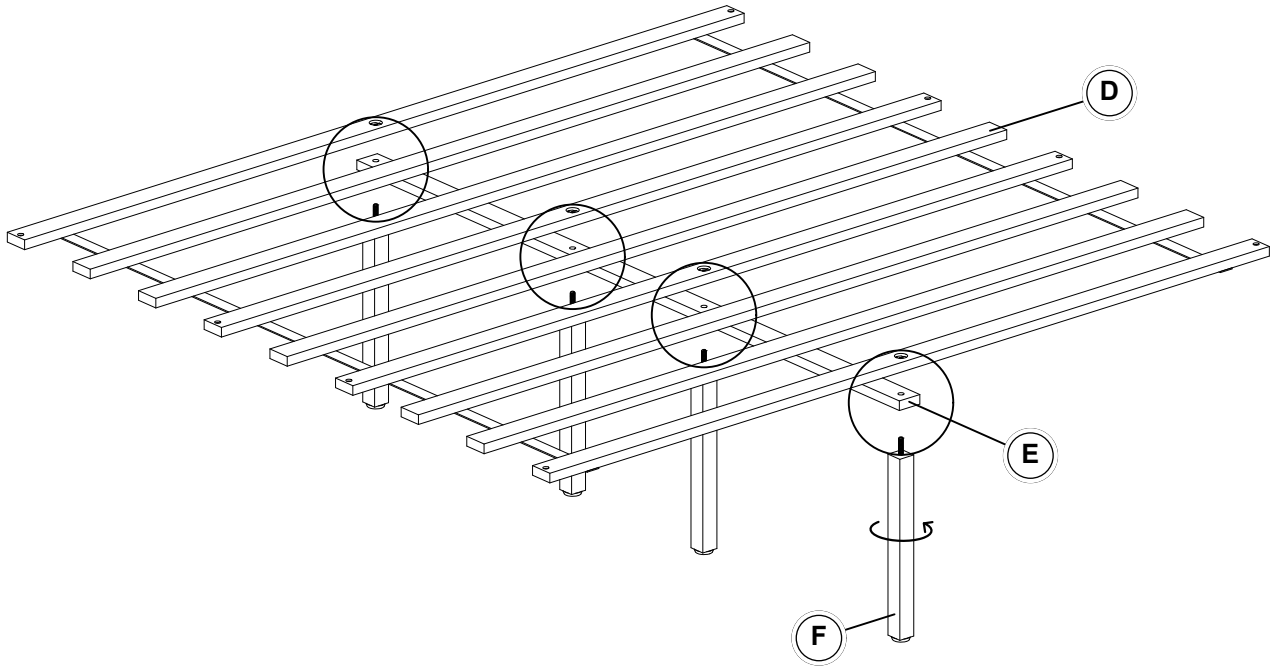


STEP 6

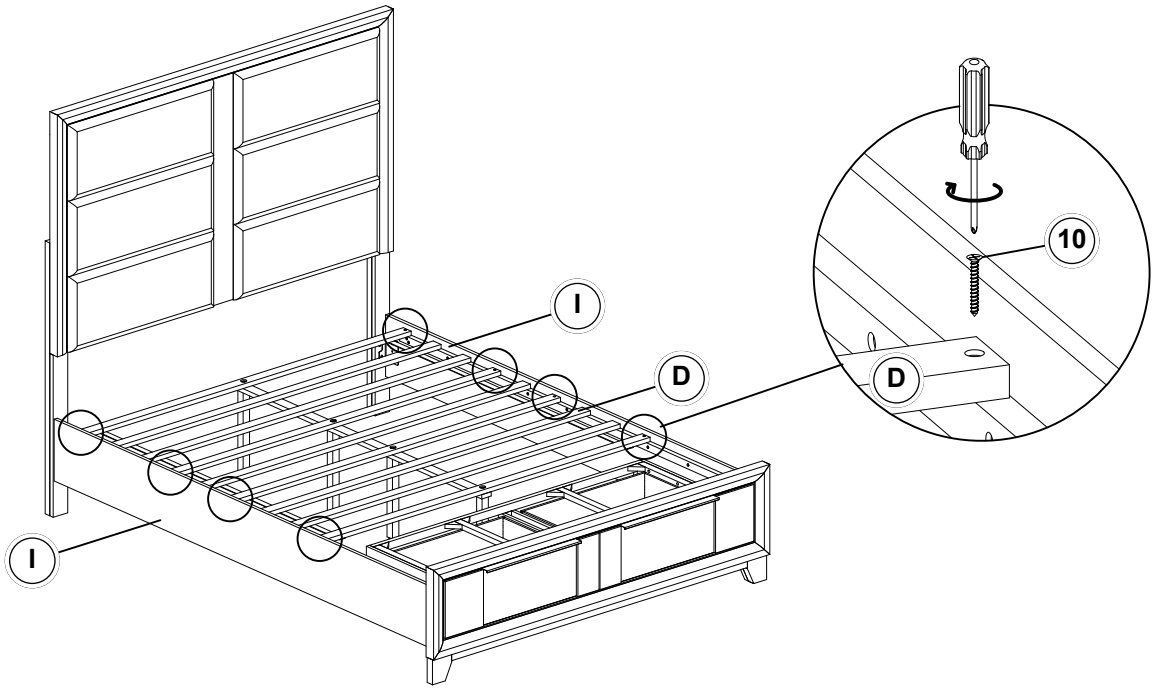

ITEM: 225320Q (B1-B3)


ASSEMBLY INSTRUCTIONS

STEP 7

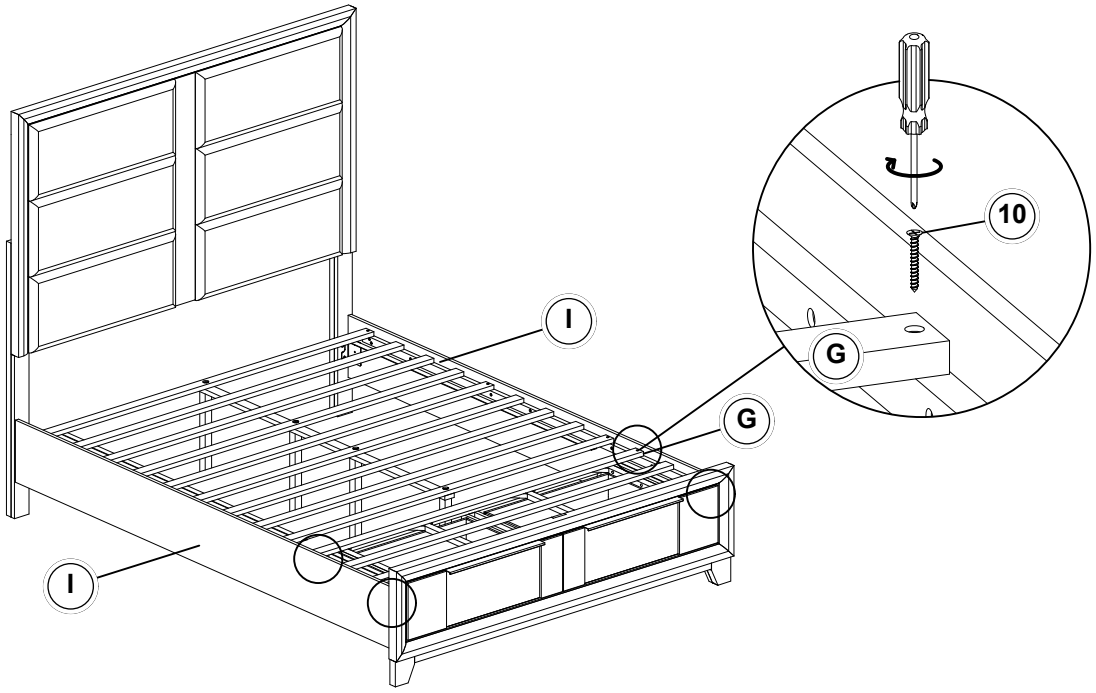


STEP 8

COMPLETE

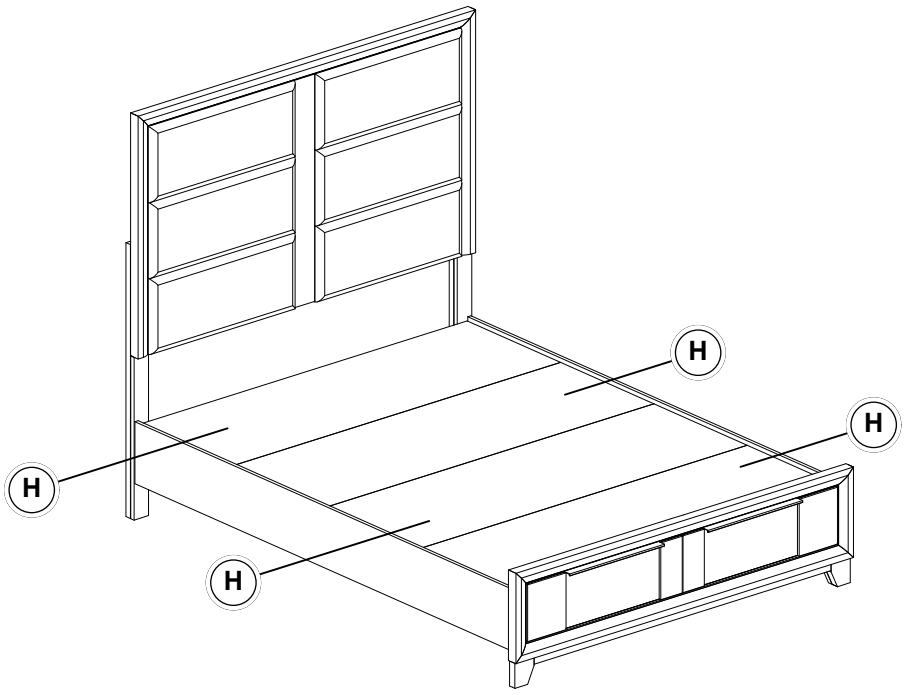

ITEM: 225320Q (B1-B3)

Inner Size : 60.75"W X 80.75"D
Inner Size of Drawer : 22.25"W X 17.25"D X 5.00"H X 0.50"T

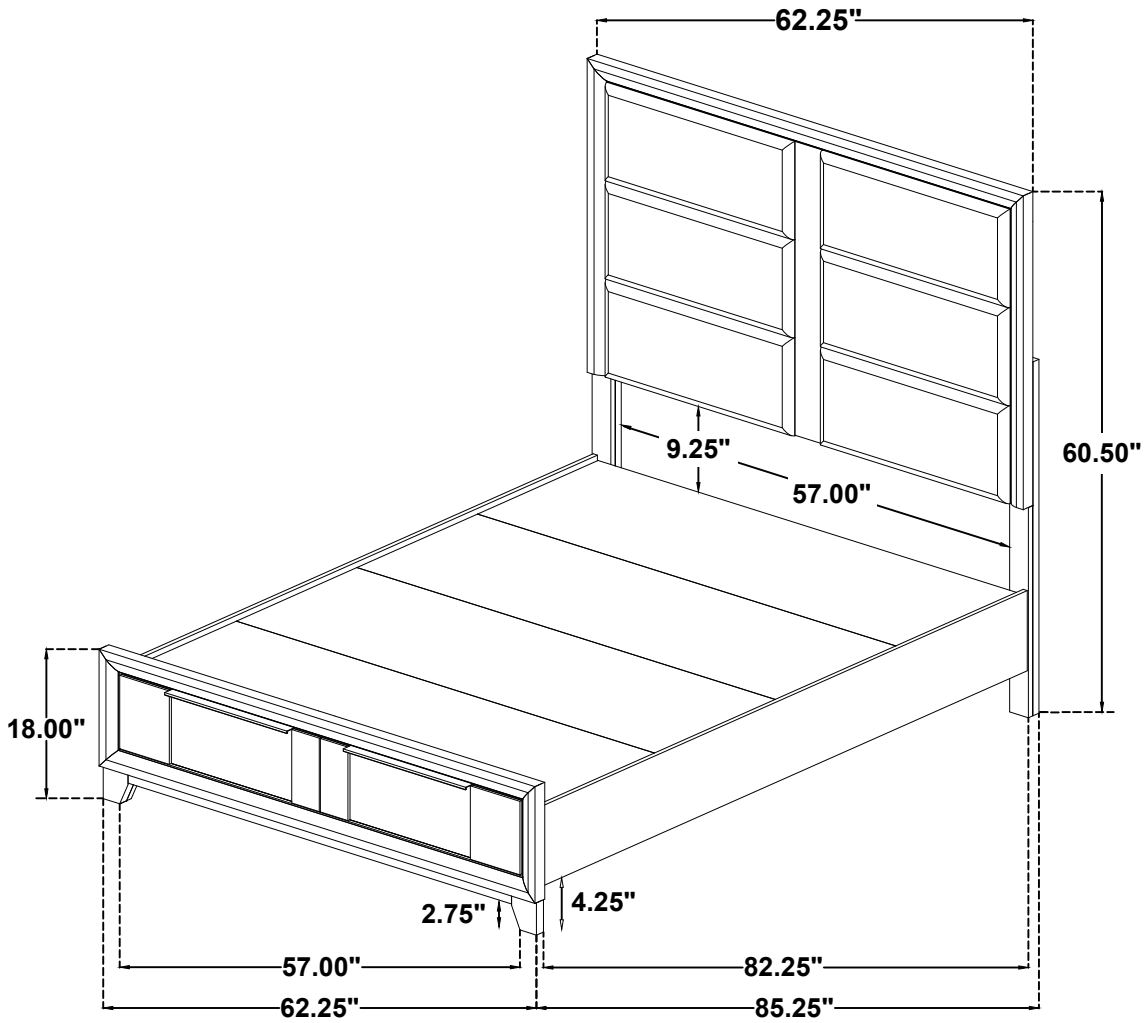

Note : Dimension tolerance ±5%

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

225322
Nightstand

REVISION 0: 09/30/2026

ITEM: 225322

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME	10 MINUTES

PARTS IDENTIFICATION

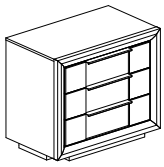A	NIGHTSTAND		1PC
B	LEG (WITH 'B' LABEL)		2PCS
C	LEG (WITH 'C' LABEL)		2PCS

HARDWARE IDENTIFICATION

1	BOLT (M6 x 40MM - RBW)		4PCS
2	LOCK WASHER (1/4" x 13Ø - RBW)		4PCS
3	FLAT WASHER (1/4" x 19Ø - RBW)		4PCS
4	WOOD DOWEL (Ø8 x 30MM)		4PCS
5	ALLEN WRENCH (M4 x 100MM - BLK)		1PC


NOTE:

Phillips head screwdriver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **225322**

ASSEMBLY INSTRUCTIONS

STEP 1

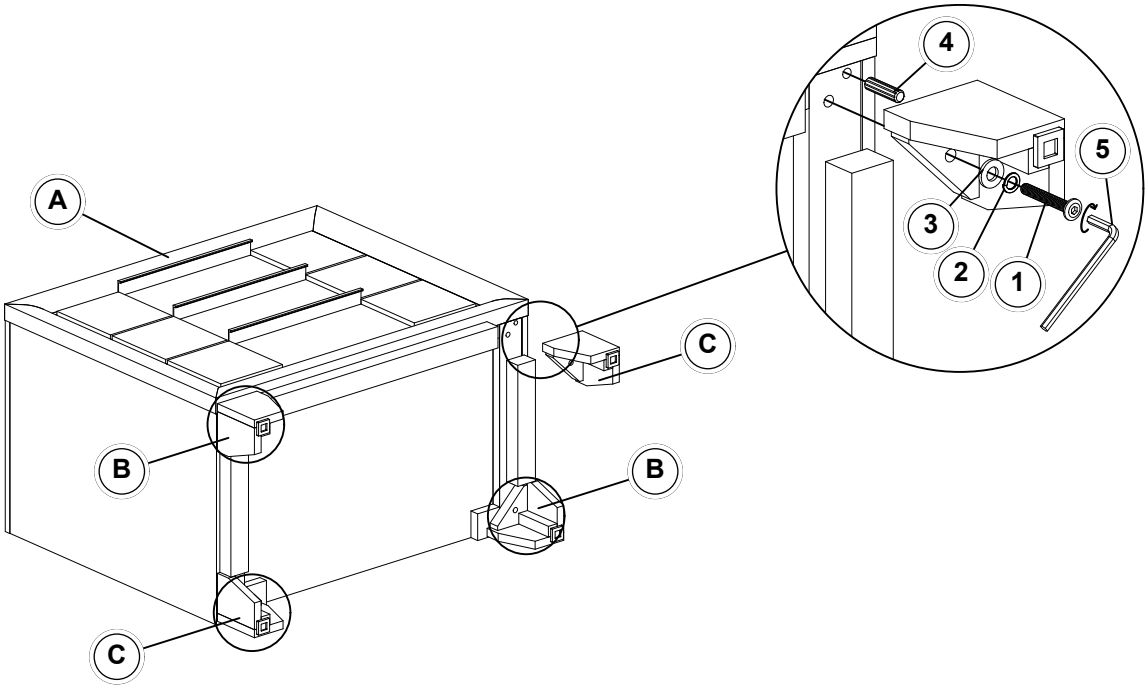


STEP 2

COMPLETE



ITEM: **225322**

Inner Size of Drawer : 21.50"W X 14.25"D X 2.75"H X 0.50"T

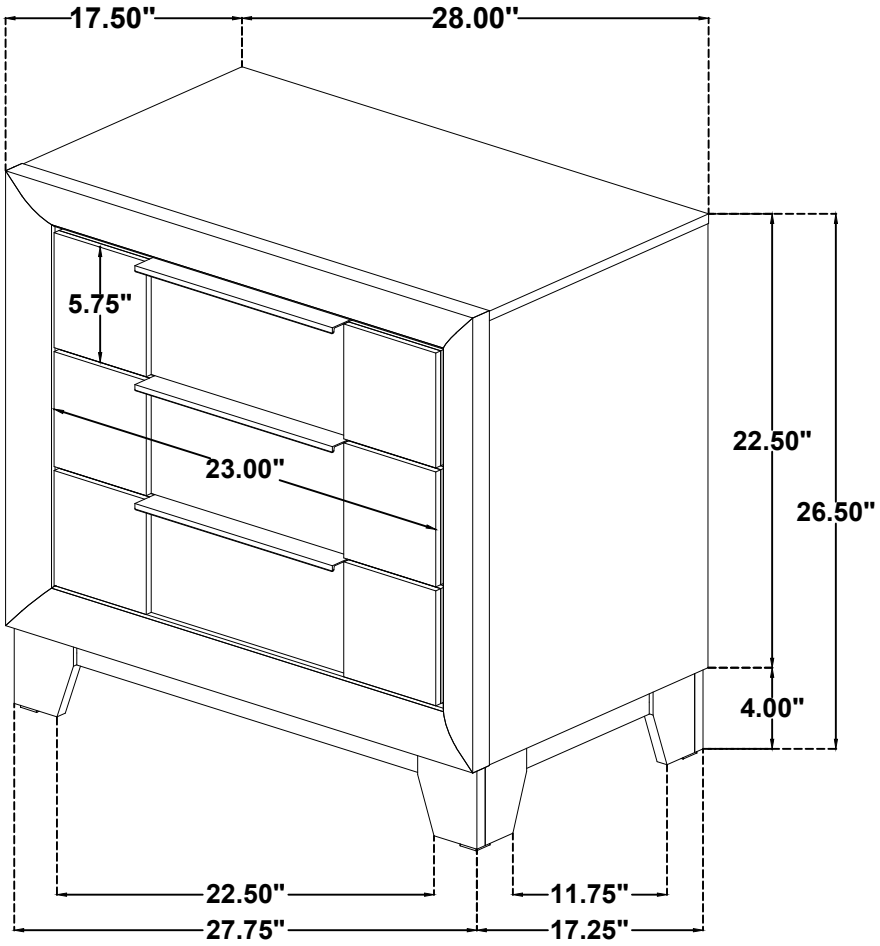

Note : Dimension tolerance ±5%

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

225323
Dresser

REVISION 0: 09/30/2026

ITEM: 225323

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME	10 MINUTES

PARTS IDENTIFICATION

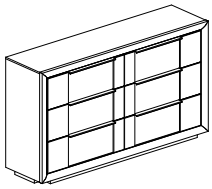A	DRESSER		1PC
B	LEG (WITH 'B' LABEL)		2PCS
C	LEG (WITH 'C' LABEL)		2PCS
D	CENTER LEG SUPPORT WITH LEVELER		1PC

HARDWARE IDENTIFICATION

1	BOLT (M6 x 40MM - RBW)		4PCS
2	LOCK WASHER (1/4" x 13Ø - RBW)		4PCS
3	FLAT WASHER (1/4" x 19Ø - RBW)		4PCS
4	WOOD DOWEL (Ø8 x 30MM)		4PCS
5	ALLEN WRENCH (M4 x 100MM - BLK)		1PC


NOTE:

Phillips head screwdriver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **225323**


ASSEMBLY INSTRUCTIONS

STEP 1

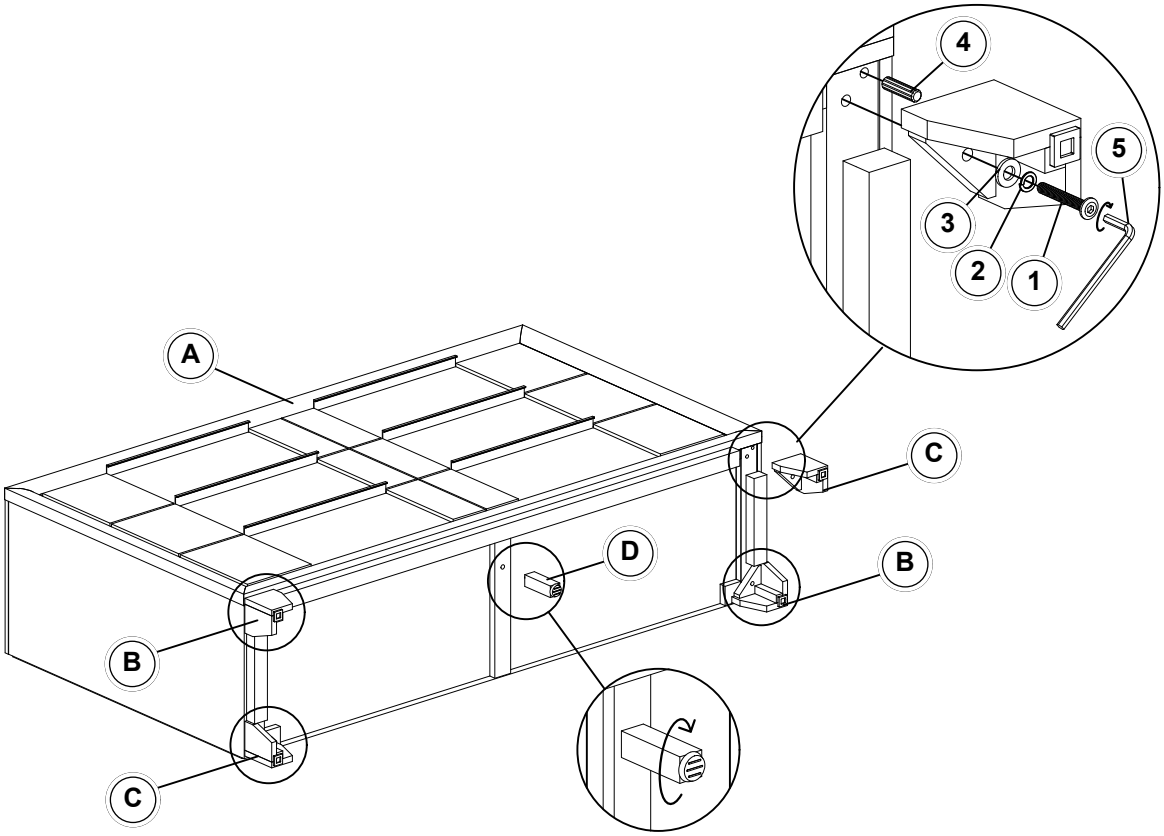

STEP 2

COMPLETE

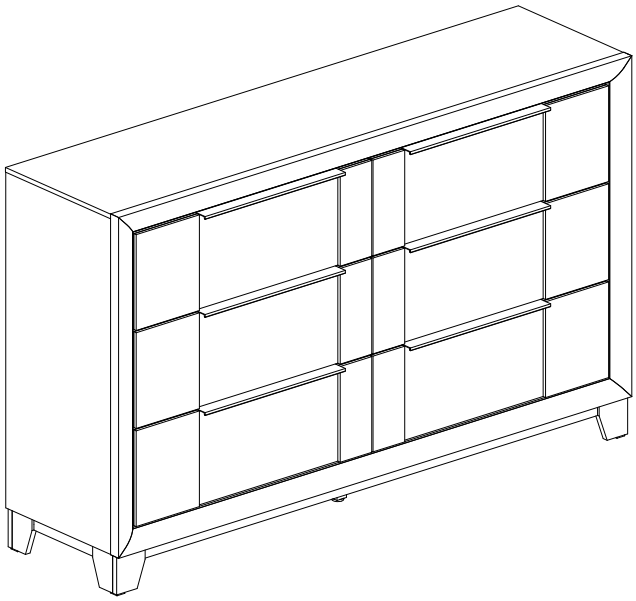

ITEM: **225323**

ANTI-TIPPING INSTALLATION INSTRUCTIONS
FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

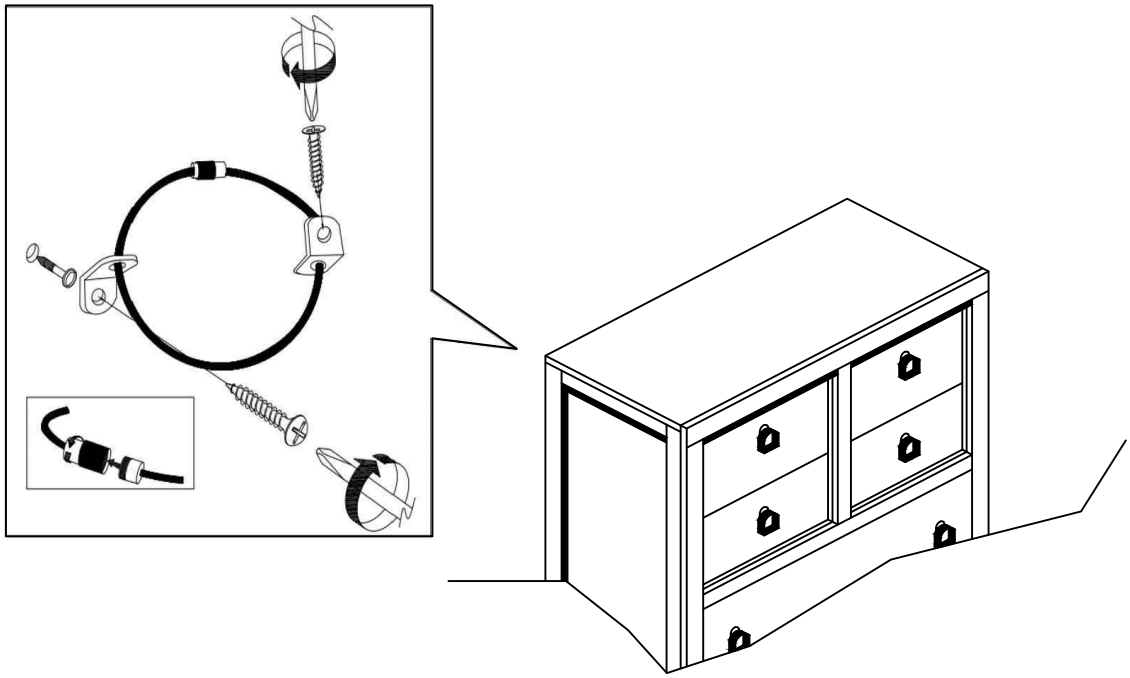






ITEM: **225323**

Inner Size of Drawer : 27.25"W X 14.25"D X 6.00"H X 0.50"T

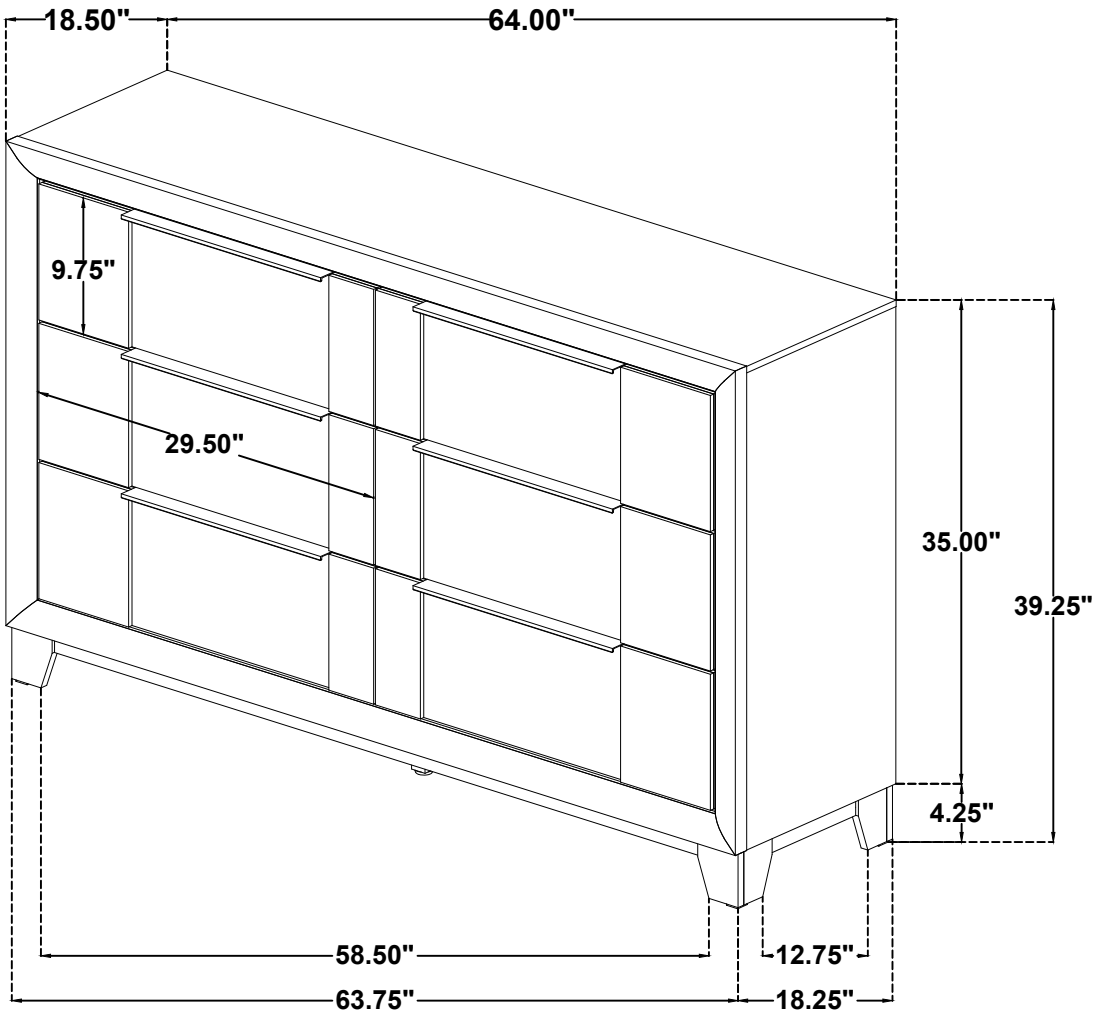

Note : Dimension tolerance ±5%

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

225324
Mirror

REVISION 0: 09/30/2026

ITEM: 225324

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME	5 MINUTES

PARTS IDENTIFICATION

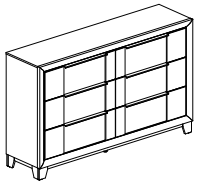A	MIRROR		1PC
B	MIRROR SUPPORT (PACKED WITH MIRROR)		2PCS
C	DRESSER *FROM BOX ITEM 225323		1PC


HARDWARE IDENTIFICATION

1	BOLT (M6 x 40MM - RBW)		8PCS
2	LOCK WASHER (1/4" x 13Ø - RBW)		8PCS
3	FLAT WASHER (1/4" x 19Ø - RBW)		8PCS
4	ALLEN WRENCH (M4 x 100MM - BLK)		1PC

ITEM: **225324**

ASSEMBLY INSTRUCTIONS


STEP 1

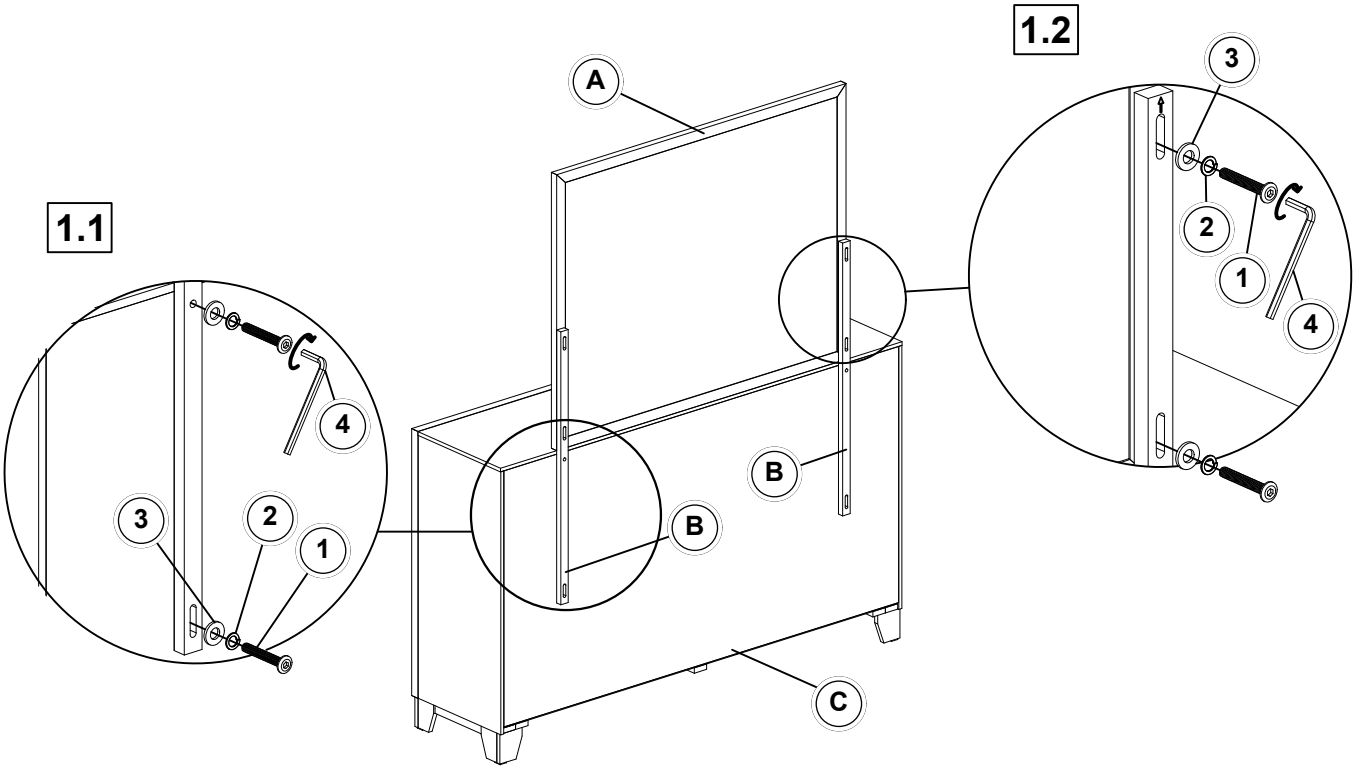


** BACK VIEW

STEP 2

COMPLETE

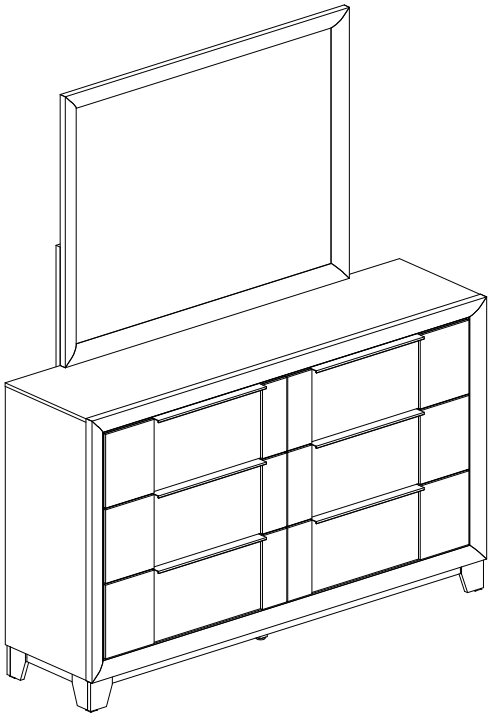

ITEM: **225324**

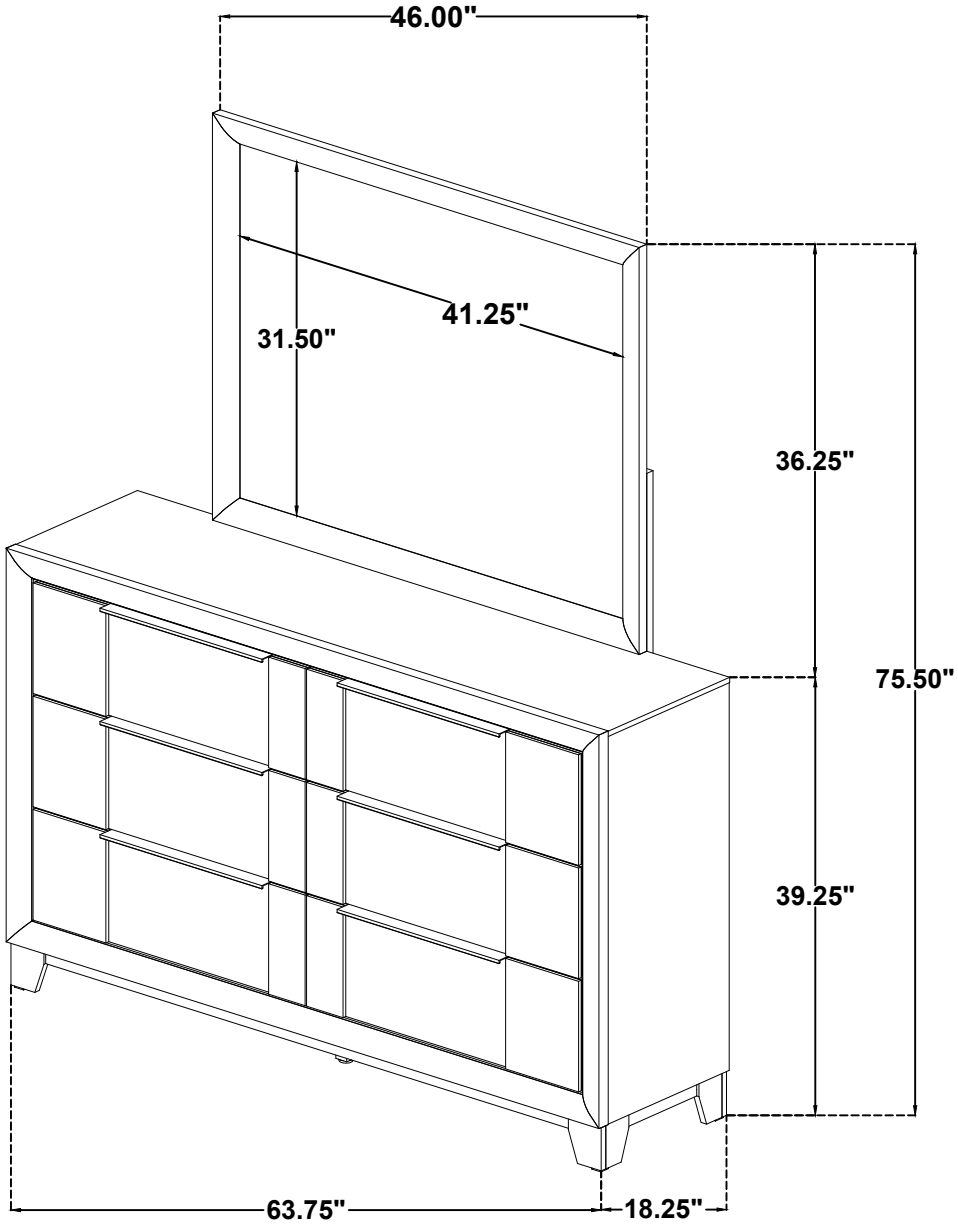

Note : Dimension tolerance ±5%