
# ASSEMBLY INSTRUCTIONS
# COASTER FINE FURNITURE

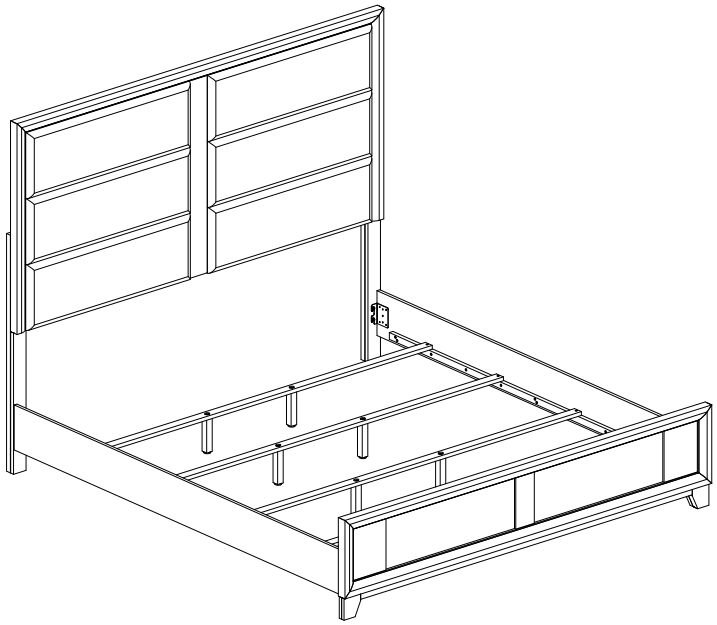

*Fine Furniture for every stage of life*

# 225321KE (B1&B2)
# Eastern King Bed

**REVISION 0: 09/30/2026**

# ITEM: 225321KE (B1&B2)


## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### WARNING!




1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

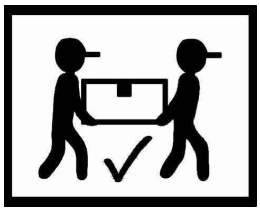


| ASSEMBLY TIME | 30 MINUTES |
|---|---|

## PARTS IDENTIFICATION

### B1 (BOX 1)

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| A | HEADBOARD PANEL |  | 1PC | D | FOOTBOARD PANEL |  | 1PC |
| B | LEFT HEADBOARD LEG (WITH "L" LABEL) |  | 1PC | E | BED SLAT |  | 4PCS |
| C | RIGHT HEADBOARD LEG (WITH "R" LABEL) |  | 1PC | F | BED SLAT SUPPORT WITH LEVELER |  | 8PCS |

### B2 (BOX 2)
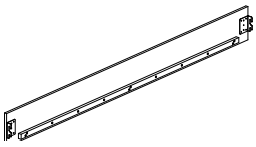
| | | | | | | | |
|---|---|---|---|---|---|---|---|
| G | BED RAIL |  | 2PCS | I | RIGHT FOOTBOARD LEG (WITH "R" LABEL) |  | 1PC |
| H | LEFT FOOTBOARD LEG (WITH "L" LABEL) |  | 1PC | | | | |

# ITEM: 225321KE (B1&B2)

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:



1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE IS LOCATED IN 225321KE (B1)

| | | | |
|---|---|---|---|
| 1 | **BOLT 1**<br>(M8 x 16MM - RBW) |  | 8 PCS |
| 2 | **BOLT 2**<br>(M8 x 40MM - RBW) |  | 8 PCS |
| 3 | **BIG LOCK WASHER**<br>(5/16" x 14Ø - RBW) |  | 8 PCS |
| 4 | **BIG FLAT WASHER**<br>(5/16" x 22Ø - RBW) |  | 8 PCS |
| 5 | **BIG ALLEN WRENCH**<br>(M5 x 68MM - BLK) |  | 1 PC |
| 6 | **BOLT 3**<br>(M6 x 40MM - RBW) |  | 4 PCS |
| 7 | **SMALL LOCK WASHER**<br>(1/4" x 13Ø - RBW) |  | 4 PCS |
| 8 | **SMALL FLAT WASHER**<br>(1/4" x 19Ø - RBW) |  | 4 PCS |
| 9 | **SMALL ALLEN WRENCH**<br>(M4 x 65MM - BLK) |  | 1 PC |
| 10 | **FLAT HEAD SCREW**<br>(M4 x 32MM - BLK) |  | 8 PCS |


### NOTE:

**Phillips head screwdriver is required in the assembly process; however, manufacturer does not provide this item.**

# ITEM: 225321KE (B1&B2)


## ASSEMBLY INSTRUCTIONS

## STEP 1

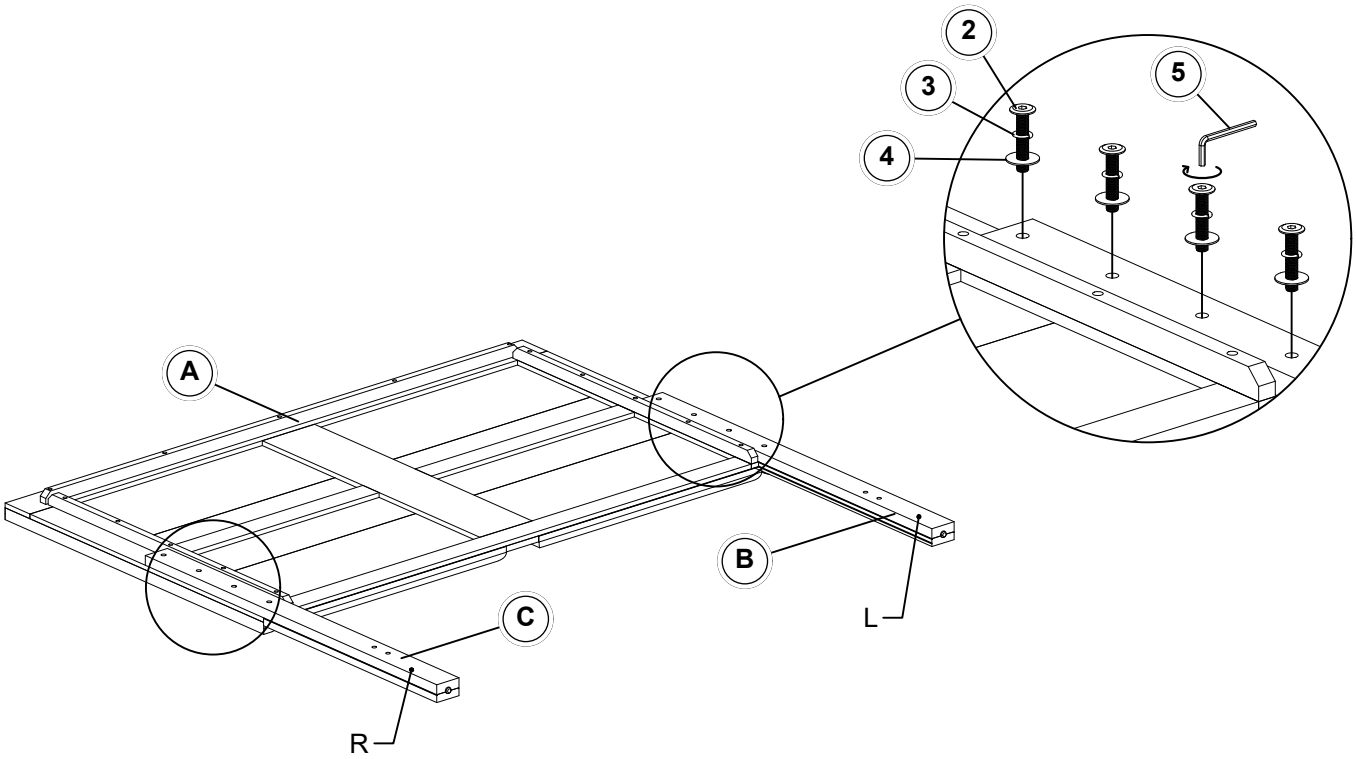


** BACK VIEW

## STEP 2

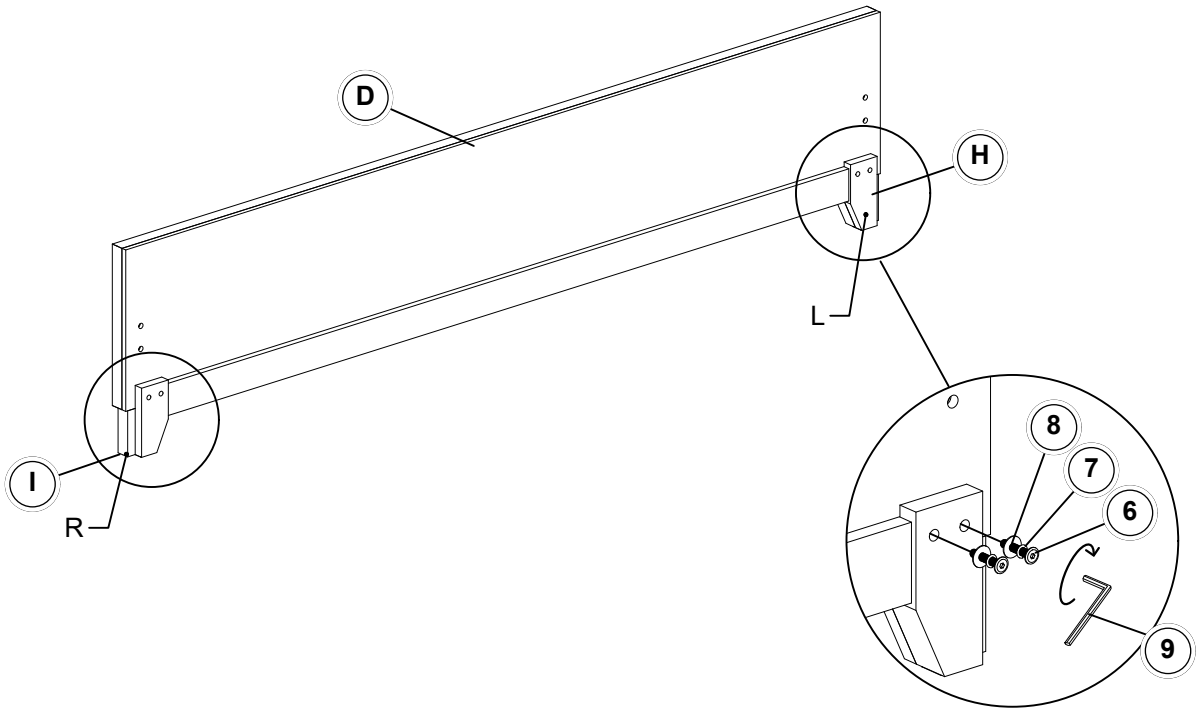



** BACK VIEW


# ITEM: 225321KE (B1&B2)

## ASSEMBLY INSTRUCTIONS

## STEP 3

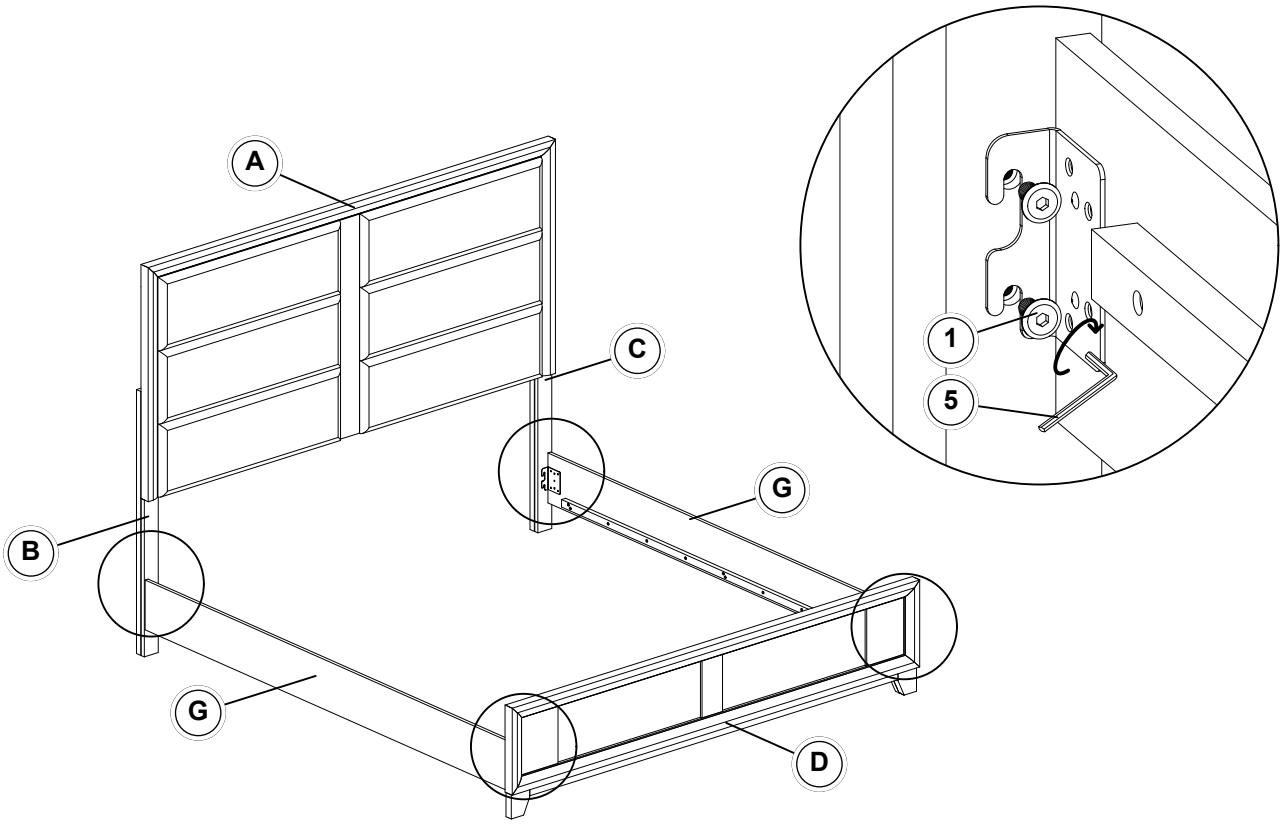



## STEP 4

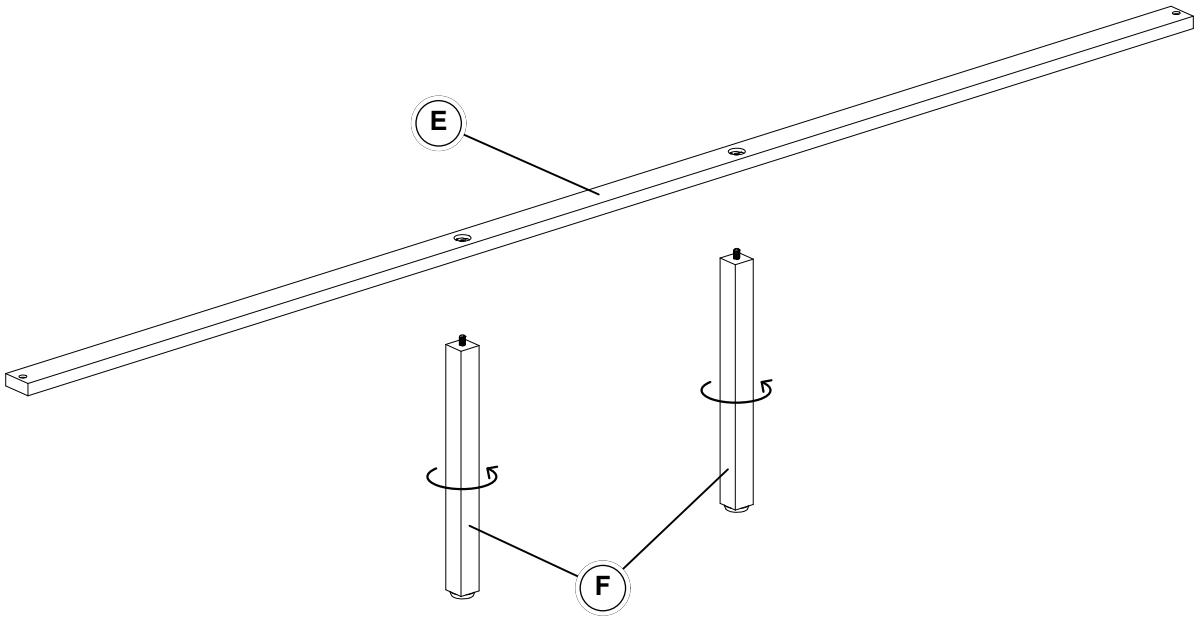

# ITEM: 225321KE (B1&B2)


## ASSEMBLY INSTRUCTIONS

## STEP 5

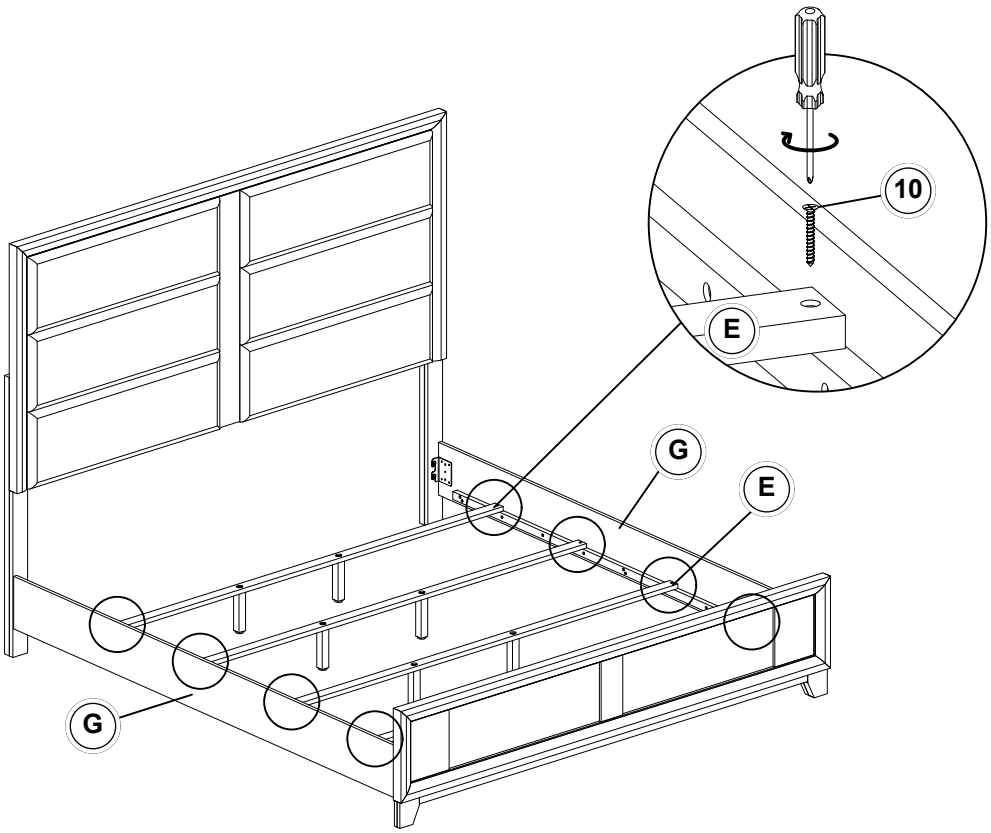



## STEP 6

## COMPLETE

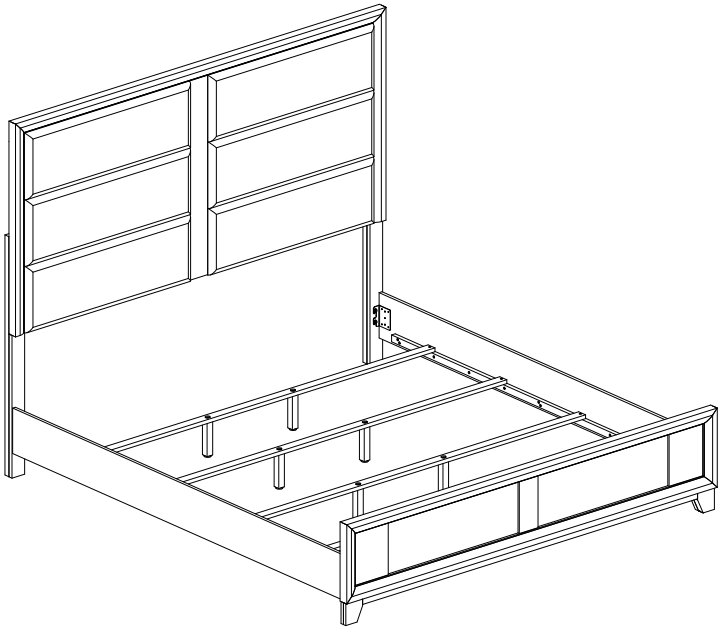

# ITEM: 225321KE (B1&B2)

**Inner Size 76.50"W X 80.75"D**

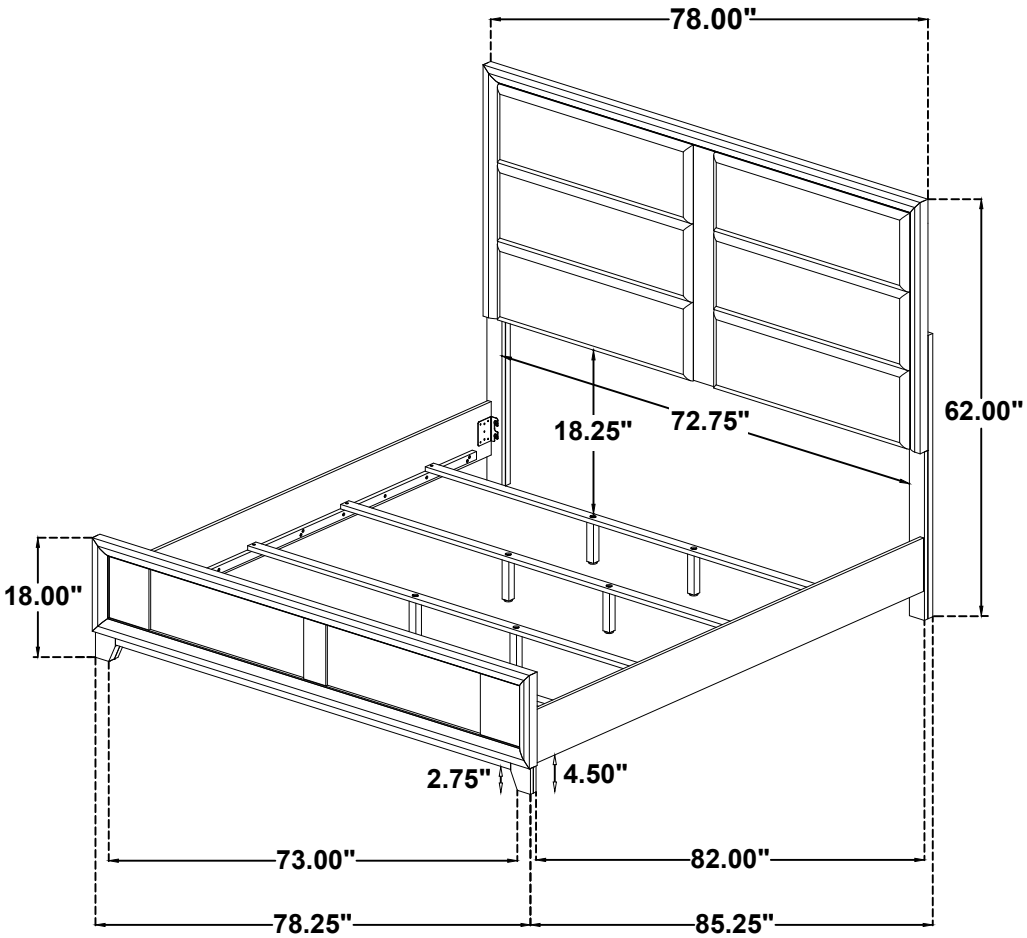


**Note : Dimension tolerance ±5%**

# ASSEMBLY INSTRUCTIONS
# COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## 225322
## Nightstand

**REVISION 0: 09/30/2026**

# ITEM: 225322

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



| ASSEMBLY TIME | 10 MINUTES |
|---|---|

## PARTS IDENTIFICATION
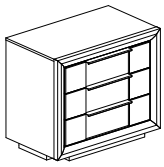
| | | | |
|---|---|---|---|
| A | NIGHTSTAND |  | 1PC |
| B | LEG (WITH 'B' LABEL) |  | 2PCS |
| C | LEG (WITH 'C' LABEL) |  | 2PCS |

## HARDWARE IDENTIFICATION

| | | | |
|---|---|---|---|
| 1 | BOLT<br>(M6 x 40MM - RBW) |  | 4PCS |
| 2 | LOCK WASHER<br>(1/4" x 13Ø - RBW) |  | 4PCS |
| 3 | FLAT WASHER<br>(1/4" x 19Ø - RBW) |  | 4PCS |
| 4 | WOOD DOWEL<br>(Ø8 x 30MM) |  | 4PCS |
| 5 | ALLEN WRENCH<br>(M4 x 100MM - BLK) |  | 1PC |


### NOTE:

**Phillips head screwdriver is required in the assembly process; however, manufacturer does not provide this item.**

ITEM: **225322**

**ASSEMBLY INSTRUCTIONS**

## STEP 1

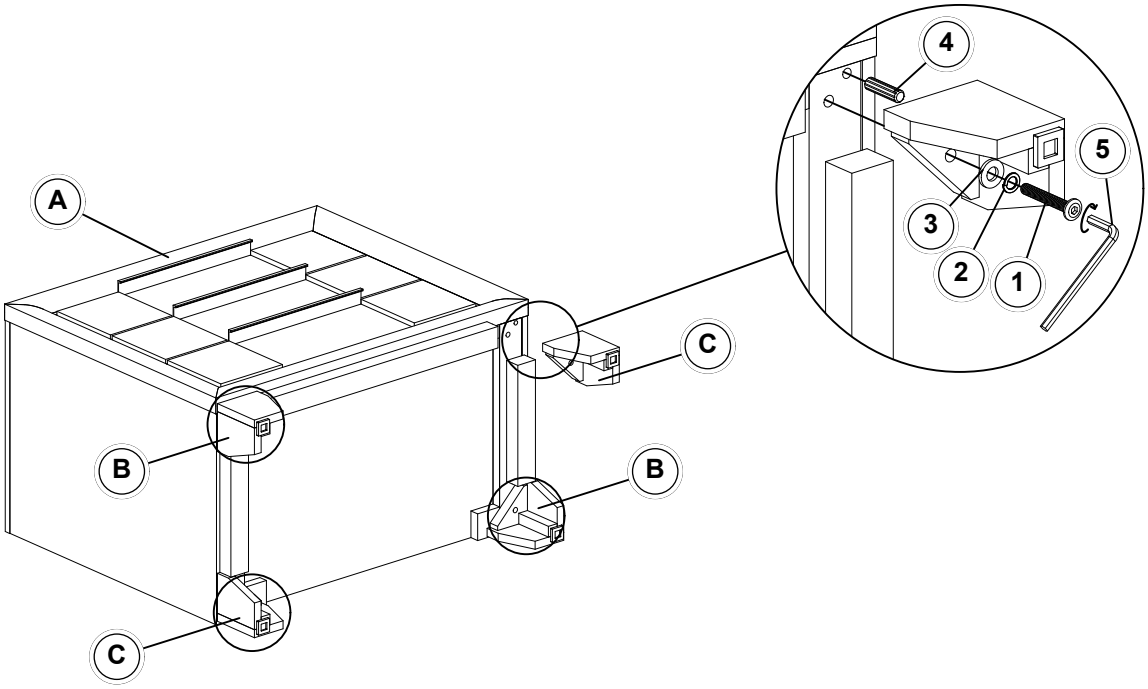



## STEP 2

**COMPLETE**



ITEM: **225322**

**Inner Size of Drawer : 21.50"W X 14.25"D X 2.75"H X 0.50"T**

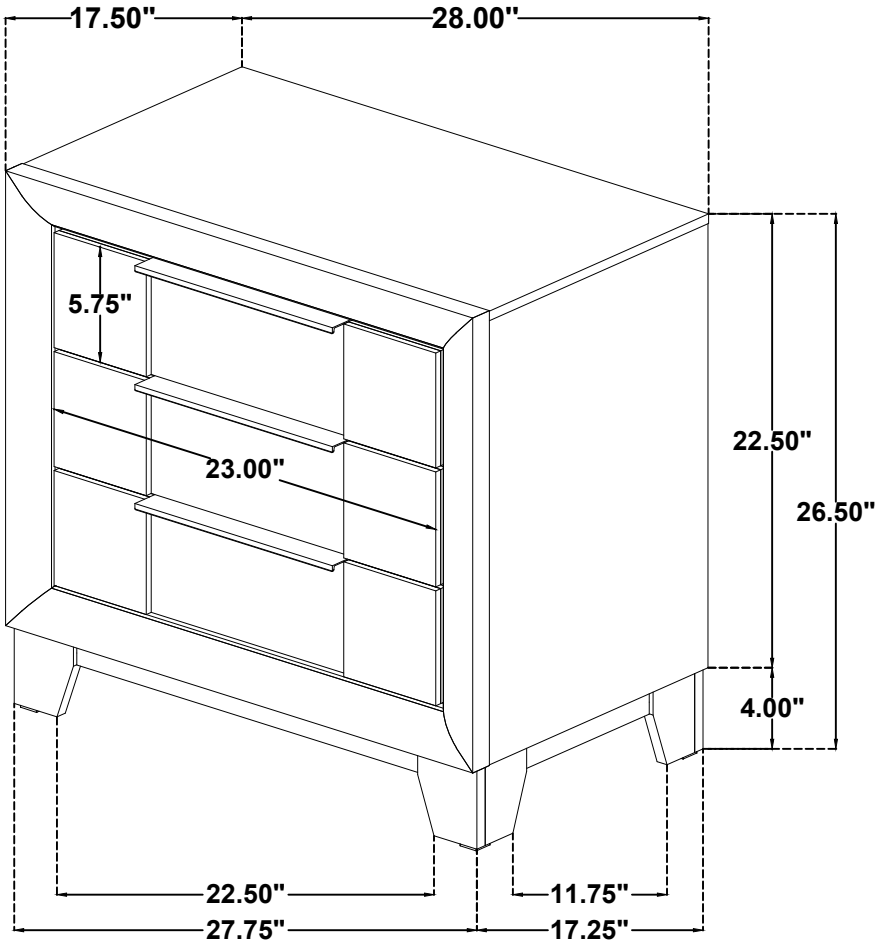


**Note : Dimension tolerance ±5%**

# *ASSEMBLY INSTRUCTIONS*
# *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

## 225323
## Dresser

**REVISION 0: 09/30/2026**

# ITEM: 225323

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




| ASSEMBLY TIME | 10 MINUTES |
|---|---|

## PARTS IDENTIFICATION
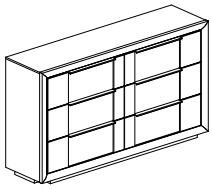
| | | | |
|---|---|---|---|
| A | DRESSER |  | 1PC |
| B | LEG (WITH 'B' LABEL) |  | 2PCS |
| C | LEG (WITH 'C' LABEL) |  | 2PCS |
| D | CENTER LEG SUPPORT WITH LEVELER |  | 1PC |

## HARDWARE IDENTIFICATION

| | | | |
|---|---|---|---|
| 1 | BOLT (M6 x 40MM - RBW) |  | 4PCS |
| 2 | LOCK WASHER (1/4" x 13Ø - RBW) |  | 4PCS |
| 3 | FLAT WASHER (1/4" x 19Ø - RBW) |  | 4PCS |
| 4 | WOOD DOWEL (Ø8 x 30MM) |  | 4PCS |
| 5 | ALLEN WRENCH (M4 x 100MM - BLK) |  | 1PC |


### NOTE:

**Phillips head screwdriver is required in the assembly process; however, manufacturer does not provide this item.**

ITEM: **225323**


**ASSEMBLY INSTRUCTIONS**

## STEP 1

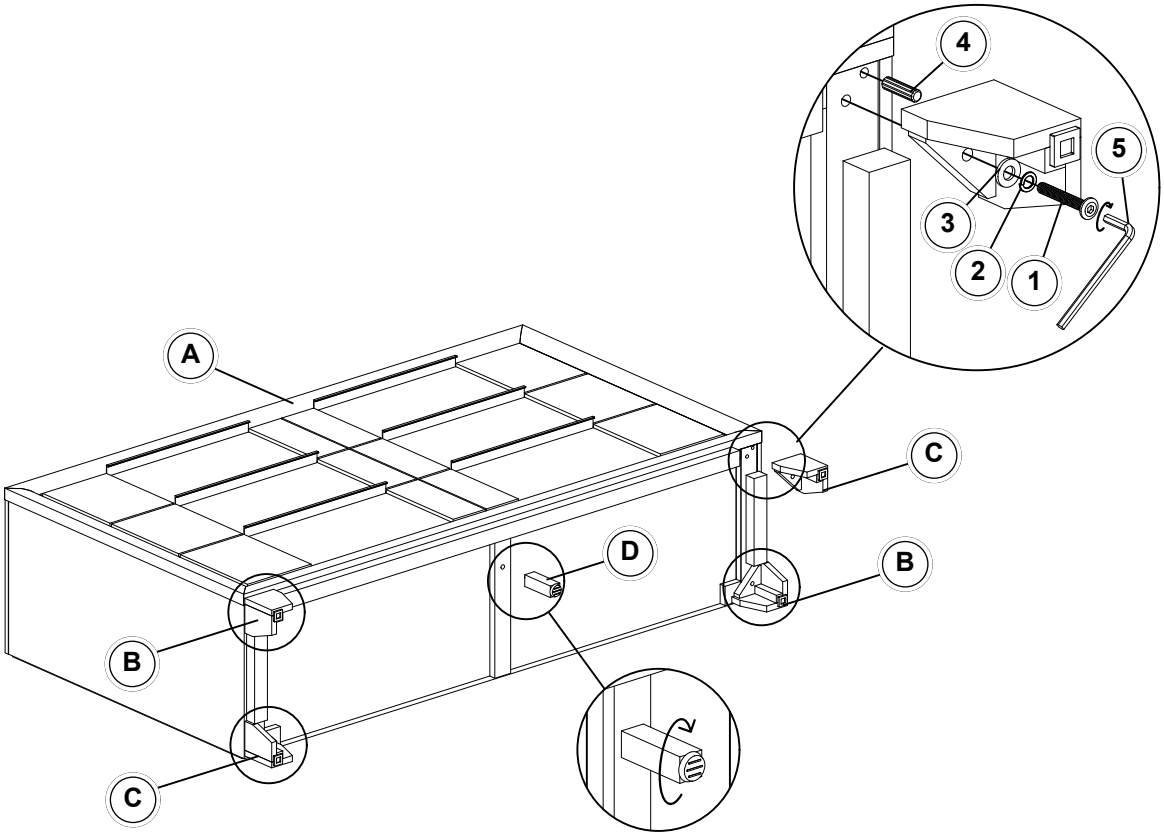


## STEP 2

**COMPLETE**

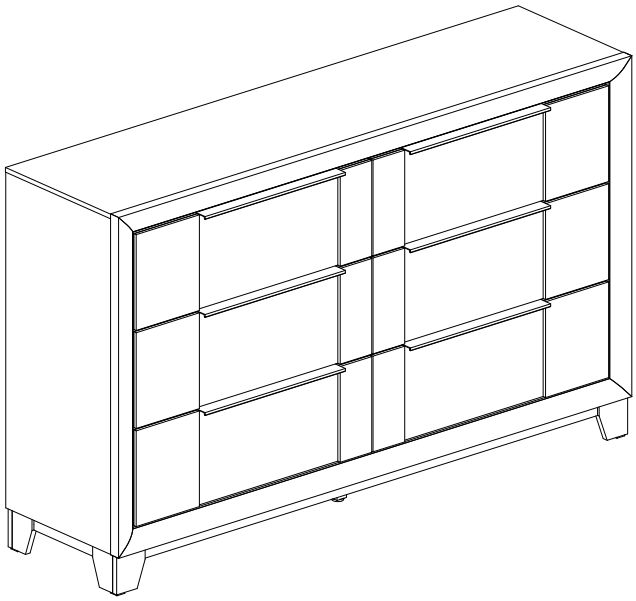

ITEM: **225323**

# ANTI-TIPPING INSTALLATION INSTRUCTIONS
# FURNITURE TIPPING RESTRAINT

## WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

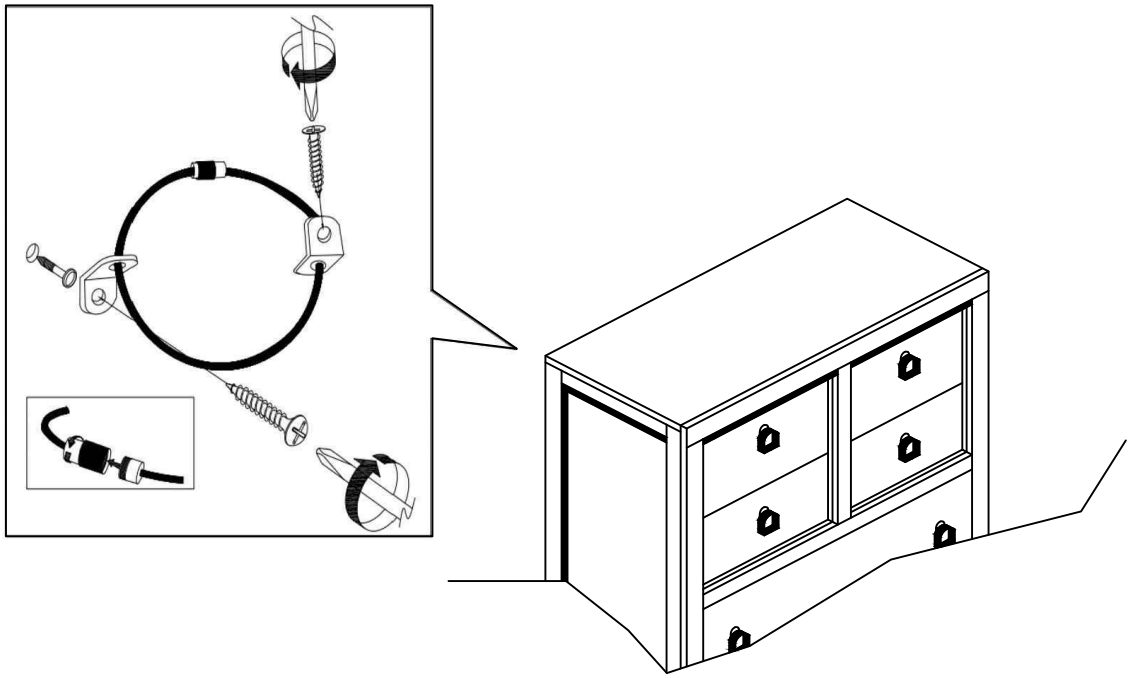






ITEM: **225323**

**Inner Size of Drawer : 27.25"W X 14.25"D X 6.00"H X 0.50"T**

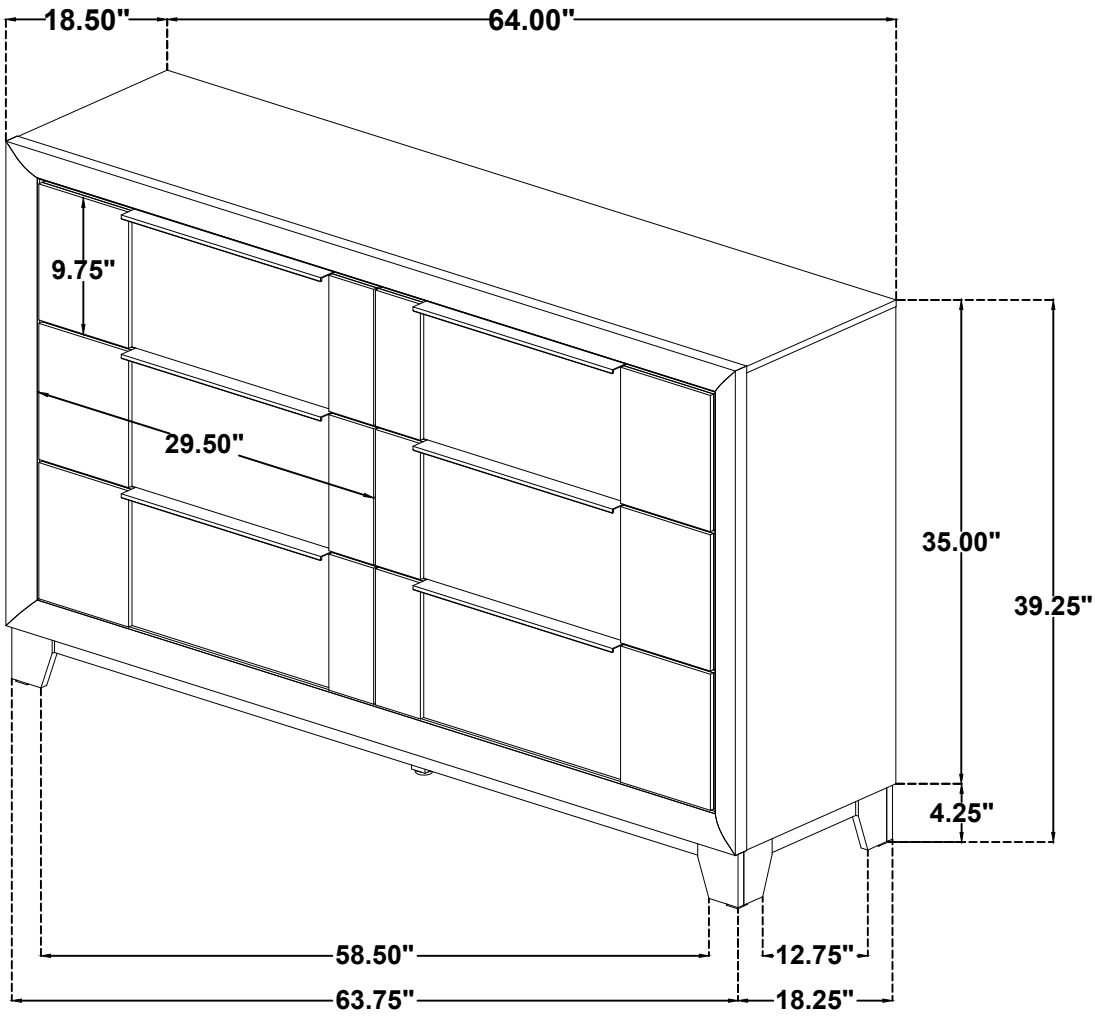


**Note : Dimension tolerance ±5%**

# ASSEMBLY INSTRUCTIONS
# COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## 225324
## Mirror

**REVISION 0: 09/30/2026**

# ITEM: 225324

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




| ASSEMBLY TIME | 5 MINUTES |
|---|---|

## PARTS IDENTIFICATION
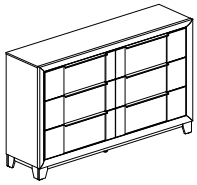
| | | | |
|---|---|---|---|
| A | MIRROR |  | 1PC |
| B | MIRROR SUPPORT<br>(PACKED WITH MIRROR) |  | 2PCS |
| C | DRESSER<br>*FROM BOX ITEM 225323 |  | 1PC |


## HARDWARE IDENTIFICATION

| | | | |
|---|---|---|---|
| 1 | BOLT<br>(M6 x 40MM - RBW) |  | 8PCS |
| 2 | LOCK WASHER<br>(1/4" x 13Ø - RBW) |  | 8PCS |
| 3 | FLAT WASHER<br>(1/4" x 19Ø - RBW) |  | 8PCS |
| 4 | ALLEN WRENCH<br>(M4 x 100MM - BLK) |  | 1PC |

ITEM: **225324**

**ASSEMBLY INSTRUCTIONS**


## STEP 1

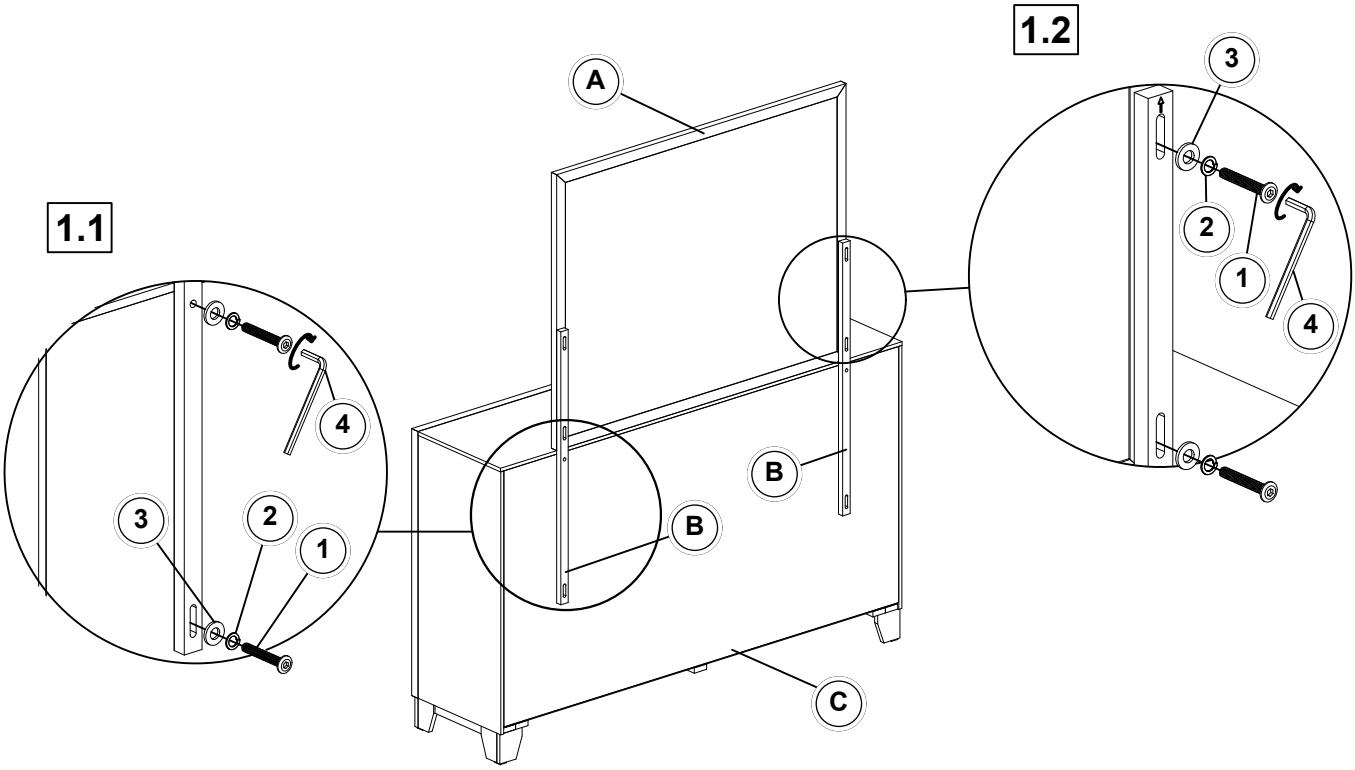



** BACK VIEW

## STEP 2

**COMPLETE**

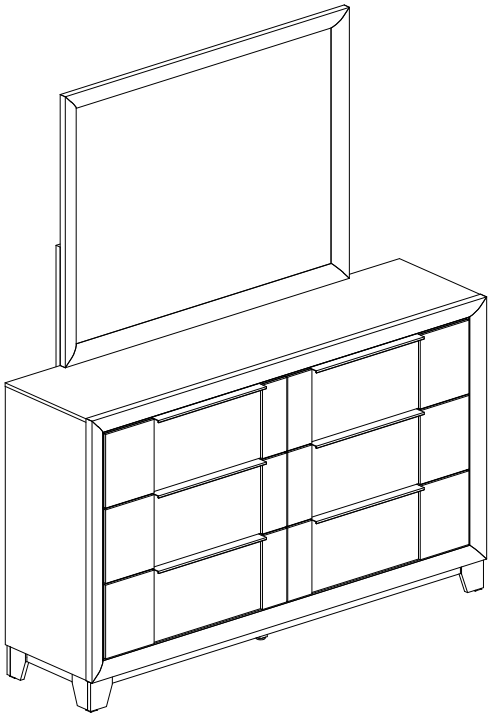

ITEM: **225324**

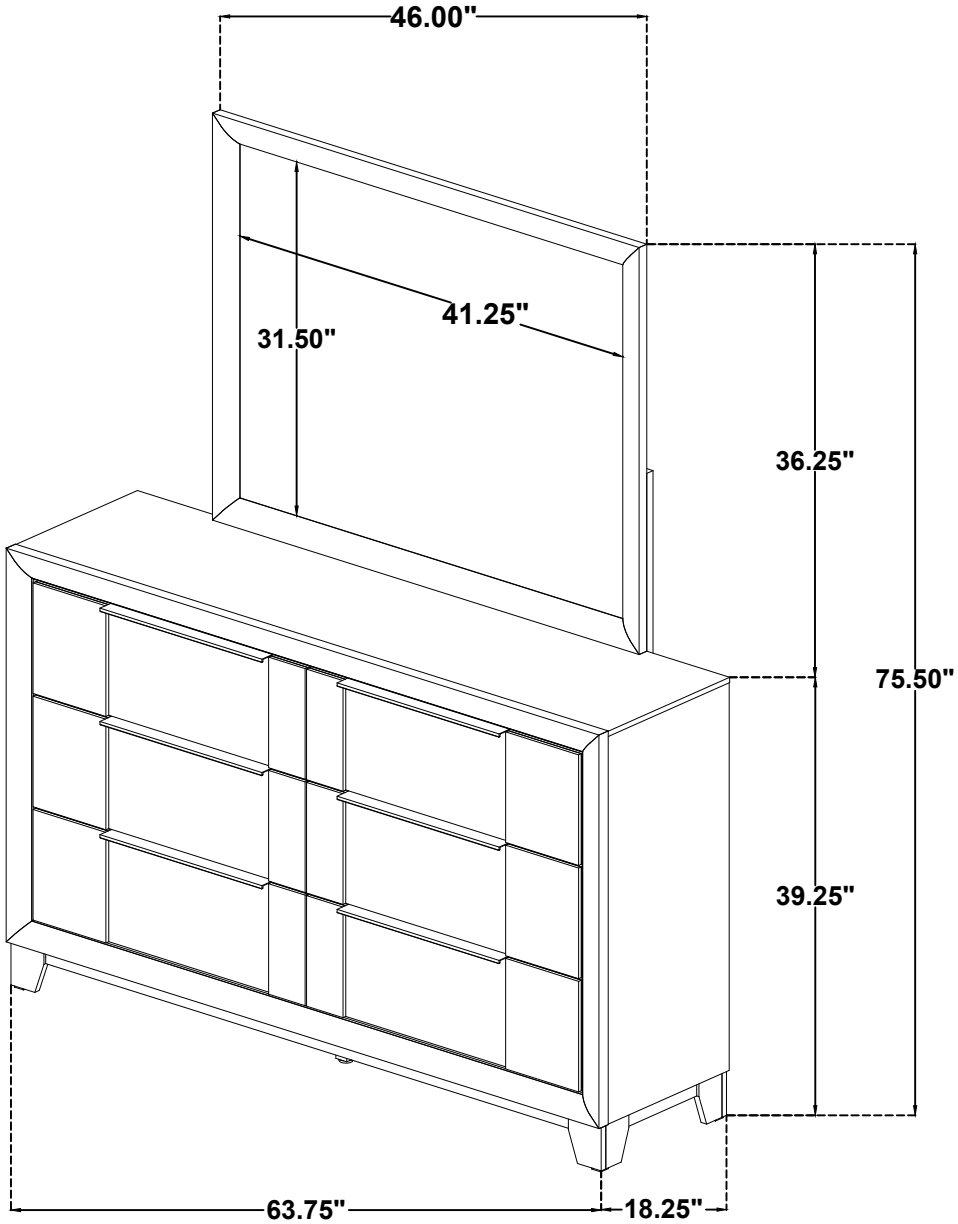


**Note : Dimension tolerance ±5%**

# *ASSEMBLY INSTRUCTIONS*
# *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

***225325***
***Chest***

**REVISION 0: 09/30/2026**

# ITEM: 225325

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




| ASSEMBLY TIME | 10 MINUTES |
|---|---|

## PARTS IDENTIFICATION
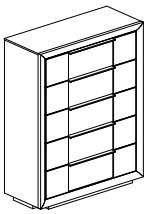
| | | | |
|---|---|---|---|
| A | CHEST |  | 1PC |
| B | LEG (WITH 'B' LABEL) |  | 2PCS |
| C | LEG (WITH 'C' LABEL) |  | 2PCS |

## HARDWARE IDENTIFICATION

| | | | |
|---|---|---|---|
| 1 | BOLT<br>(M6 x 40MM - RBW) |  | 4PCS |
| 2 | LOCK WASHER<br>(1/4" x 13Ø - RBW) |  | 4PCS |
| 3 | FLAT WASHER<br>(1/4" x 19Ø - RBW) |  | 4PCS |
| 4 | WOOD DOWEL<br>(Ø8 x 30MM) |  | 4PCS |
| 5 | ALLEN WRENCH<br>(M4 x 100MM - BLK) |  | 1PC |


### NOTE:

**Phillips head screwdriver is required in the assembly process; however, manufacturer does not provide this item.**

ITEM: **225325**


**ASSEMBLY INSTRUCTIONS**

## STEP 1

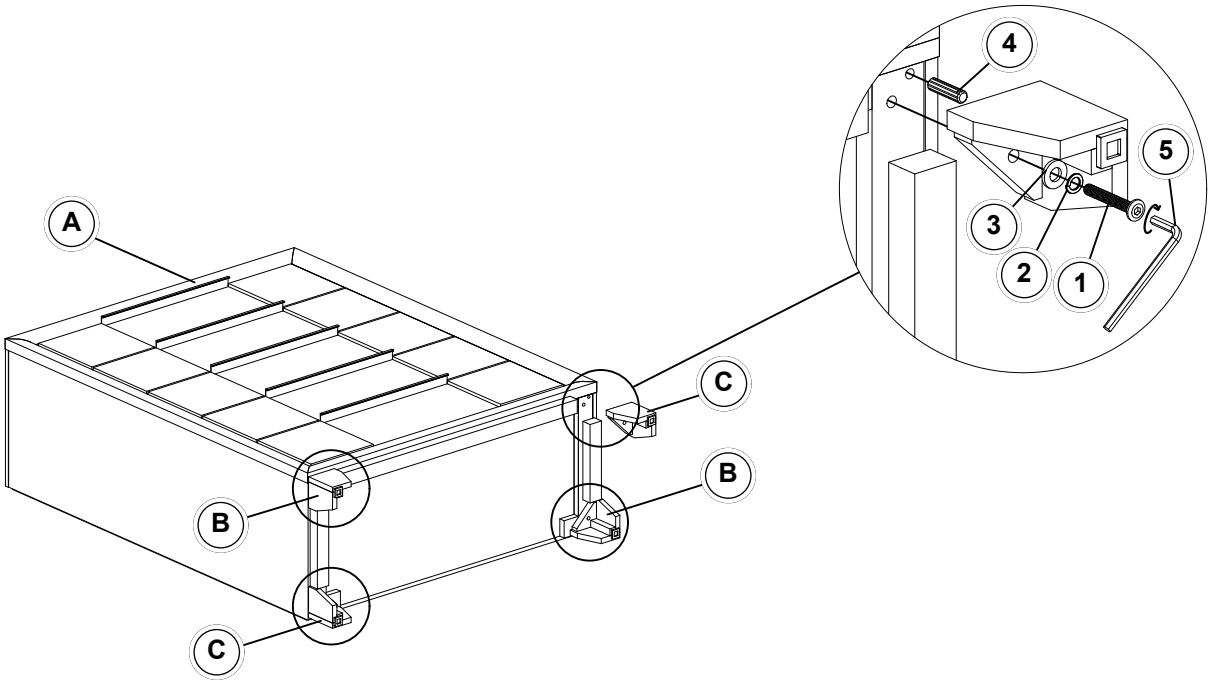


## STEP 2

**COMPLETE**

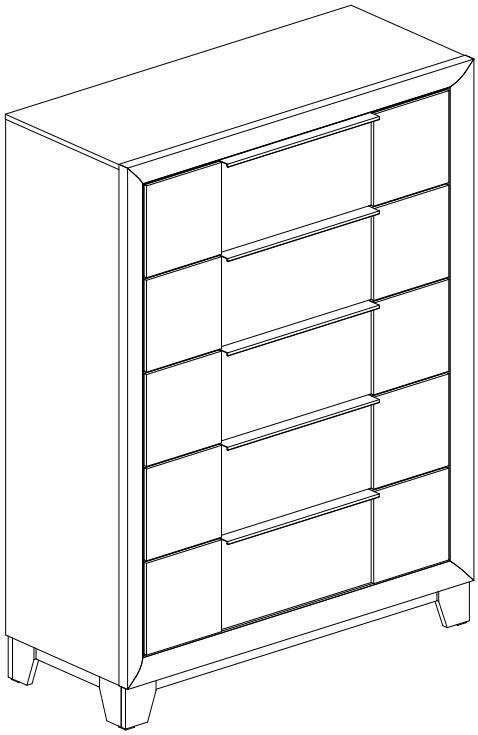



ITEM: **225325**

# ANTI-TIPPING INSTALLATION INSTRUCTIONS

## WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.


Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

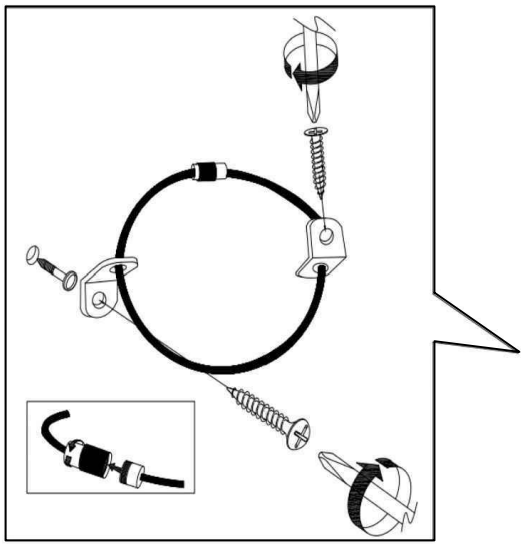

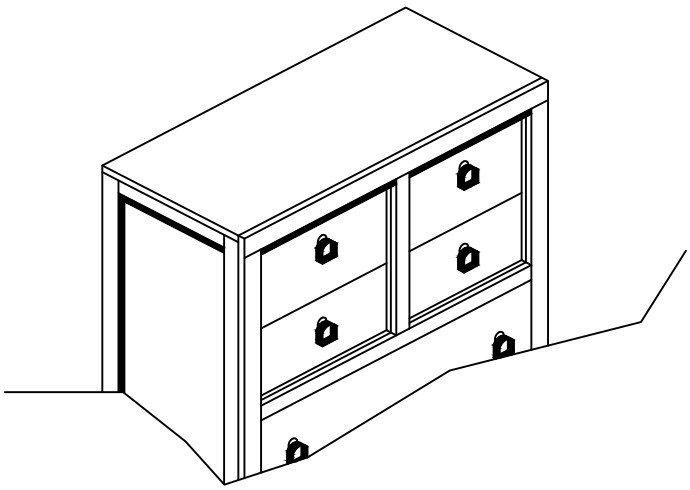






ITEM: **225325**

**Inner Size of Drawer : 33.50"W X 14.25"D X 6.00"H X 0.50"T**

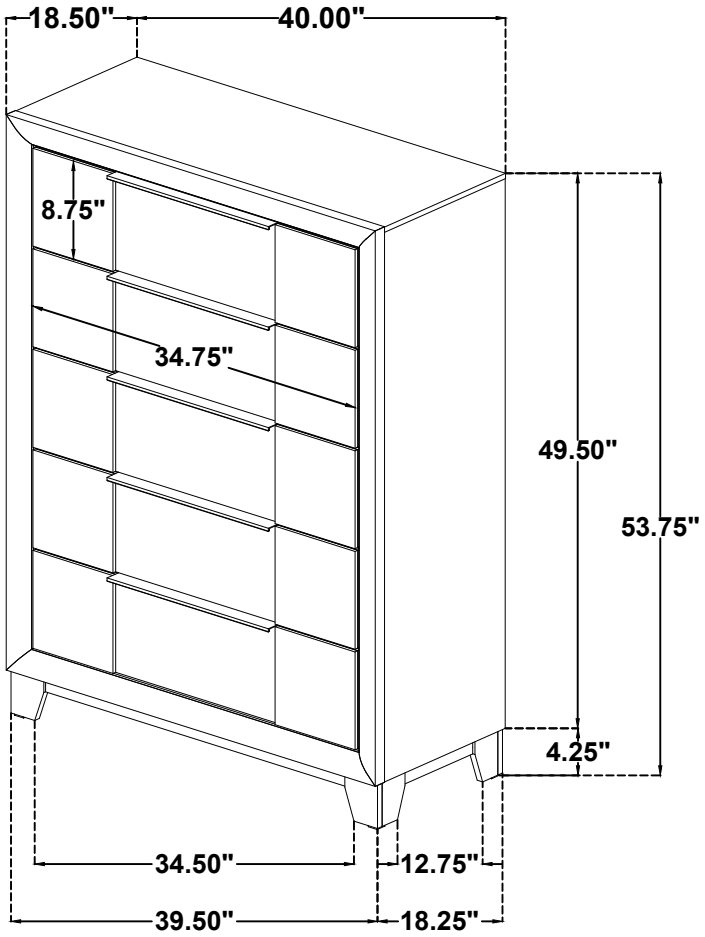


**Note : Dimension tolerance ±5%**