ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

225321Q (B1&B2)
Queen Bed

REVISION 0: 09/30/2026

ITEM: 225321Q (B1&B2)


ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!





1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

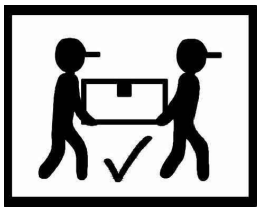


ASSEMBLY TIME	30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

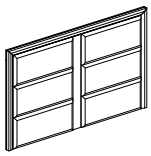A	HEADBOARD PANEL		1PC	D	FOOTBOARD PANEL		1PC
B	LEFT HEADBOARD LEG (WITH "L" LABEL)		1PC	E	BED SLAT		4PCS
C	RIGHT HEADBOARD LEG (WITH "R" LABEL)		1PC	F	BED SLAT SUPPORT WITH LEVELER		4PCS

B2 (BOX 2)

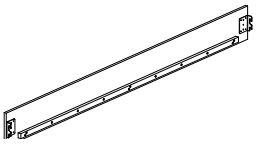G	BED RAIL		2PCS	I	RIGHT FOOTBOARD LEG (WITH "R" LABEL)		1PC
H	LEFT FOOTBOARD LEG (WITH "L" LABEL)		1PC				

ITEM: 225321Q (B1&B2)

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:



1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE IS LOCATED IN 225321Q (B1)

1	**BOLT 1** **(M8 x 16MM - RBW)**		**8 PCS**
2	**BOLT 2** **(M8 x 40MM - RBW)**		**8 PCS**
3	**BIG LOCK WASHER** **(5/16" x 14Ø - RBW)**		**8 PCS**
4	**BIG FLAT WASHER** **(5/16" x 22Ø - RBW)**		**8 PCS**
5	**BIG ALLEN WRENCH** **(M5 x 68MM - BLK)**		**1 PC**
6	**BOLT 3** **(M6 x 40MM - RBW)**		**4 PCS**
7	**SMALL LOCK WASHER** **(1/4" x 13Ø - RBW)**		**4 PCS**
8	**SMALL FLAT WASHER** **(1/4" x 19Ø - RBW)**		**4 PCS**
9	**SMALL ALLEN WRENCH** **(M4 x 65MM - BLK)**		**1 PC**
10	**FLAT HEAD SCREW** **(M4 x 32MM - BLK)**		**8 PCS**


NOTE:

Phillips head screwdriver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 225321Q (B1&B2)


ASSEMBLY INSTRUCTIONS

STEP 1

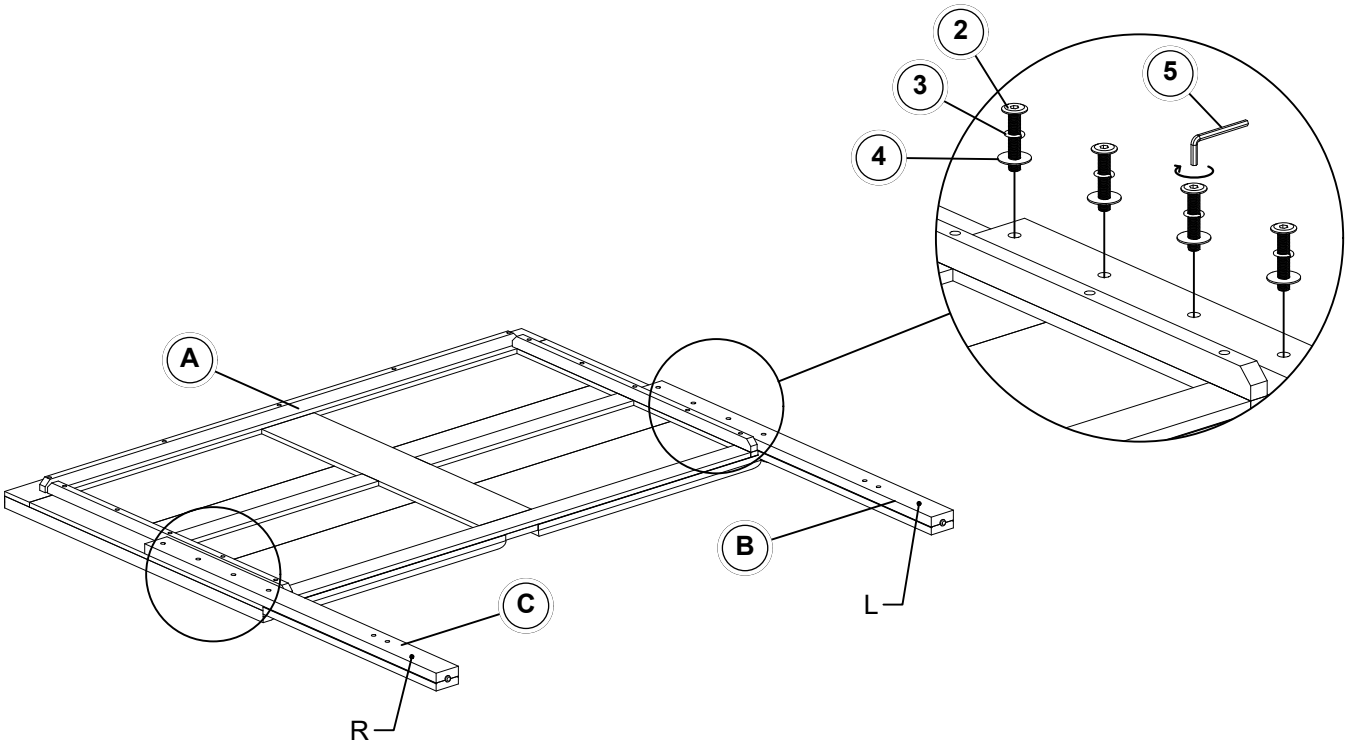

** BACK VIEW

STEP 2

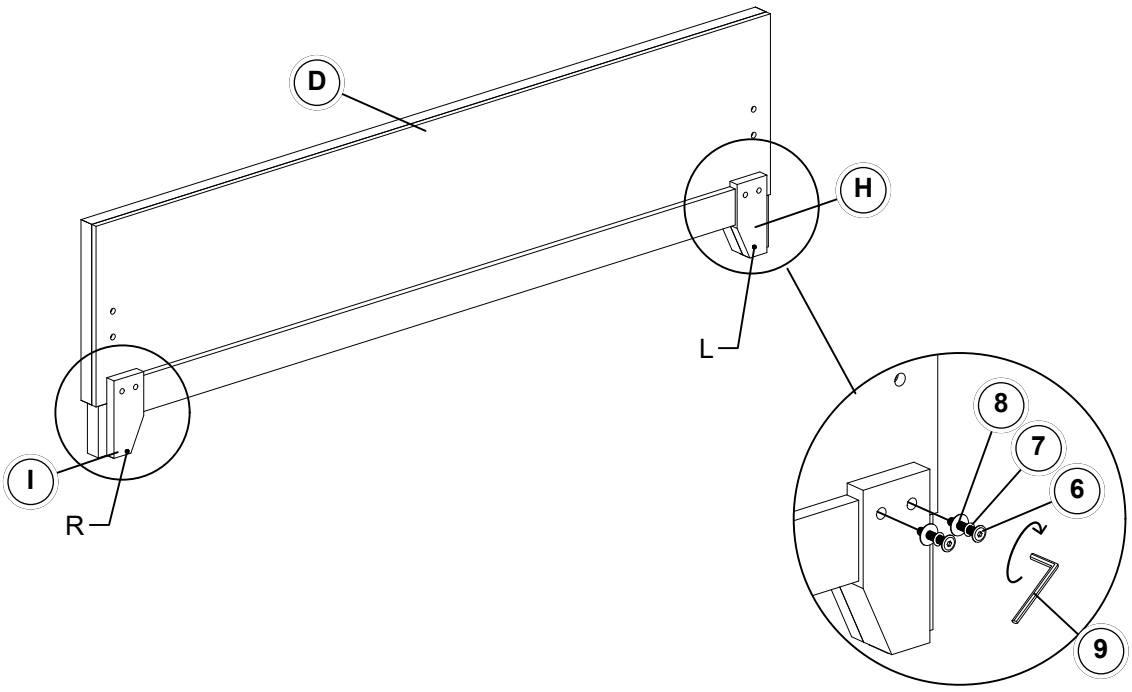


** BACK VIEW


ITEM: 225321Q (B1&B2)

ASSEMBLY INSTRUCTIONS

STEP 3

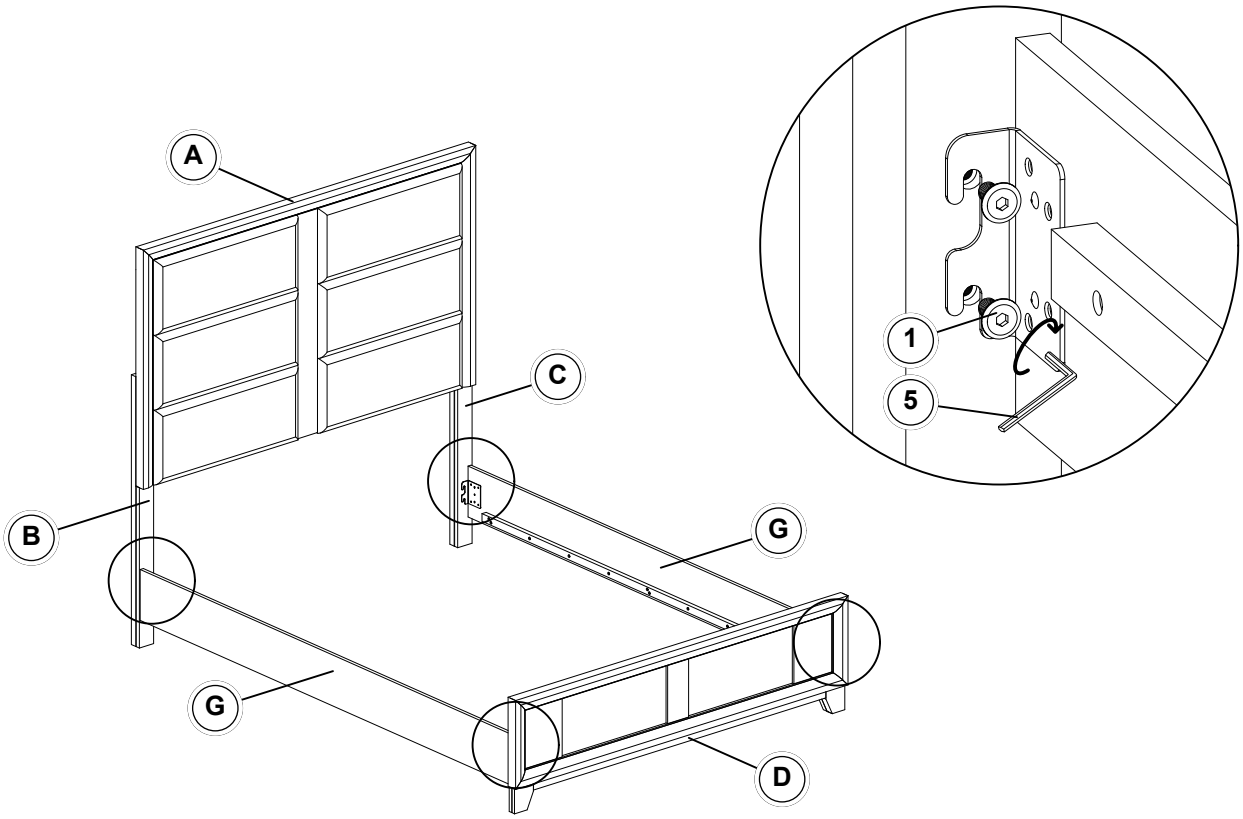


STEP 4

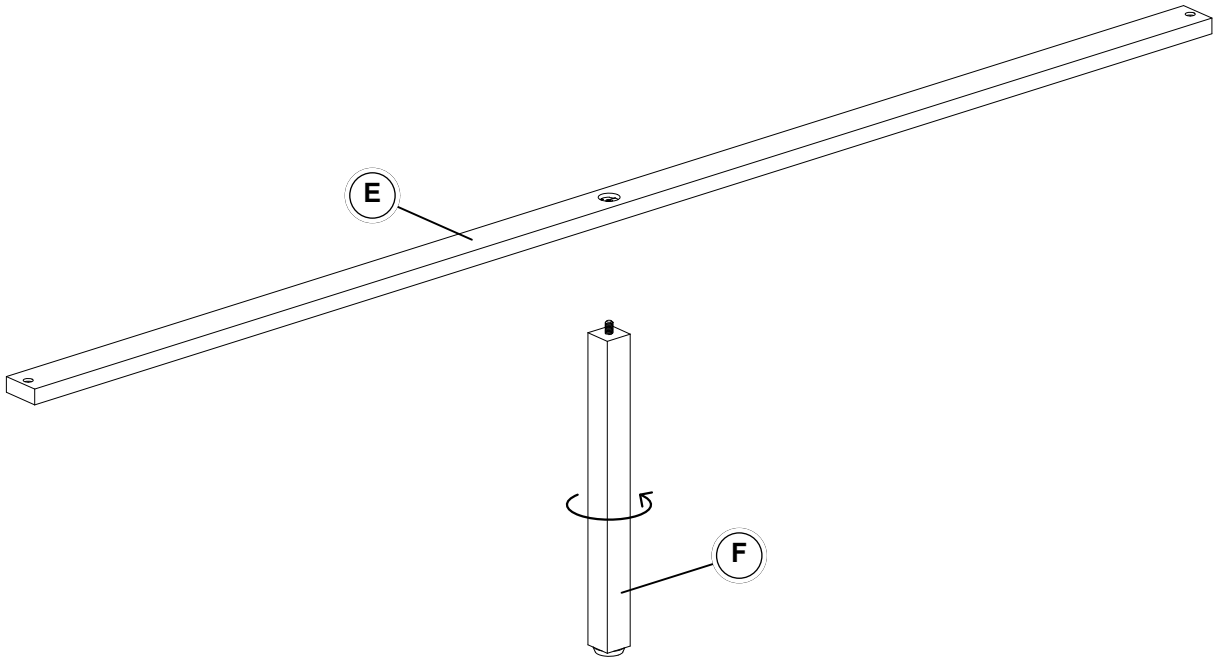

ITEM: 225321Q (B1&B2)


ASSEMBLY INSTRUCTIONS

STEP 5

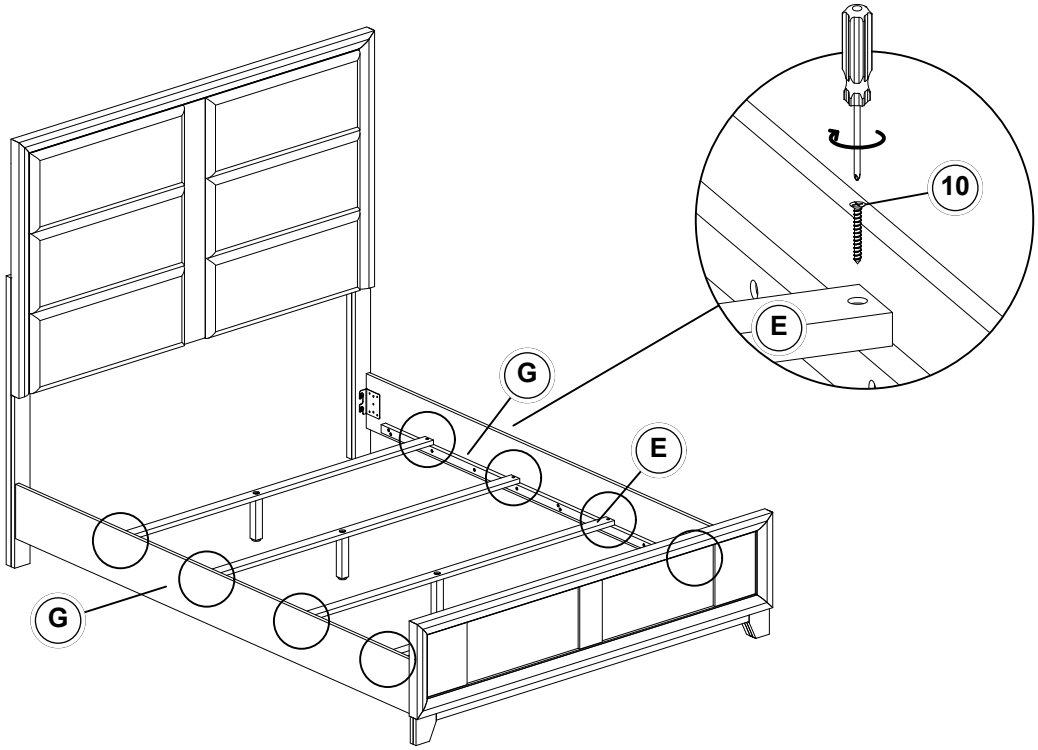


STEP 6

COMPLETE

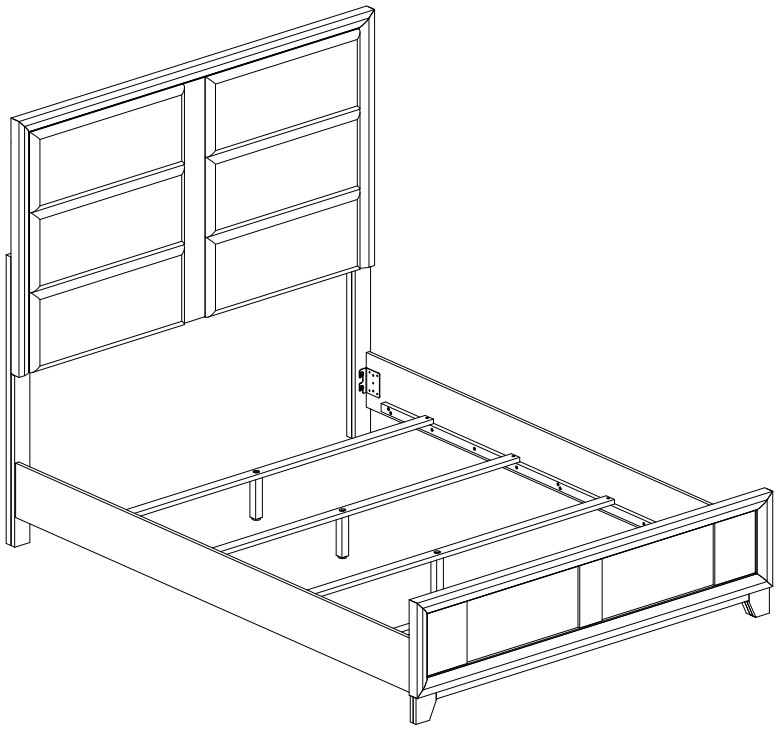

ITEM: 225321Q (B1&B2)

Inner Size : 60.75"W X 80.75"D

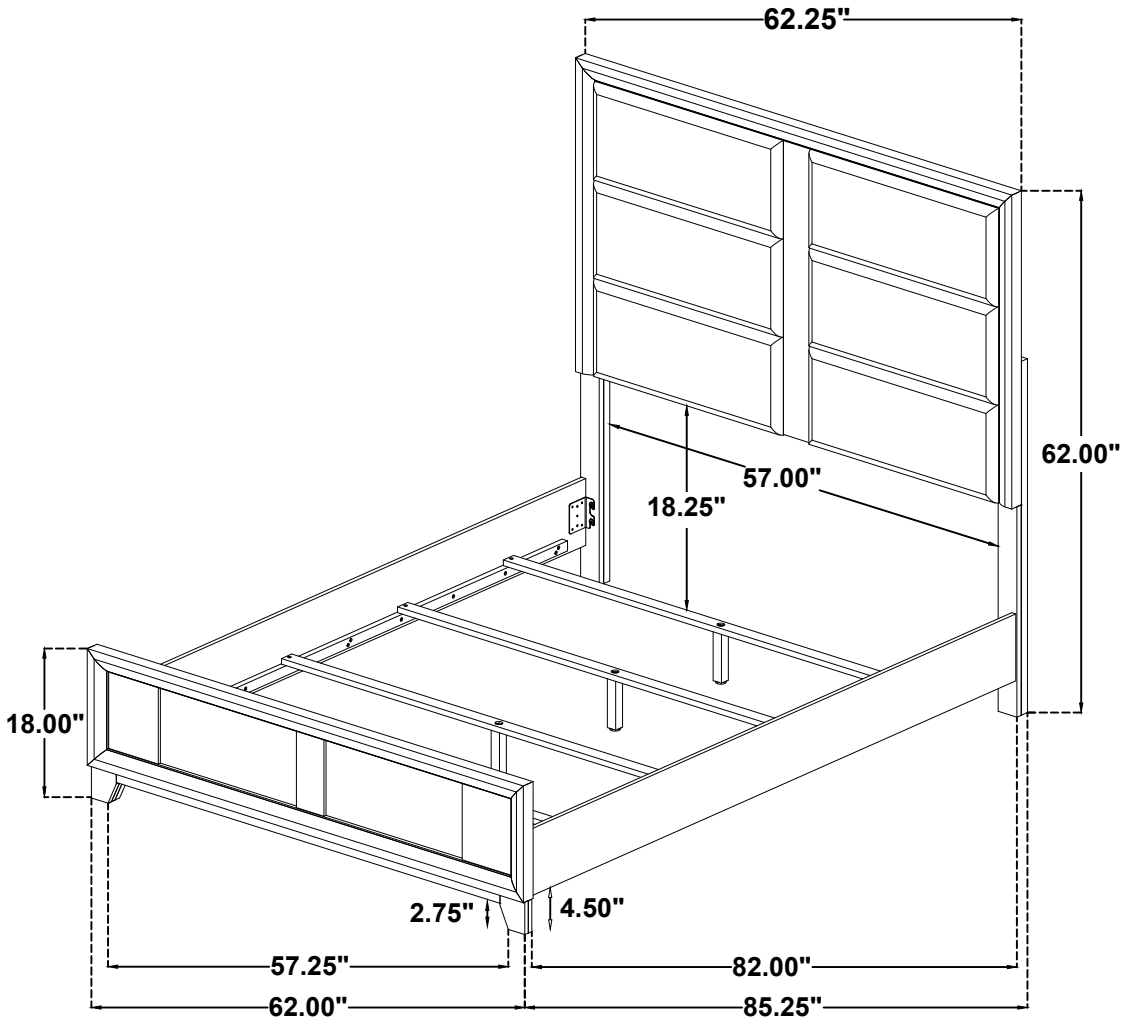

Note : Dimension tolerance ±5%