

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*


**203502**  
***Nightstand***

ITEM: **203502**

## ASSEMBLY INSTRUCTIONS




### REMOVAL OF PROTECTIVE FILM

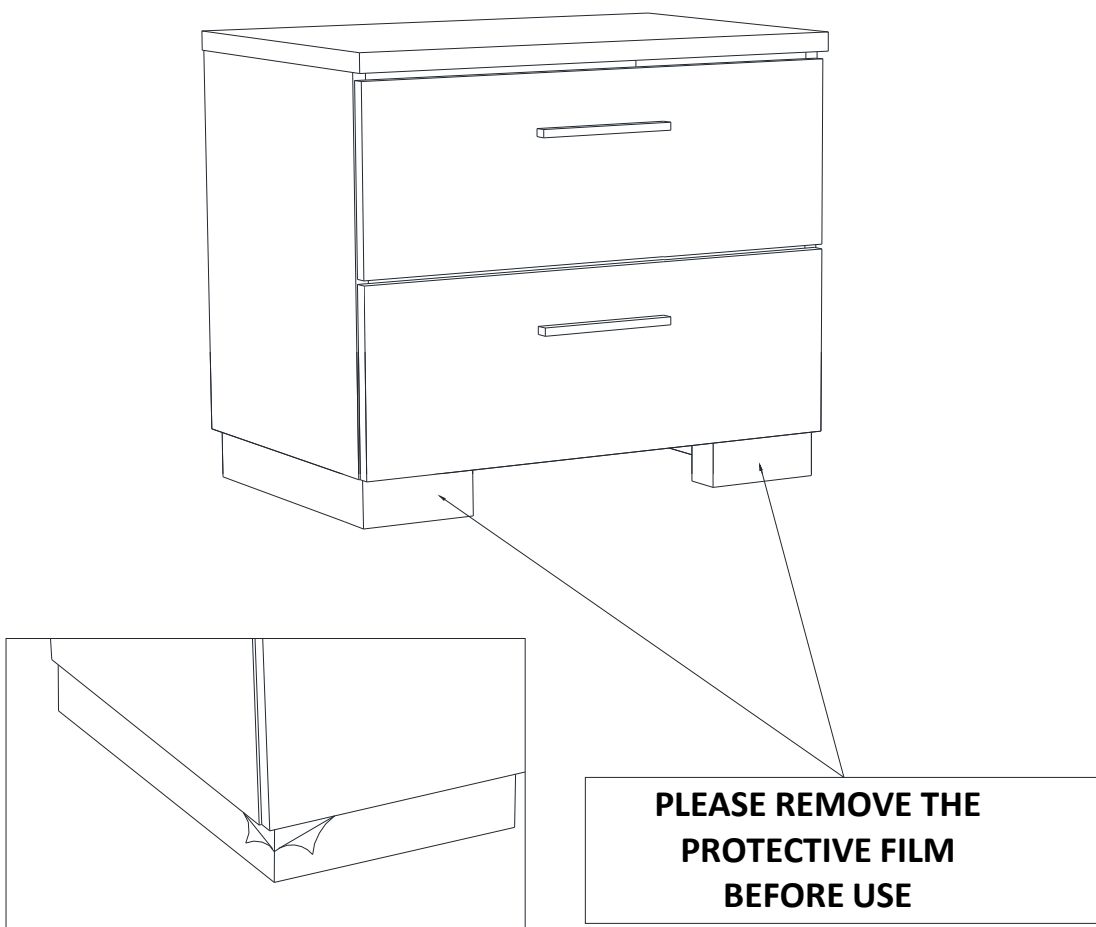

ITEM: **203502**



**Inner Size of Drawer : 20.00"W x 12.50"D x 5.00"H x 0.25"T**

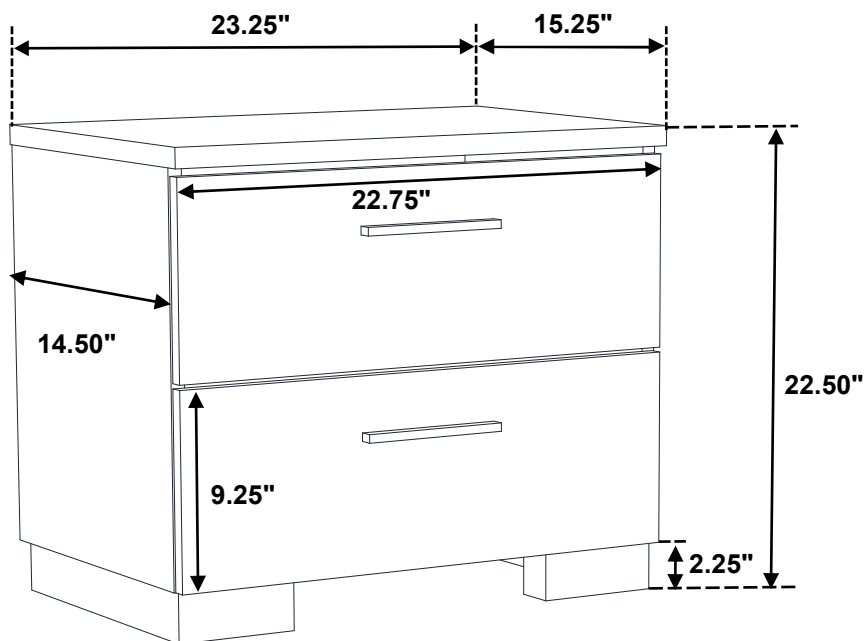

**Note : Dimension tolerance  $\pm$  5%**



## *ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**203503**  
***Dresser***

REVISION 0 : 05/16/2014  
REVISION 1 : 05/27/2014  
REVISION 2 : 07/26/2019

**PAGE 1 OF 2**


COASTERFURNITURE.COM

ITEM: **203503**

## ASSEMBLY INSTRUCTIONS



### REMOVAL OF PROTECTIVE FILM

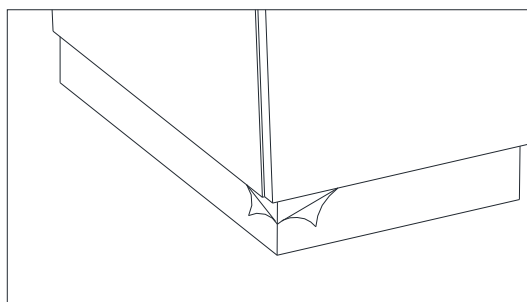


**PLEASE REMOVE THE  
PROTECTIVE FILM  
BEFORE USE**



ITEM: **203503**




**Inner Size of Drawer : 28.75"W x 12.50"D x 5.00"H x 0.25"T**

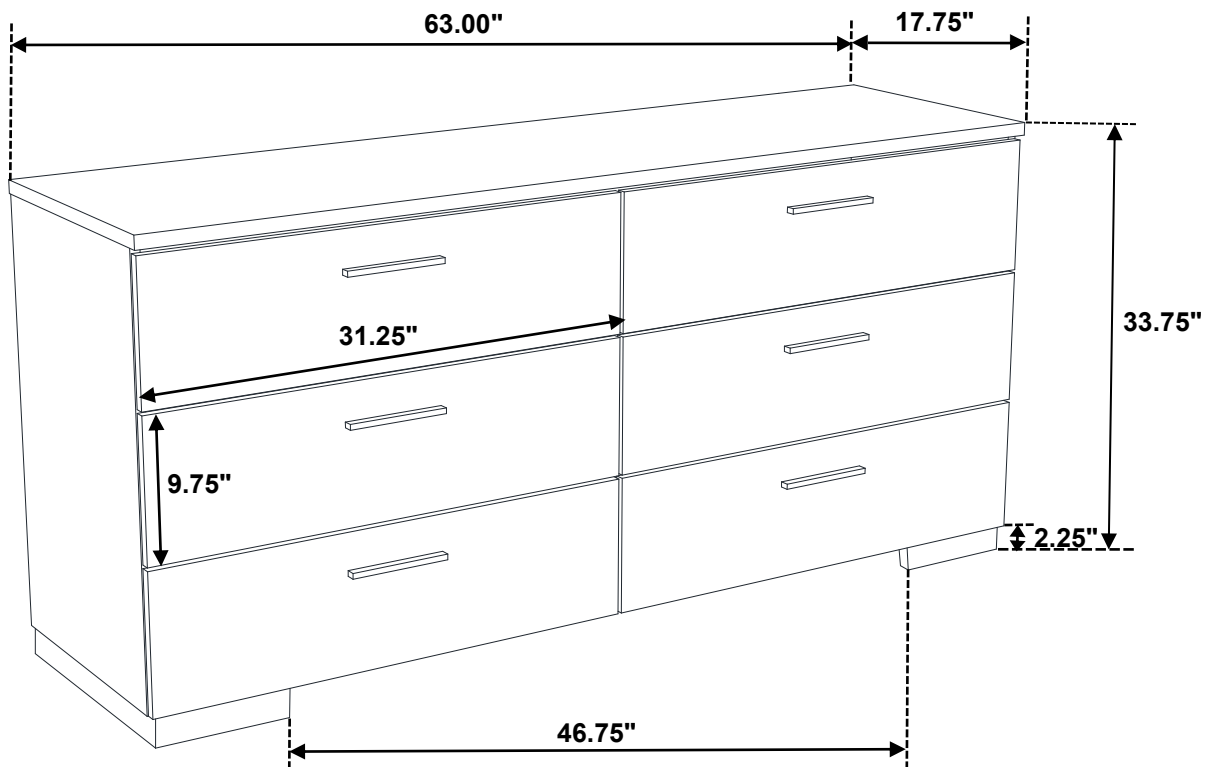

**Note : Dimension tolerance  $\pm$  5%**

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

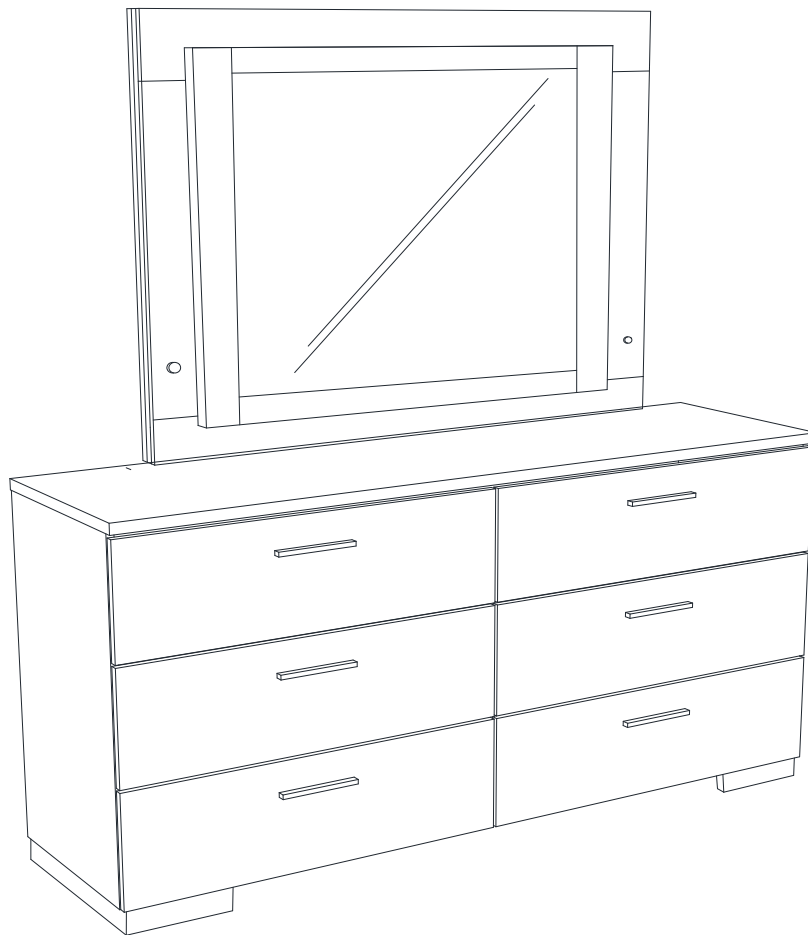

*Fine Furniture for every stage of life*

**203504LED**  
**LED Mirror**

ITEM: **203504LED**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME


10 MINUTES

## PARTS IDENTIFICATION

A

MIRROR

1PC

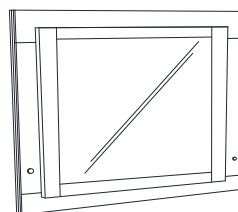

B

DRESSER  
FROM BOX ITEM # 203503


1PC



C

MIRROR SUPPORT  
(PACK WITH DRESSER)

2PCS



D

ADAPTER PLUG

1PC



## HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW  
(M4 x 32mm - RBW)

10PCS



### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: **203504LED**




## ASSEMBLY INSTRUCTIONS

### STEP 1

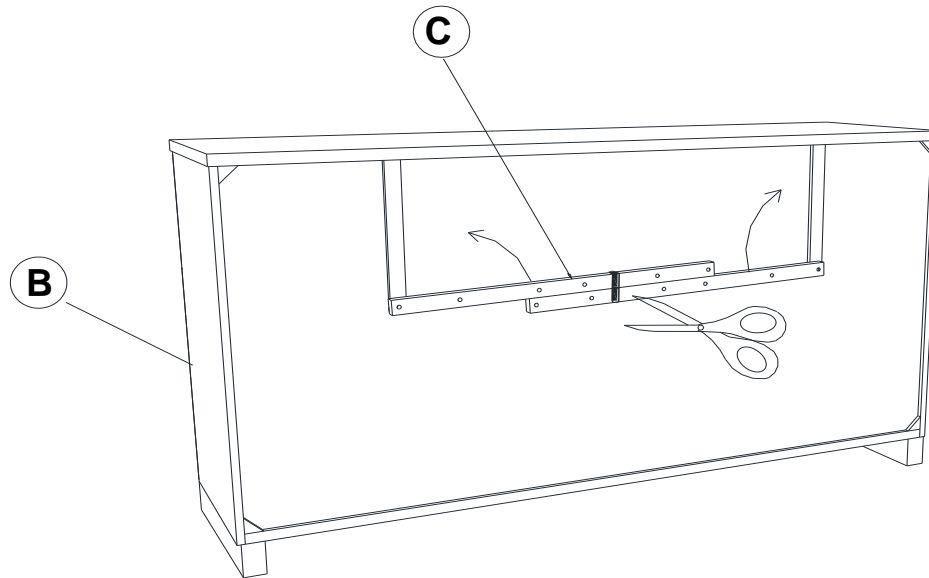

### STEP 2

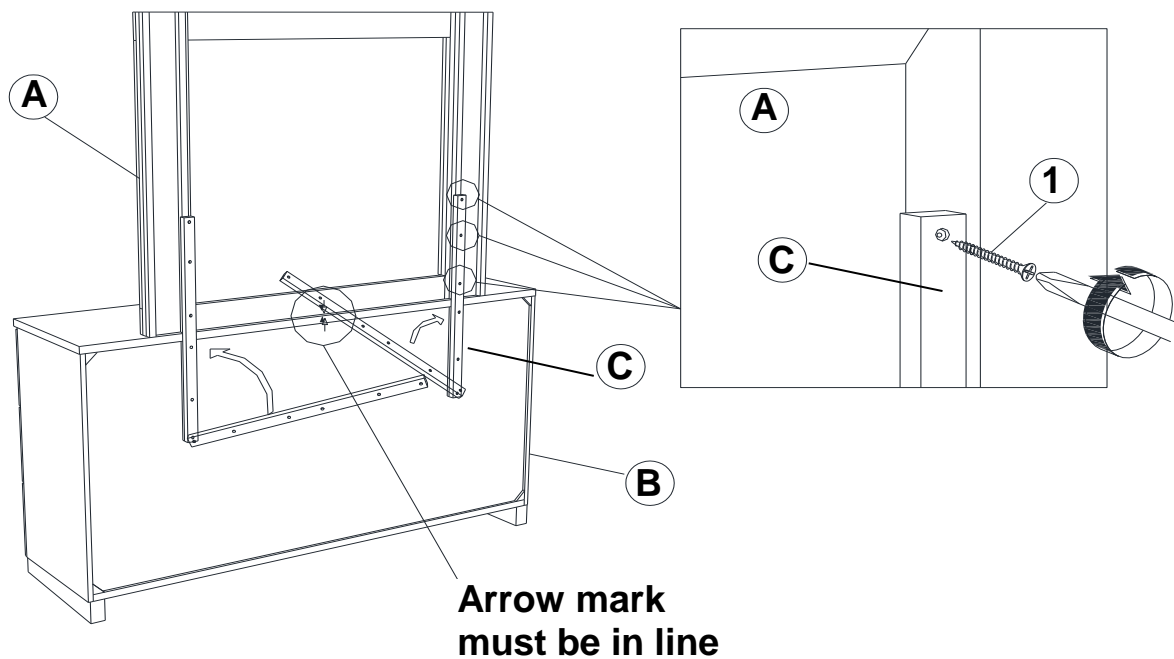


**\*\*BACK VIEW**

ITEM: **203504LED**



## ASSEMBLY INSTRUCTIONS


### STEP 3

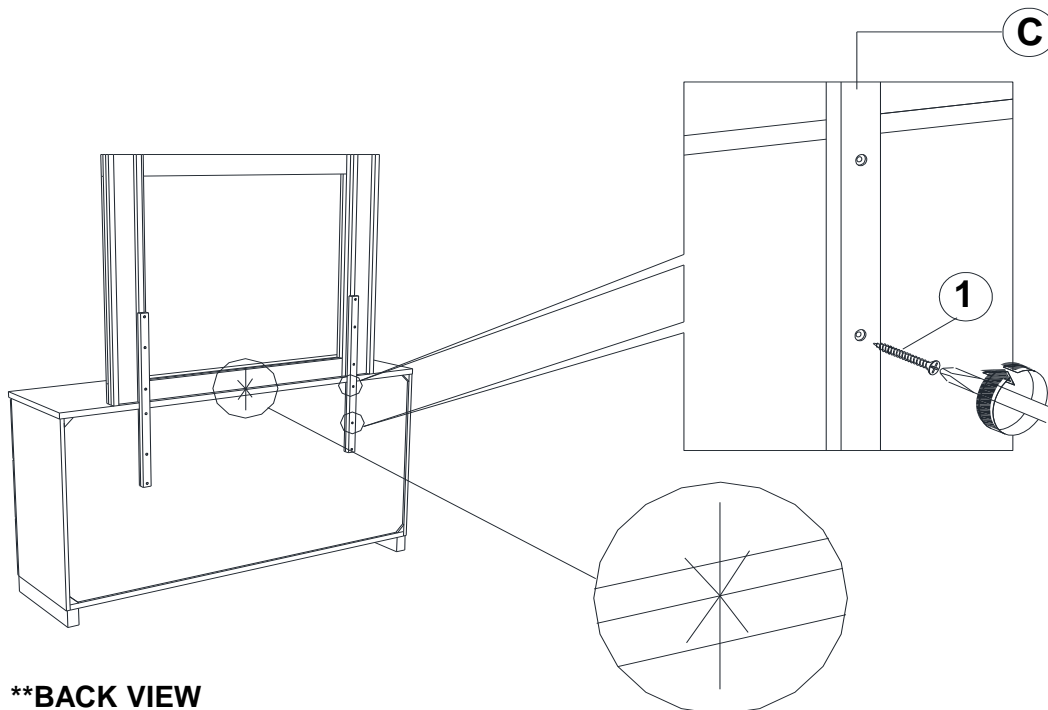

**\*\*BACK VIEW**

**Arrow Marking Must Be Aligned**


### STEP 4 **COMPLETE**

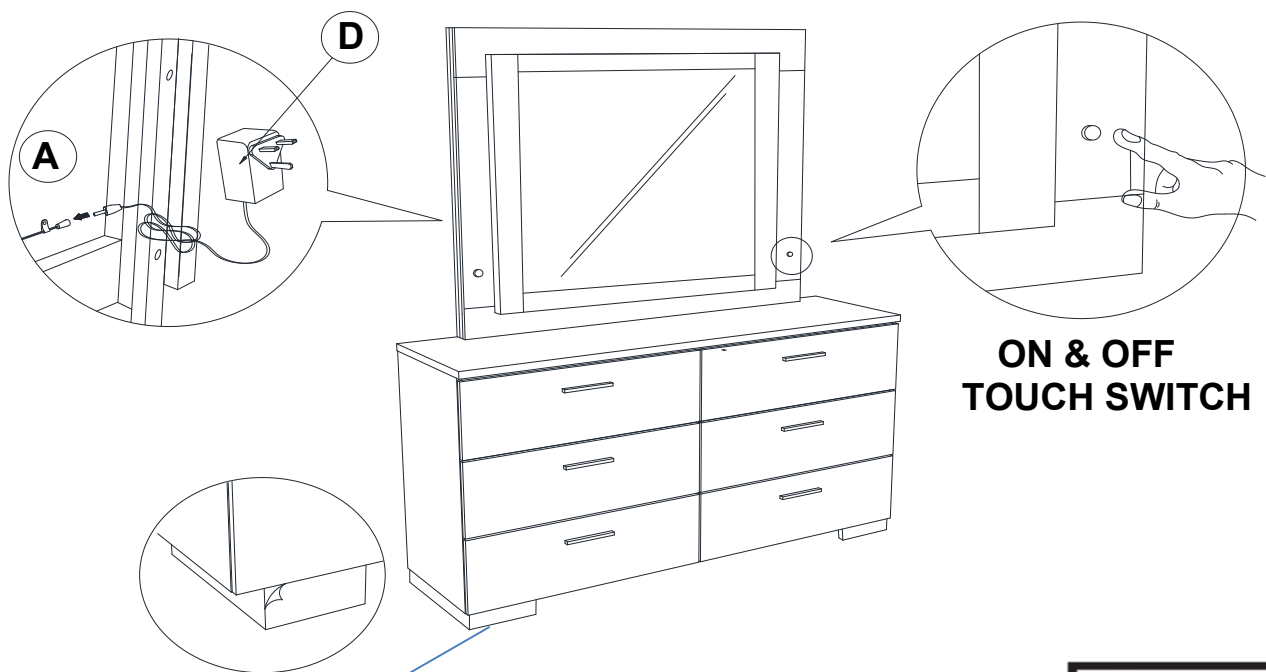

**PLEASE REMOVE THE  
PROTECTIVE FILM BEFORE USE**



ITEM: **203504LED**

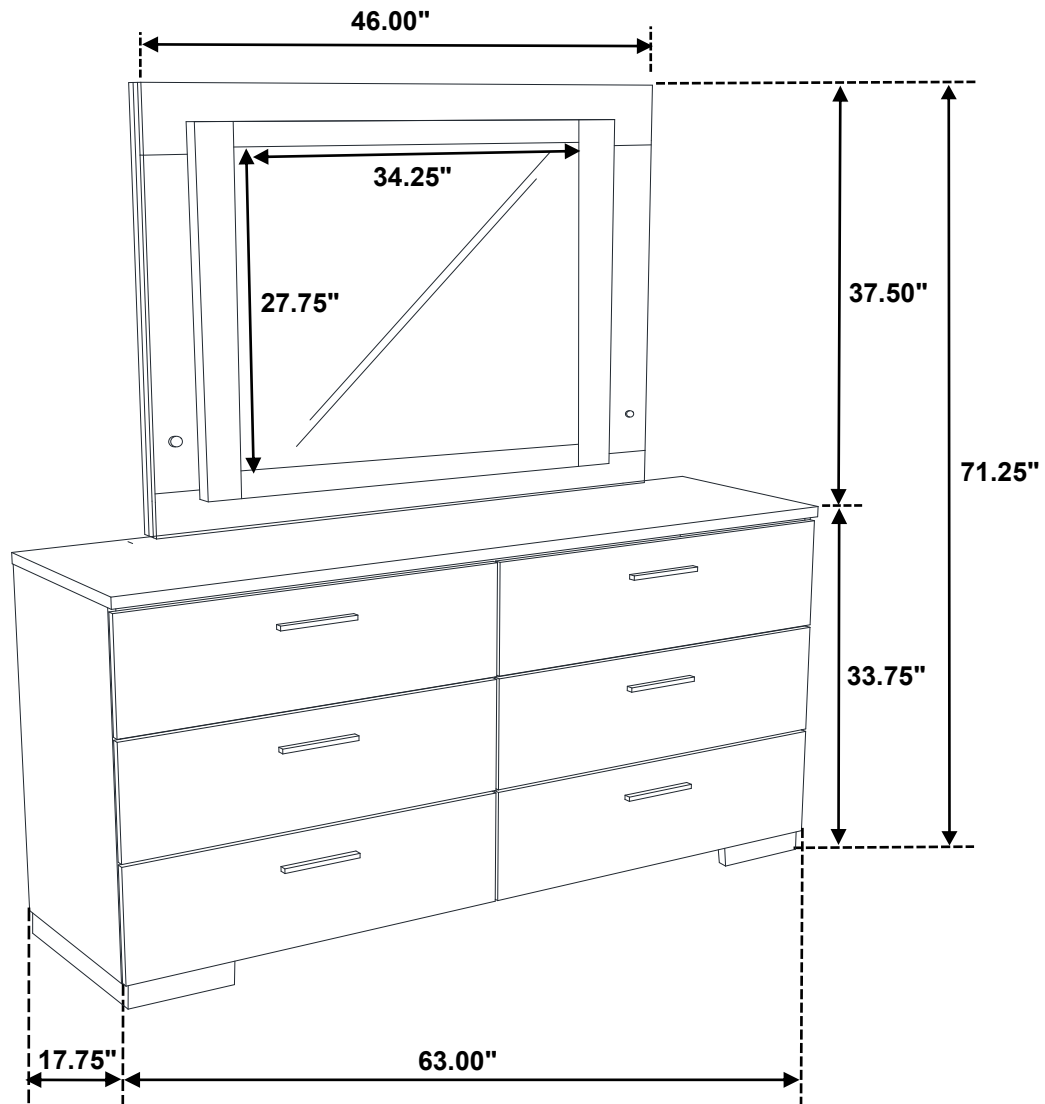

**Note : Dimension tolerance  $\pm 5\%$**

# *ASSEMBLY INSTRUCTIONS*

## *COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*


**203505**  
***Chest***

ITEM: **203505**

## ASSEMBLY INSTRUCTIONS



### REMOVAL OF PROTECTIVE FILM

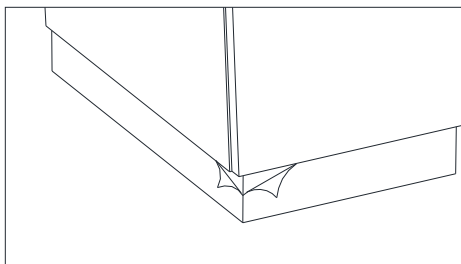


**PLEASE REMOVE THE  
PROTECTIVE FILM  
BEFORE USE**



ITEM:203505




Inner Size of Drawer : 32.00"W x 12.50"D x 5.00"H x 0.25"T

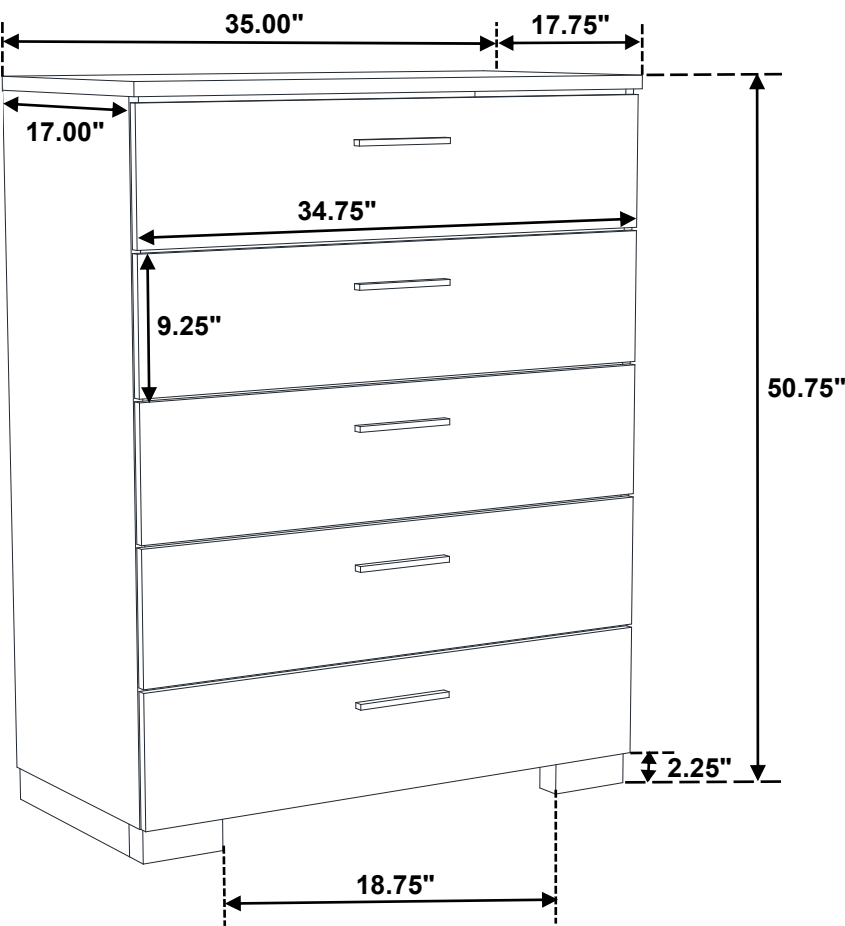

Note : Dimension tolerance  $\pm 5\%$

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

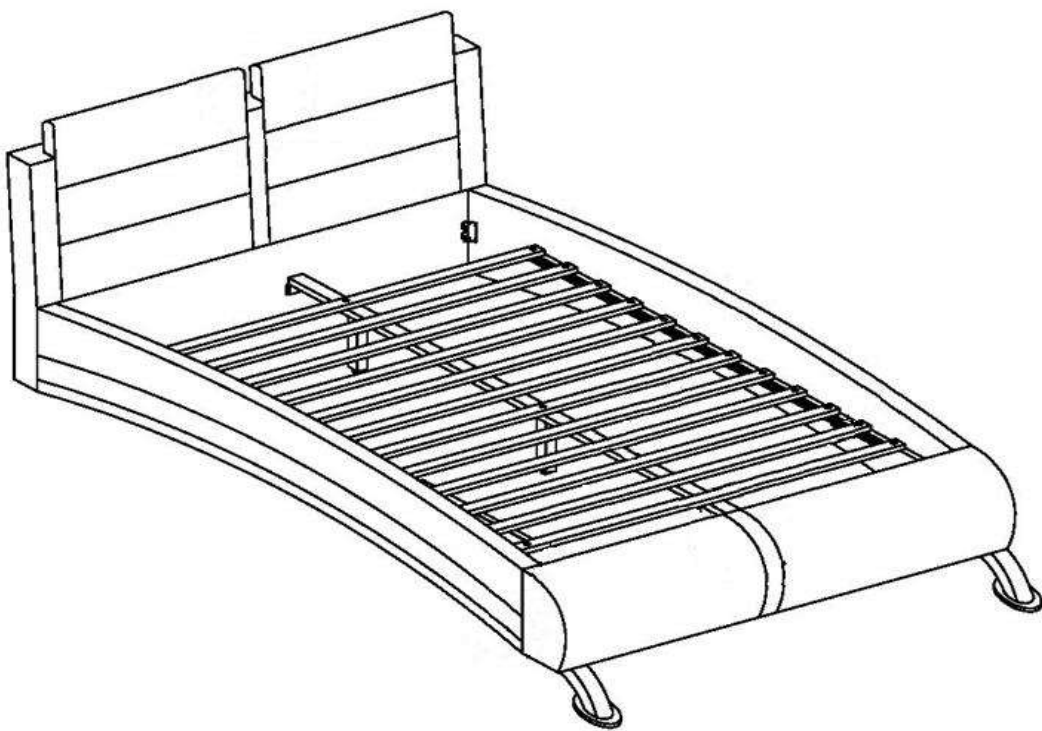

*Fine Furniture for every stage of life*

### **300345Q (B1-B3)** ***Queen Bed***

REVISION 0 : 08/13/2014  
REVISION 1 : 04/06/2015  
REVISION 2 : 05/14/2015  
REVISION 3 : 07/25/2019

# ITEM: 300345Q (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

## PARTS IDENTIFICATION

### B1 ( BOX 1 )


AN HEADBOARD

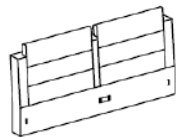

1PC

BN


ROLL SLAT  
(14PCS)



1SET

### B2 ( BOX 2 )

CN FOOTBOARD PANEL



1PC

### B3 ( BOX 3 )

DN LEFT BED RAIL



1PC

IN

CENTER RAIL



1PC


EN RIGHT BED RAIL



1PC

AN

300345Q (B1)  
FROM BOX 1  
HEADBOARD

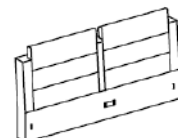


1PC

FN FOOTBOARD LEG



2PCS

300345Q (B2&B3)  
FROM BOX 2 & BOX 3  
FOOTBOARD  
COMPLETE

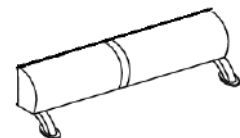

1PC

GN BED SLAT SUPPORT  
WITH LEVELER



3PCS

HN FOOTBOARD  
SUPPORT WITH  
LEVELER



1PC

## HARDWARE IDENTIFICATION

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 300345Q (B3)

1 SHORT FLAT HEAD  
SCREW  
(4 x 25mm - RBW)




12PCS

2 LONG FLAT HEAD  
SCREW  
(4 x 32mm - RBW)




31PCS

3 BOLT  
(6x 40mm - RBW)




3PCS

4 SMALL ALLEN  
WRENCH  
(4 X 65MM - BLK)



1PC

5 BIG ALLEN WRENCH  
(5 X 70MM - BLK)



1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




**ASSEMBLY INSTRUCTIONS**


**STEP 1**

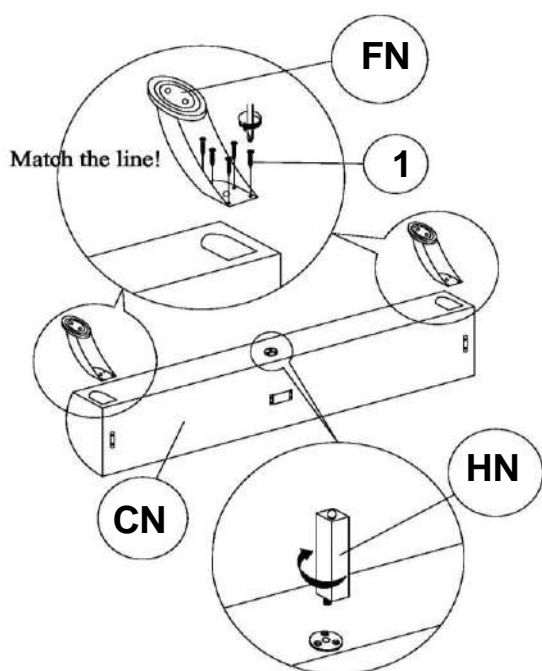


**STEP 2**

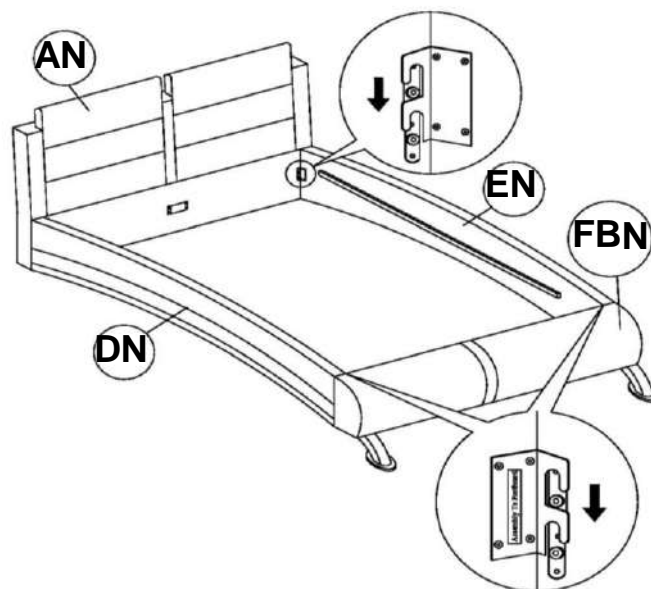

**STEP 3**

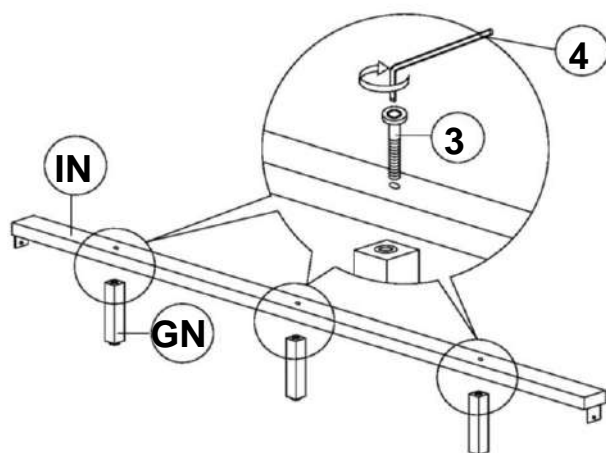

**STEP 4**

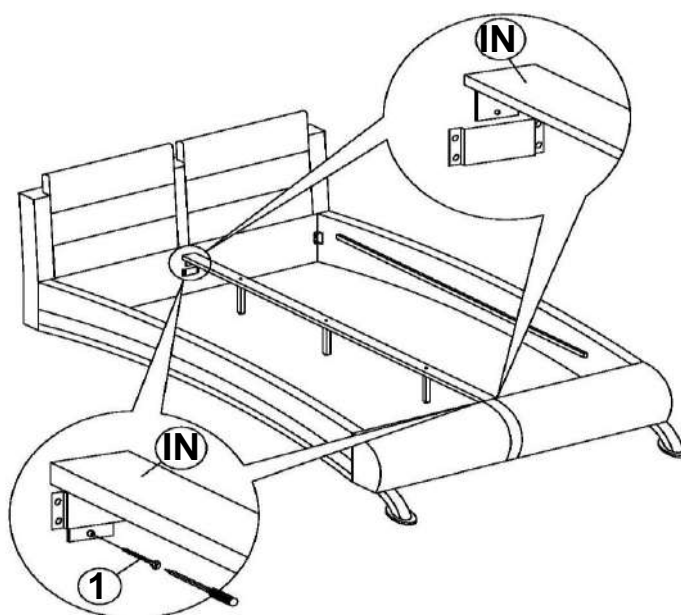


ITEM: **300345Q (B1-B3)**




## ASSEMBLY INSTRUCTIONS

### STEP 5

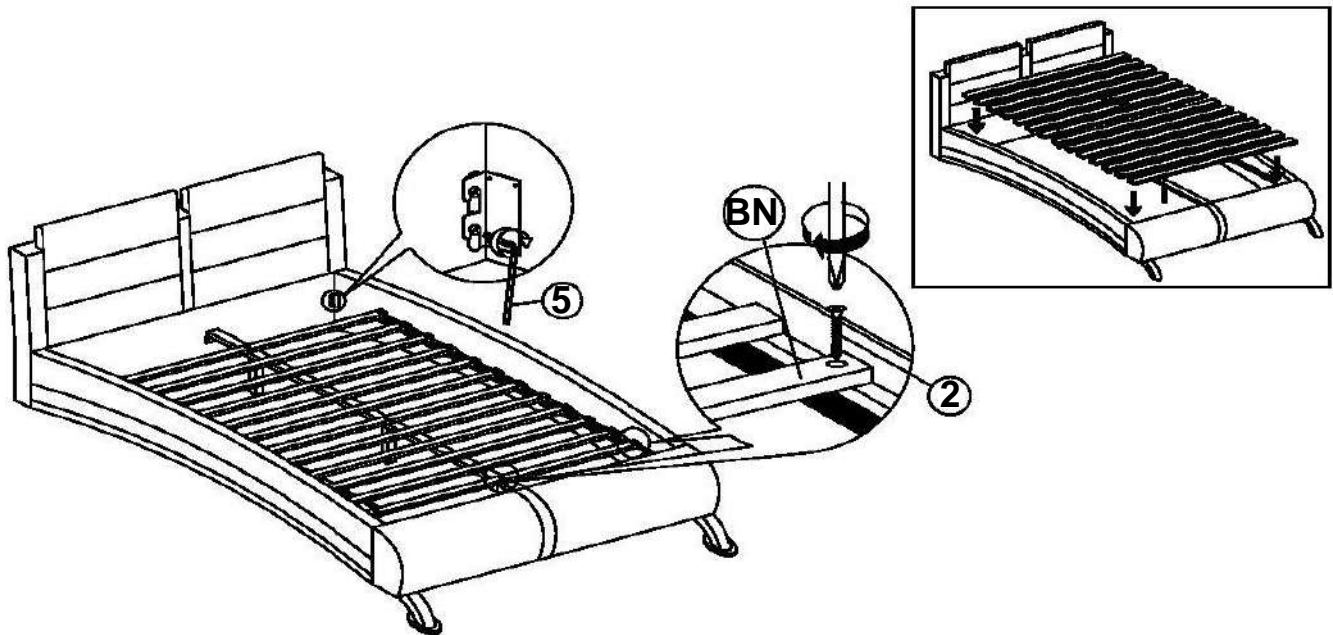

### STEP 6


### COMPLETE

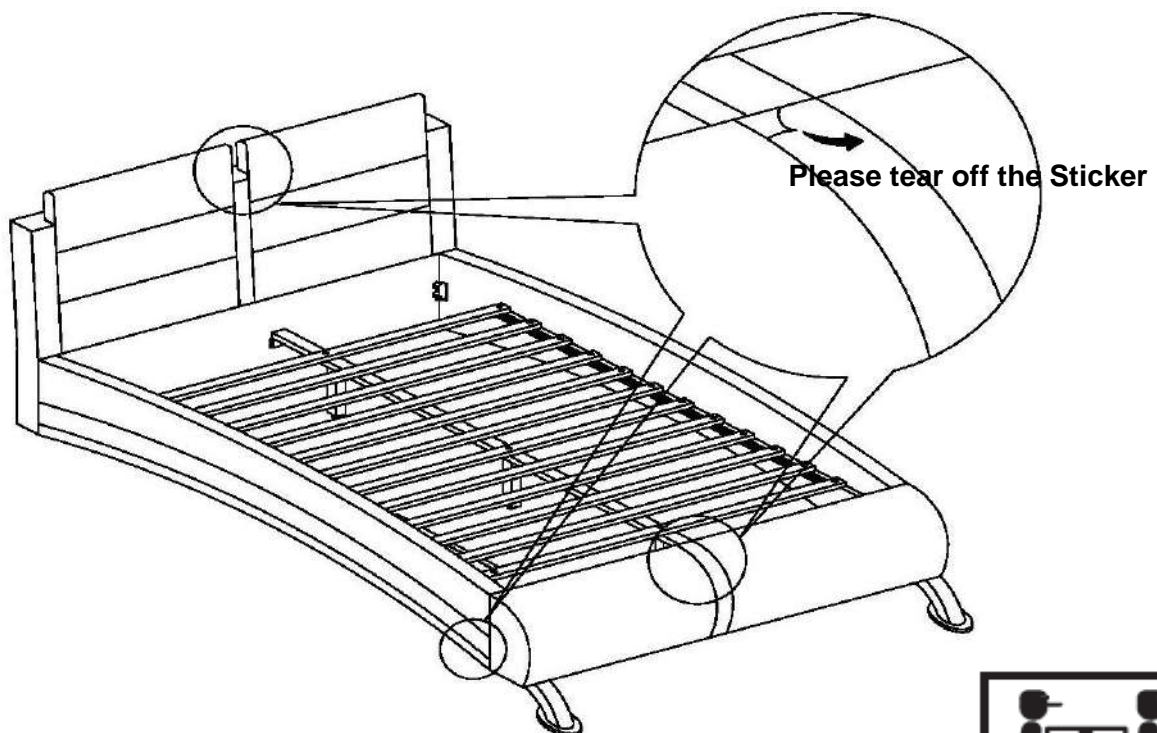

ITEM: **300345Q (B1-B3)**



Inner Size: 60.50"W X 81.00"D

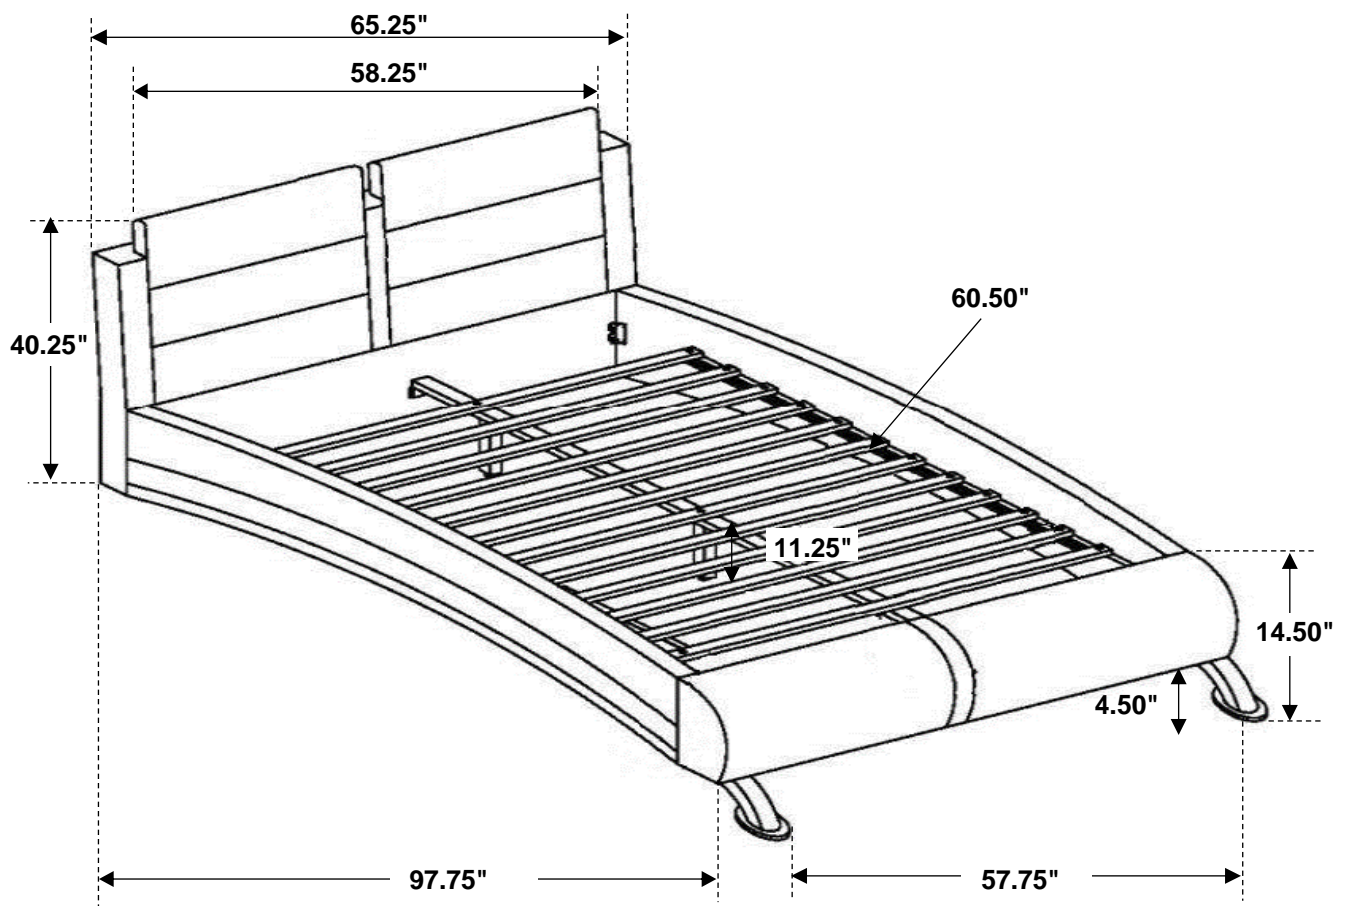

Note: Dimension tolerance  $\pm 5\%$