


# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE

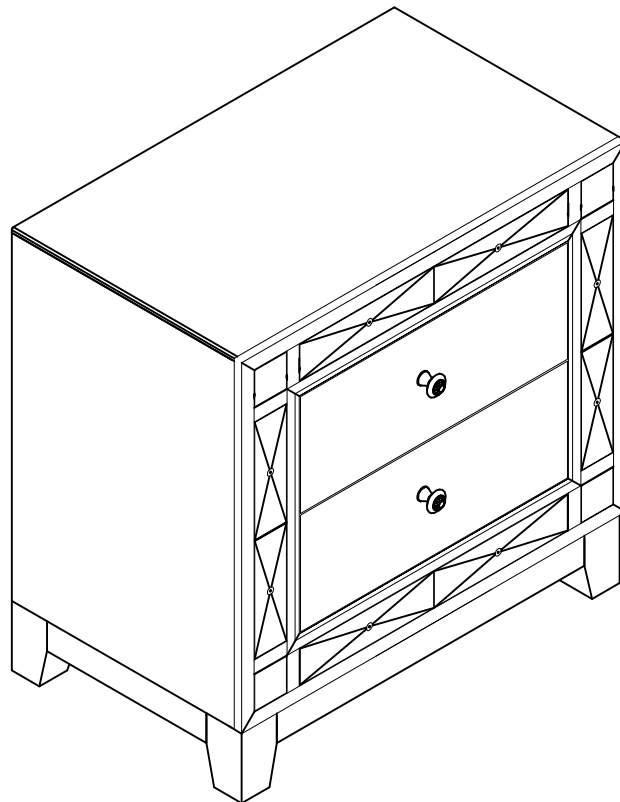

*Fine Furniture for every stage of life*

**204922**  
***Nightstand***

# ITEM:204922

## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

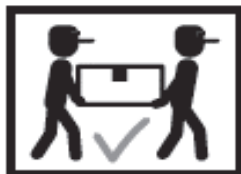


ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

AN

NIGHTSTAND

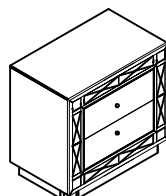

1PC

BN

LEG



4PCS

## HARDWARE IDENTIFICATION

1

**BOLT**  
(1/4" x 50mm- RBW)



8PCS

2

**LOCK WASHER**  
(1/4" - RBW)



8PCS

3

**FLAT WASHER**  
(1/4" - RBW)



8PCS

4

**ALLEN WRENCH**  
(4MM - RBW)



1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item .


ITEM: **204922**

**ASSEMBLY INSTRUCTIONS**


**STEP 1**

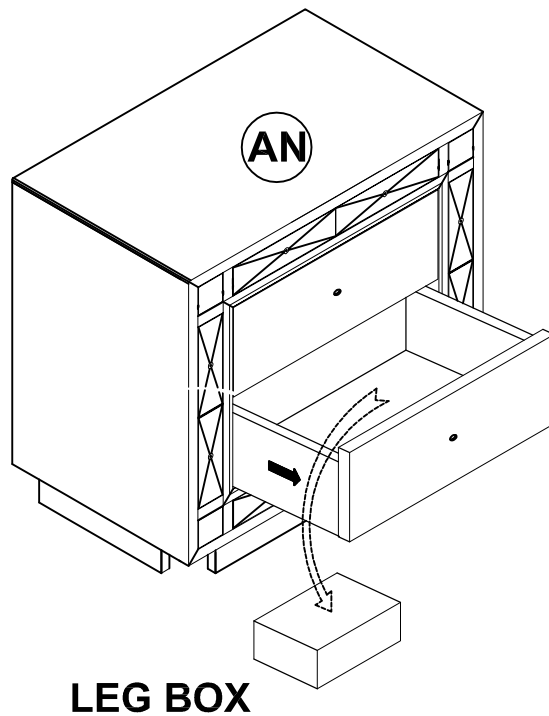

**STEP 2**

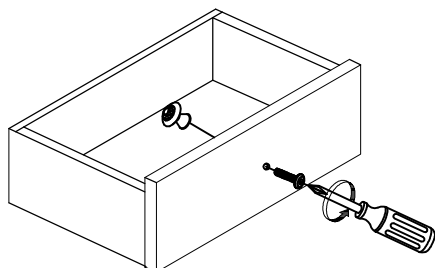

**STEP 3**

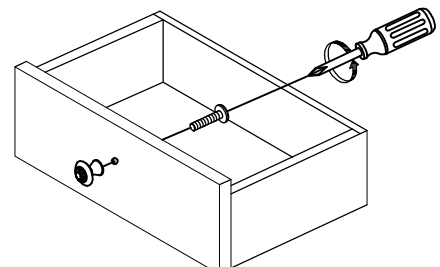


ITEM: **204922**

## ASSEMBLY INSTRUCTIONS


### STEP 4

**COASTER**  
FINE FURNITURE

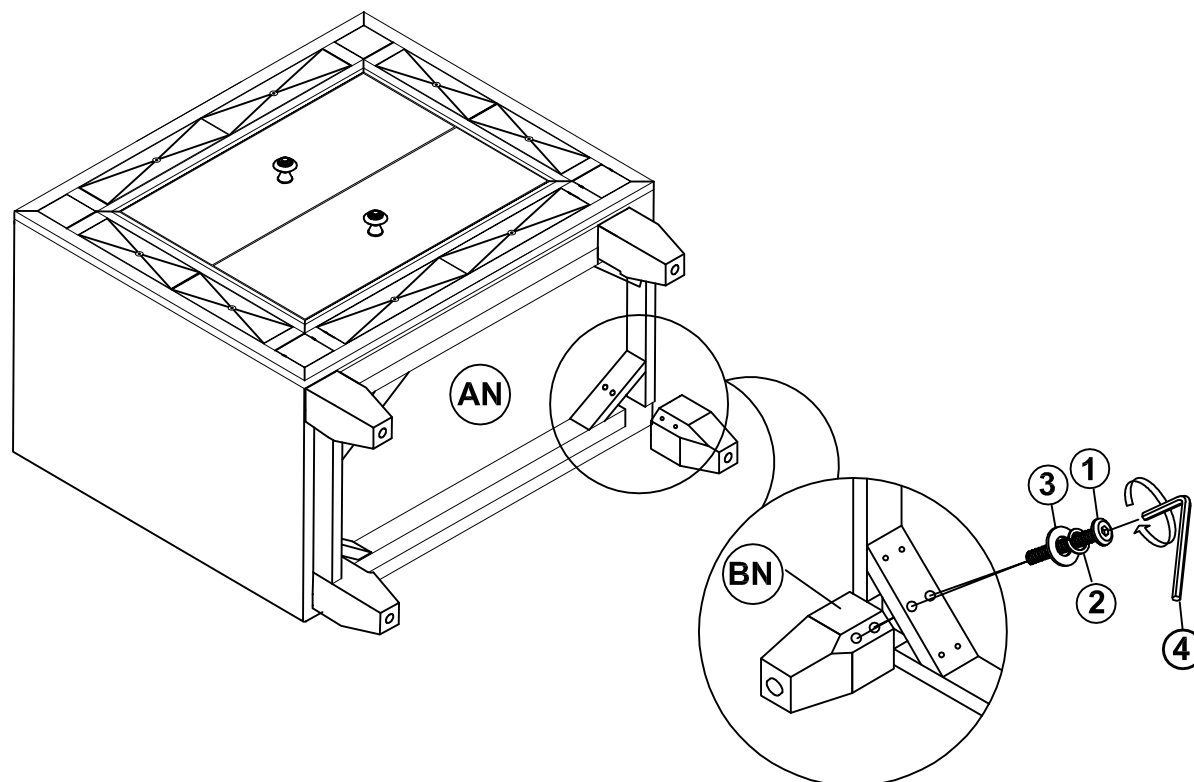

### STEP 5


### COMPLETE

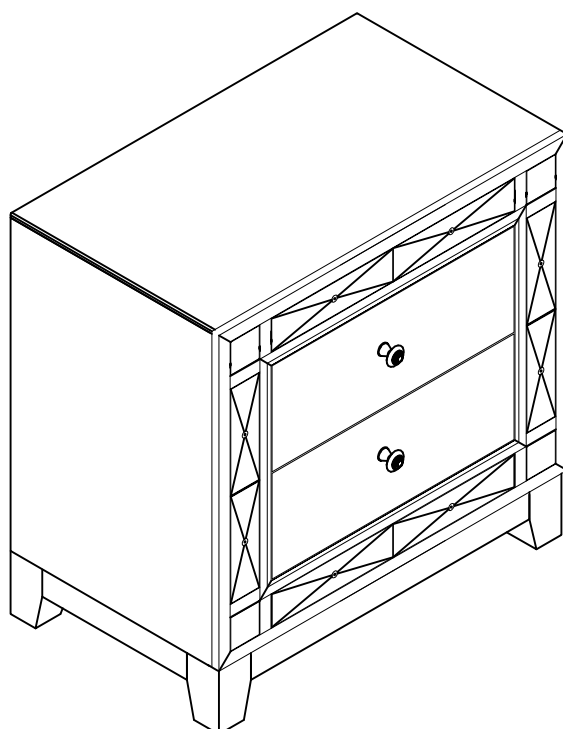

ITEM: **204922**




Inner Size of Drawer : 14.50"W X 13.50"D X 3.50"H X 0.50"T

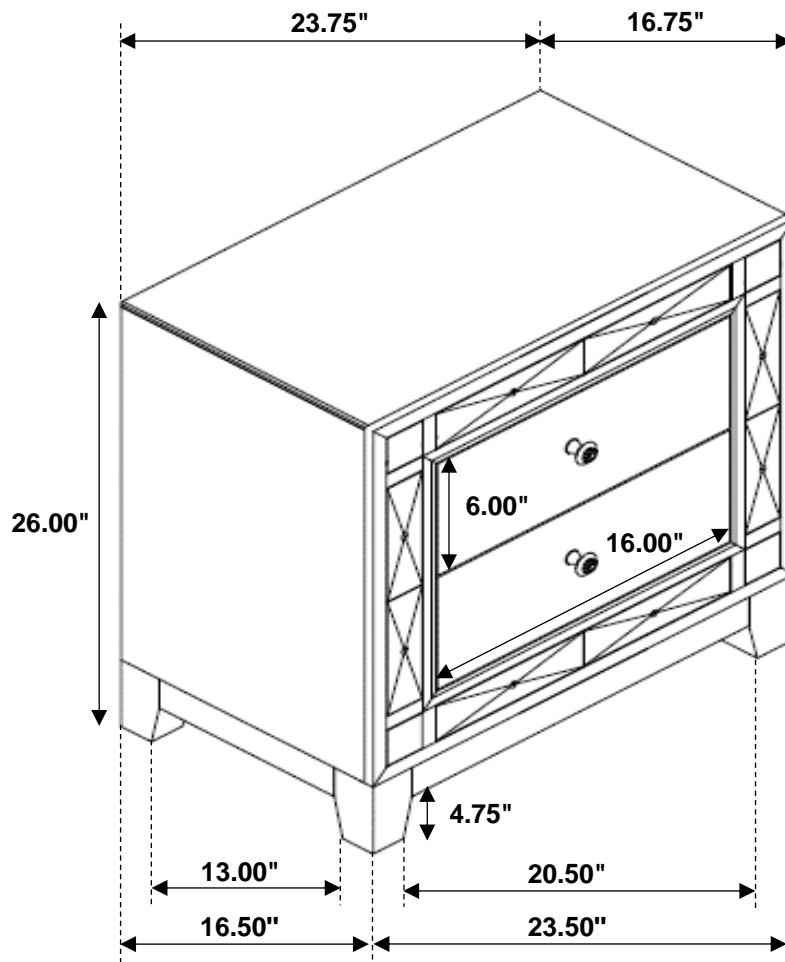

Note: Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE

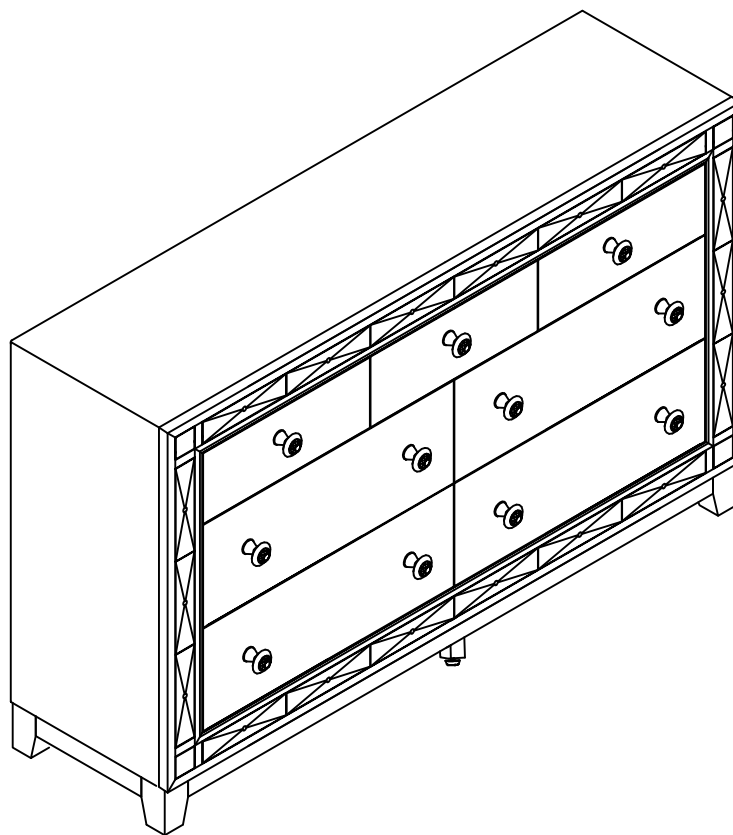

*Fine Furniture for every stage of life*

**204923**  
***Dresser***

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

AN DRESSER

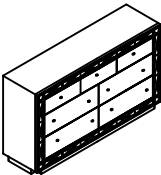

1PC

BN LEG



4PCS

CN CENTER  
SUPPORT  
LEG WITH  
LEVELER



1PC

HARDWARE IDENTIFICATION

1 BOLT  
(1/4" x 50mm- RBW)



8PCS

2 LOCK WASHER  
(1/4" - RBW)



8PCS

3 FLAT WASHER  
(1/4" - RBW)



8PCS

4 ALLEN WRENCH  
(4MM - RBW)




1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item .


ITEM: **204923**  
**ASSEMBLY INSTRUCTIONS**  
**STEP 1**

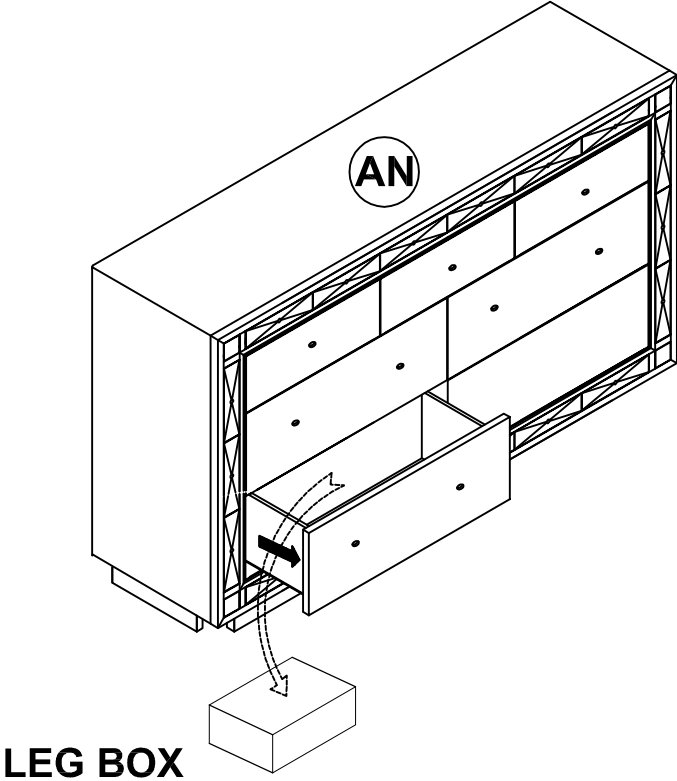

**STEP 2**

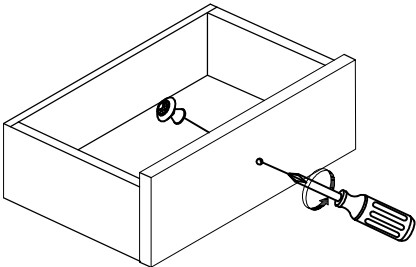

**STEP 3**

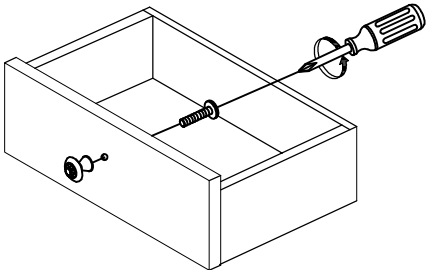





ITEM: **204923**

## ASSEMBLY INSTRUCTIONS

### STEP 4

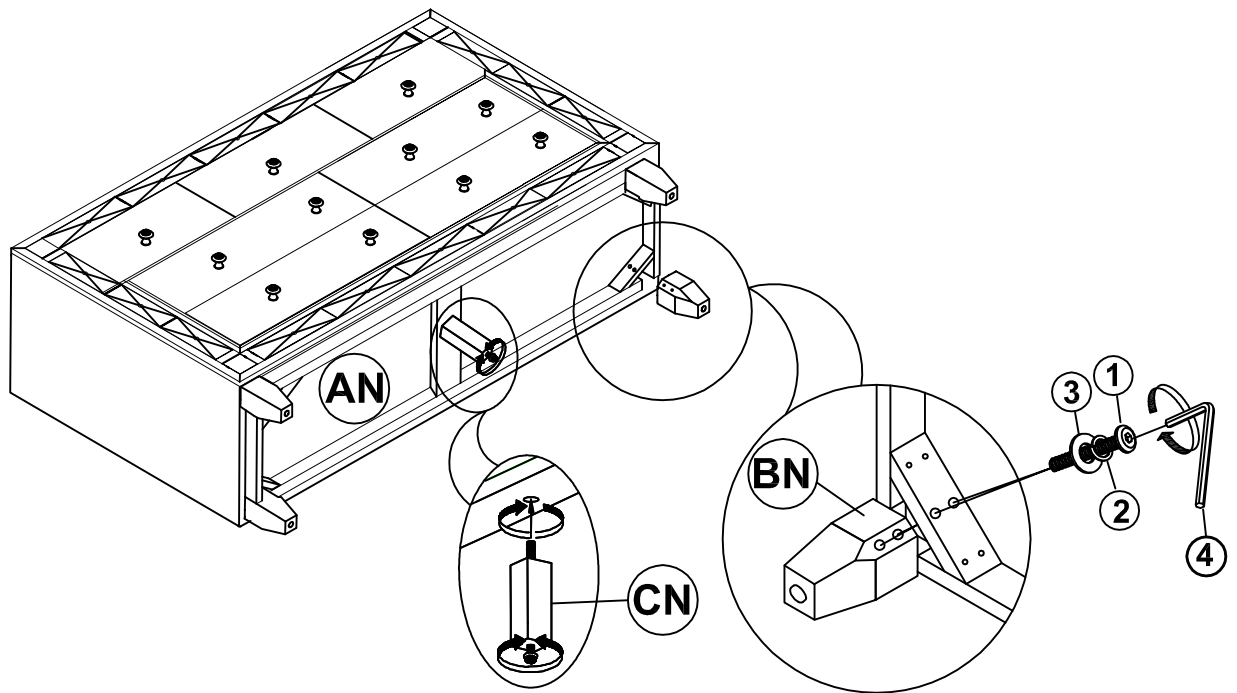

### STEP 5 COMPLETE

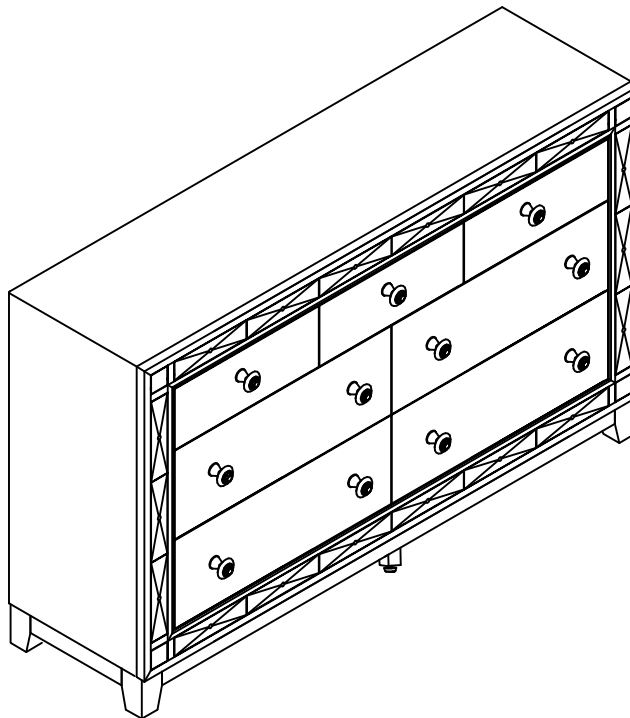

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage .

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

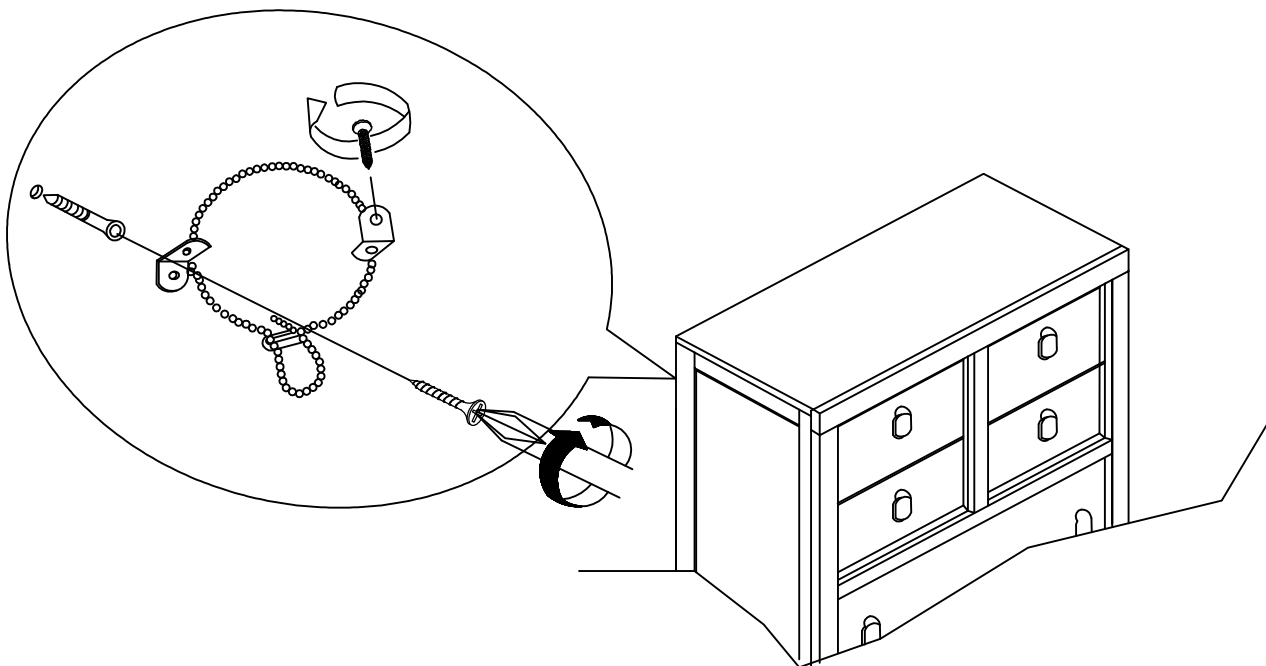


ITEM:204923



Inner Size of Drawer A : 14.75"W X 13.50"D X 3.50"H X 0.50"T


Inner Size of Drawer B : 23.25"W X 13.50"D X 6.50"H X 0.50"T

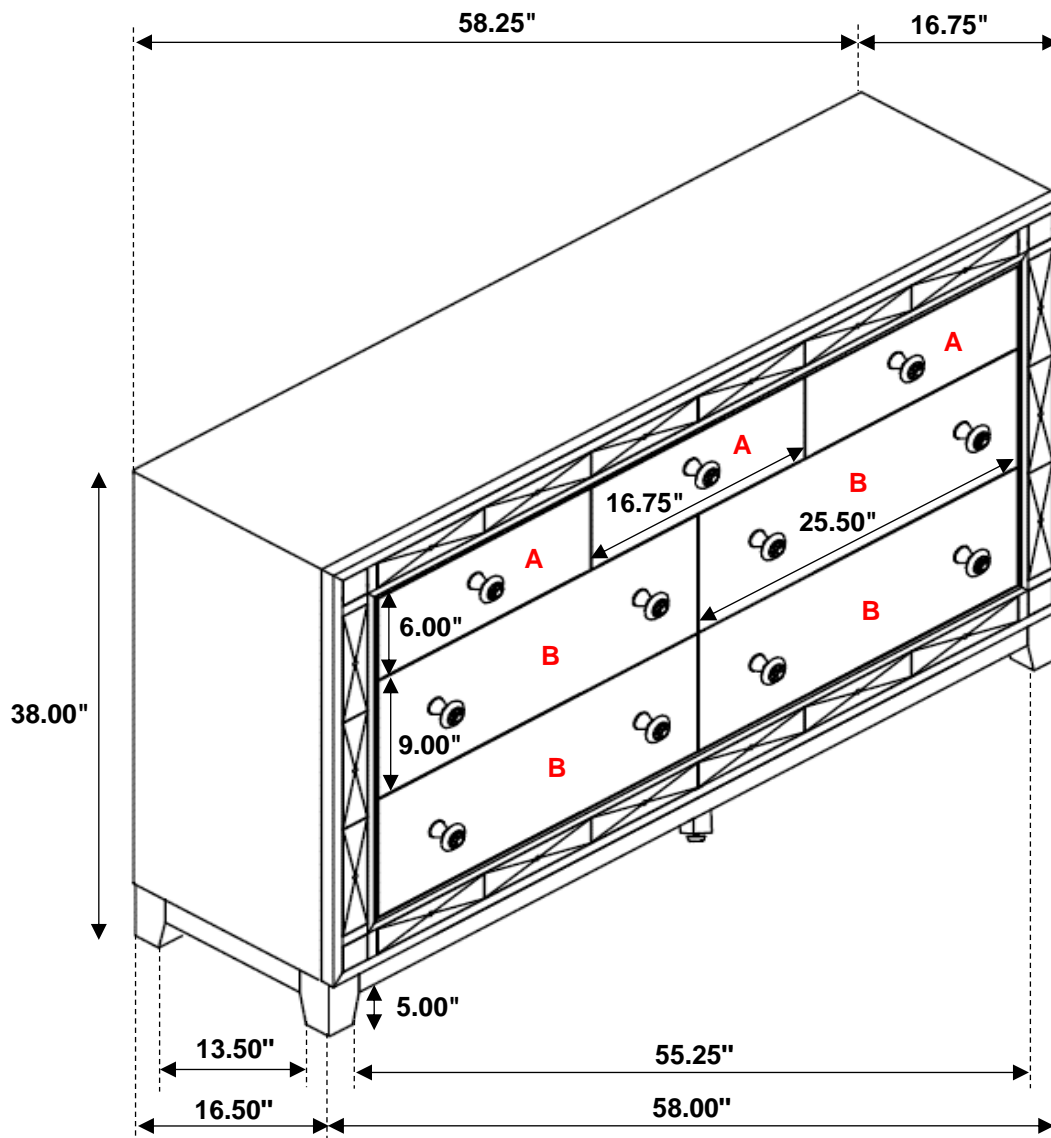

Note: Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE

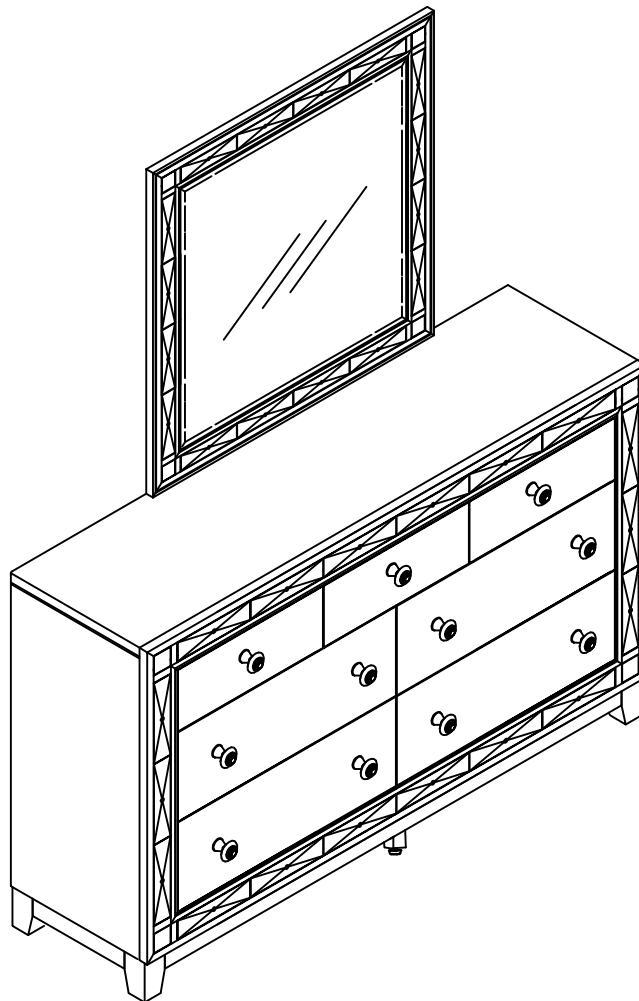

*Fine Furniture for every stage of life*

**204924**  
***Mirror***

# ITEM: 204924

## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



### WARNING!


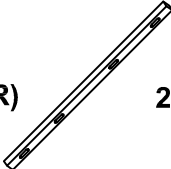
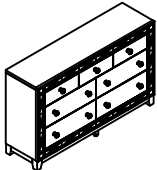
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

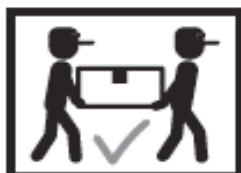





ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

|    |                                     |   |     |  |  |      |
|----|-------------------------------------|---|-----|--|--|------|
| AN | MIRROR                              |   | 1PC | MIRROR SUPPORT<br>BN (PACKED WITH DRESSER) |  | 2PCS |
| CN | DRESSER<br>FROM BOX<br>ITEM# 204923 |  | 1PC |  |  |      |


## HARDWARE IDENTIFICATION

|   |                             |   |      |   |                             |   |      |
|---|-----------------------------|---|------|---|-----------------------------|---|------|
| 1 | BOLT<br>(1/4" x 38mm - RBW) |  | 6PCS | 2 | LOCK WASHER<br>(1/4" - RBW) |  | 6PCS |
| 3 | FLAT WASHER<br>(1/4" - RBW) |  | 6PCS | 4 | ALLEN WRENCH<br>(4MM - RBW) |  | 1PC  |


ITEM: **204924**

**ASSEMBLY INSTRUCTIONS**


**STEP 1**

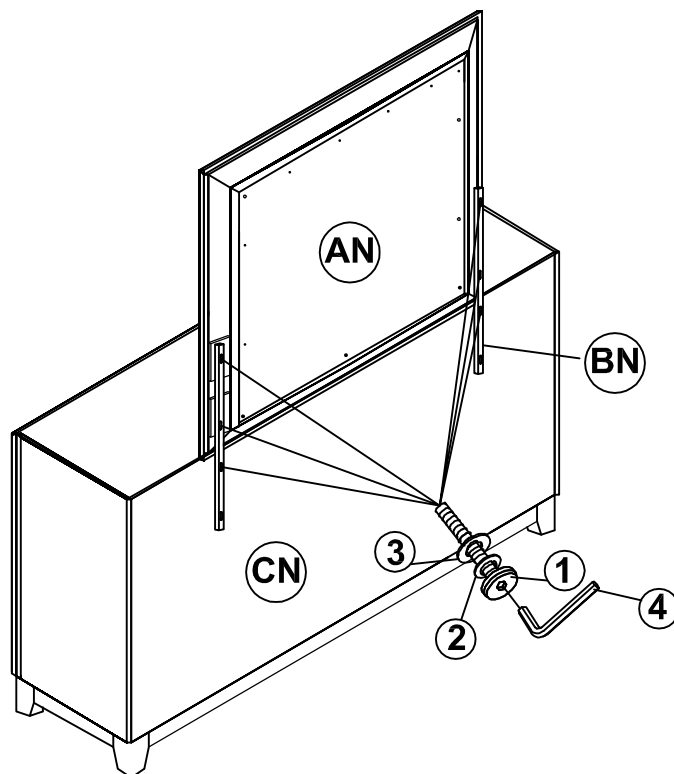

**STEP 2**  
**COMPLETE**

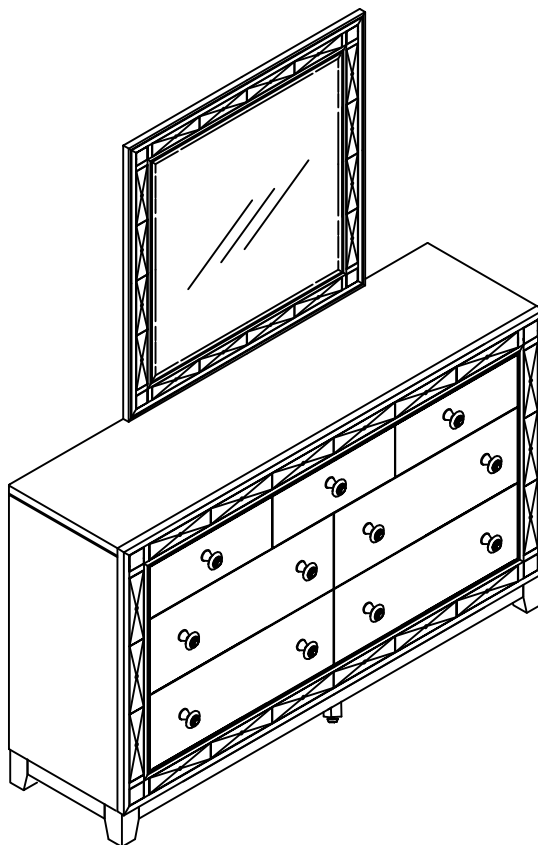


ITEM: **204924**

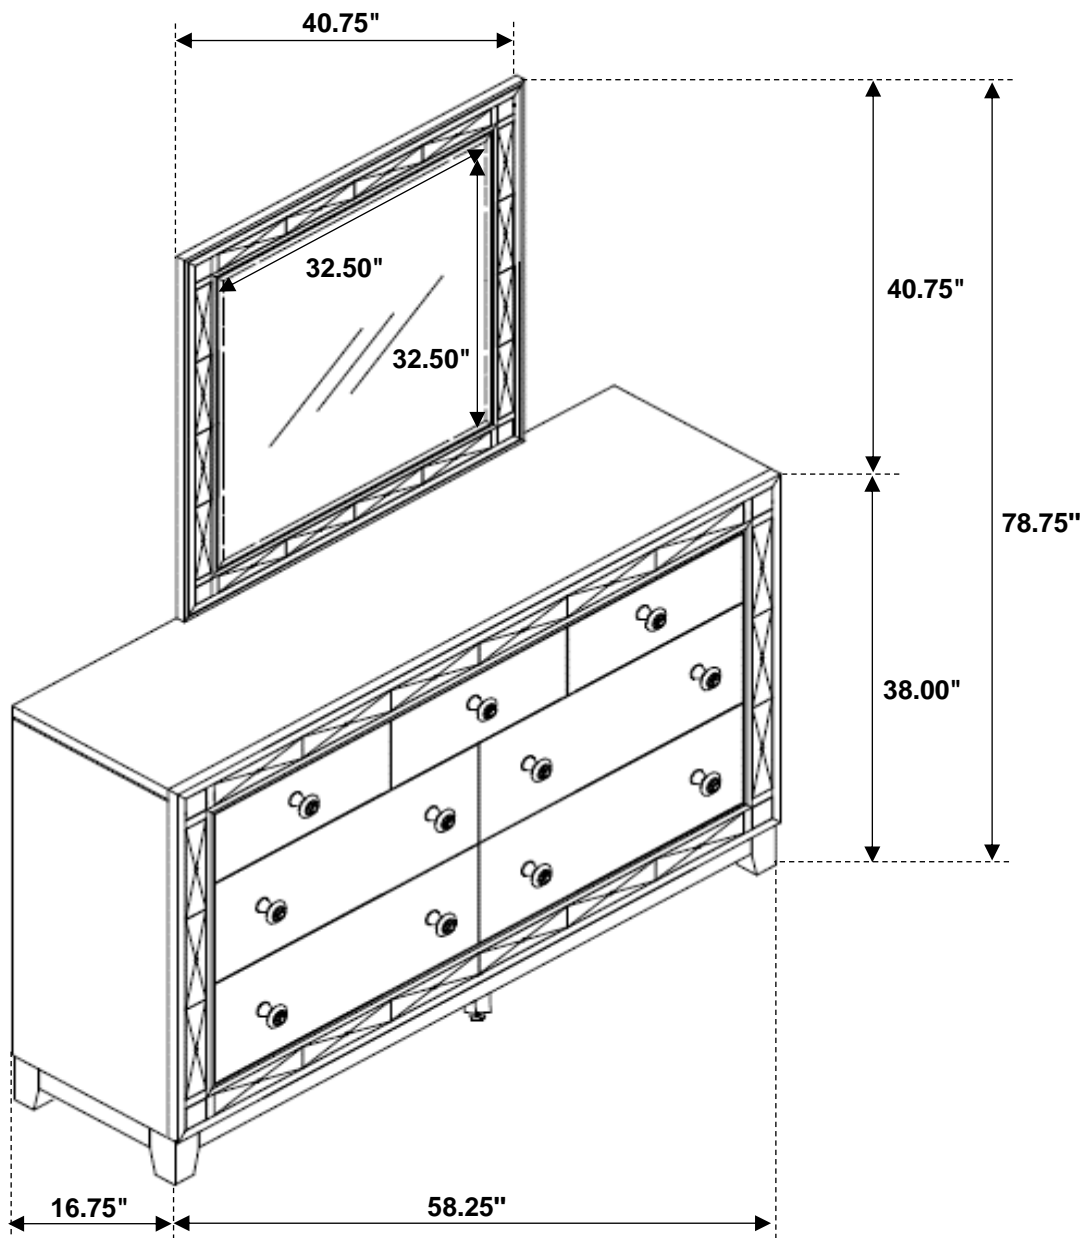

**Note: Dimension tolerance  $\pm 5\%$**

# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE

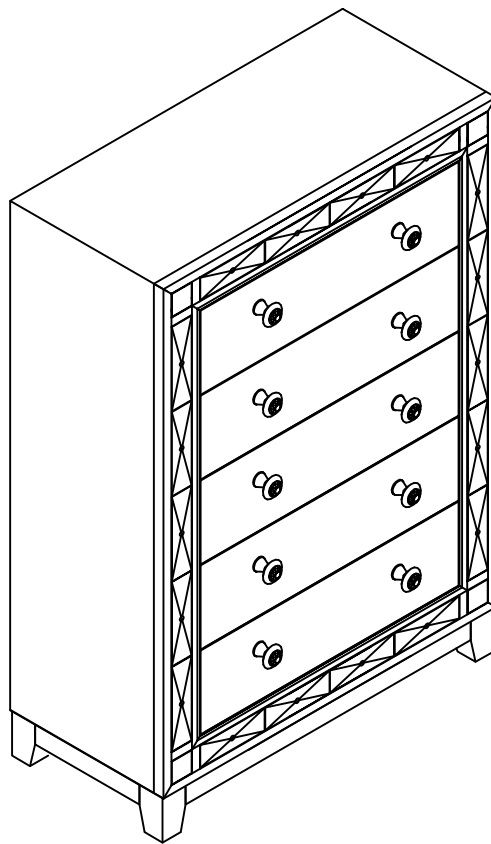

*Fine Furniture for every stage of life*

**204925**  
**Chest**



# ITEM:204925

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.

### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

## PARTS IDENTIFICATION

AN

CHEST

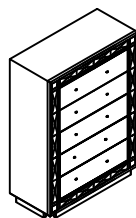

1PC

BN

LEG



4PCS

## HARDWARE IDENTIFICATION

1

**BOLT**  
(1/4" x 50mm- RBW)



8PCS

2

**LOCK WASHER**  
(1/4" - RBW)



8PCS

3

**FLAT WASHER**  
(1/4" - RBW)



8PCS

4

**ALLEN WRENCH**  
(4MM - RBW)



1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item .


ITEM: **204925**

**ASSEMBLY INSTRUCTIONS**


**STEP 1**

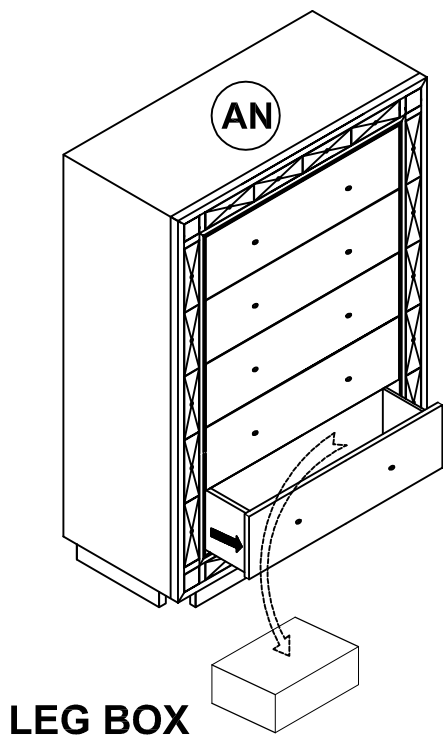

**STEP 2**

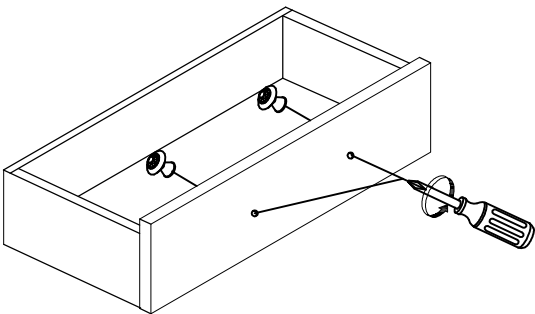


**STEP 3**

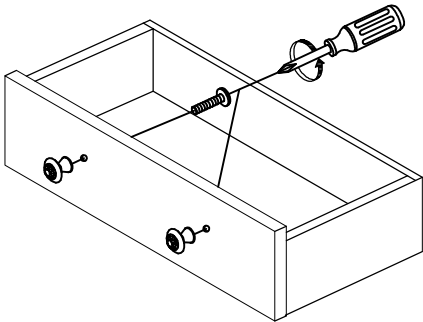


ITEM: **204925**

## ASSEMBLY INSTRUCTIONS

### STEP 4

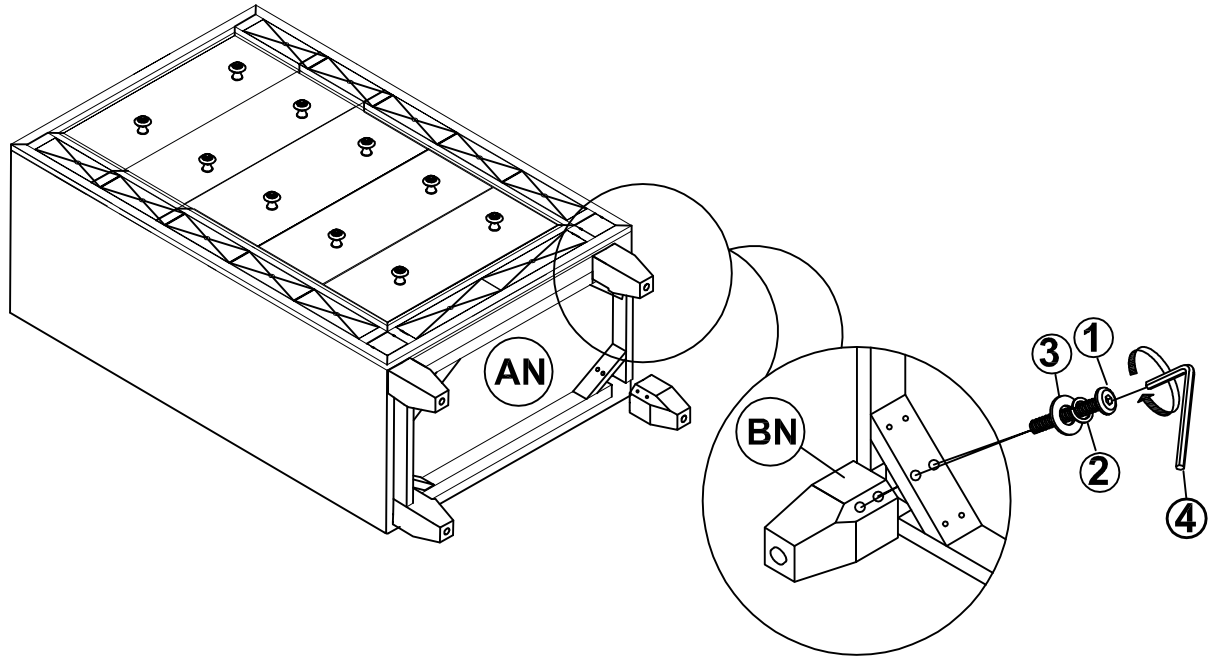

### STEP 5 COMPLETE

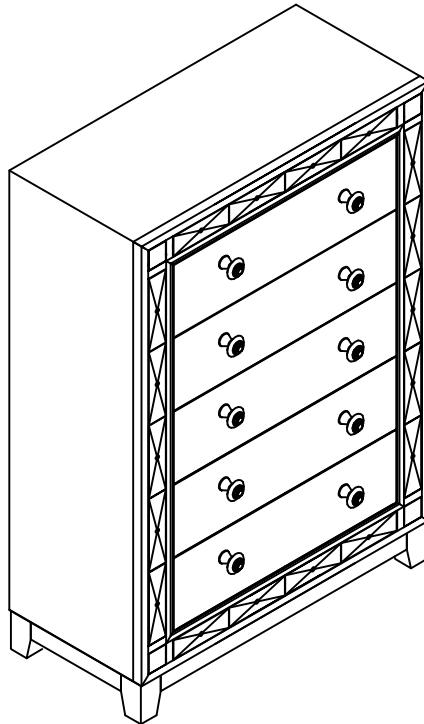

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT

#### WARNING

Injury may result from tipping furniture.


This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage .

1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the short screw.
2. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw hole approximately 2" below the bracket mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic wall plug into the hole and gently tap until the flange on the wall plug is against the wall surface.
4. Position the bracket over the wall plug and use the long screw to securely attach the bracket to the wall.
5. Place the furniture so the bracket on the back edge is in line with the bracket on the wall.
6. Lace an end of the cable tie down through each bracket. Bring both ends together and slide the beaded end of the cable tie through the keyhole shaped slot on the other end until snug. Pull down on the beaded end until it snap locks into the keyhole slot.
7. To double lock return the beaded end back through the keyhole as shown.
8. Check to make sure the cable tie is securely laced and locked to the brackets.

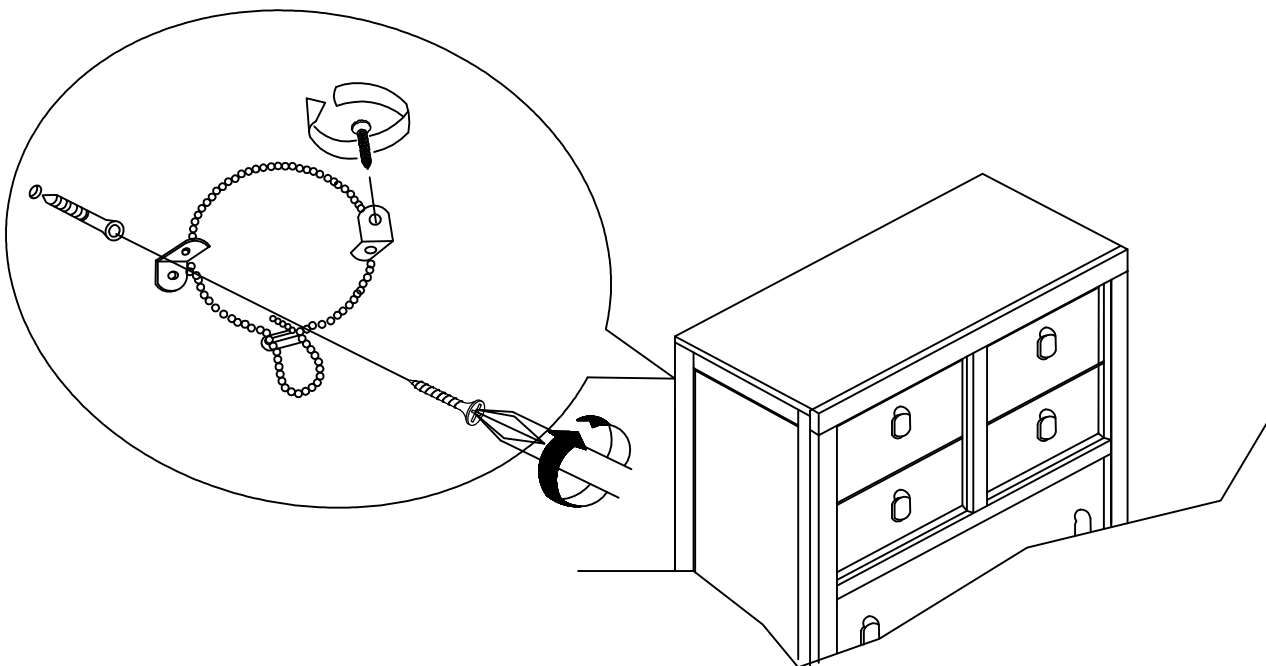

The logo for Coaster Fine Furniture, featuring the word "COASTER" in a large, bold, red sans-serif font, with a red curved line arching over the letters. Below "COASTER" is the phrase "FINE FURNITURE" in a smaller, red sans-serif font.

Technical drawing of a chest of drawers (Dresser) showing dimensions in inches. The overall height is 49.00". The top width is 32.25". The depth of the top is 16.75". The depth of the drawers is 24.75". The height of the drawers is 7.00". The height of the base is 5.00". The width of the base is 13.50". The width of the drawers is 29.00". The width of the chest is 16.50". The width of the base is 32.00".

COASTERFURNITURE.COM



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

### **300621KW(B1&B2)** ***California King Bed***

# ITEM:300621KW(B1&B2)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

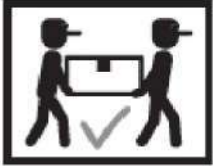


ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

### B1(BOX1)

AV HEADBOARD PANEL




1PC

CV RIGHT HEADBOARD LEG



1PC

EV RIGHT METAL CLEAT



1PC


### B2(BOX2)

FV FOOTBOARD LEG




2PCS

HV FOOTBOARD PANEL




1PC

JV BED SLAT



5PCS

300621KW(B1)  
HBV FROM BOX1  
HEADBOARD  
COMPLETE

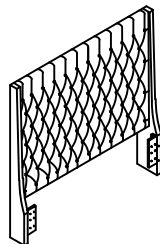


1PC

BV LEFT HEADBOARD LEG




1PC

DV LEFT METAL CLEAT




1PC

GV BED RAIL

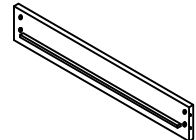


2PCS

IV BED SLAT SUPPORT  
WITH LEVELER



10PCS

300621KW(B2)  
FBV FROM BOX2  
FOOTBOARD  
COMPLETE

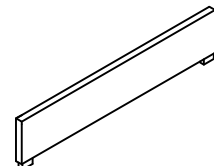

1PC



# ITEM:300621KW(B1&B2)

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







### WARNING!










1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1(BOX1)-HARDWARE PACK IS LOCATED IN 300621KW(B1)

|   |                                      |   |       |   |  |   |       |
|---|--------------------------------------|---|-------|---|--|---|-------|
| 1 | <b>ALLEN WRENCH</b><br>(5MM-RBW)     |  | 1PC   | 2 | <b>FLAT WASHER</b><br>( Ø 5/16 "-RBW ) |  | 18PCS |
| 3 | <b>BOLT</b><br>( Ø 5/16 "X40mm-RBW ) |  | 18PCS | 4 | <b>LOCK WASHER</b><br>( Ø 5/16 "-RBW ) |  | 18PCS |

### Z-B2(BOX2)-HARDWARE PACK IS LOCATED IN 300621KW(B2)

|    |  |   |      |    |   |   |       |
|----|--|---|------|----|---|---|-------|
| 5  | <b>ALLEN WRENCH</b><br>(5MM-RBW)                 |  | 1PC  | 6  | <b>FLAT WASHER</b><br>( Ø 5/16 "-RBW )        |  | 4PCS  |
| 7  | <b>BOLT</b><br>( Ø 5/16 "X50mm-RBW )             |  | 4PCS | 8  | <b>THREADED BOLT</b><br>( Ø 5/16 "X90mm-RBW ) |  | 8PCS  |
| 9  | <b>LOCK WASHER</b><br>( Ø 5/16 "-RBW )           |  | 4PCS | 10 | <b>HEX NUT</b><br>( 16mmx13mmx13-RBW )        |  | 8PCS  |
| 11 | <b>WRENCH</b><br>( 14MM-RBW )                    |  | 1PC  | 12 | <b>FLAT HEAD SCREW</b><br>( m4x30mm-RBW )     |  | 10PCS |
| 13 | <b>U-SQUARE WASHER</b><br>( 36mmx15mmx11mm-RBW ) |  | 8PCS |    |   |   |       |

### NOTE:


Phillips hesd screw driver is required in the assemply process; however, manufacturer does not providde this item.




# ITEM: 300621KW(B1&B2)

## ASSEMBLY INSTRUCTIONS


### STEP 1

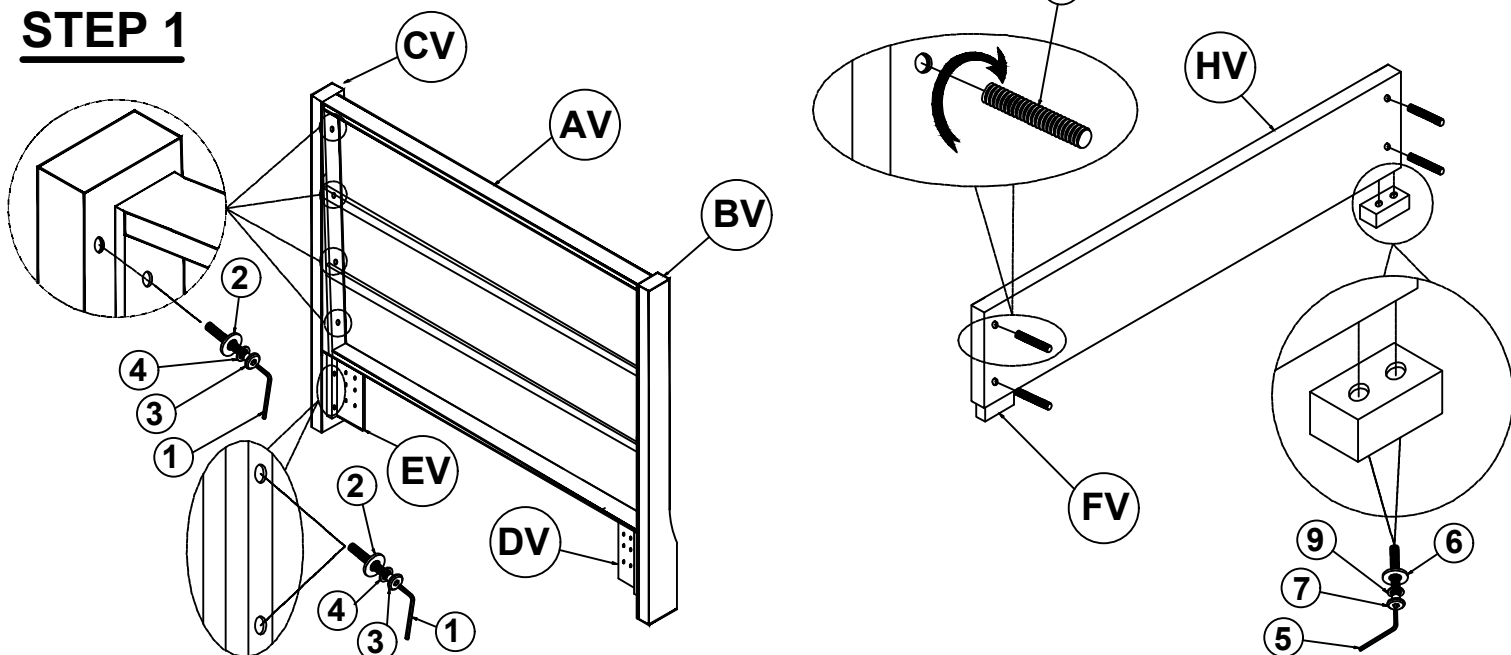

### STEP 2

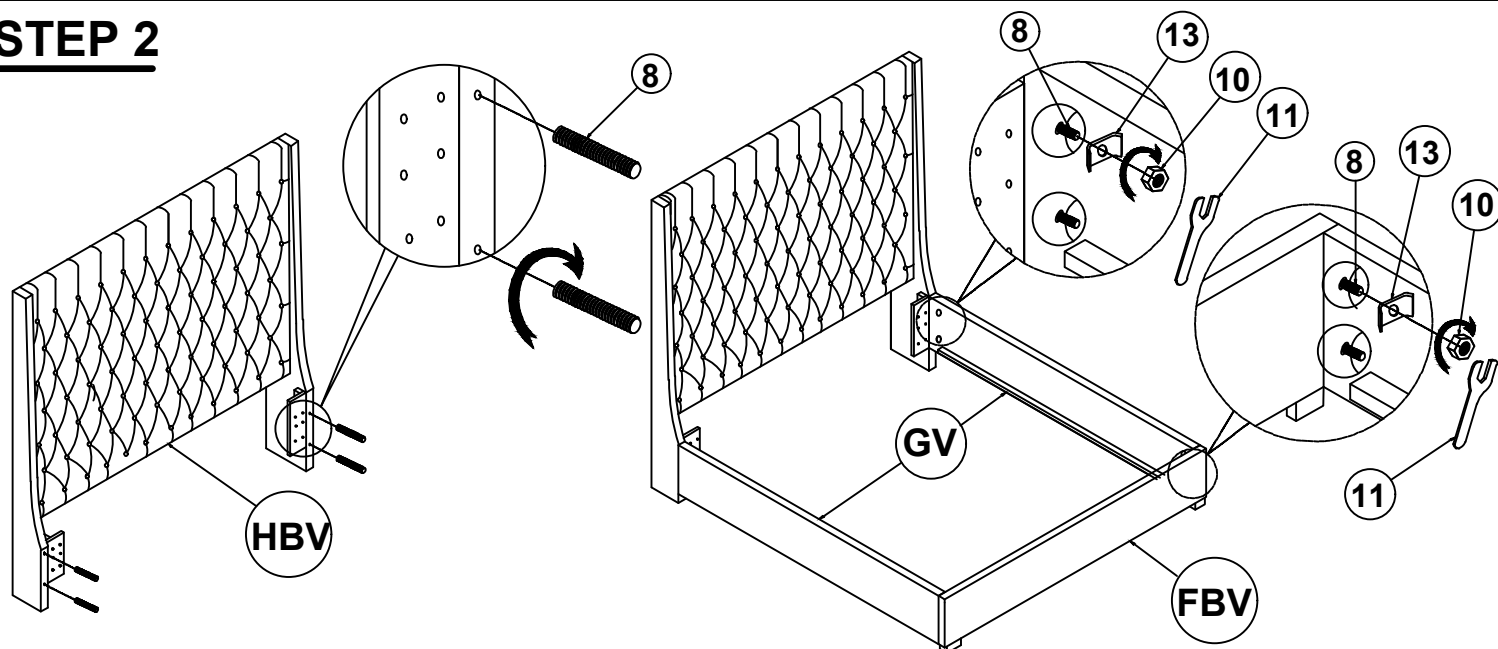

### STEP 3

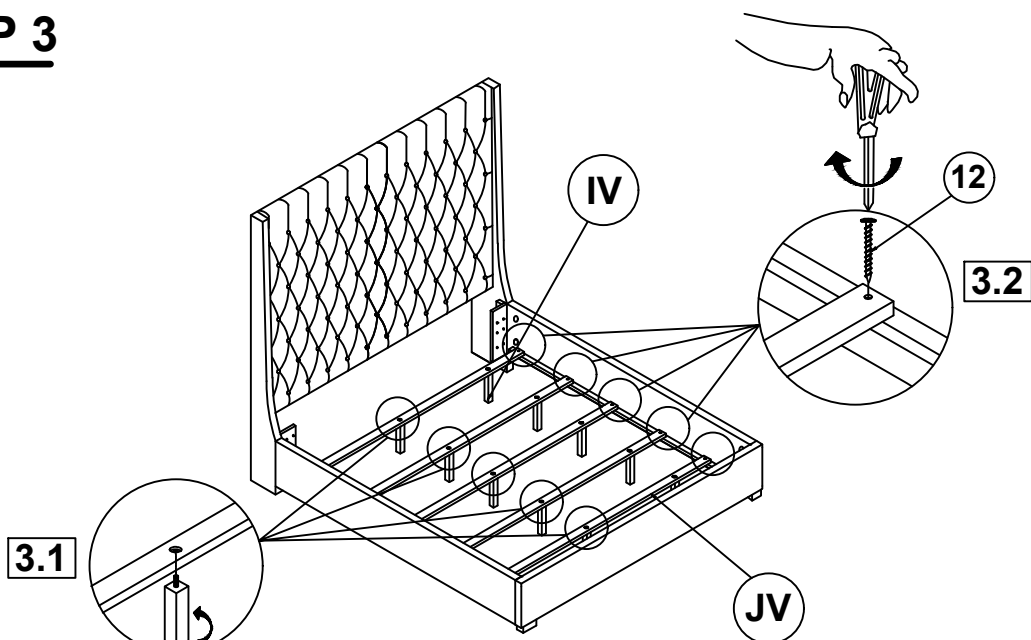



ITEM: **300621KW(B1&B2)**

ASSEMBLY INSTRUCTIONS

**STEP 4**


**COMPLETE**

**COASTER®**  
FINE FURNITURE

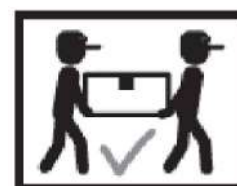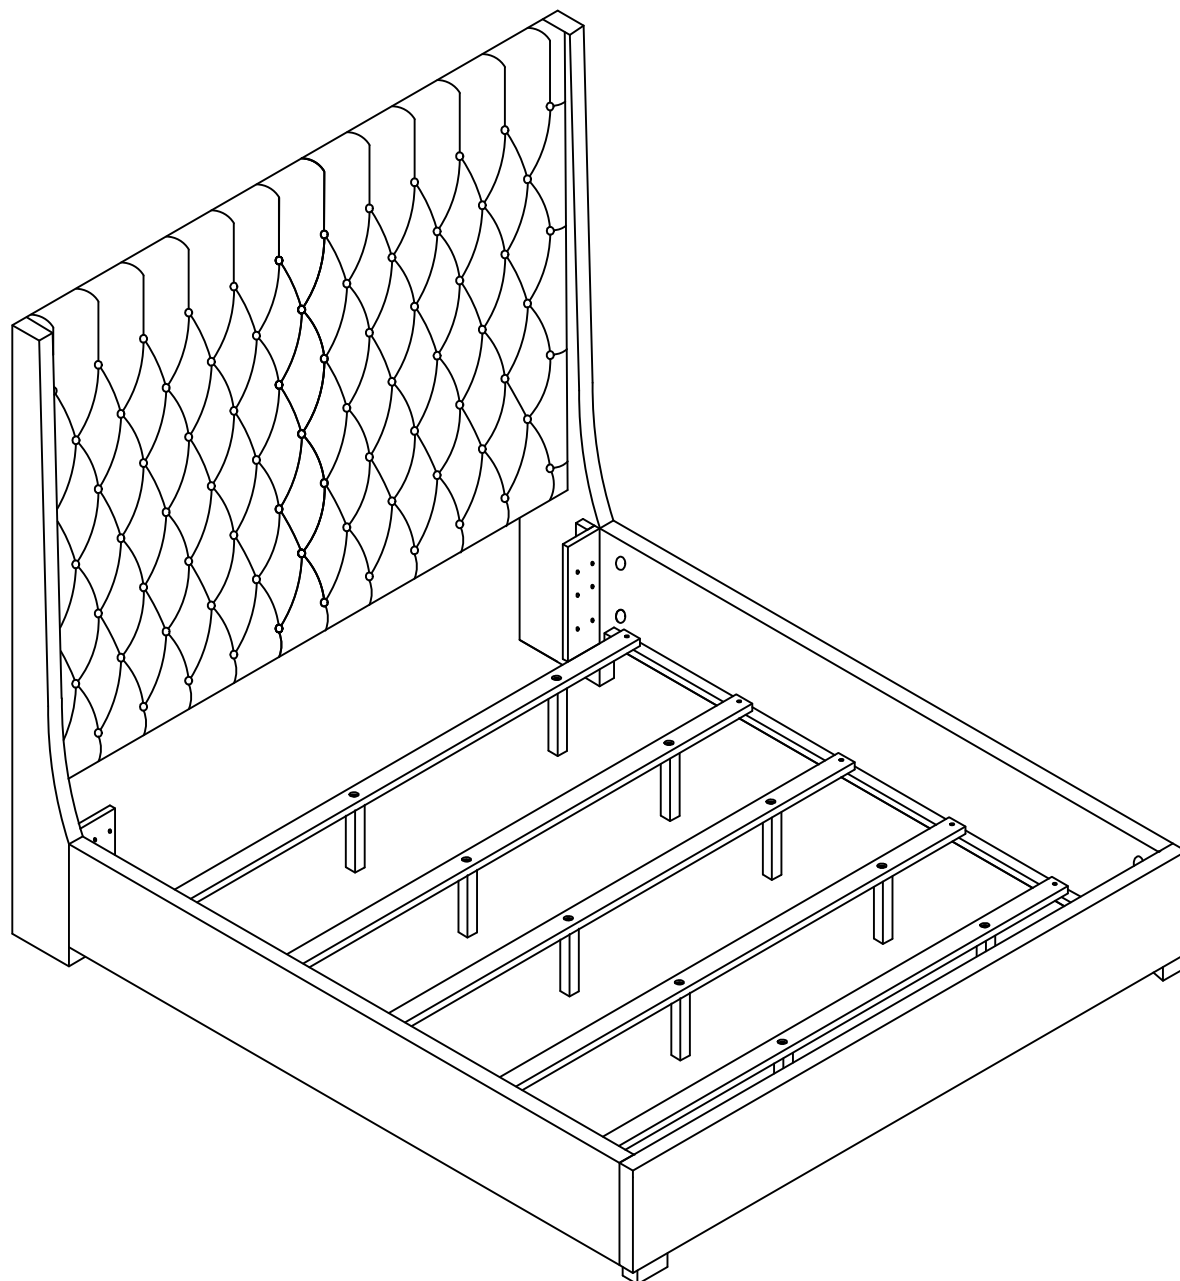

ITEM: **300621KW(B1&B2)**


**ASSEMBLY HEADBOARD TO METAL FRAME  
COMPLETE**

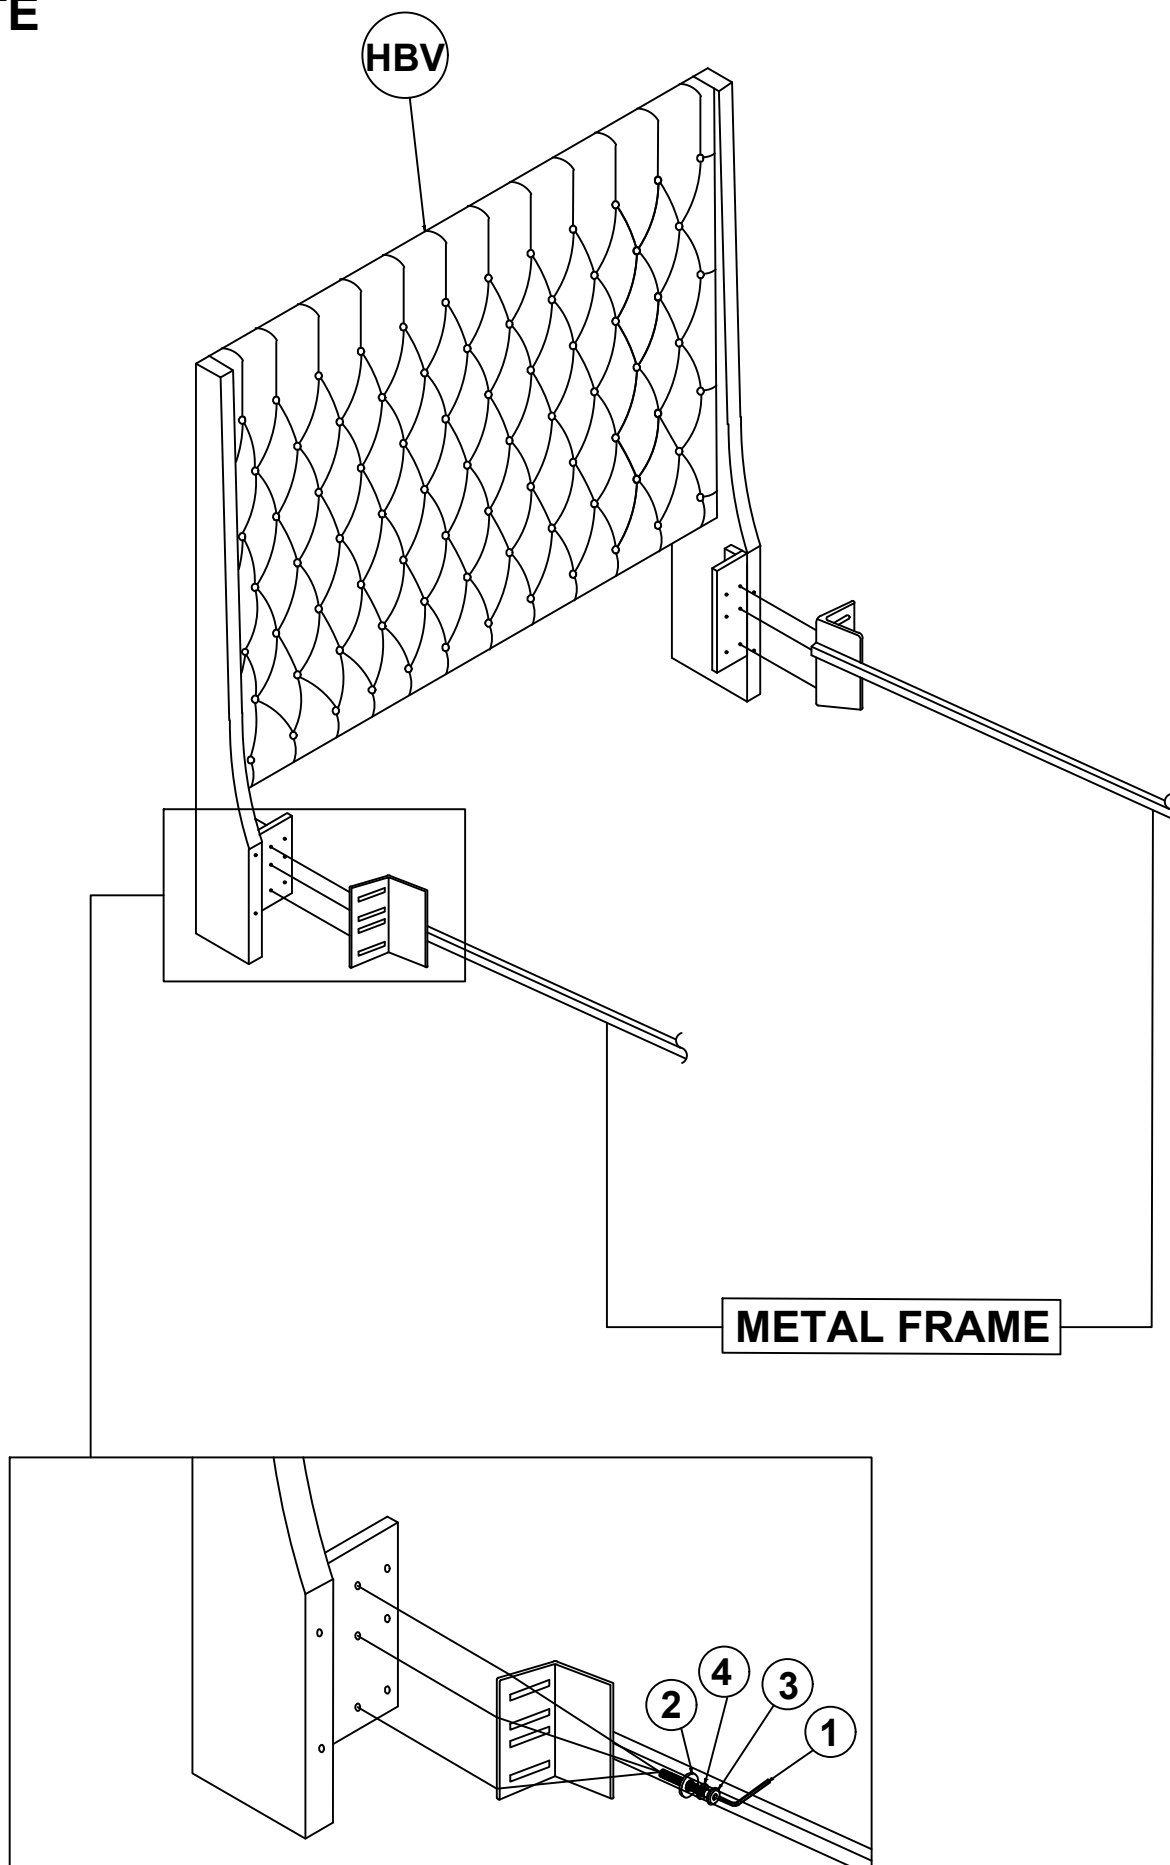

ITEM: **300621KW(B1&B2)**

**COASTER®**  
FINE FURNITURE

Inner Size: 73.00"W X 85.00"D

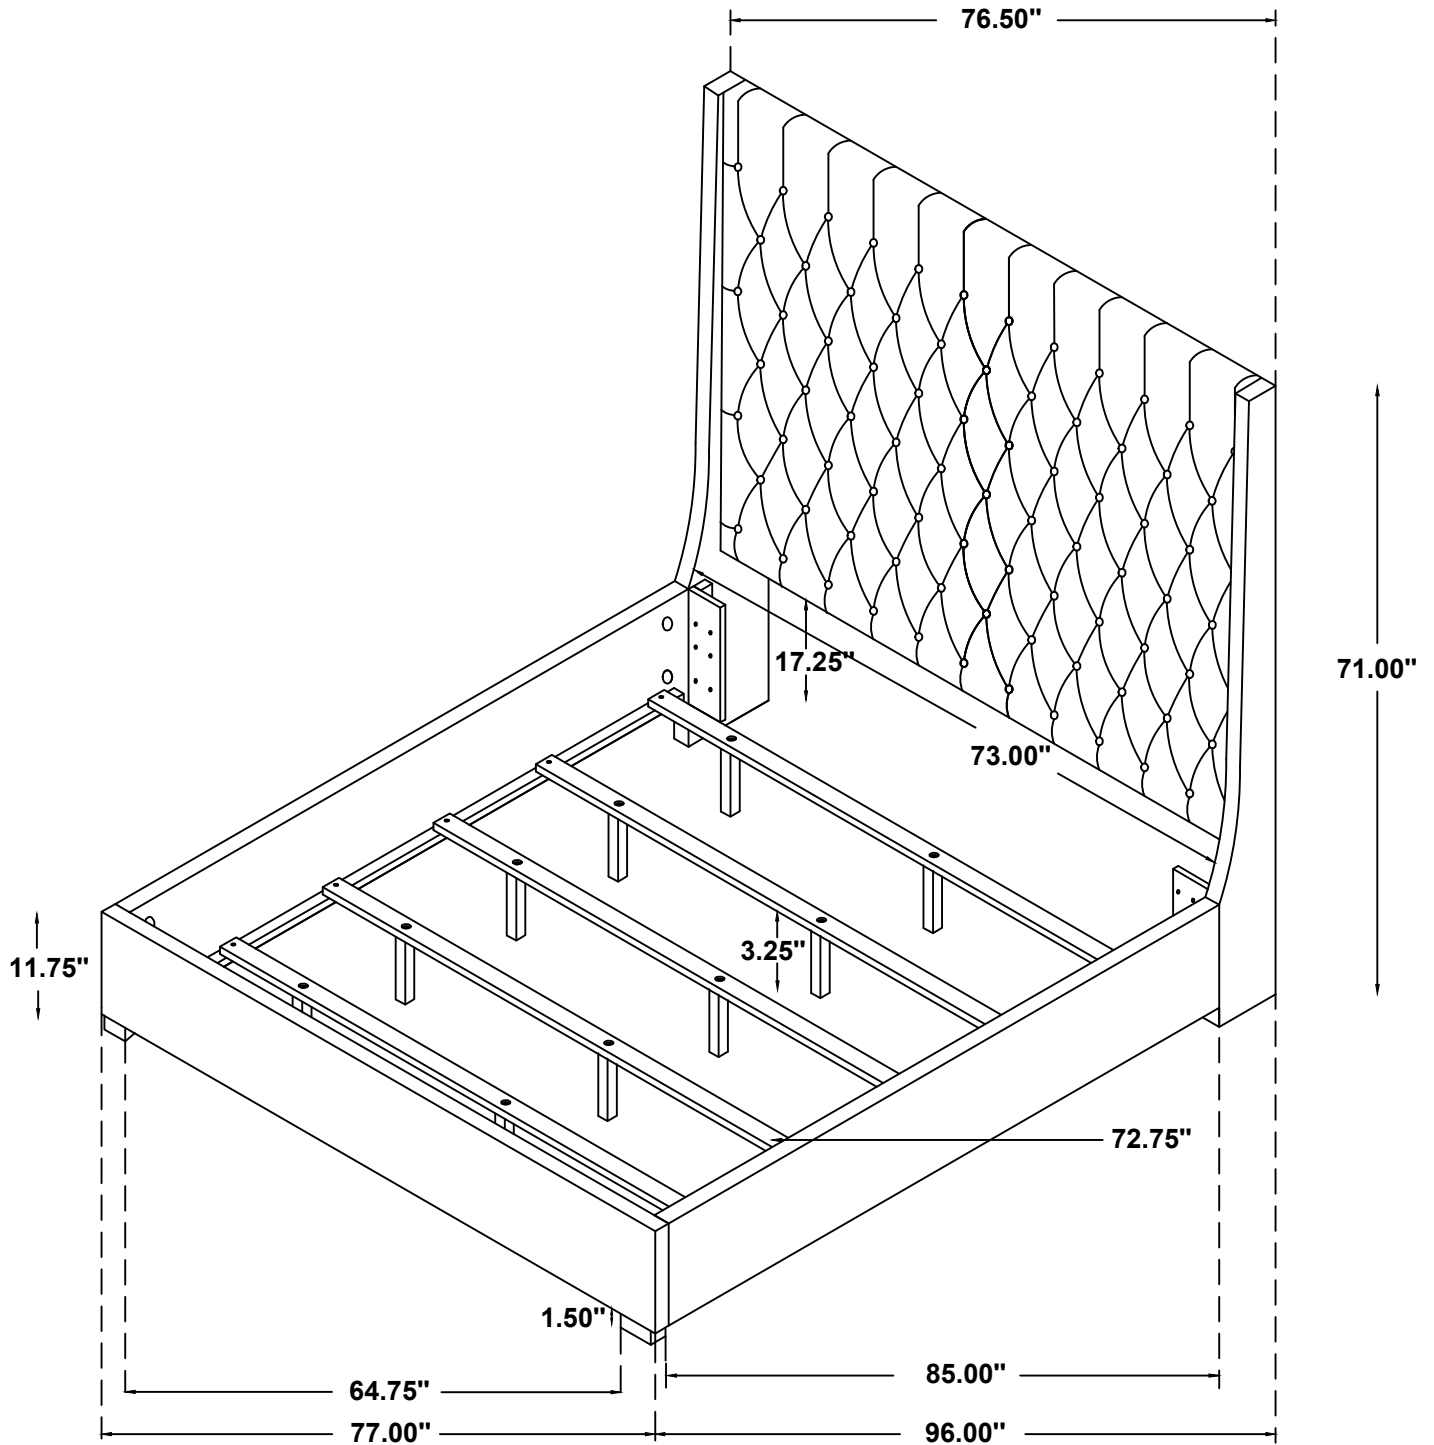

Note: Dimension tolerance  $\pm 5\%$