



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**300621Q(B1&B2)**  
**Queen Bed**

# ITEM:300621Q(B1&B2)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

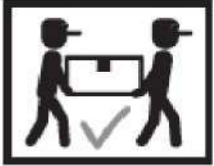


ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION


### B1(BOX1)

AV HEADBOARD PANEL




1PC

CV RIGHT HEADBOARD LEG




1PC

EV RIGHT METAL CLEAT




1PC

BV LEFT HEADBOARD LEG



1PC

DV LEFT METAL CLEAT



1PC


### B2(BOX2)

FV FOOTBOARD LEG




2PCS

HV FOOTBOARD PANEL




1PC

JV BED SLAT




4PCS

HBV 300621Q(B1)  
FROM BOX1  
HEADBOARD  
COMPLETE

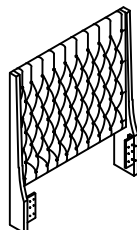


1PC

GV BED RAIL

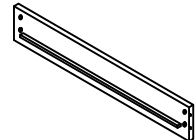


2PCS

IV BED SLAT SUPPORT  
WITH LEVELER



4PCS

FBV 300621Q(B2)  
FROM BOX2  
FOOTBOARD  
COMPLETE

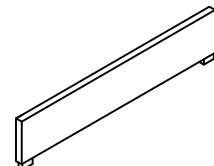

1PC

# ITEM:300621Q(B1&B2)

## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







### WARNING!










1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1(BOX1)-HARDWARE PACK IS LOCATED IN 300621Q(B1)

1	<b>ALLEN WRENCH</b> (5MM-RBW)		1PC	2	<b>FLAT WASHER</b> ( Ø 5/16 "-RBW )		18PCS
3	<b>BOLT</b> ( Ø 5/16 "X40mm-RBW )		18PCS	4	<b>LOCK WASHER</b> ( Ø 5/16 "-RBW )		18PCS

### Z-B2(BOX2)-HARDWARE PACK IS LOCATED IN 300621Q(B2)

5	<b>ALLEN WRENCH</b> (5MM-RBW)		1PC	6	<b>FLAT WASHER</b> ( Ø 5/16 "-RBW )		4PCS
7	<b>BOLT</b> ( Ø 5/16 "X50mm-RBW )		4PCS	8	<b>THREADED BOLT</b> ( Ø 5/16 "X90mm-RBW )		8PCS
9	<b>LOCK WASHER</b> ( Ø 5/16 "-RBW )		4PCS	10	<b>HEX NUT</b> ( 16mmx13mmx13-RBW )		8PCS
11	<b>WRENCH</b> ( 14MM-RBW )		1PC	12	<b>FLAT HEAD SCREW</b> ( m4x30mm-RBW )		8PCS
13	<b>U-SQUARE WASHER</b> ( 36mmx15mmx11mm-RBW )		8PCS				


### NOTE:

Phillips hesd screw driver is required in the assemply process; however, manufacturer does not providde this item.


# ITEM: 300621Q(B1&B2)

## ASSEMBLY INSTRUCTIONS


### STEP 1

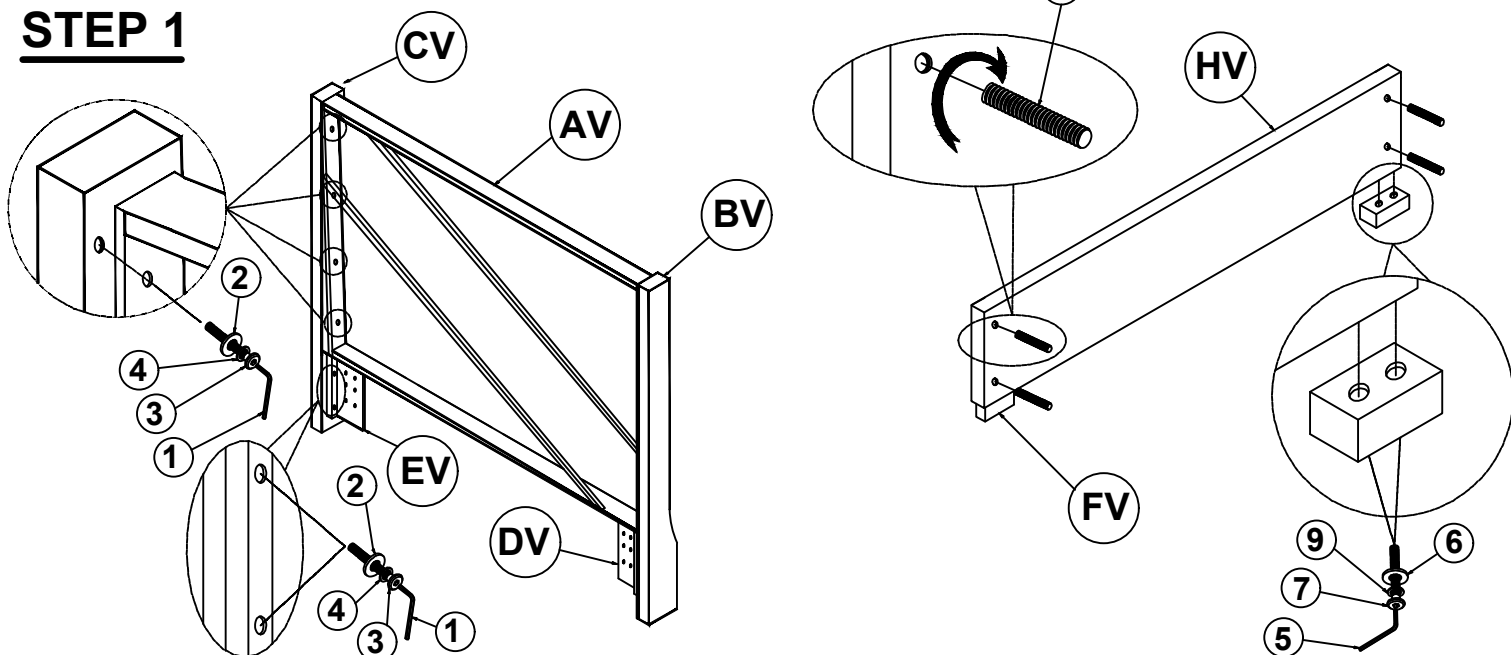

### STEP 2

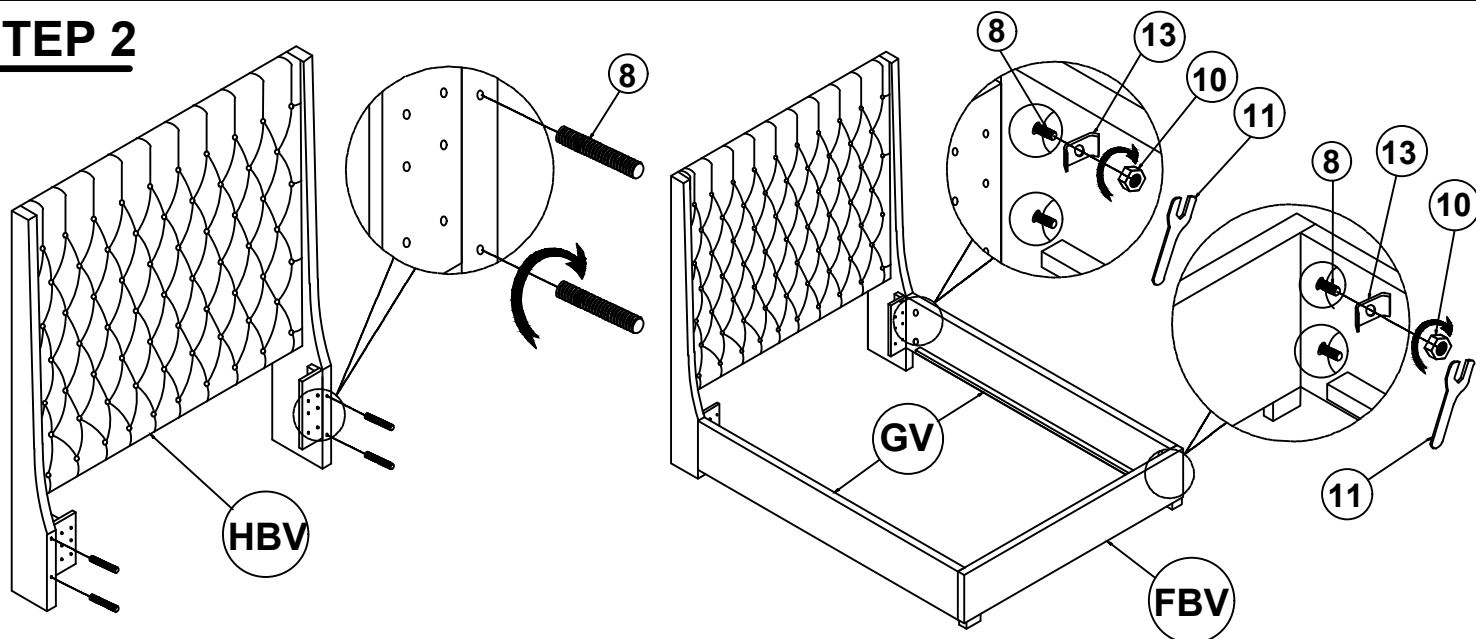

### STEP 3

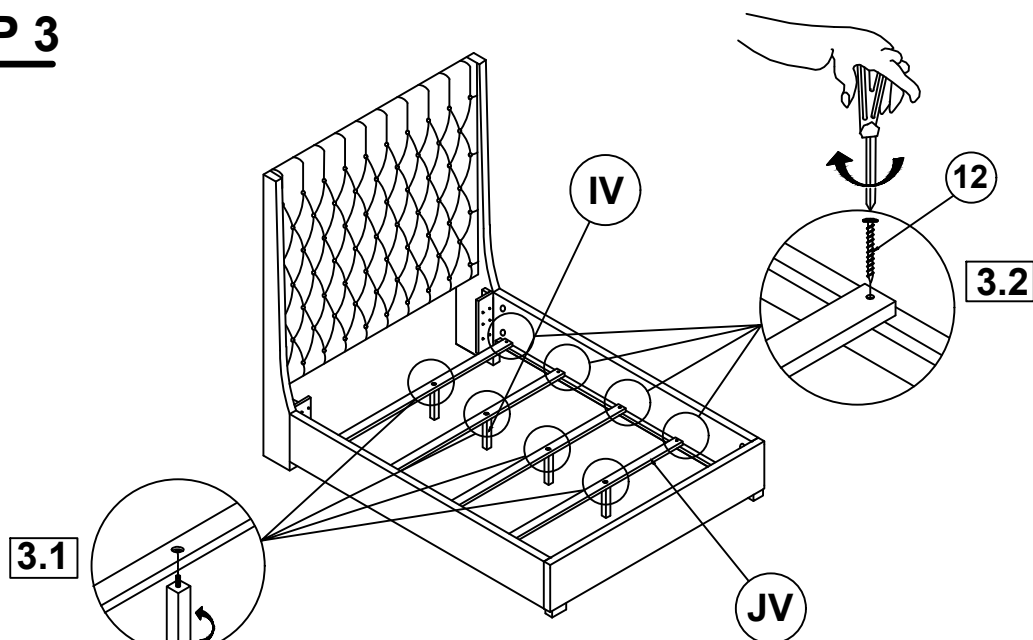



ITEM: **300621Q(B1&B2)**

ASSEMBLY INSTRUCTIONS

**STEP 4**


**COMPLETE**

**COASTER®**  
FINE FURNITURE

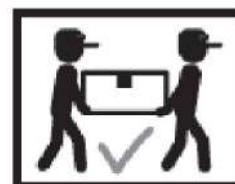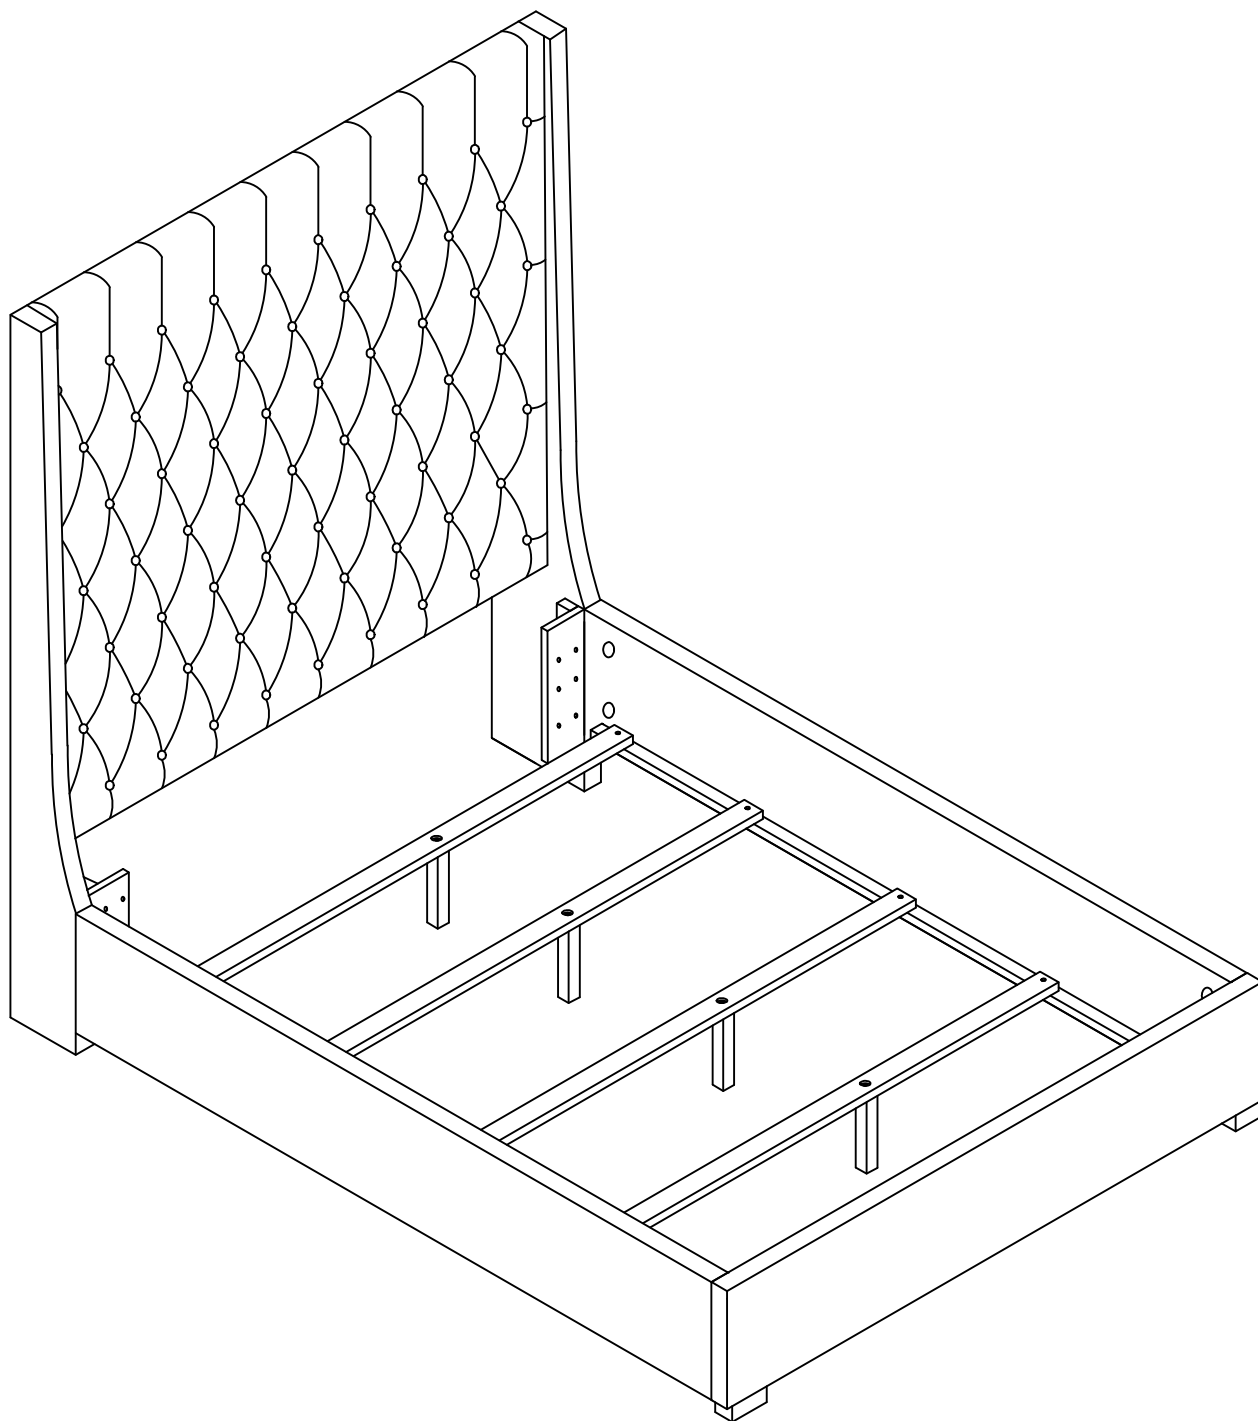


ITEM: **300621Q(B1&B2)**

**ASSEMBLY HEADBOARD TO METAL FRAME  
COMPLETE**

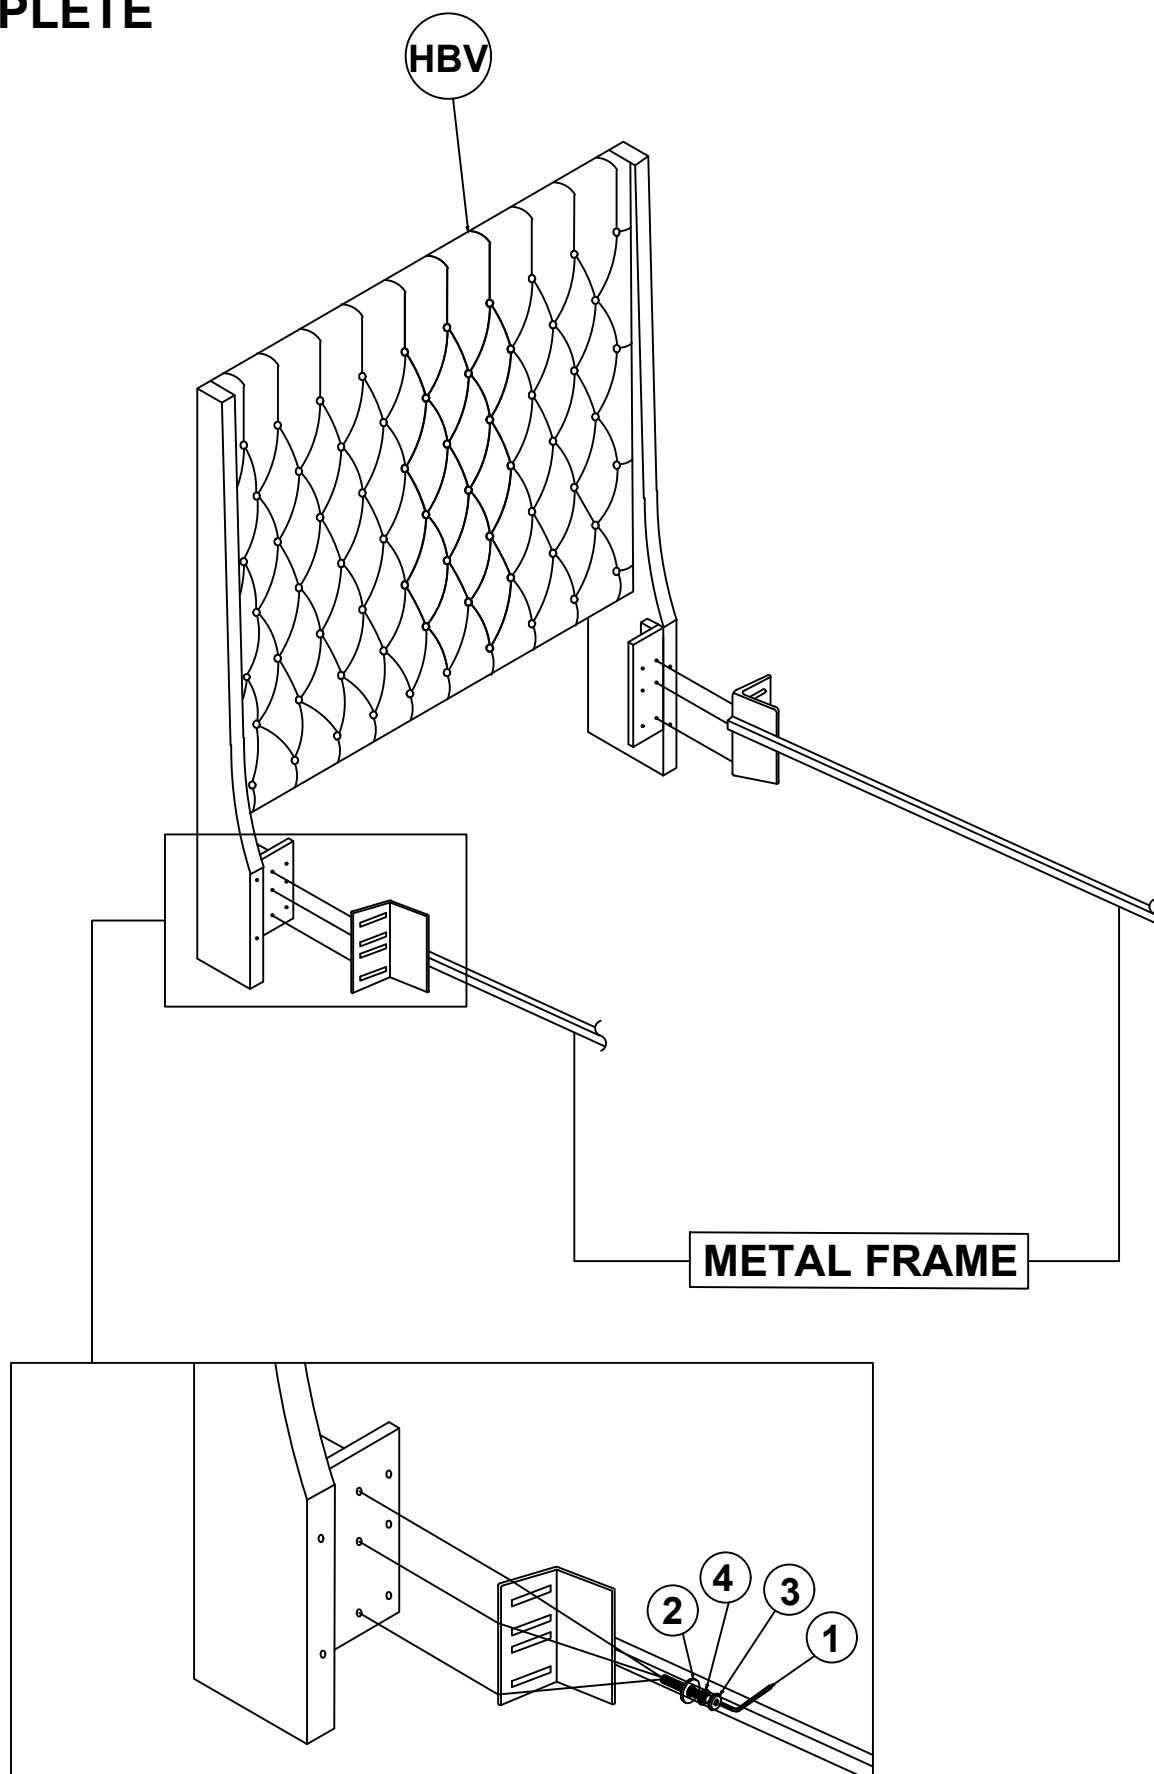

Inner Size: 61.00"W X 81.00"D

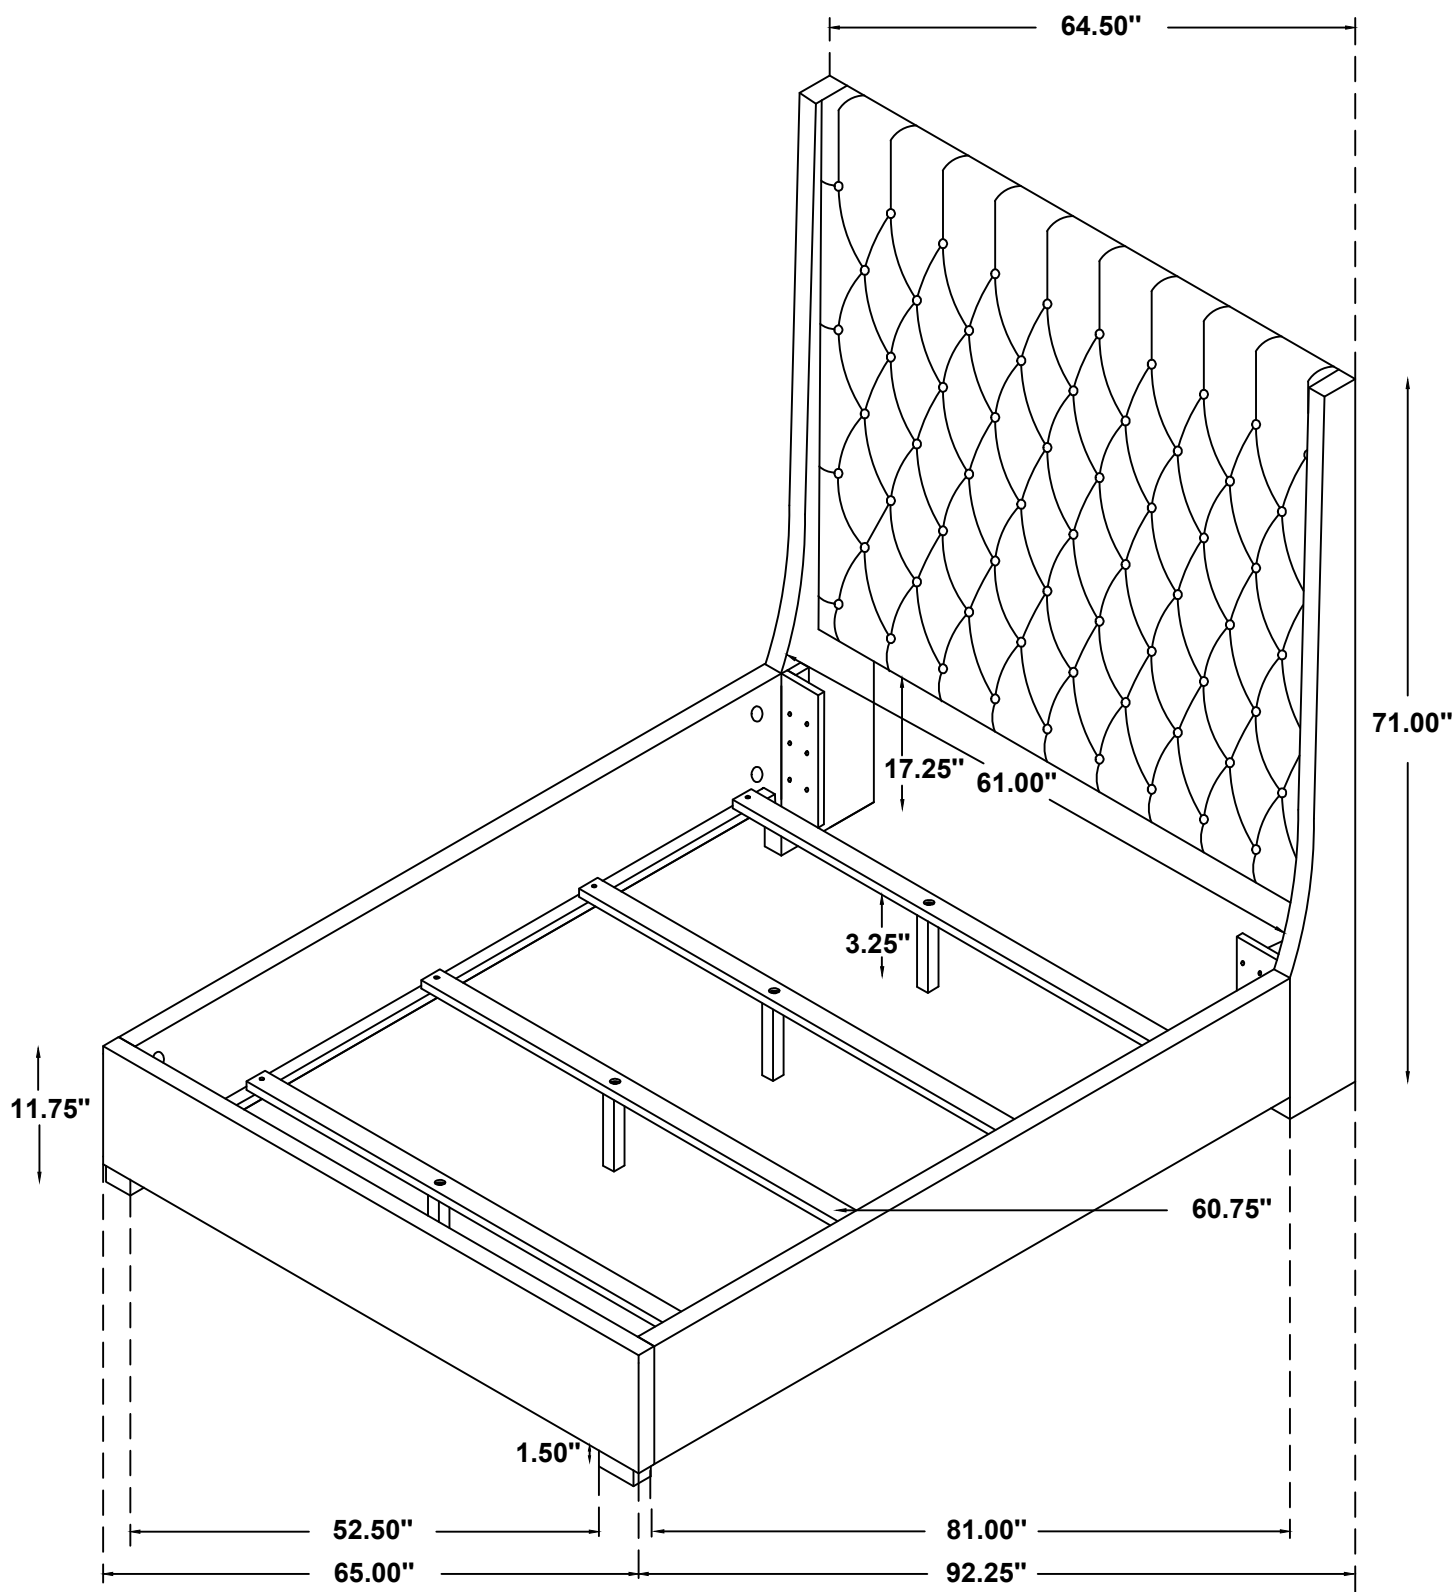

Note:Dimension tolerance±5%





**300621Q**

**HEADBOARD ONLY**

**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**



**[www.coasterfurniture.com](http://www.coasterfurniture.com)**




**ASSEMBLY TIPS:**

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




**Warning!**

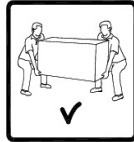1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.










<b>ASSEMBLY TIME</b>	<b>10 MINUTES</b>
----------------------	-------------------


**PARTS IDENTIFICATION****B1 (BOX 1)**

	PART NAME	FIGURE	QTY
<b>A</b>	HEADBOARD		1PC
<b>B</b>	LEFT HEADBOARD LEG		1PC
<b>C</b>	RIGHT HEADBOARD LEG		1PC


**HARDWARE IDENTIFICATION****Z-B1 (BOX1) - HARDWARE PACK IS LOCATED IN 300621Q (B1)**

	HARDWARE NAME	FIGURE	Q'TY		HARDWARE NAME	FIGURE	Q'TY
1	Allen wrench 5*23*73mm		1 PC	6	Hexagon socket screw 7cm		4 PCS
3	Headboard corner bracket- Right		1 PC	12	Hexagon socket screw 4cm		4 PCS
4	Headboard corner bracket- Left		1 PC	13	Washer M8 21*21*1mm		16 PCS
5	Short bolt 4.5cm		8 PCS				


STEP 1

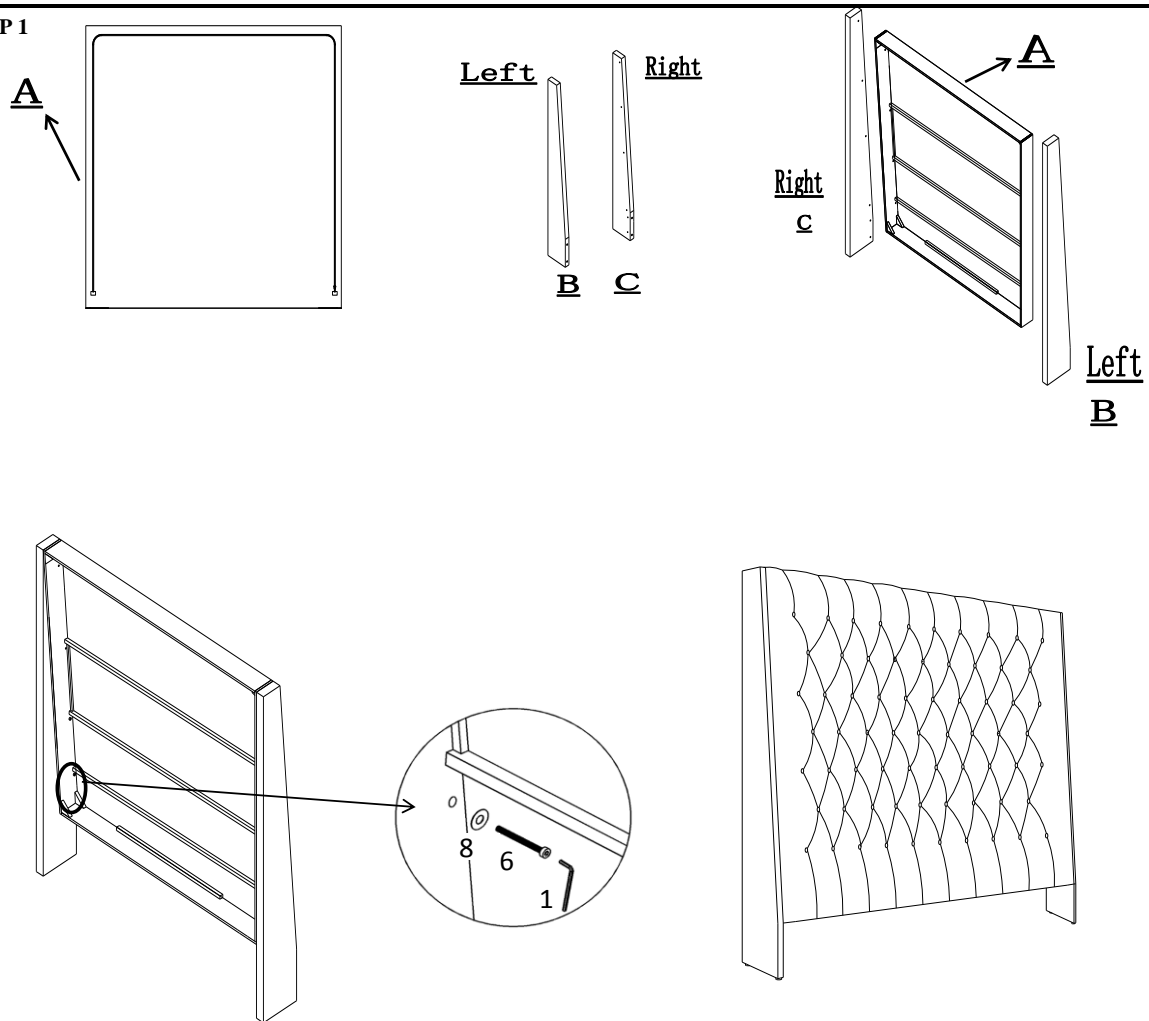

STEP 2

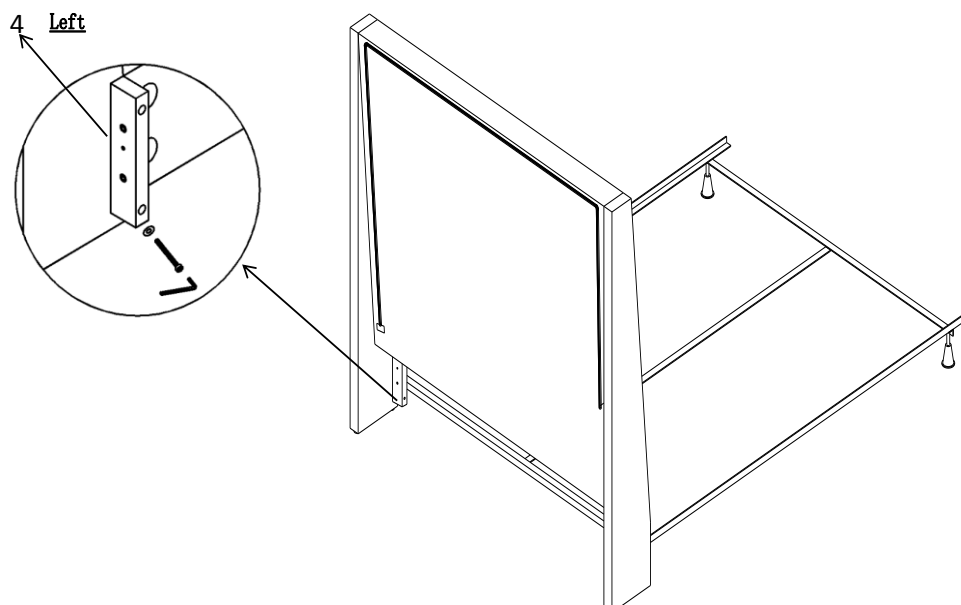

**STEP 3**

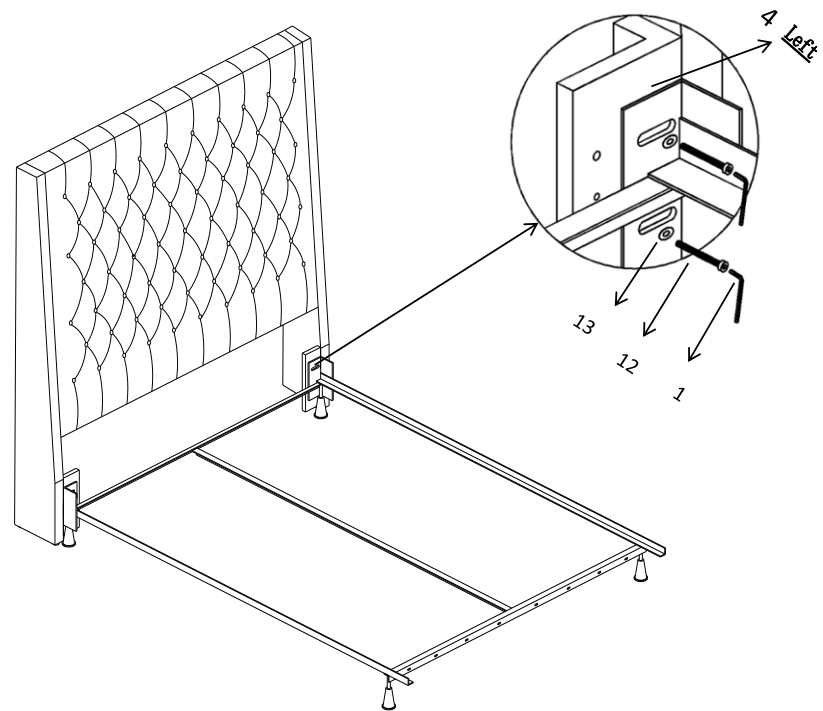

**STEP 4**

