

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**205892**  
***Nightstand***

ITEM: **205892**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

**A NIGHTSTAND**

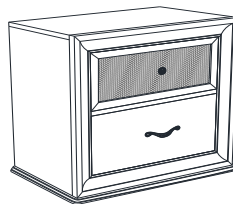

**1PC**

**B BUN FOOT**




**4PCS**

ITEM: **205892**


## ASSEMBLY INSTRUCTIONS





### STEP 1

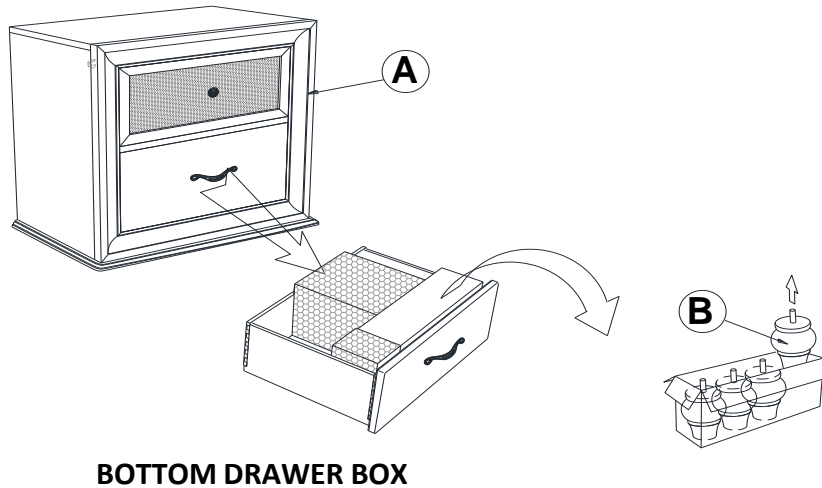

### STEP 2

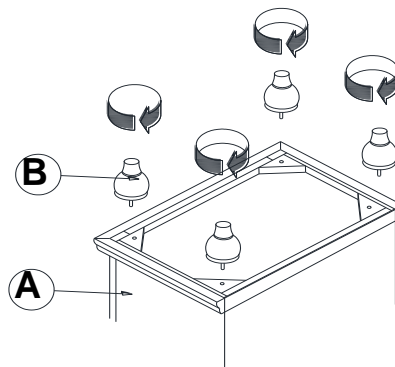


### STEP 3 COMPLETE

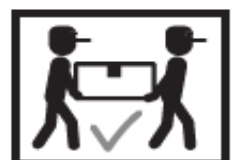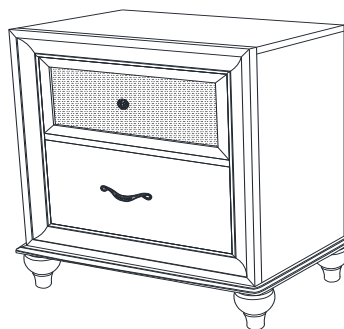

ITEM: **205892**

**COASTER**  
FINE FURNITURE

Inner Size of Drawer A : 19.00"W X 12.50"D X 5.00"H X 0.25"T  
Inner Size of Drawer B : 19.00"W X 12.50"D X 5.00"H X 0.25"T

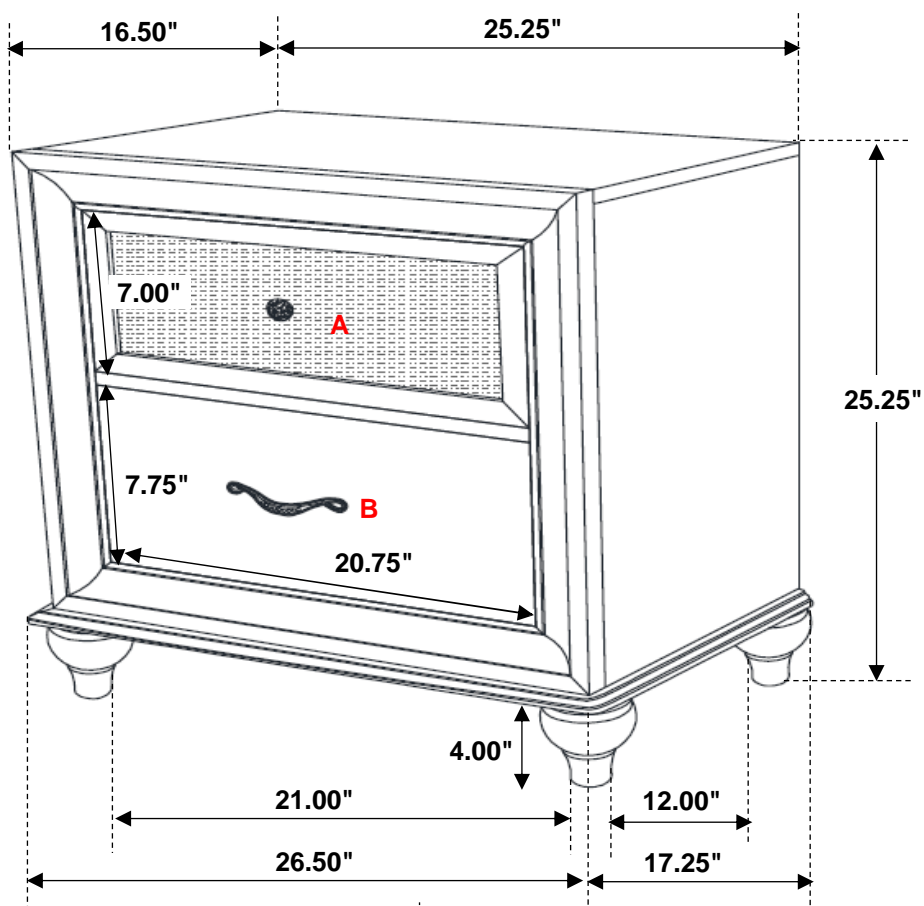

Note: Dimension tolerance  $\pm 5\%$

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**205893**  
***Dresser***

ITEM:205893



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A DRESSER

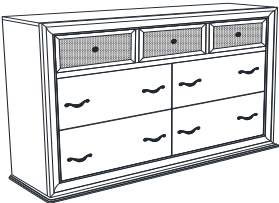

1PC

B BUN FOOT




4PCS

ITEM: **205893**

## ASSEMBLY INSTRUCTIONS




### STEP 1

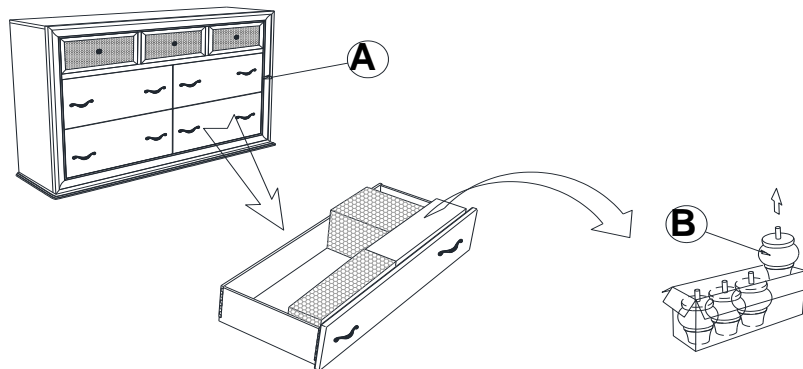


**BOTTOM DRAWER BOX**

### STEP 2

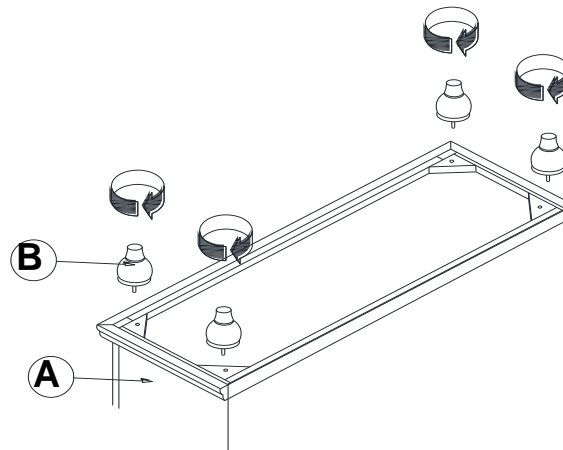


### STEP 3 **COMPLETE**

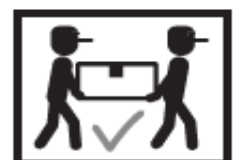

ITEM: **205893**



Inner Size of Drawer A : 17.00"W X 12.50"D X 5.00"H X 0.25"T  
Inner Size of Drawer B : 27.25"W X 12.50"D X 5.00"H X 0.25"T

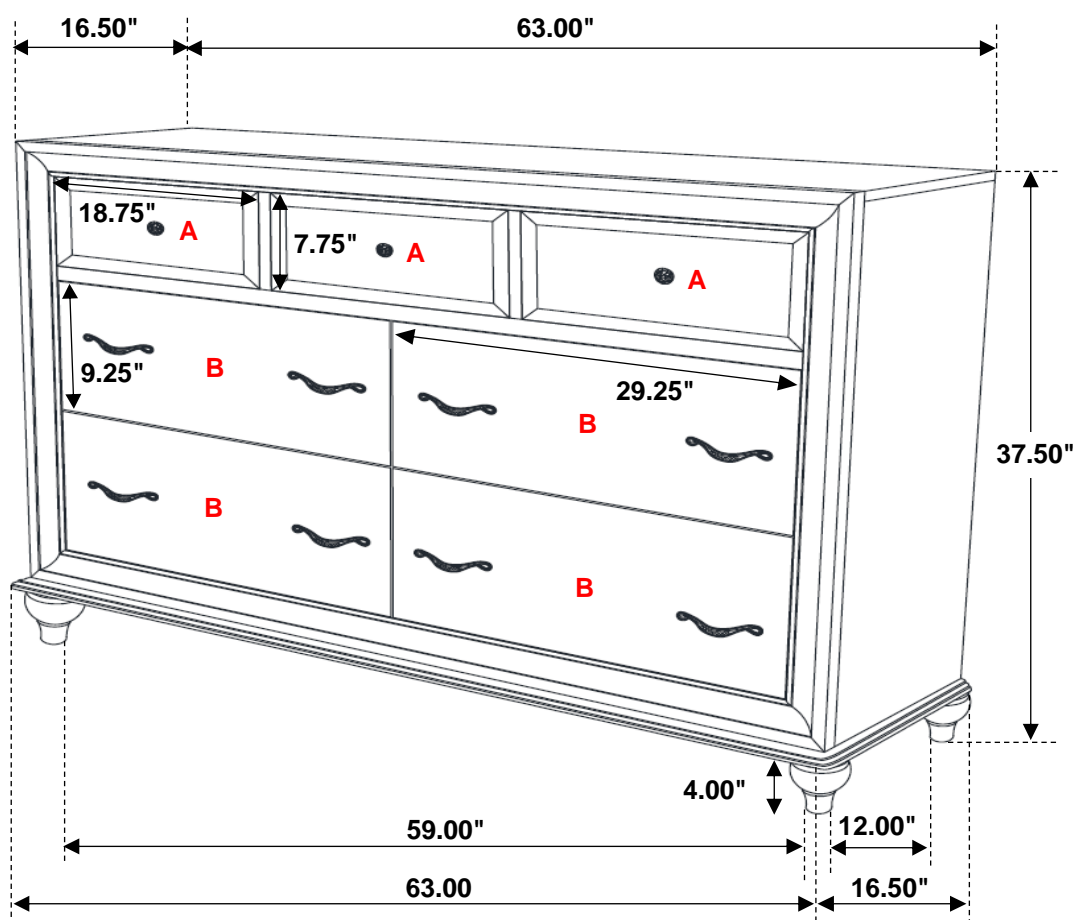

Note: Dimension tolerance  $\pm 5\%$



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**205895**  
***Chest***

ITEM:205895



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A CHEST

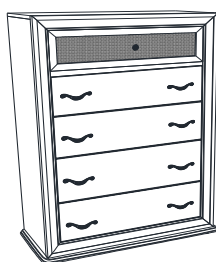

1PC

B BUN FOOT




4PCS

ITEM: **205895**


## ASSEMBLY INSTRUCTIONS




### STEP 1

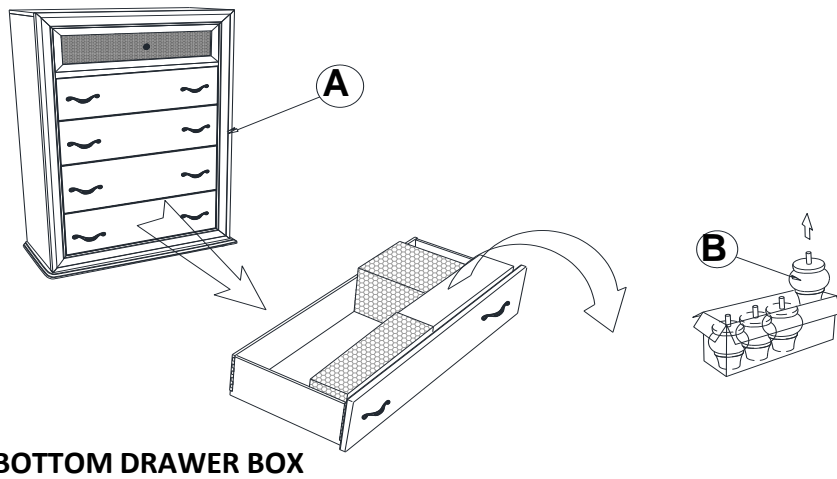

### STEP 2

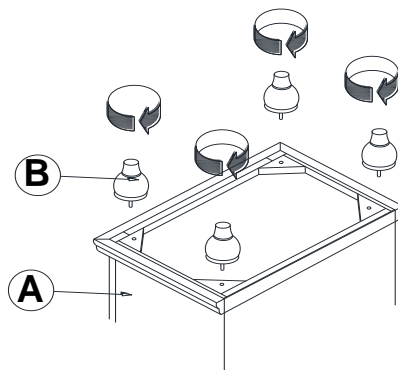

### STEP 3 COMPLETE

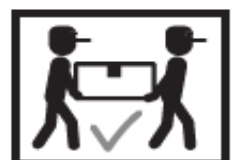


ITEM: **205895**



Inner Size of Drawer A : 28.75"W X 12.50"D X 5.00"H X 0.25"T

Inner Size of Drawer B : 28.75"W X 12.50"D X 5.00"H X 0.25"T

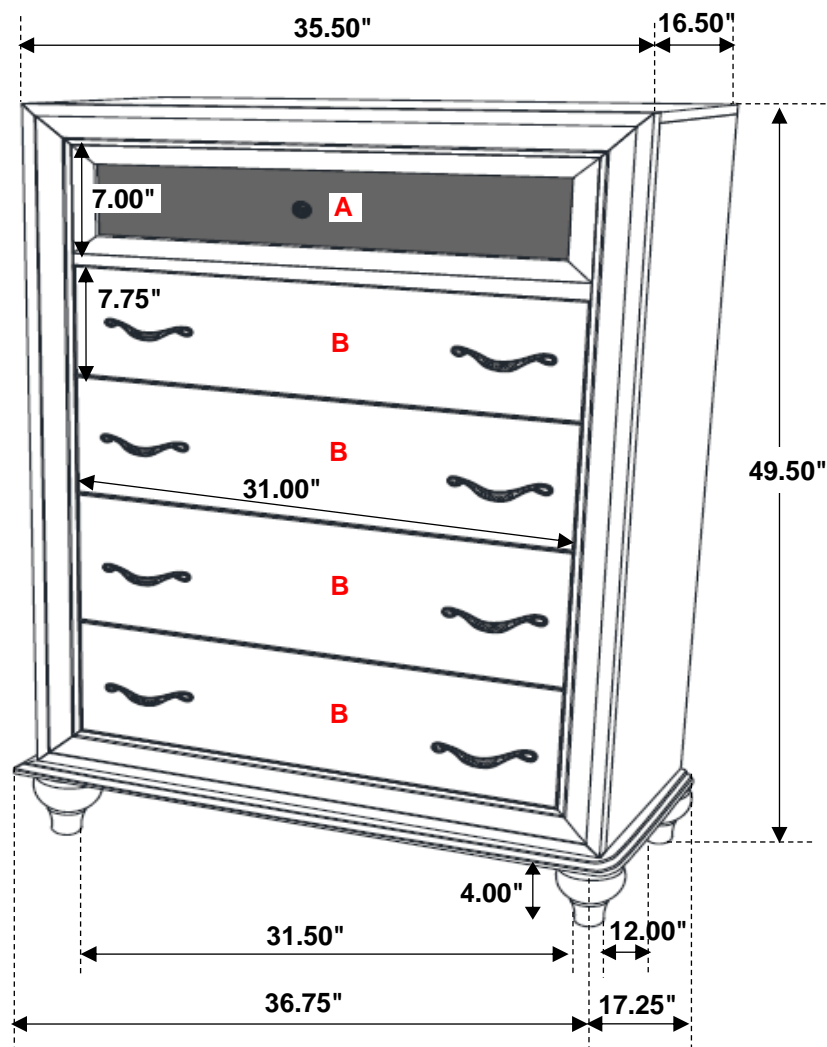

Note: Dimension tolerance  $\pm 5\%$



# ASSEMBLY INSTRUCTIONS

## COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

# 300843KW (B1-B3)

## California King Bed

REVISION 0: 01/17/2017  
REVISION 1: 08/14/2018  
REVISION 2: 08/20/2018  
REVISION 3: 08/27/2019  
REVISION 4: 12/21/2020

PAGE 1 OF 10

COASTERFURNITURE.COM

# ITEM: 300843KW (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

40 MINUTES

## PARTS IDENTIFICATION


### B1 ( BOX 1)

A HEADBOARD PANEL

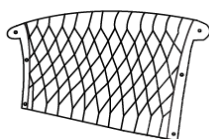

1PC

B HEADBOARD LEG



2PCS


C HEADBOARD SUPPORT  
PANEL



1PC


### B2 ( BOX 2)

D1 LEFT WING



1PCS

D2 RIGHT WING



1PCS


E WING SUPPORT



2PCS

### B3 ( BOX 3)

F FOOTBOARD PANEL




1PC

G1 LEFT BED RAIL



1PC

G2 RIGHT BED RAIL



1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 300843KW (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:










1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy asse



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## PARTS IDENTIFICATION

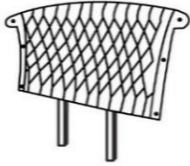H	BED SLAT WITHOUT HOLE		10PCS
I	BED SLAT WITH HOLES		3PCS
J	BED SLAT SUPPORT		6PCS
K	FOOTBOARD LEG		2PCS
L	CENTER RAIL		2PCS
M	CENTER RAIL SUPPORT		2PCS
HB	300843KW (B1) FROM BOX 1 HEADBOARD COMPLETE		1PC
ER 1	300843KW (B2) FROM BOX 2 WING COMPLETE		1PC
ER 2	300843KW (B2) FROM BOX 2 WING COMPLETE		1PC

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 300843KW (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.
















### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 300843KW (B3)

1	<b>ALLEN WRENCH</b> (Φ6 - BLK)		1PC
2	<b>BOLT 1</b> (Φ6 X 30mm - RBW)		4PCS
3	<b>BOLT 2</b> (Φ6 X 45mm - RBW)		12PCS
4	<b>BOLT 3</b> (Φ6 X 60mm - RBW)		10PCS
5	<b>BOLT 4</b> (Φ6 X 90mm - RBW)		8PCS
6	<b>SHORT FLAT HEAD SCREW</b> (Φ4 X 16mm - RBW)		8PCS
7	<b>MEDIUM FLAT HEAD SCREW</b> (Φ4 X 32mm - RBW)		28PCS
8	<b>LONG FLAT HEAD SCREW</b> (Φ4 X 45mm - RBW)		4PCS
9	<b>BIG FLAT WASHER</b> (Φ3/8 X 25 X 1 - RBW)		24PCS
10	<b>MEDIUM FLAT WASHER</b> (Φ7 X 19 X 2 - RBW)		24PCS
11	<b>SMALL FLAT WASHER</b> (Φ6 X 13 X 1 - RBW)		4PCS
12	<b>LOCK WASHER</b> (Φ6 - RBW)		24PCS
13	<b>LEVELER</b> (Φ6 X 23mm - RBW)		6PCS

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




ITEM: **300843KW (B1-B3)**




## ASSEMBLY INSTRUCTIONS

### STEP 1

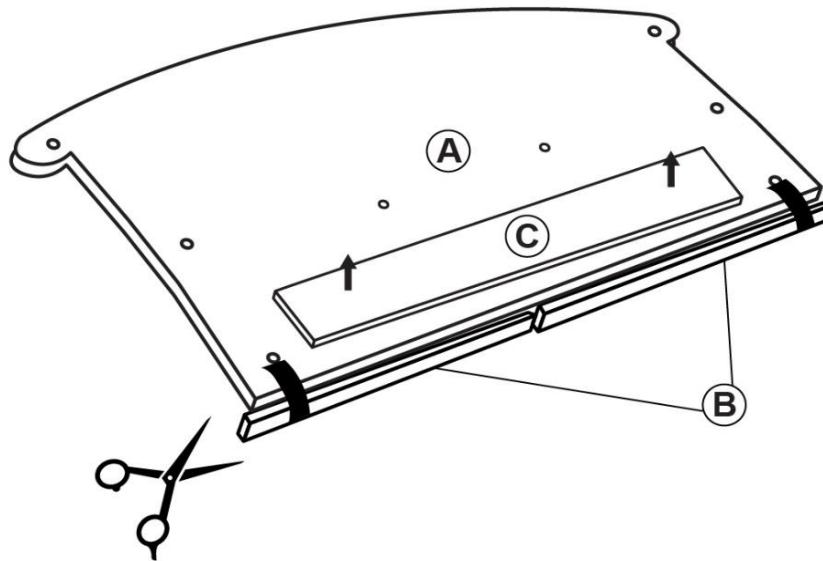


### STEP 2

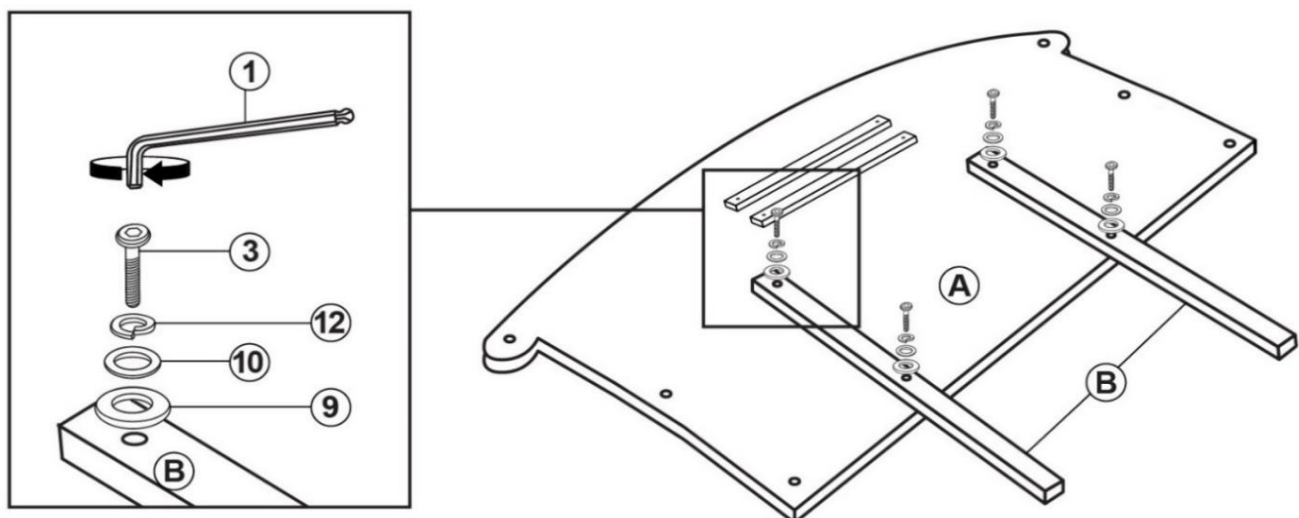


**ASSEMBLY INSTRUCTIONS**

**STEP 3**

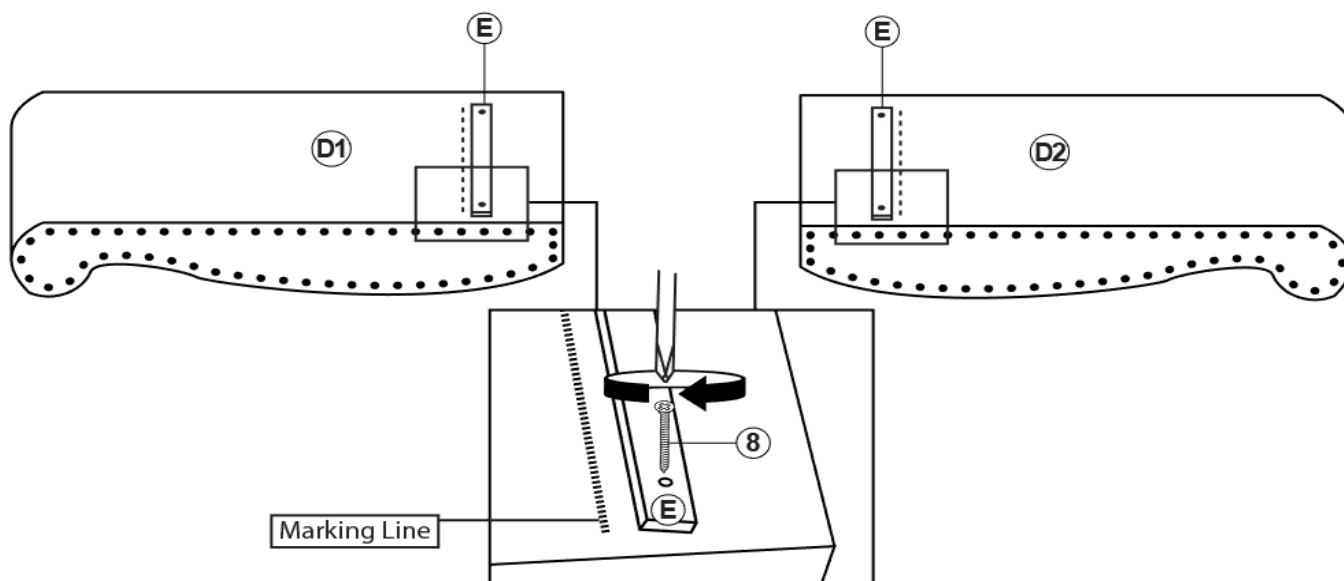

\*Assemble wing support at the bottom of the marking line.

**STEP 4**

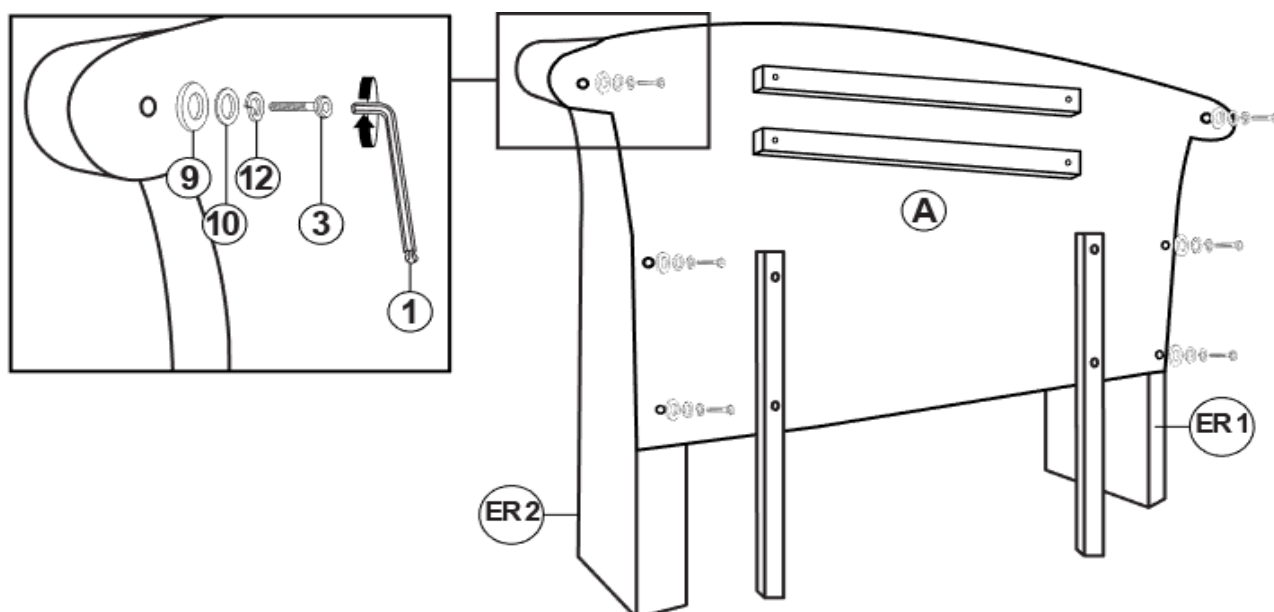


# ITEM: 300843KW (B1-B3)




## ASSEMBLY INSTRUCTIONS

### STEP 5

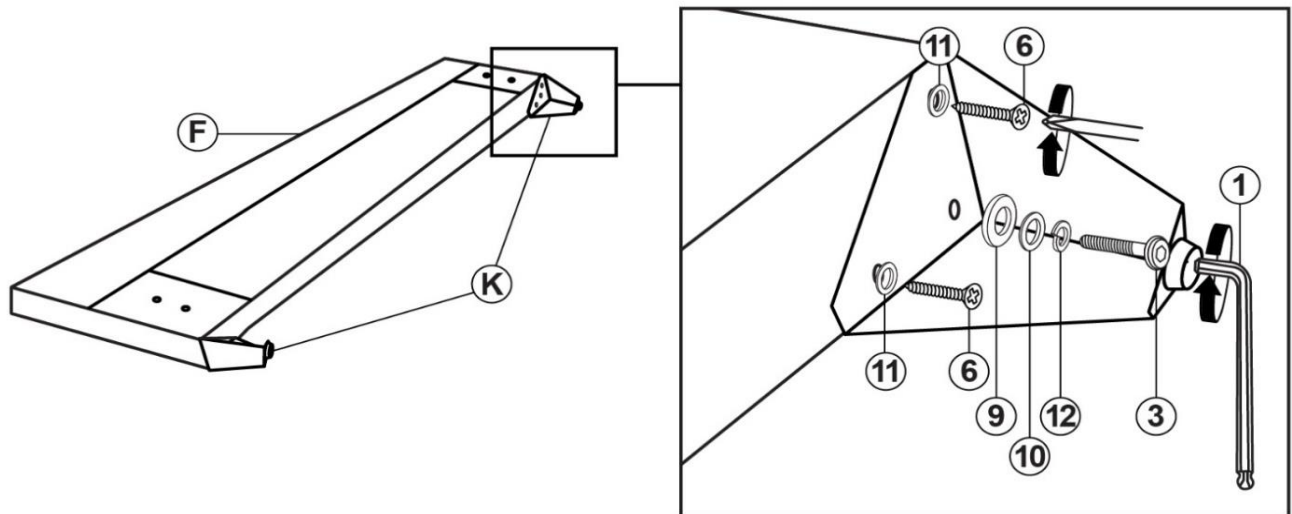

### STEP 6

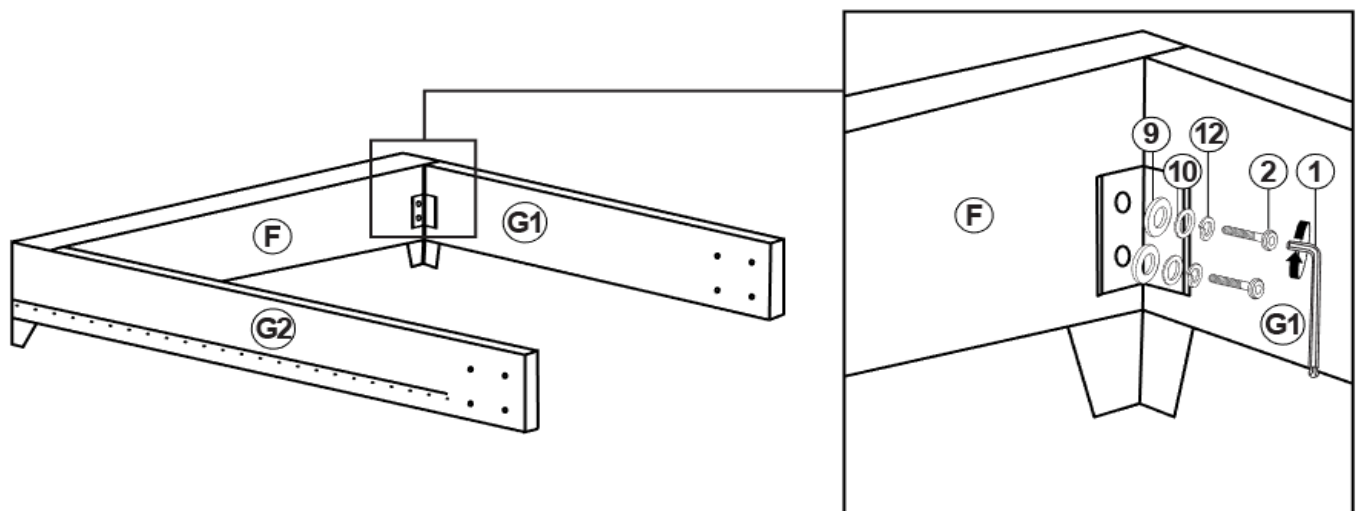


ITEM: **300843KW (B1-B3)**




## ASSEMBLY INSTRUCTIONS

### STEP 7

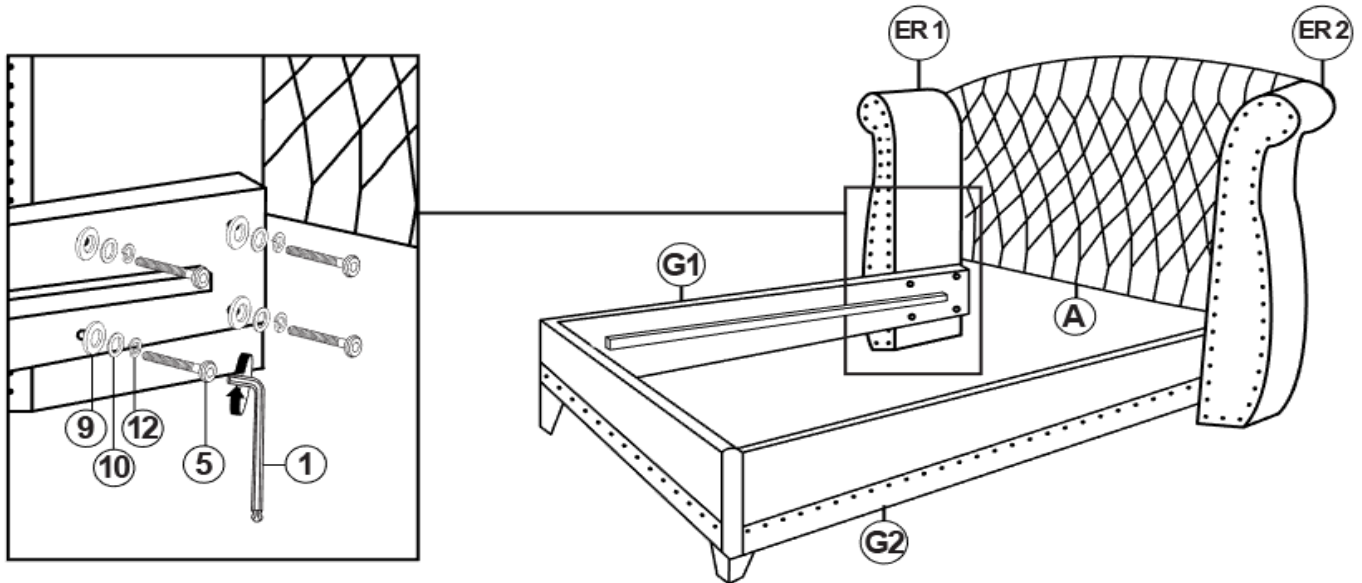

### STEP 8


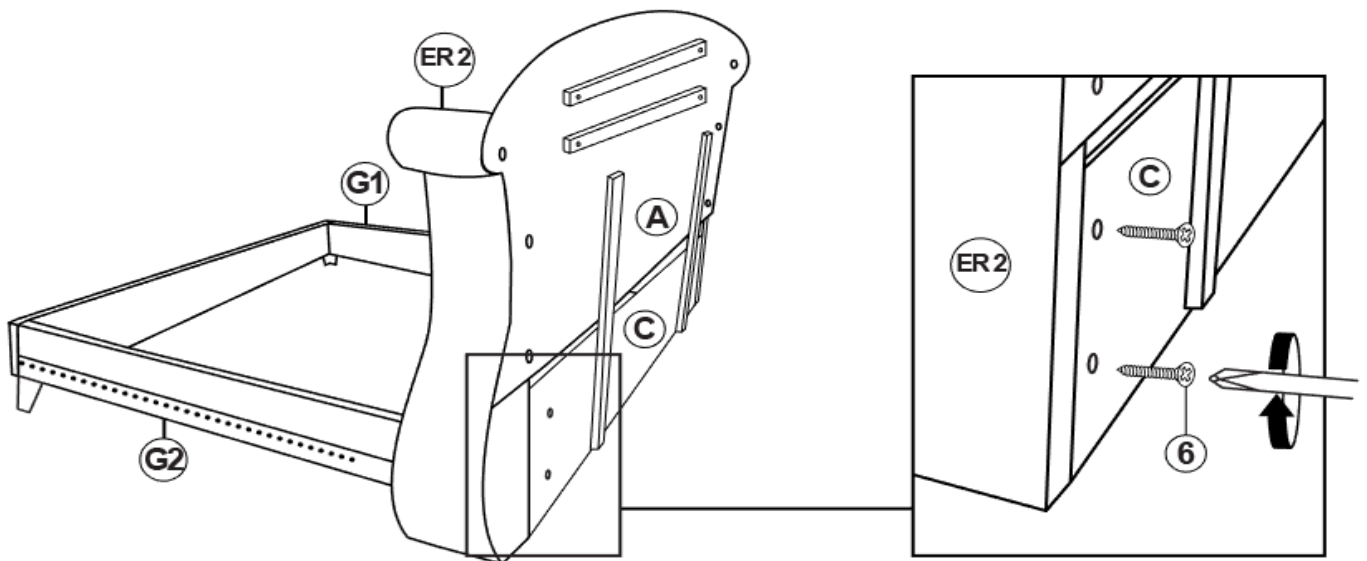


# ITEM: 300843KW (B1-B3)





## ASSEMBLY INSTRUCTIONS

### STEP 9

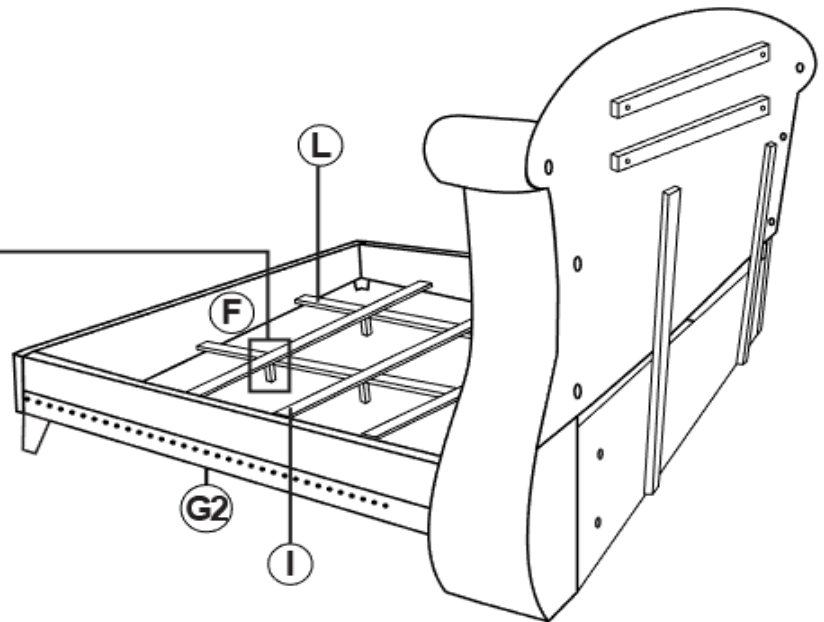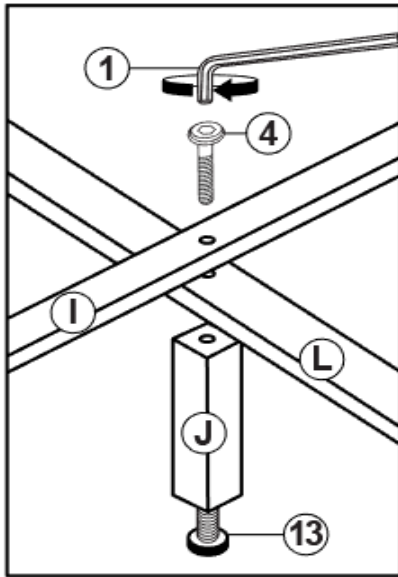

### STEP 10

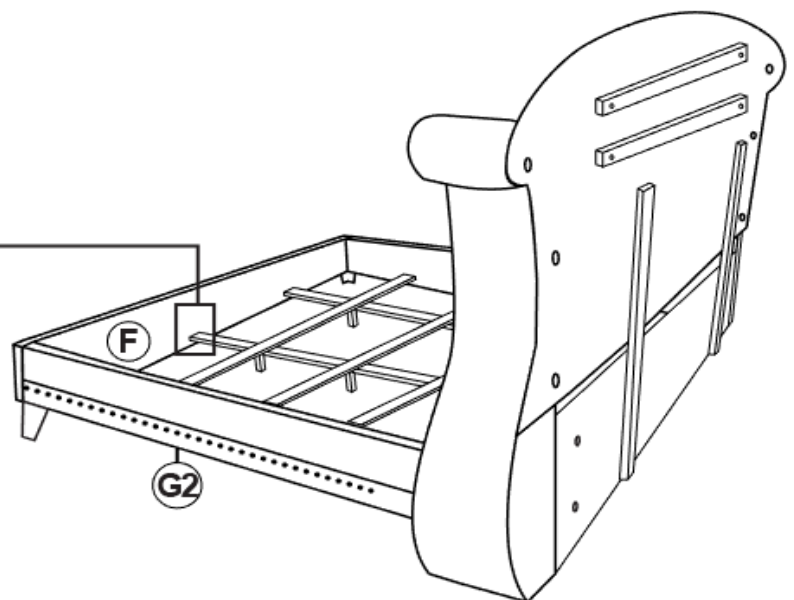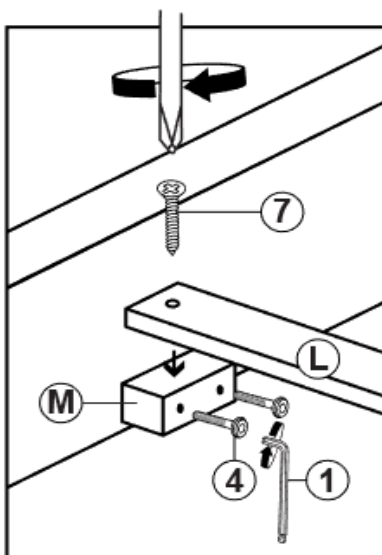


ITEM: **300843KW (B1-B3)**





## ASSEMBLY INSTRUCTIONS

### STEP 11

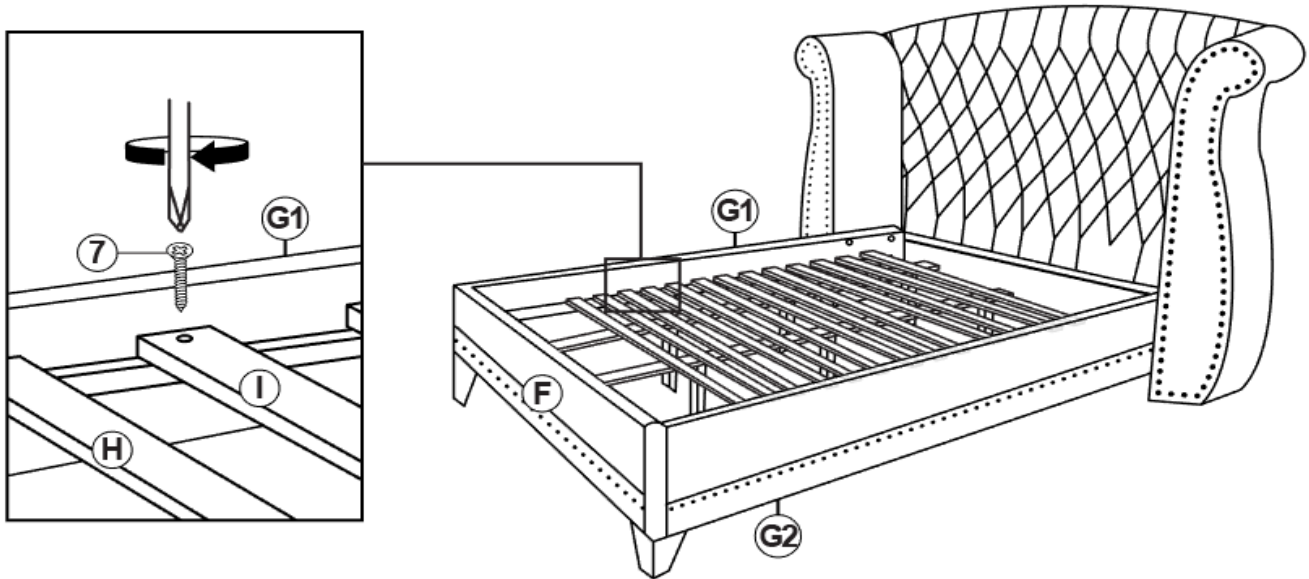


### STEP 12 **COMPLETE**

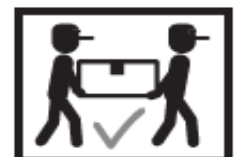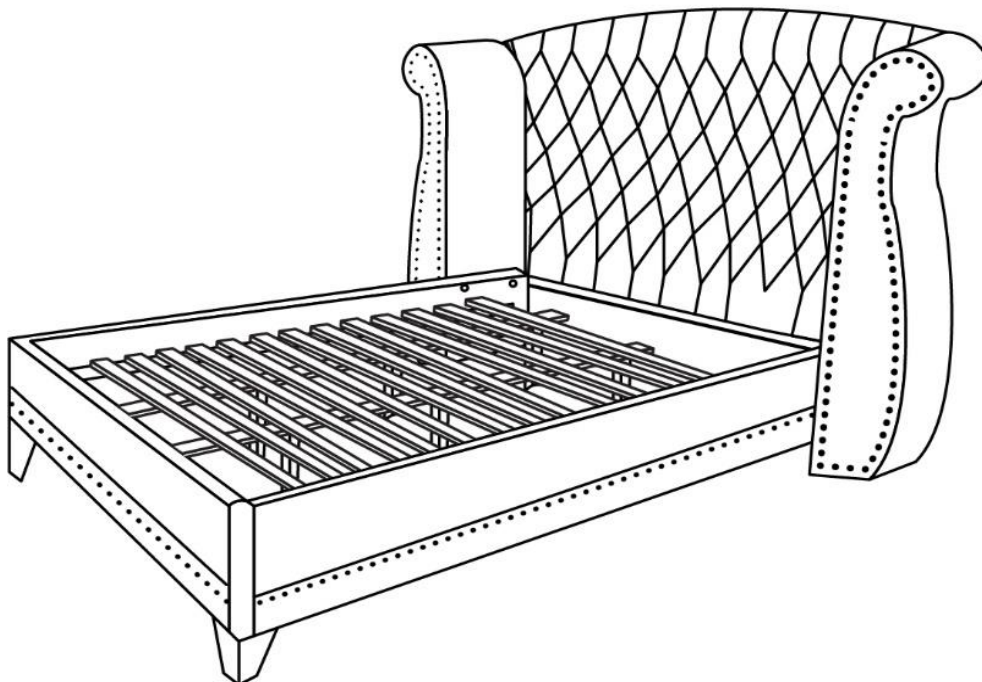

ITEM: **300843KW (B1-B3)**



Inner Size : 73"W x 86.00"D

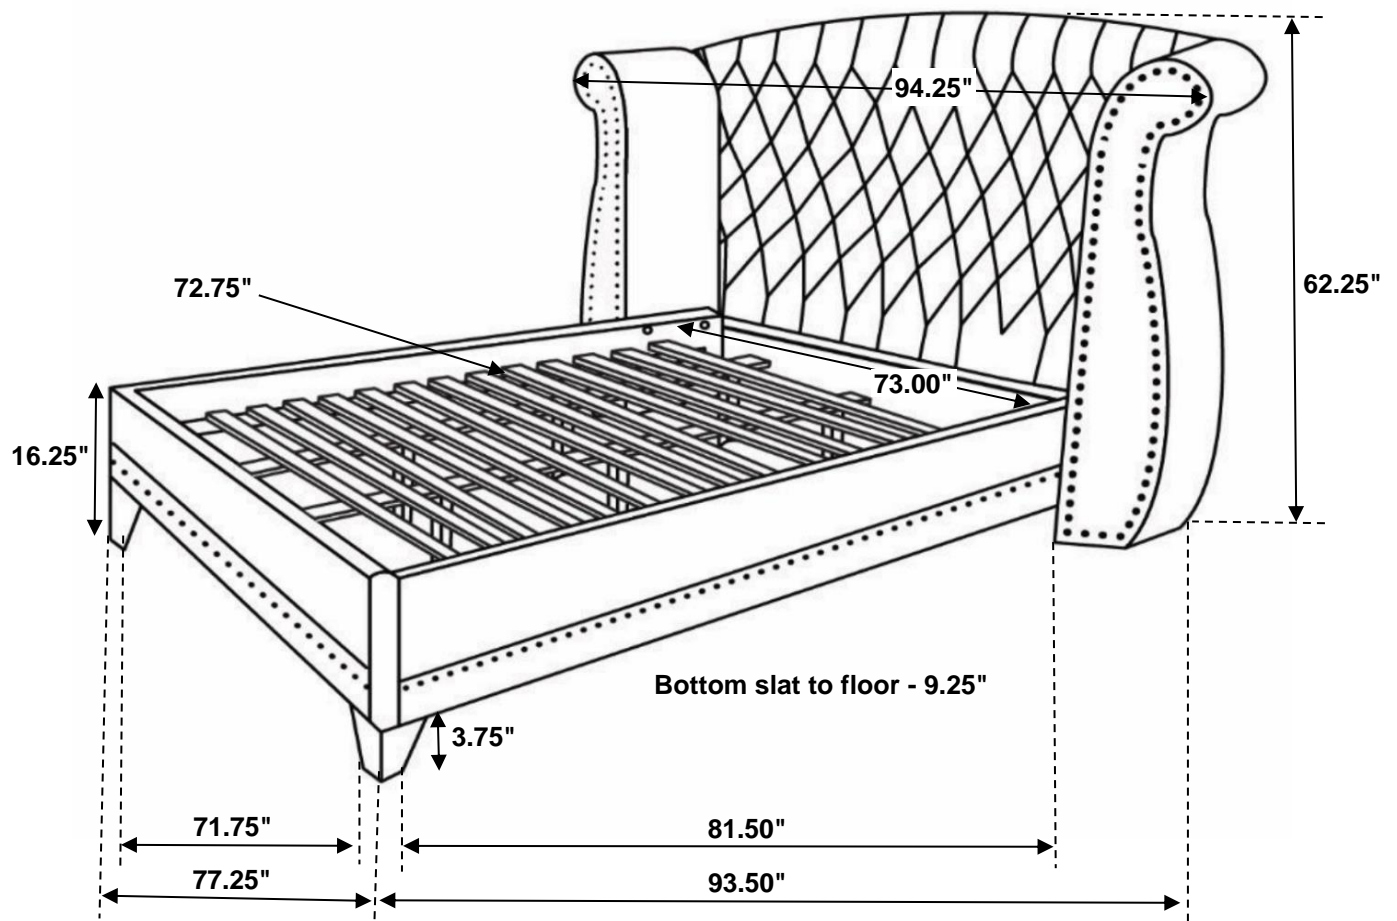

Note : Dimension tolerance  $\pm 5\%$