

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**315918GRYQ(B1&B2)**  
**Queen Bed**

# ITEM: 315918GRYQ(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

45 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

|   |                                        |  |      |   |                          |  |       |
|---|----------------------------------------|--|------|---|--------------------------|--|-------|
| A | HEADBOARD PANEL                        |  | 1PC  | J | WOODEN SUPPORT           |  | 2PCS  |
| B | LEFT HEADBOARD LEG                     |  | 1PC  | K | BED SLAT                 |  | 4PCS  |
| C | RIGHT HEADBOARD LEG                    |  | 1PC  | L | BED SLAT SUPPORT         |  | 4PCS  |
| D | FOOTBOARD FOOT                         |  | 2PCS | M | SLAT CONNECTOR           |  | 22PCS |
| E | BOTTOM PANEL WITH HOLE                 |  | 2PCS | N | SLAT CONNECTOR WITH HOLE |  | 2PCS  |
| F | BOTTOM PANEL                           |  | 2PCS | O | LEFT TUBE                |  | 1PC   |
| G | REAR TUBE                              |  | 1PC  | P | RIGHT TUBE               |  | 1PC   |
| H | FRONT TUBE WITH MATTRESS LIFTING STRIP |  | 1PC  | Q | CROSSBAR                 |  | 1PC   |
| I | MATTRESS SUPPORT                       |  | 2PCS |   |                          |  |       |

### B2 (BOX 2)

|   |                 |  |      |    |                    |  |       |
|---|-----------------|--|------|----|--------------------|--|-------|
| R | GAS SPRING      |  | 2PCS | A2 | LEFT BED RAIL      |  | 1PC   |
| S | RIGHT MECHANISM |  | 1PC  | B2 | RIGHT BED RAIL     |  | 1PC   |
| T | LEFT MECHANISM  |  | 1PC  | C2 | CENTER BAR         |  | 1PC   |
| U | FRAME SUPPORT   |  | 2PCS | D2 | BED SLAT           |  | 11PCS |
| V | FOOTBOARD PANEL |  | 1PC  | E2 | BED SLAT WITH HOLE |  | 1PC   |

# ITEM: 315918GRYQ(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.












### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 315918GRYQ (B2)

|    |                                         |                                                                                     |       |    |                                            |                                                                                       |      |
|----|-----------------------------------------|-------------------------------------------------------------------------------------|-------|----|--------------------------------------------|---------------------------------------------------------------------------------------|------|
| 1  | BOLT 1<br>(M8 x 16MM - RBW)             |    | 24PCS | 13 | BIG ALLEN WRENCH<br>(M5 x 65MM - BLK)      |    | 1PC  |
| 2  | BOLT 2<br>(M8 x 30MM - RBW)             |    | 8PCS  | 14 | SMALL ALLEN WRENCH<br>(M4 x 100MM - BLK)   |    | 1PC  |
| 3  | BOLT 3<br>(M8 x 40MM - RBW)             |   | 4PCS  | 15 | L-BRACKET<br>(RBW)                         |   | 4PCS |
| 4  | BOLT 4<br>(M6 x 15MM - RBW)             |  | 18PCS | 16 | SMALL HEX NUT<br>(M6 - RBW)                |  | 4PCS |
| 5  | BOLT 5<br>(M6 x 30MM - RBW)             |  | 3PCS  | 17 | METAL AIRHOLES                             |  | 4PCS |
| 6  | BOLT 6<br>(M6 x 40MM - RBW)             |  | 4PCS  | 18 | PAN HEAD SCREW<br>(M4 x 25MM - BLK)        |  | 8PCS |
| 7  | BOLT 7<br>(M6 x 60MM - RBW)             |  | 4PCS  | 19 | LONG FLAT HEAD SCREW<br>(M4 x 32MM - BLK)  |  | 8PCS |
| 8  | SMALL LOCK WASHER<br>(M6 x 12MM - RBW)  |  | 25PCS | 20 | SMALL WRENCH<br>(10MM - RBW)               |  | 1PC  |
| 9  | SMALL FLAT WASHER<br>(M6 x 13MM - RBW)  |  | 16PCS | 21 | SHORT FLAT HEAD SCREW<br>(M4 x 16MM - RBW) |  | 2PCS |
| 10 | MEDIUM FLAT WASHER<br>(M6 x 19MM - RBW) |  | 13PCS | 22 | BIG HEX NUT<br>(M8 - ZINC)                 |  | 4PCS |
| 11 | BIG LOCK WASHER<br>(M8 x 13MM - RBW)    |  | 12PCS | 23 | BIG WRENCH<br>(12.8MM - RBW)               |  | 1PC  |
| 12 | BIG FLAT WASHER<br>(M8 x 22MM - RBW)    |  | 12PCS |    |                                            |                                                                                       |      |

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: **315918GRYQ(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 1

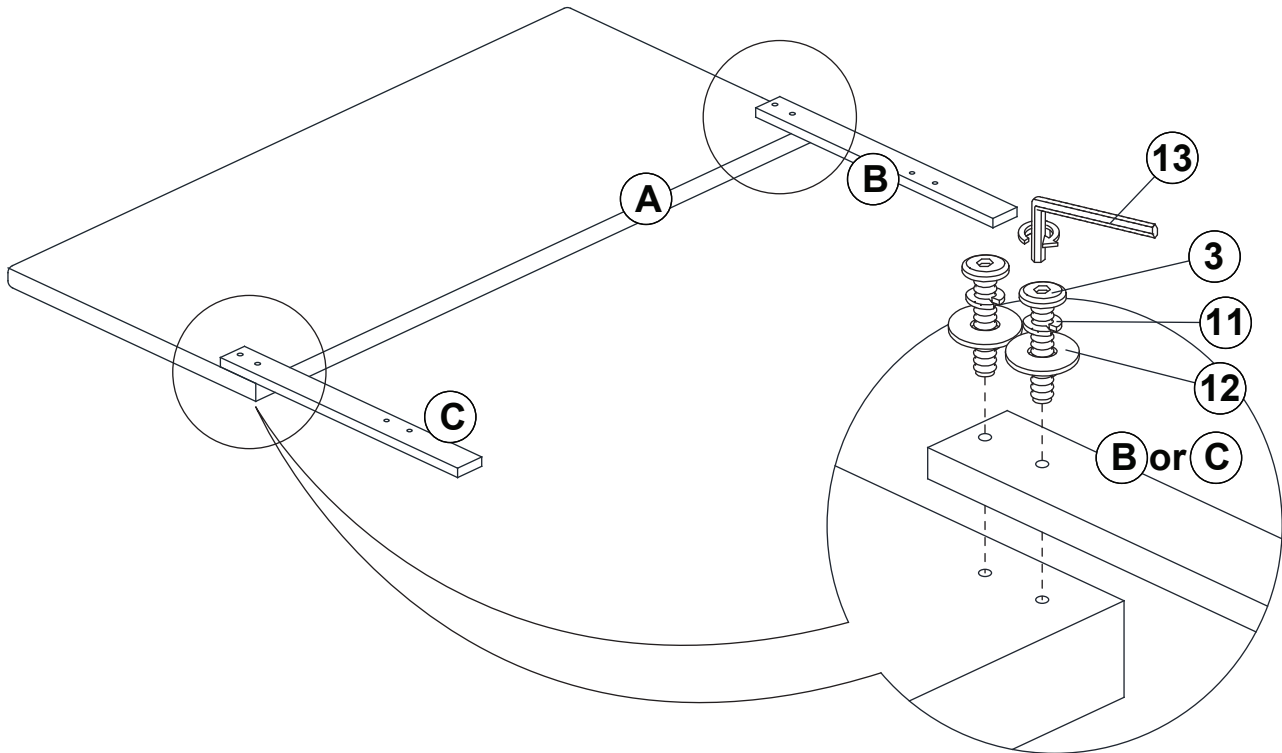

### STEP 2

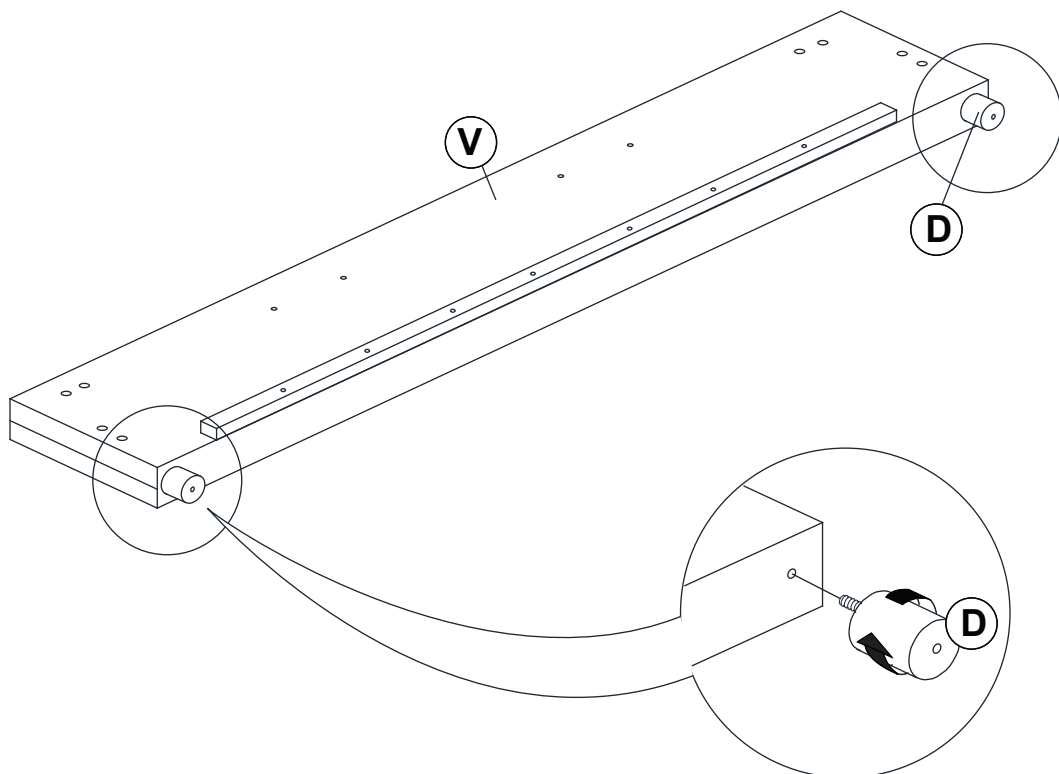


ITEM: **315918GRYQ(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 3

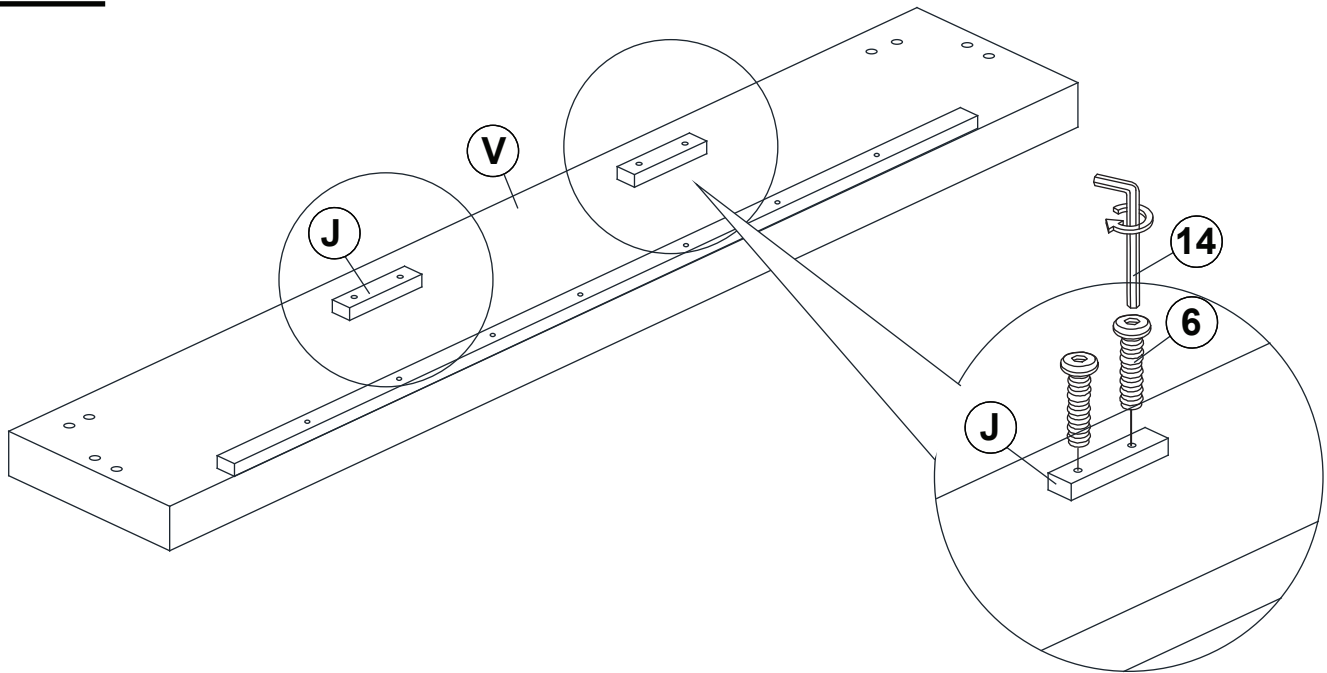

### STEP 4

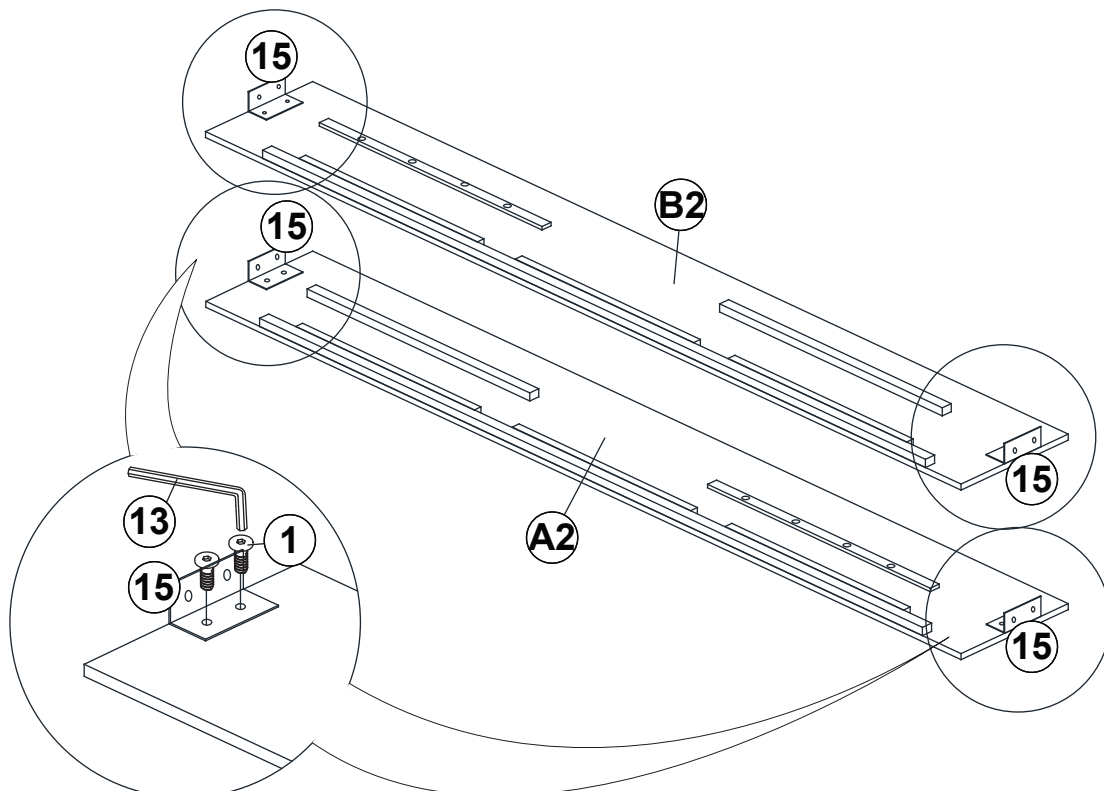


# ITEM: 315918GRYQ(B1&B2)




## ASSEMBLY INSTRUCTIONS

### STEP 5

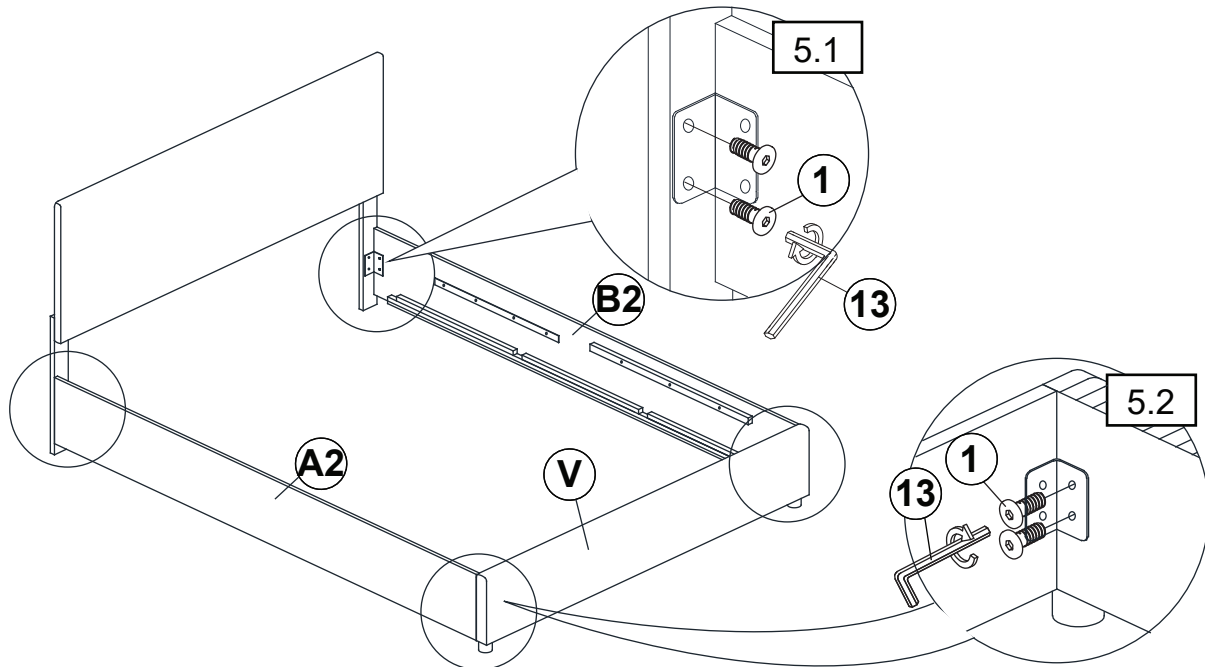

### STEP 6

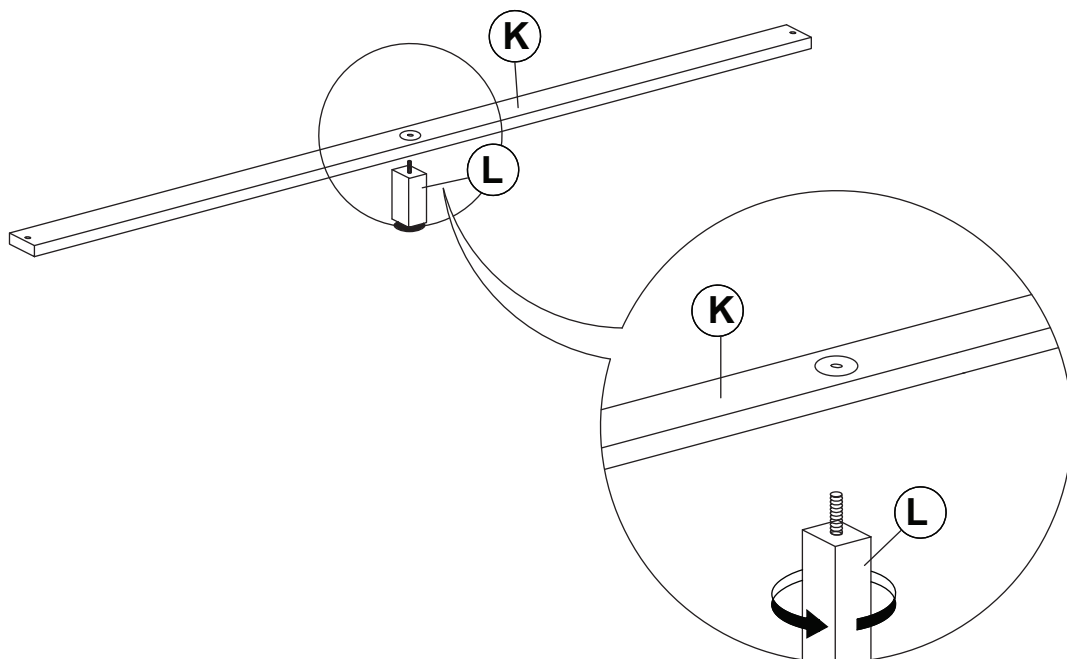


ITEM: **315918GRYQ(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 7

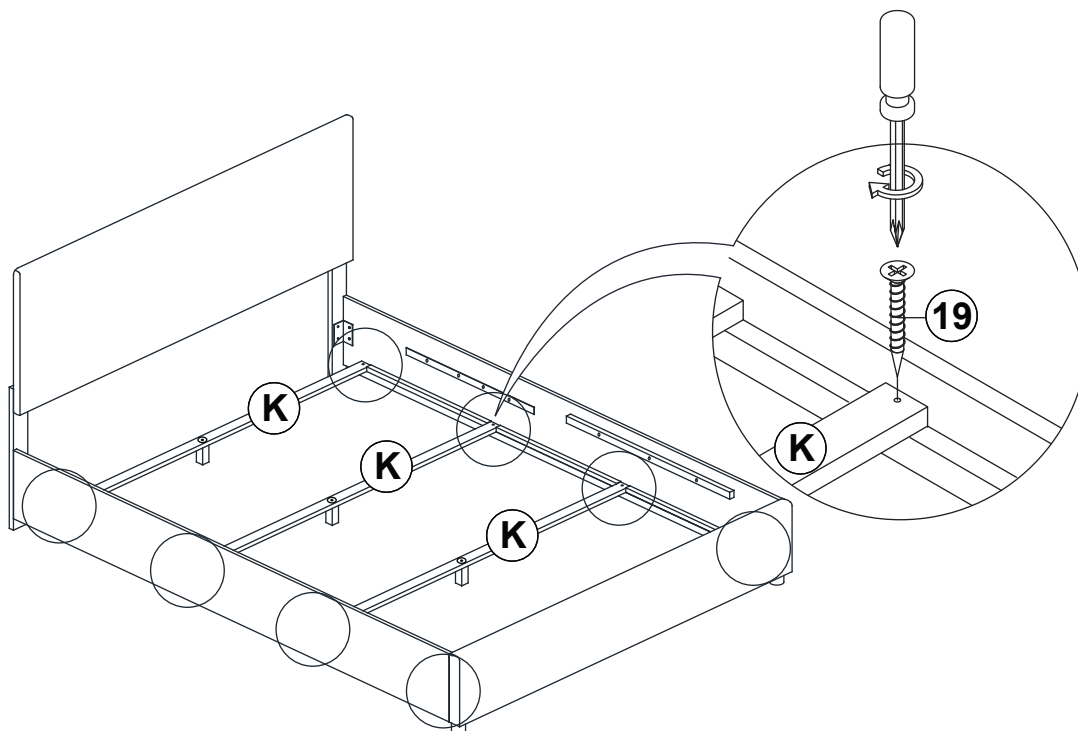

### STEP 8

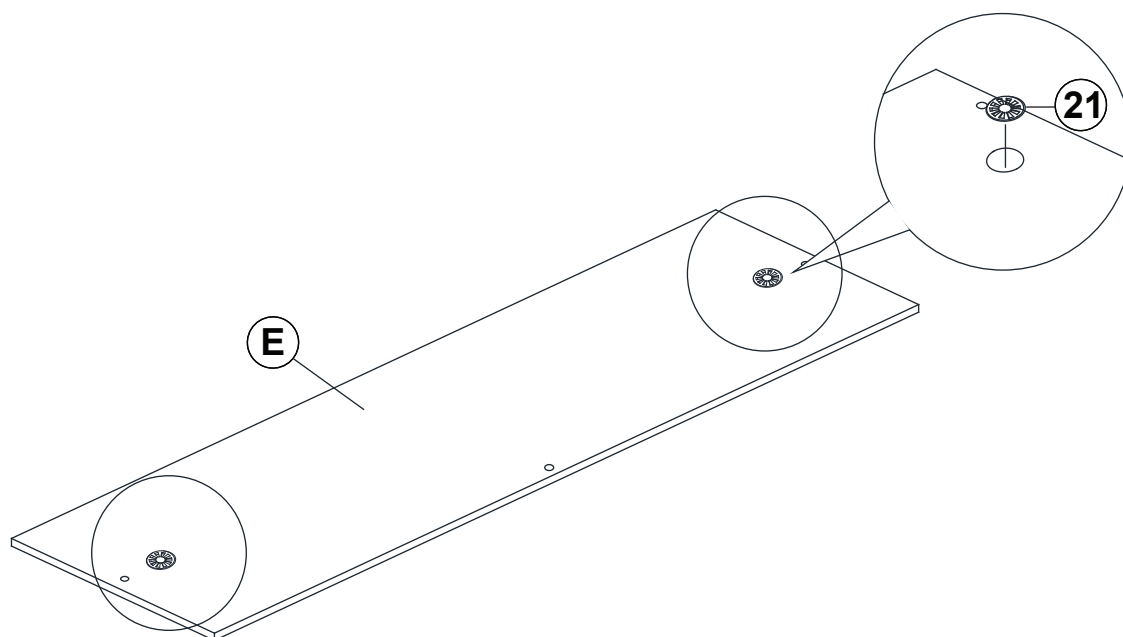


ITEM: **315918GRYQ(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 9

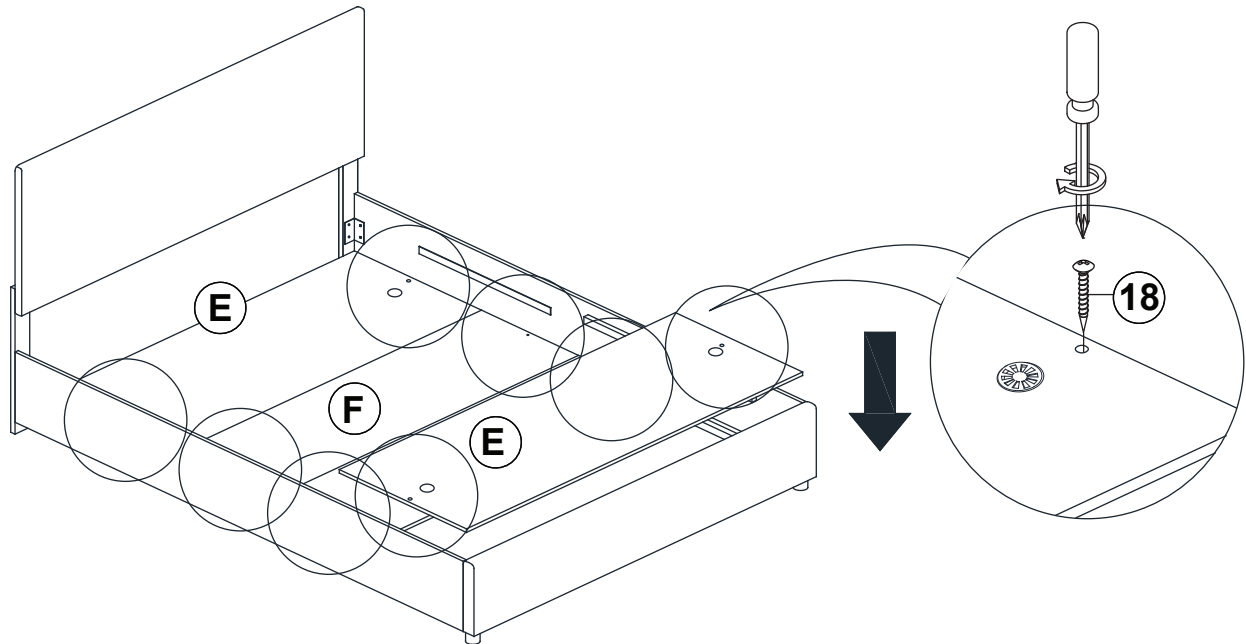

### STEP 10

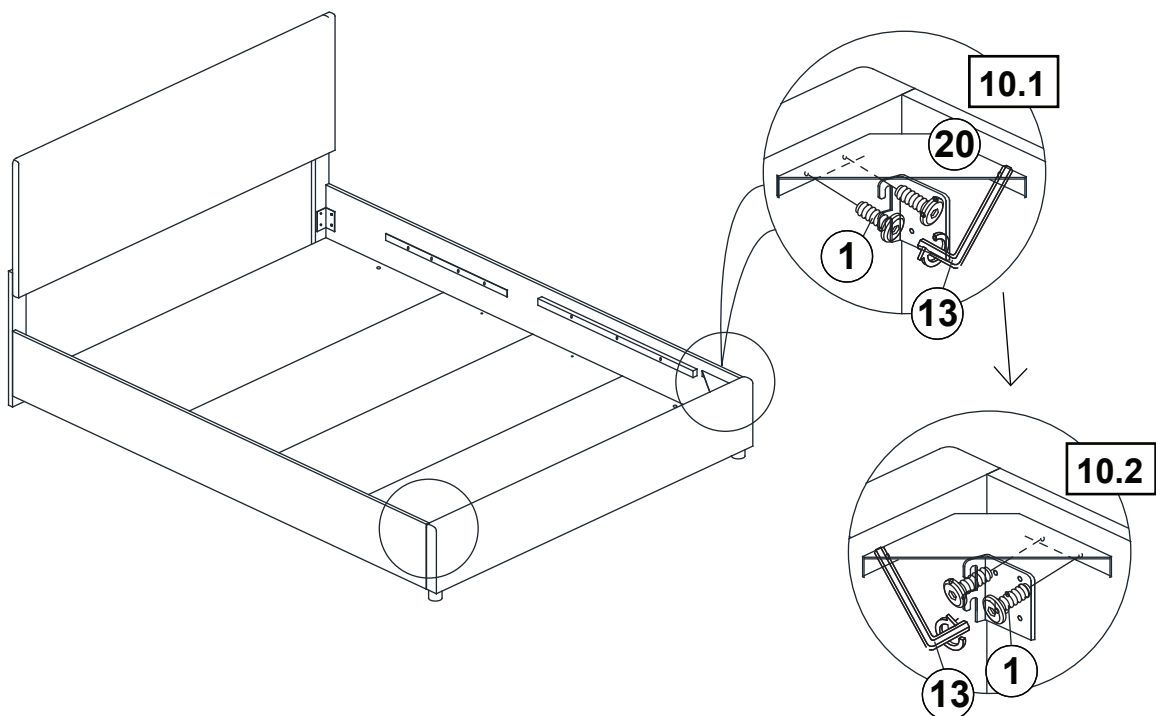




ITEM: **315918GRYQ(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 11

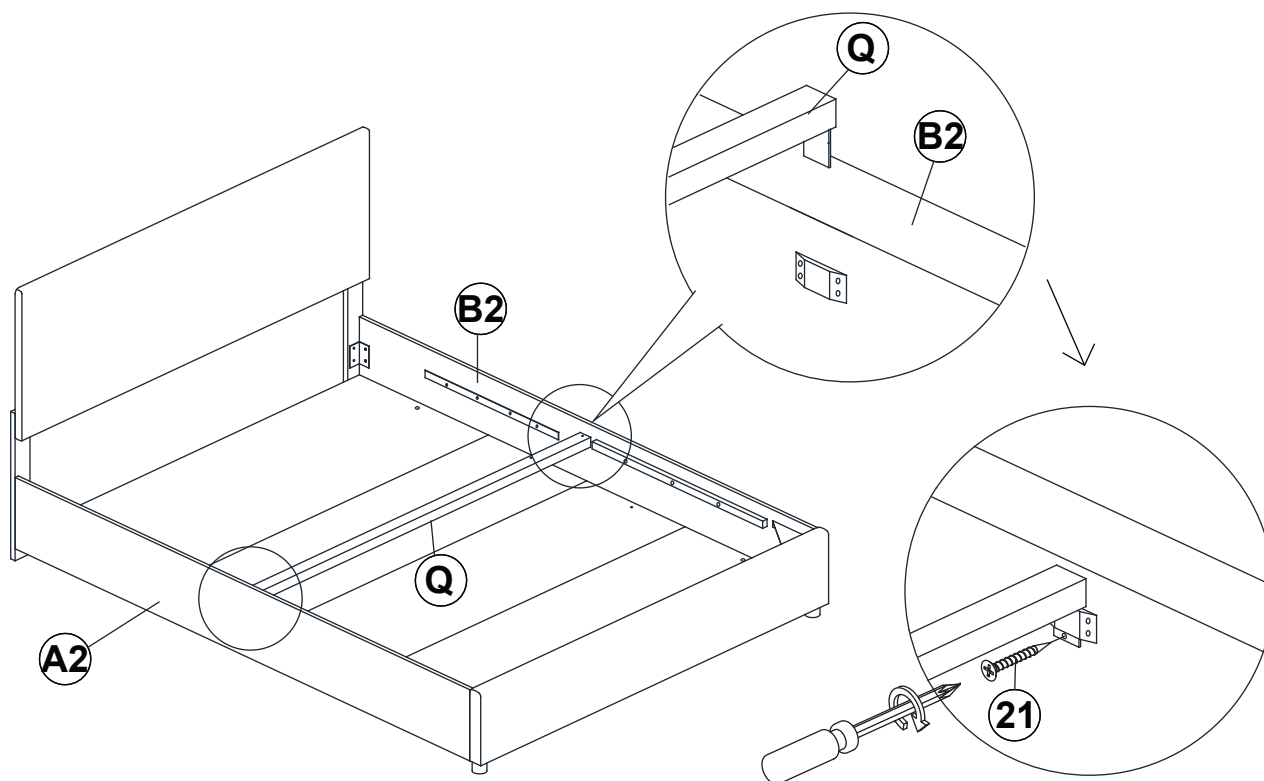

### STEP 12

Push the mechanism before screw.

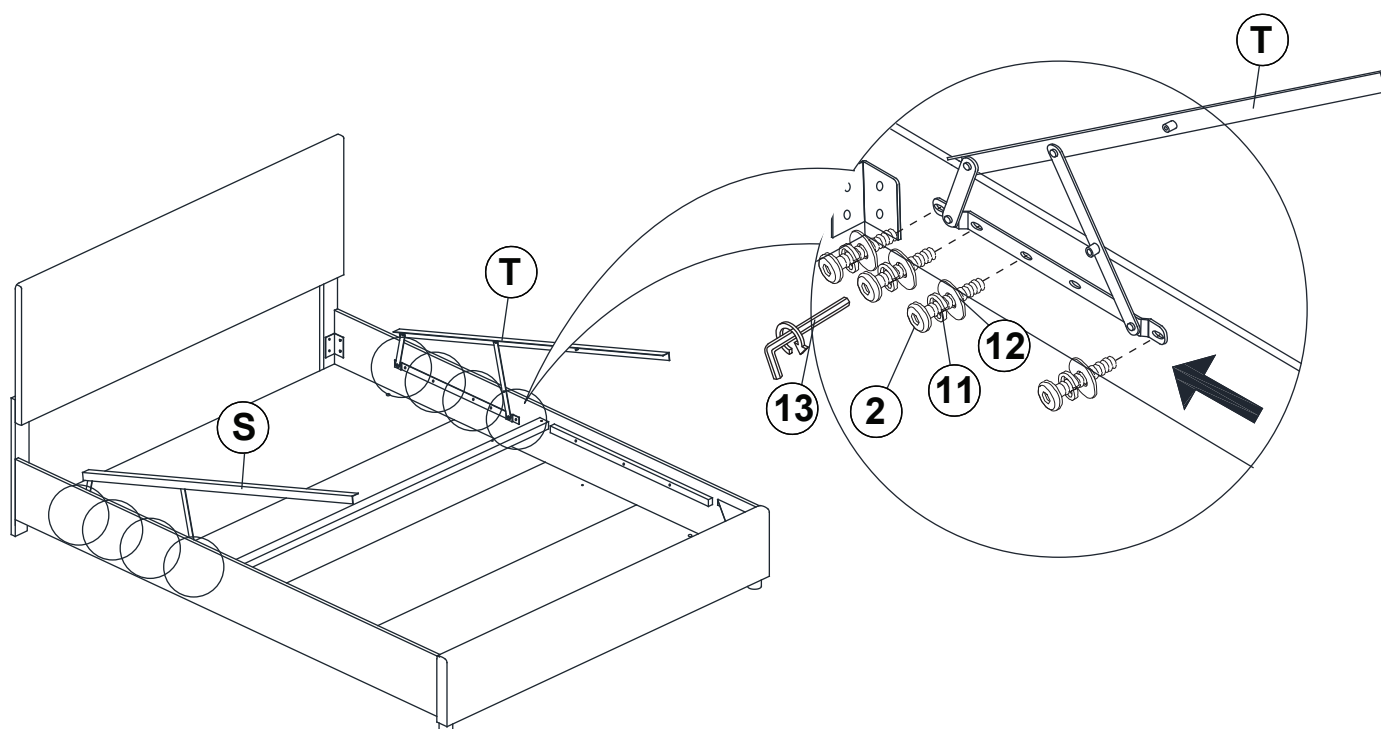


ITEM: **315918GRYQ(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 13

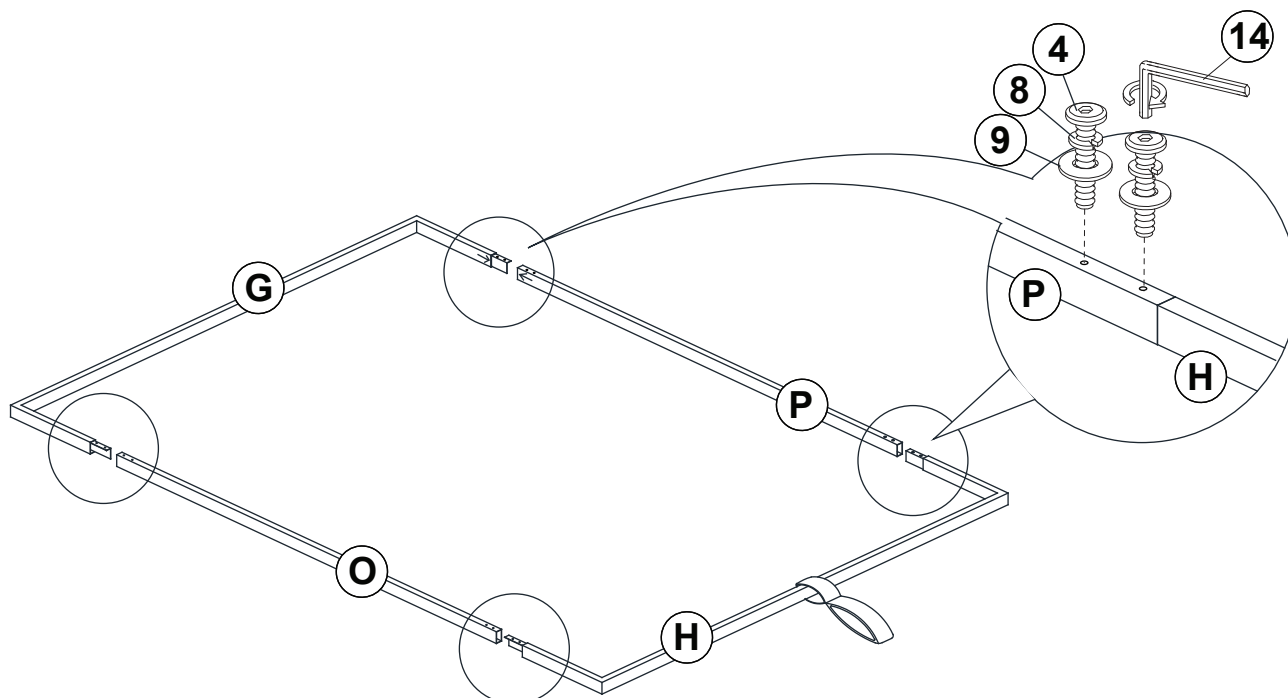

### STEP 14

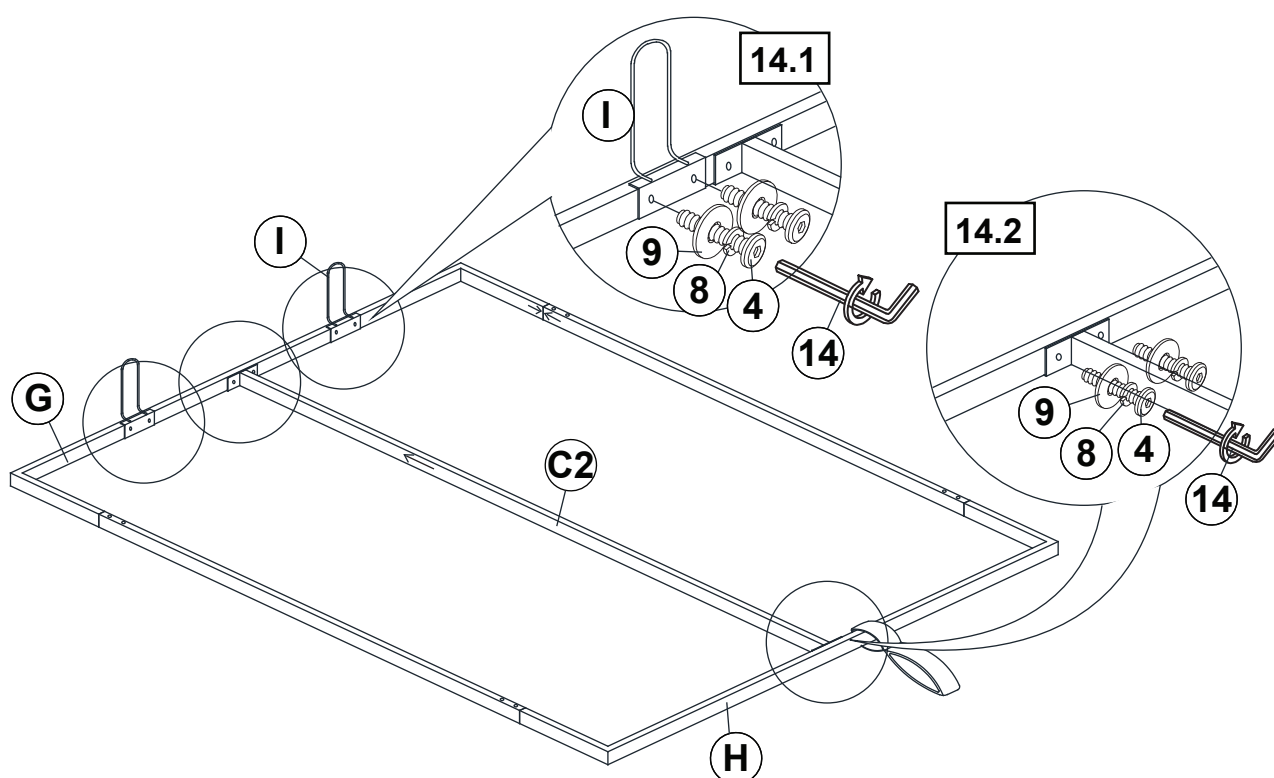


ITEM: **315918GRYQ(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 15

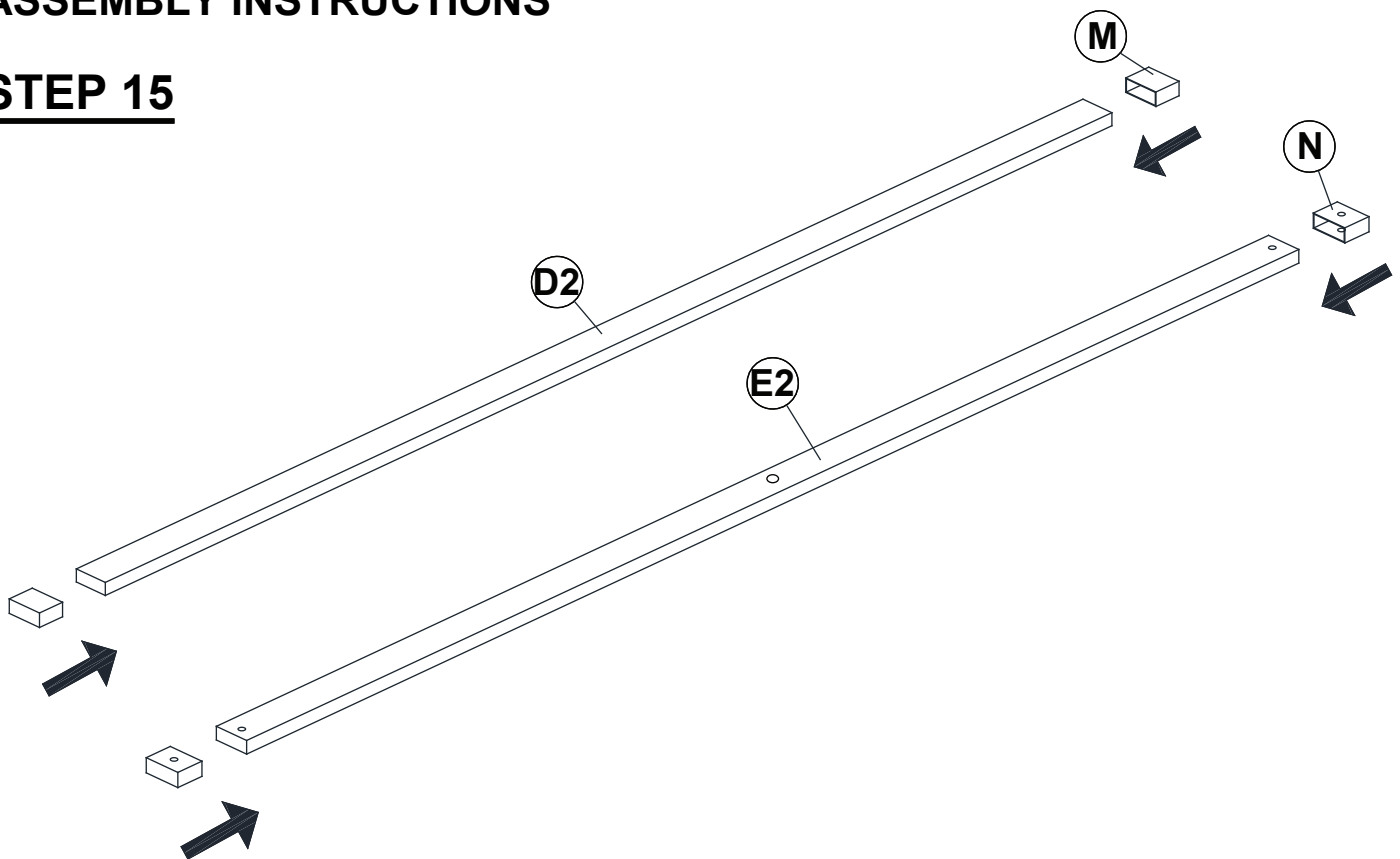

### STEP 16

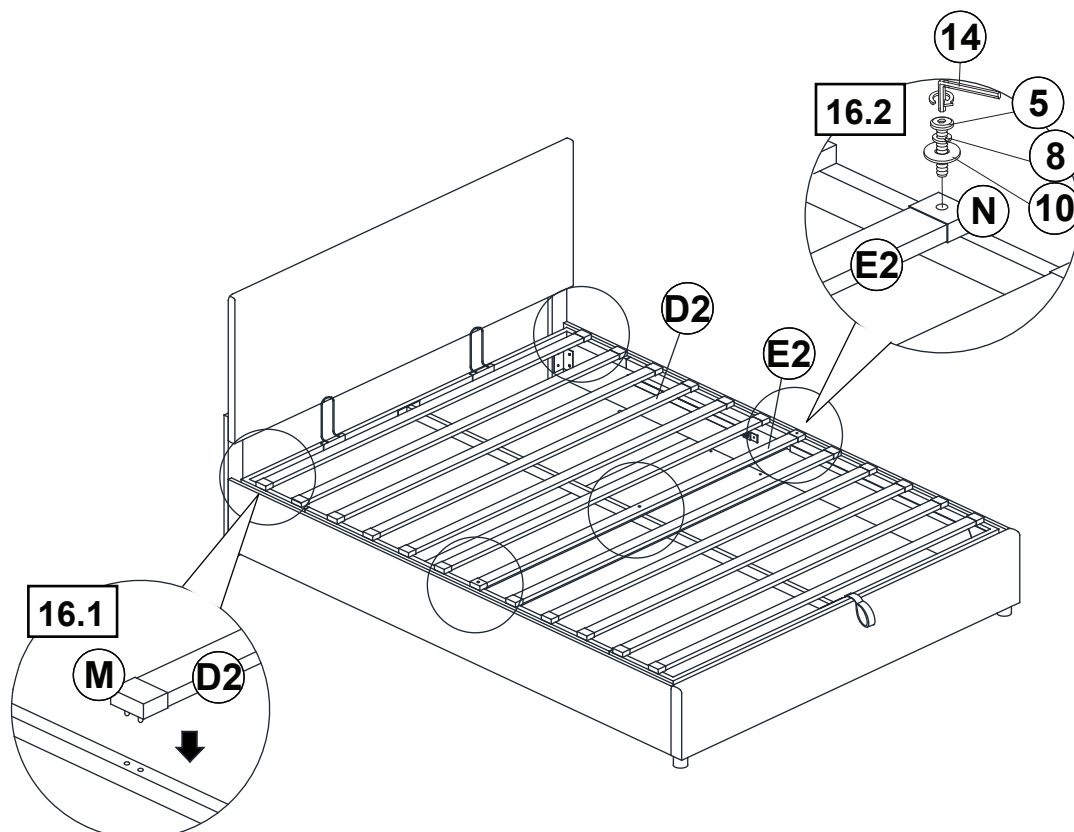


ITEM: **315918GRYQ(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 17

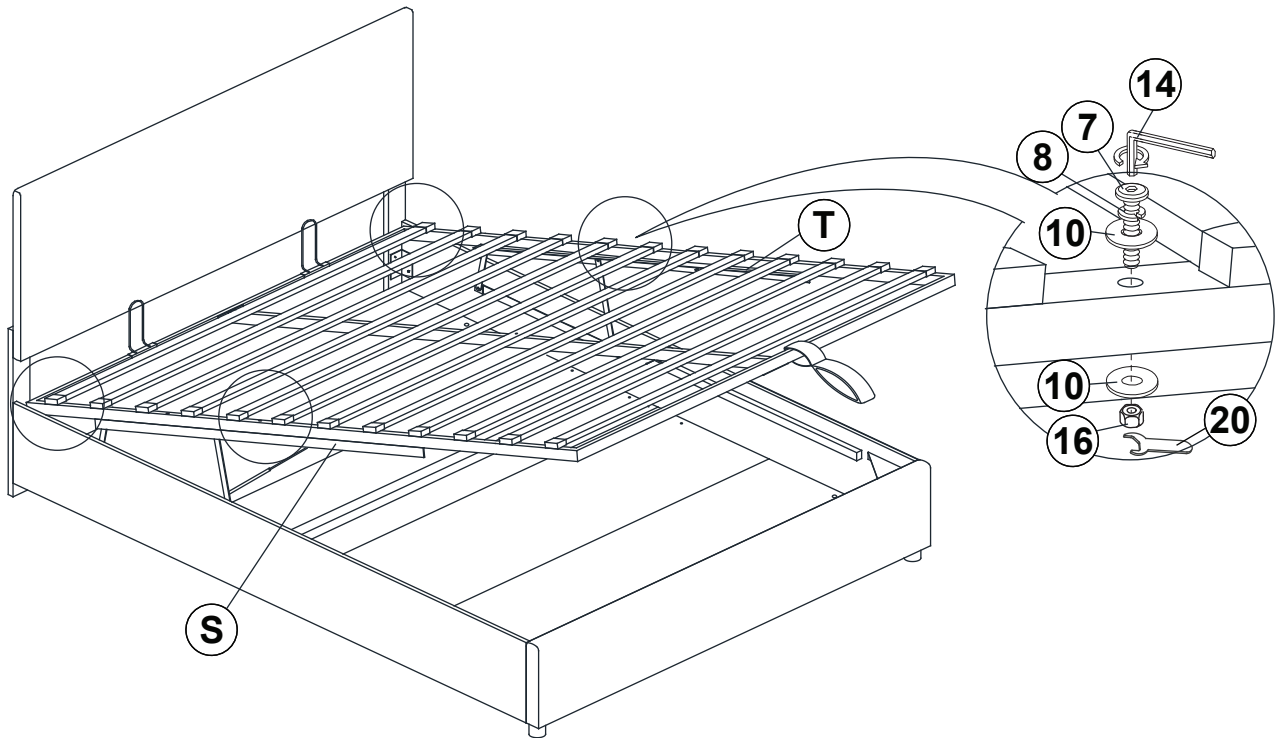

### STEP 18

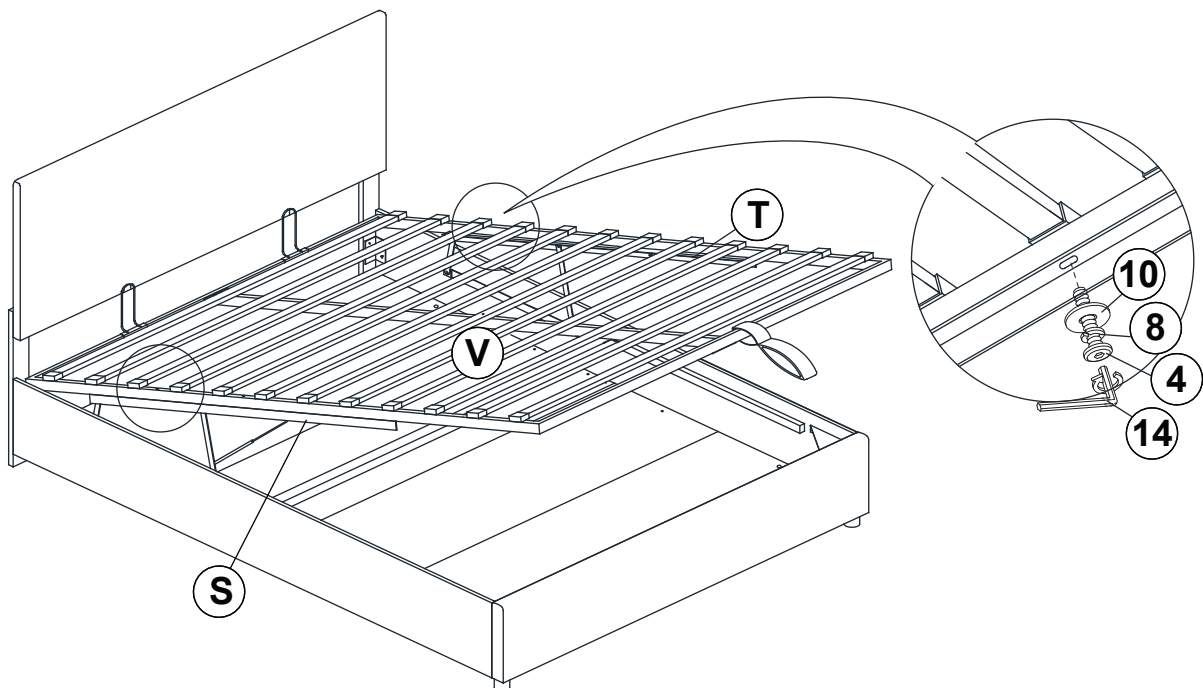


ITEM: **315918GRYQ(B1&B2)**




## ASSEMBLY INSTRUCTIONS

### STEP 19

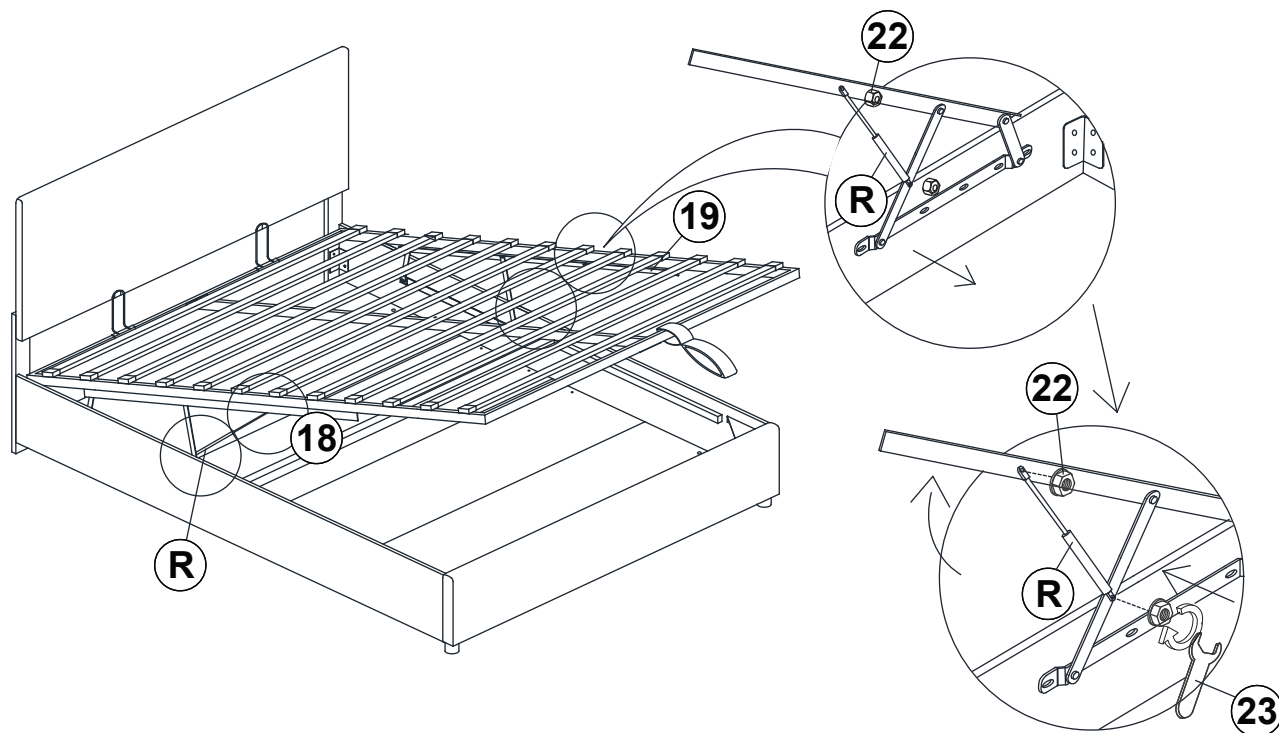


### STEP 20 COMPLETE

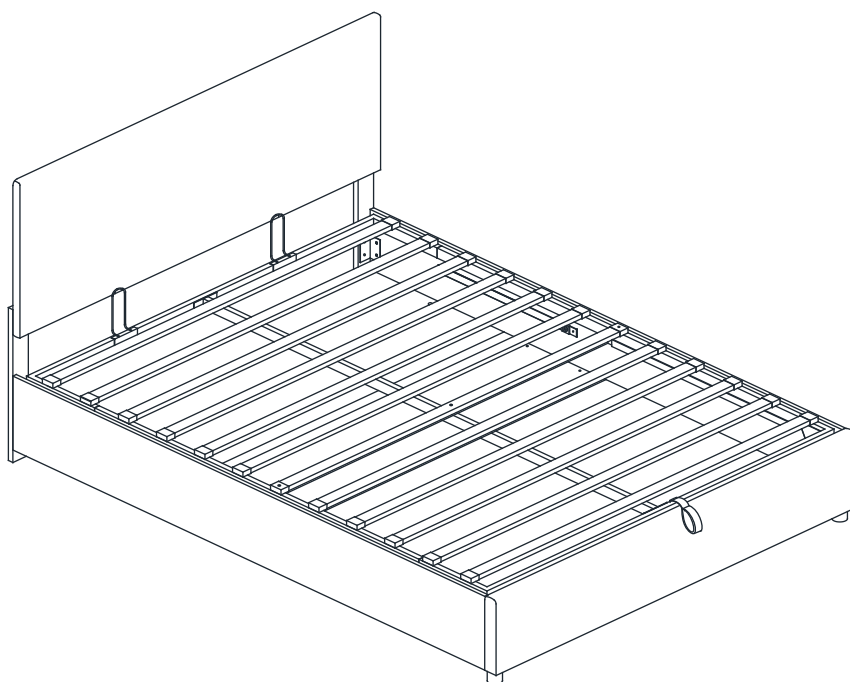

ITEM: **315918GRYQ(B1&B2)**



Inner Size: 60.75"W X 80.25"D

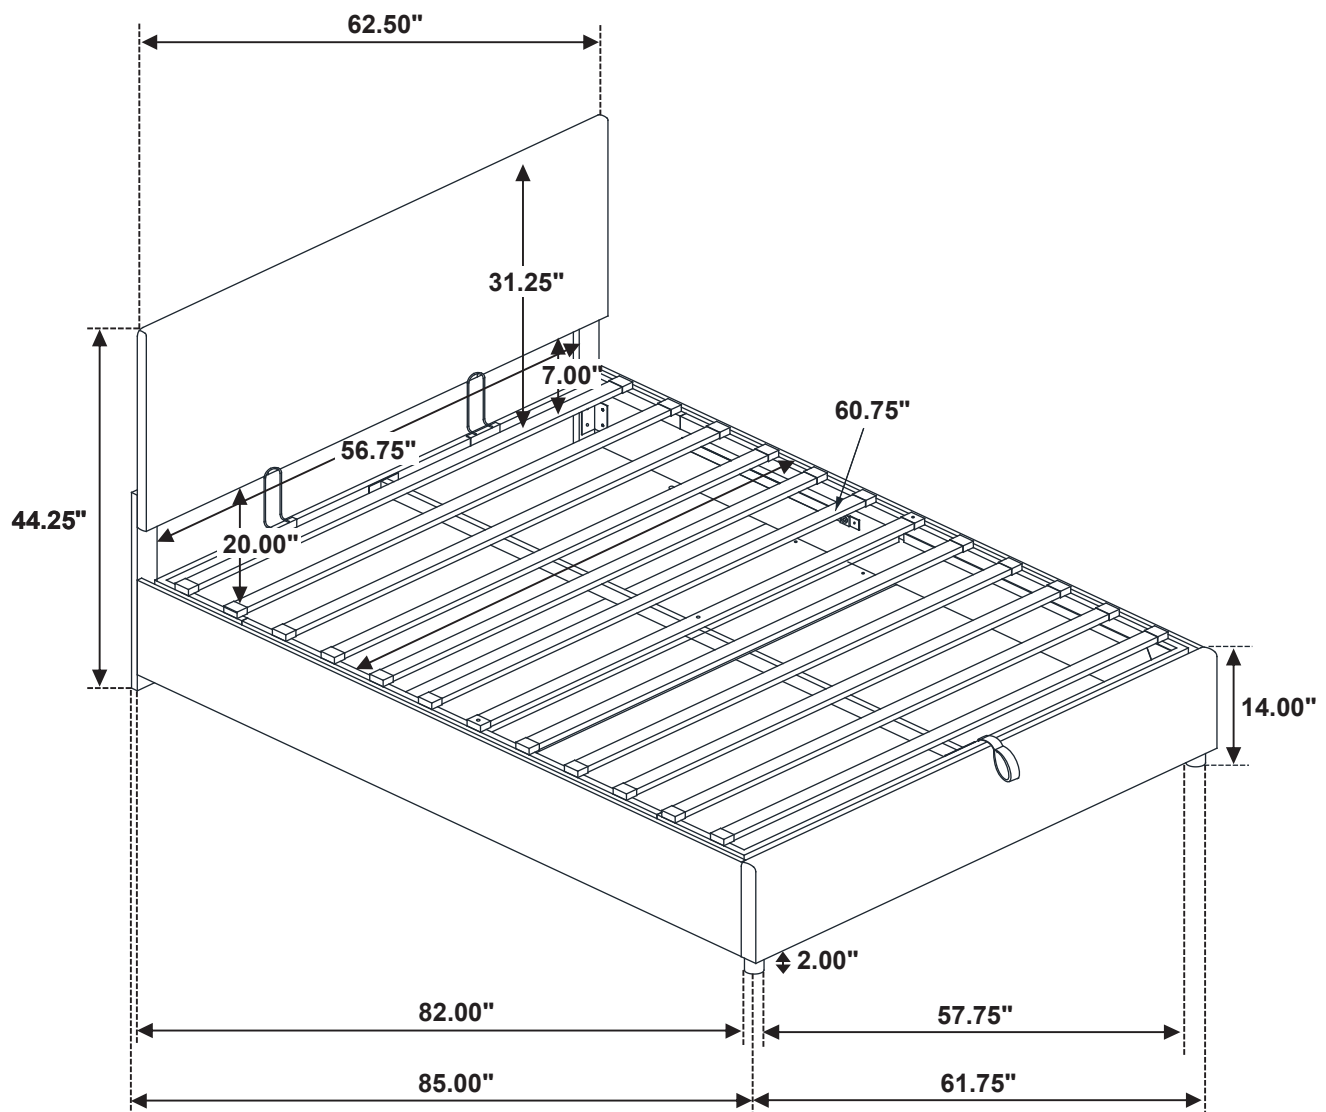

Note : Dimension tolerance  $\pm 5\%$