

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

315923KW (B1&B2) **California King Bed**

ITEM: 315923KW (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD PANEL




1PC

B LEFT HEADBOARD LEG



1PC


C RIGHT HEADBOARD LEG



1PC

B1 (BOX 2)

D FOOTBOARD PANEL




1PC

E FOOTBOARD LEG




2PCS

F LEFT SIDE RAIL




1PC

G RIGHT SIDE RAIL



1PC

H BED SLAT



4PCS

I BED SLAT SUPPORT
WITH LEVELER



8PCS

J USB PLUG



1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 315923KW (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 315923KW (B2)

1	BOLT 1 (M8 x 20MM - RBW)		8PCS	6	FLAT WASHER (M6 x 19MM - RBW)		6PCS
2	BOLT 2 (M6 x 35MM - RBW)		8PCS	7	WOOD DOWEL (M4 x 30MM - BLK)		2PCS
3	BOLT 3 (M6 x 50MM - RBW)		6PCS	8	FLAT HEAD SCREW (M4 x 32MM - BLK)		8PCS
4	BOLT 4 (M6 x 70MM - RBW)		2PCS	9	BIG ALLEN WRENCH (M5 x 65MM)		1 PC
5	LOCK WASHER (M6 x 12MM - RBW)		6PCS	10	SMALL ALLEN WRENCH (M4 x 100MM - BLK)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

ITEM: 315923KW (B1&B2)





ASSEMBLY INSTRUCTIONS

STEP 1

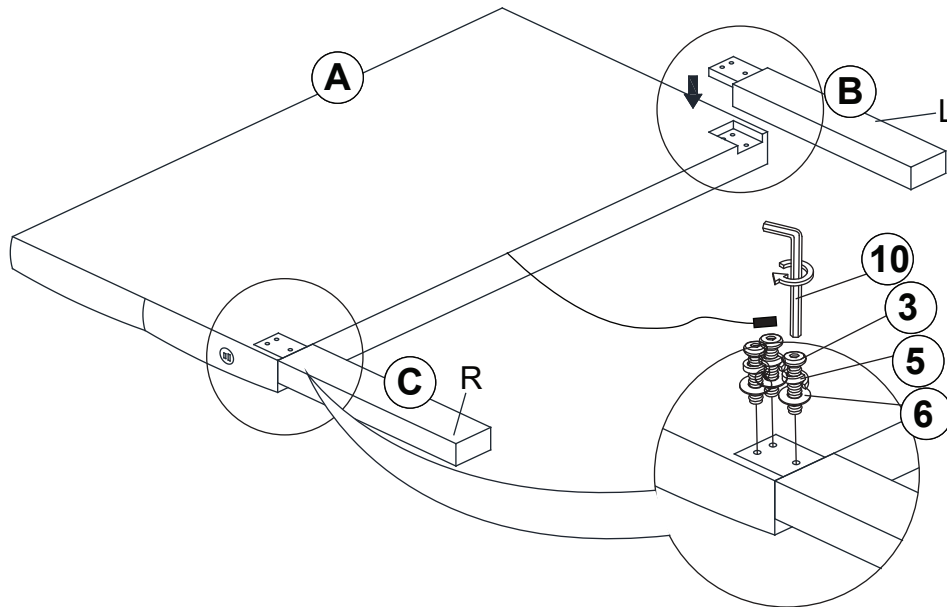

***BACK VIEW**

STEP 2

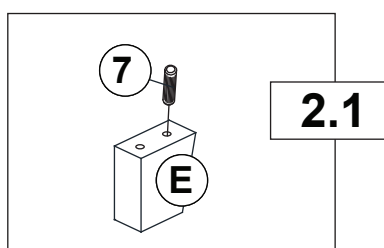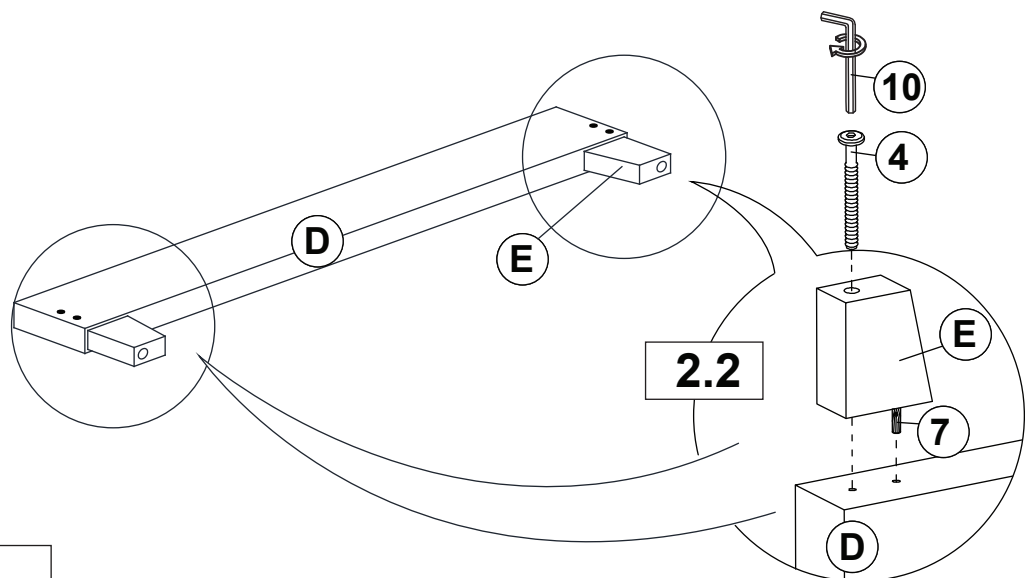


ITEM: 315923KW (B1&B2)




ASSEMBLY INSTRUCTIONS

STEP 3

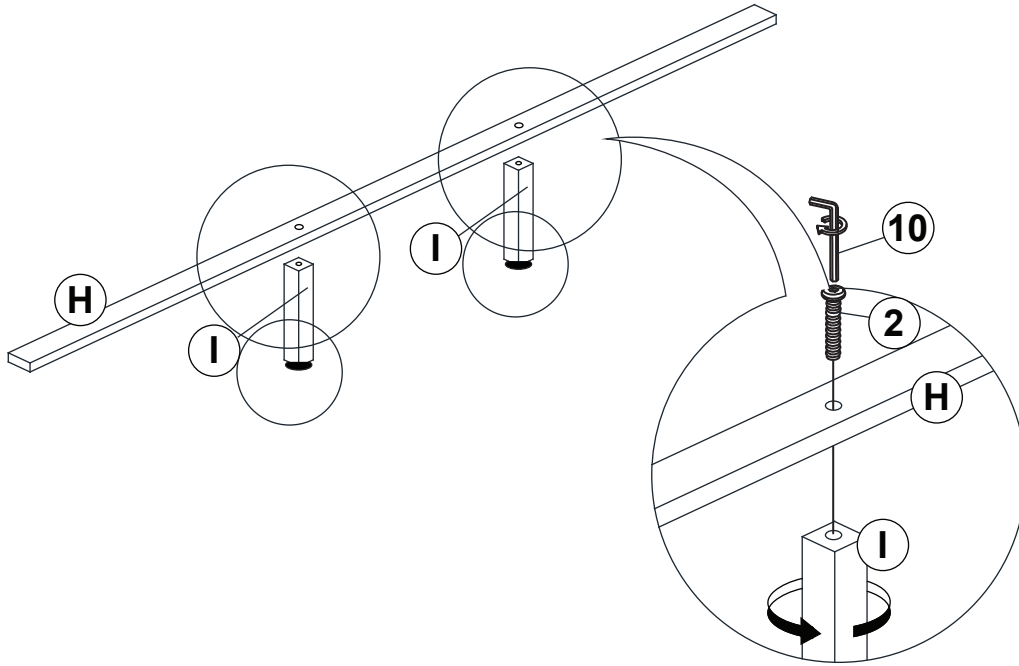

STEP 4

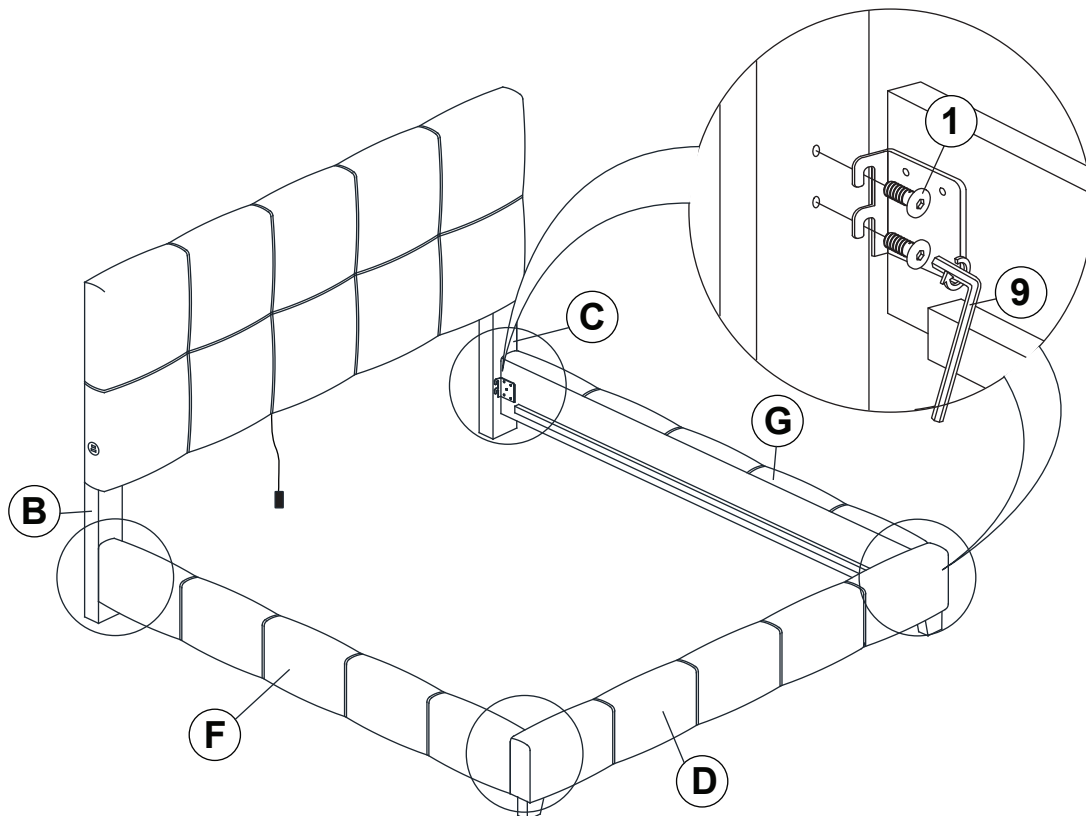


ITEM: **315923KW (B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 5

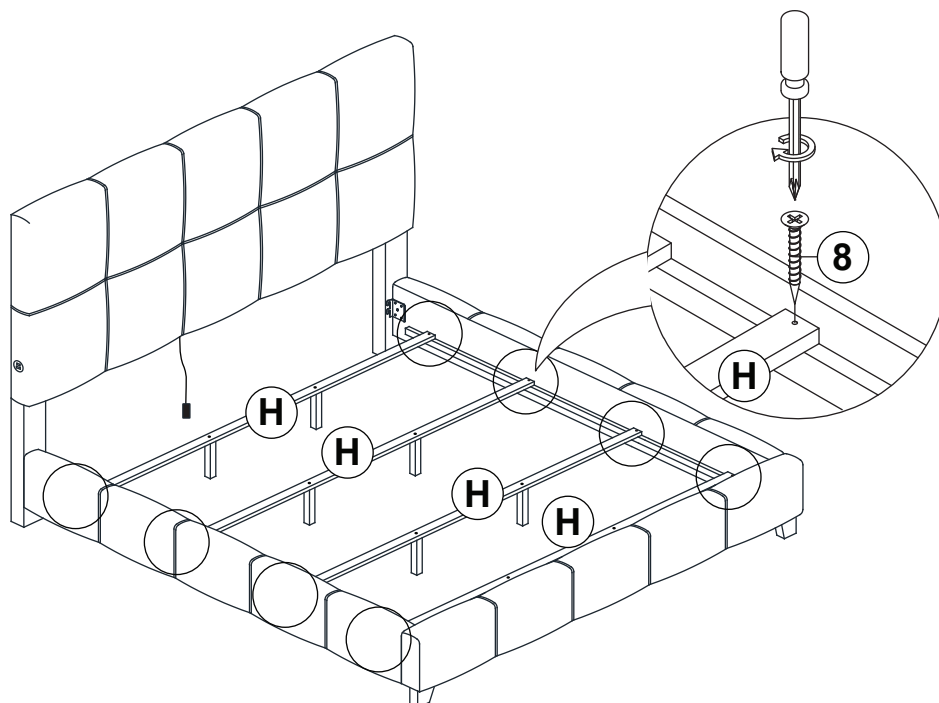

STEP 6

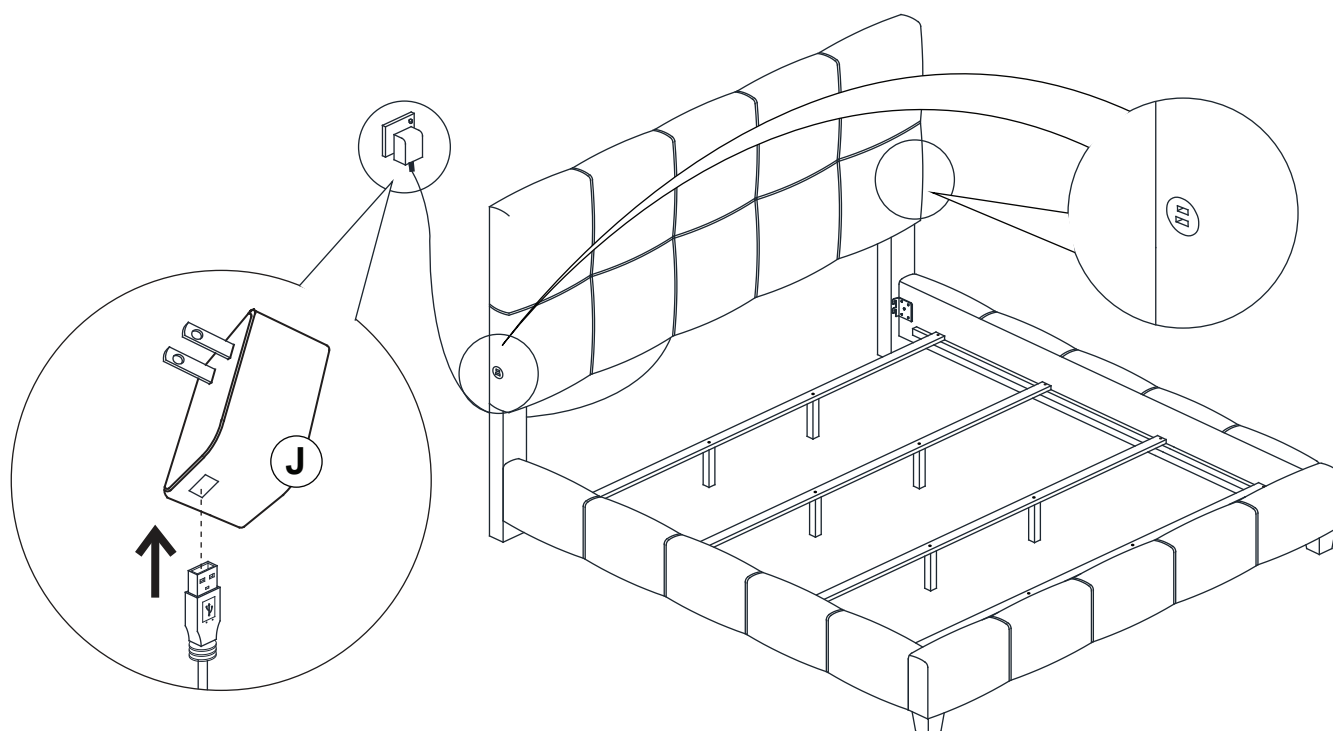


ITEM: **315923KW (B1&B2)**



ASSEMBLY INSTRUCTIONS


STEP 7 COMPLETE

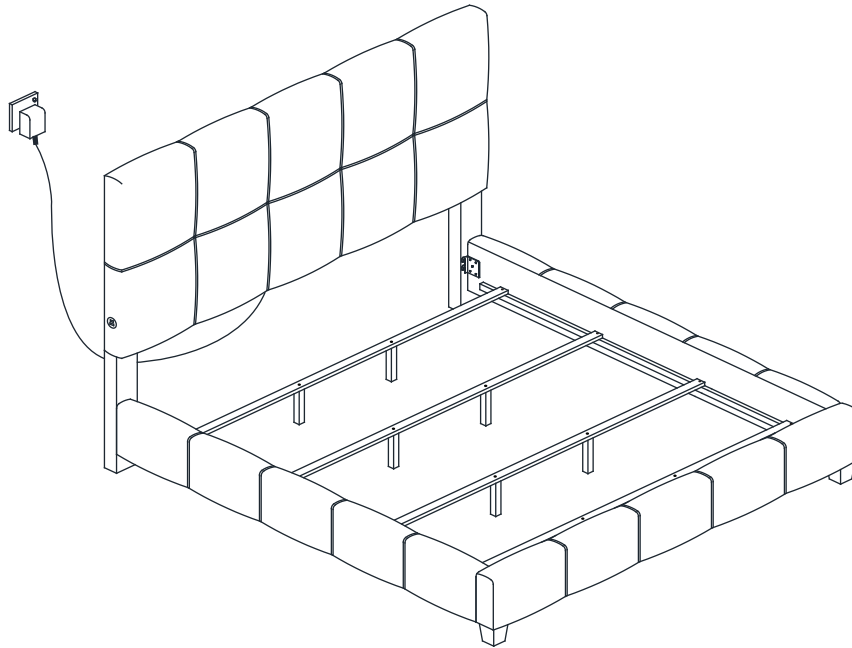

ITEM: **315923KW (B1&B2)**



Inner Size: 72.50"W X 85.50"D

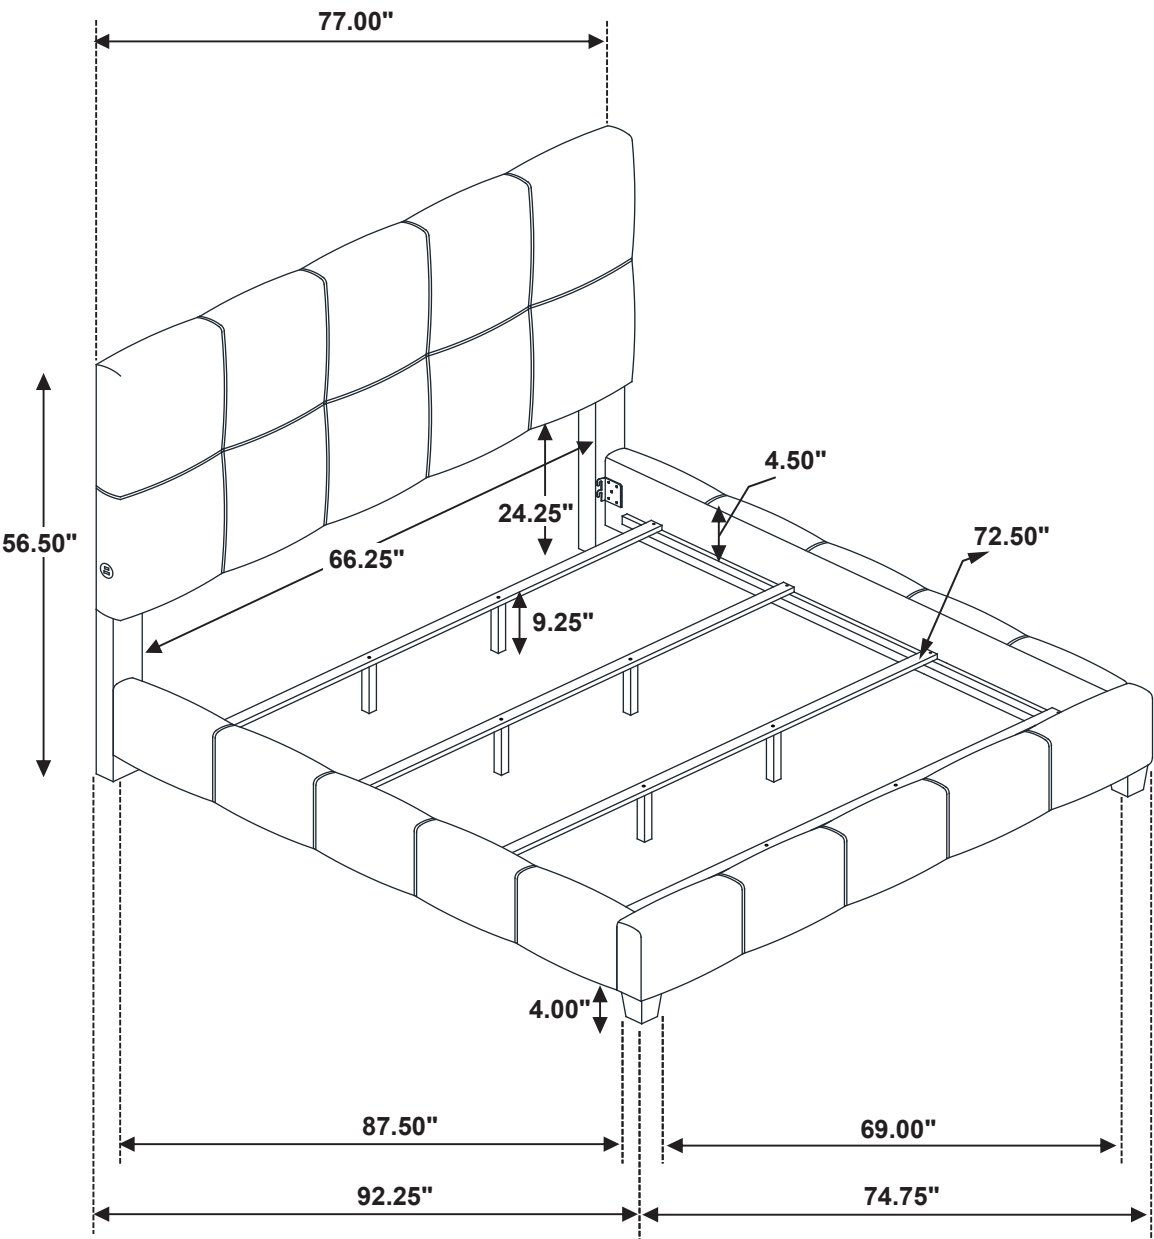

Note : Dimension tolerance $\pm 5\%$