



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

315975KE(B1&B2)
Eastern King Bed

ITEM: 315975KE(B1&B2)

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

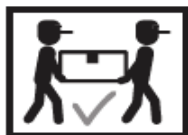


ASSEMBLY TIME

35 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL

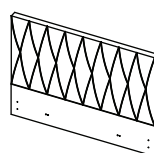

1PC

B2 (BOX 2)

B FOOTBOARD PANEL



1PC

C LEG



4PCS

D CENTER RAIL



2PCS

E WOOD CLEAT



4PCS

F BED SLAT WITH 2 HOLES



3PCS

G BED SLAT WITHOUT HOLE



2PCS

H CENTER RAIL SUPPORT WITH LEVELER



6PCS

I LEFT BED RAIL WITH "L" LABEL




1PC

J RIGHT BED RAIL WITH "R" LABEL



1PC

K CONCEAL PANEL



6PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 315975KE(B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 315975KE(B2)

1	ALLEN WRENCH (Φ4 X 95mm - WZ)		1PC
2	SHORT BOLT (Φ6 X 30mm - RBW)		8PCS
3	MEDIUM BOLT (Φ6 X 45mm - RBW)		8PCS
4	LONG BOLT (Φ6 X 60mm - RBW)		6PCS
5	SHORT FLAT HEAD SCREW (Φ4 X 25mm - RBW)		12PCS
6	MEDIUM FLAT HEAD SCREW (Φ4 X 32mm - RBW)		14PCS
7	LONG FLAT HEAD SCREW (Φ4 X 45mm - RBW)		8PCS
8	LOCK WASHER (Φ6 - RBW)		8PCS
9	FLAT WASHER (Φ7 X 19mm X 2.0 - RBW)		8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **315975KE(B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 1

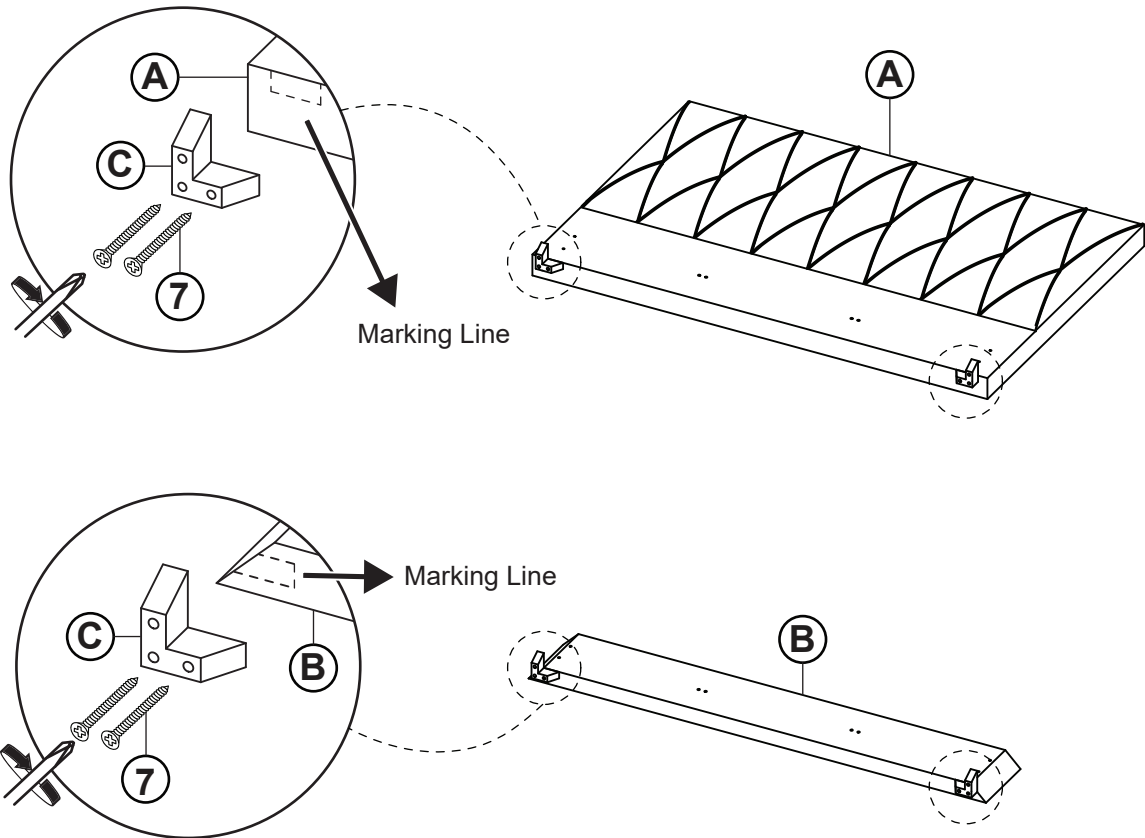

STEP 2

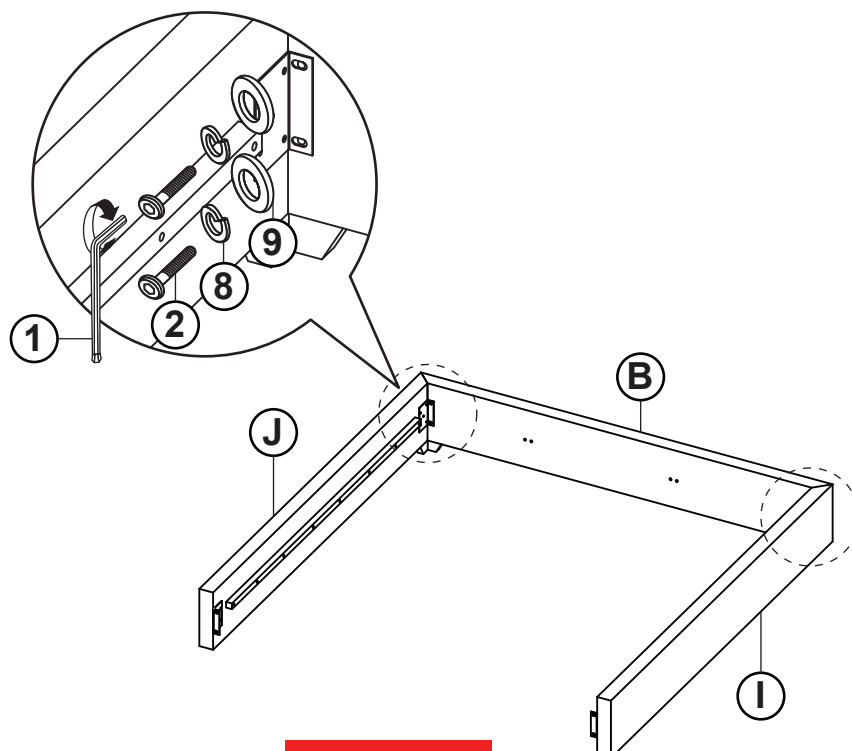


ITEM: **315975KE(B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 3

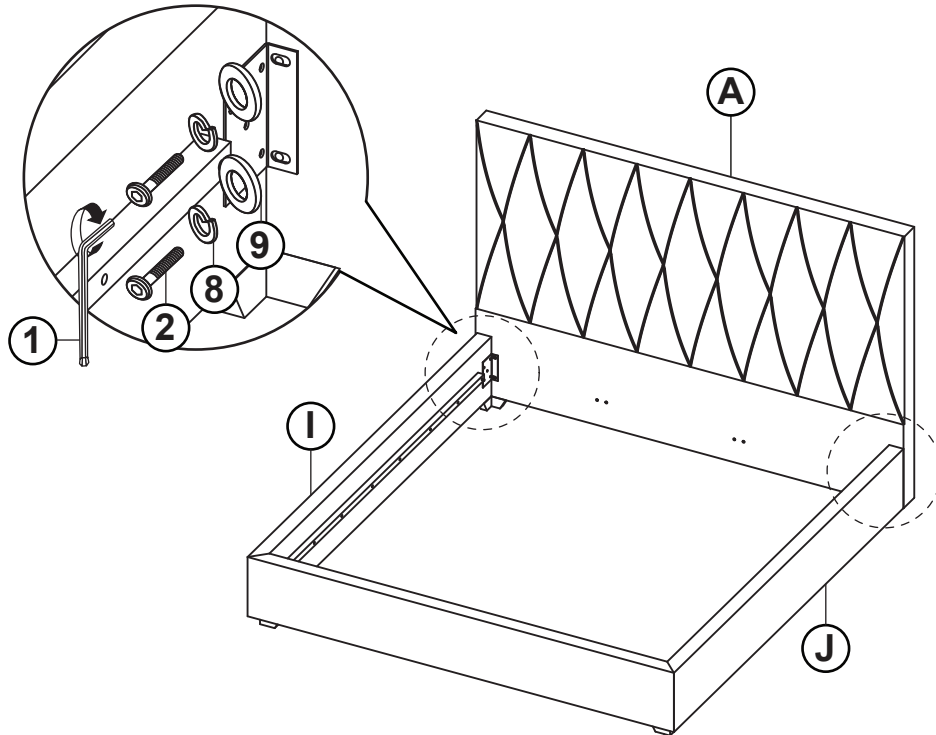

STEP 4

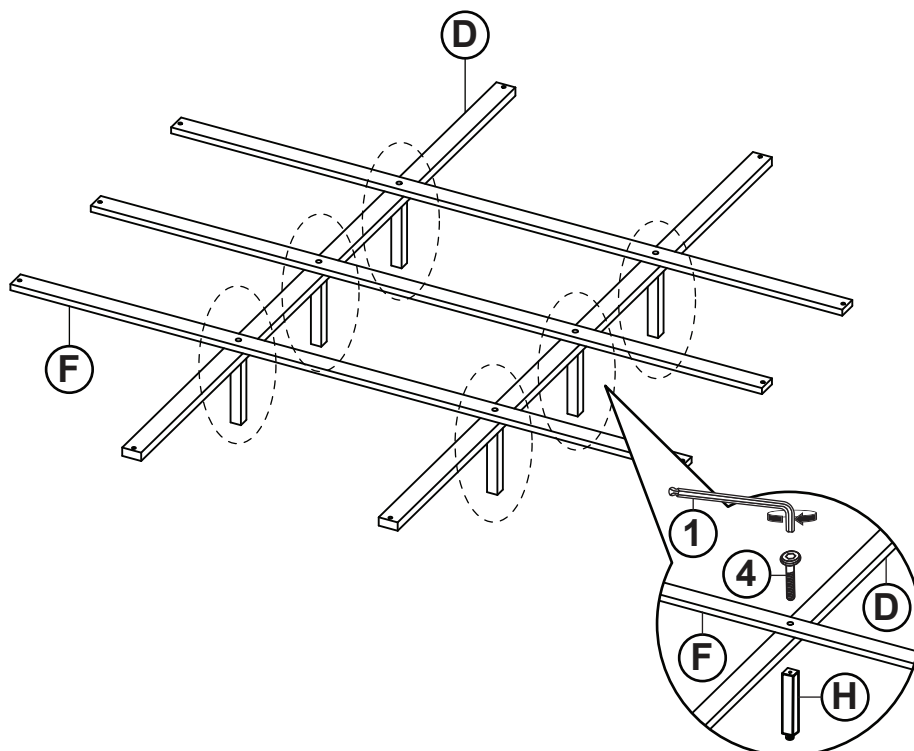


ITEM: **315975KE(B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 5

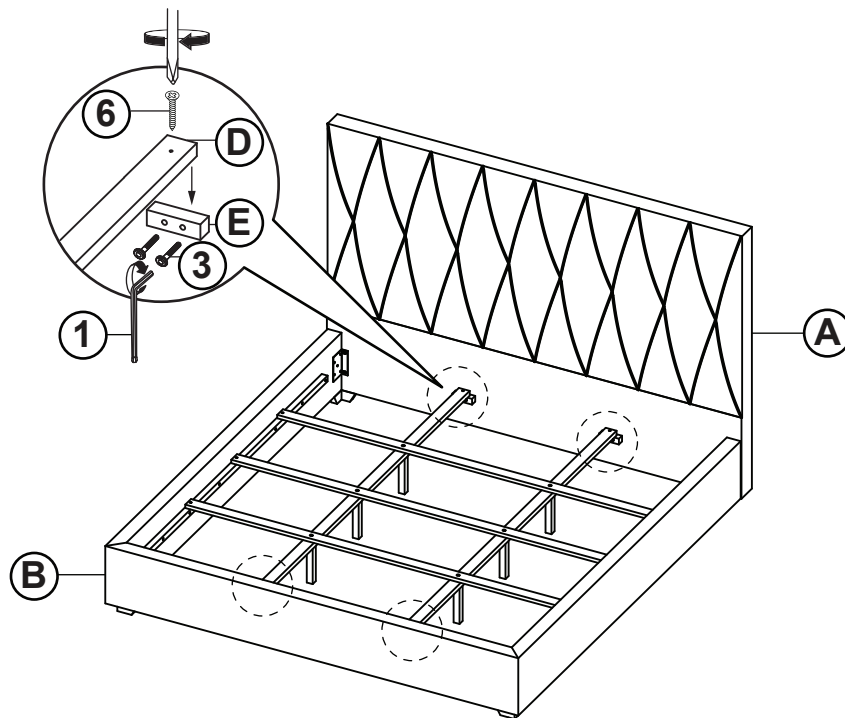

STEP 6

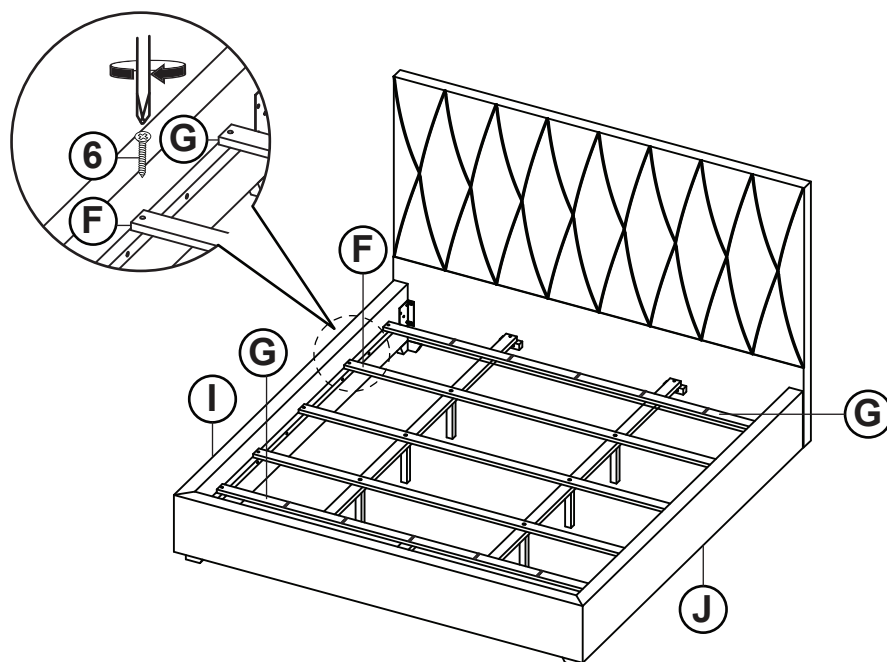


ITEM: 315975KE(B1&B2)




ASSEMBLY INSTRUCTIONS


STEP 7

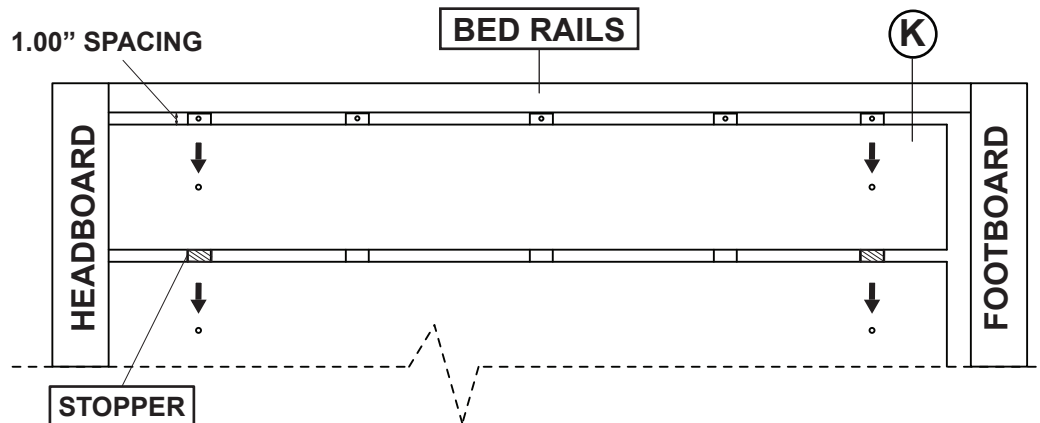

TIGHTEN THE FLAT HEAD SCREW(5) BY FOLLOW THE ARROW AS SHOWN.

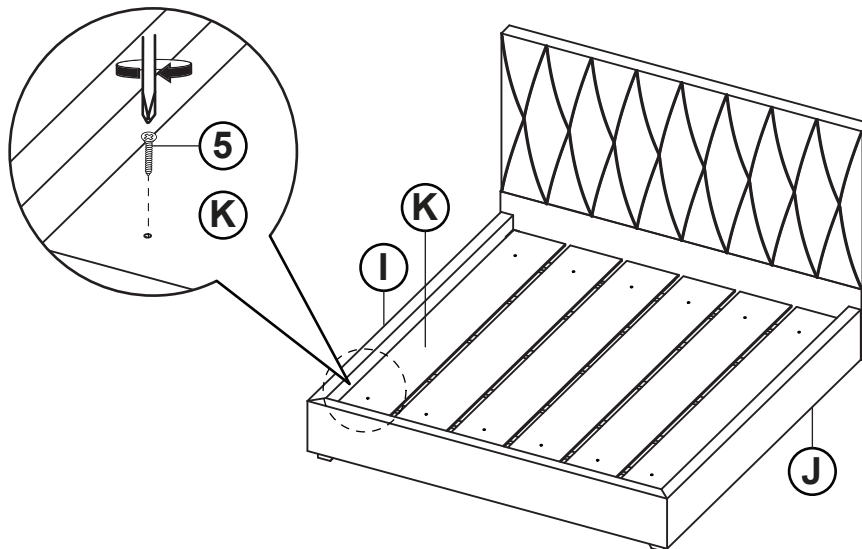


STEP 8 COMPLETE

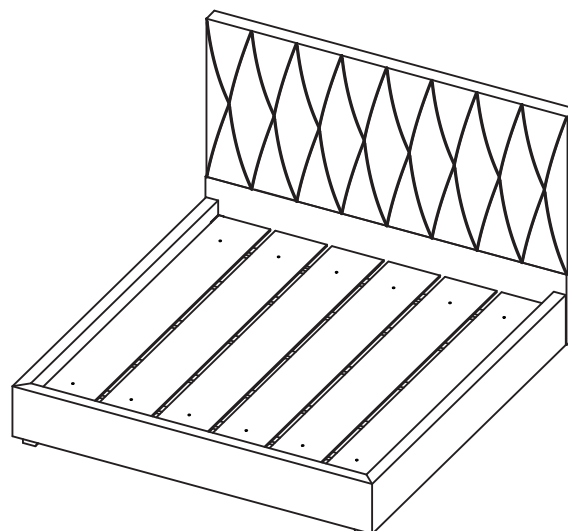

ITEM: **315975KE(B1&B2)**



Inner Size : 76.75"W x 81.25"D

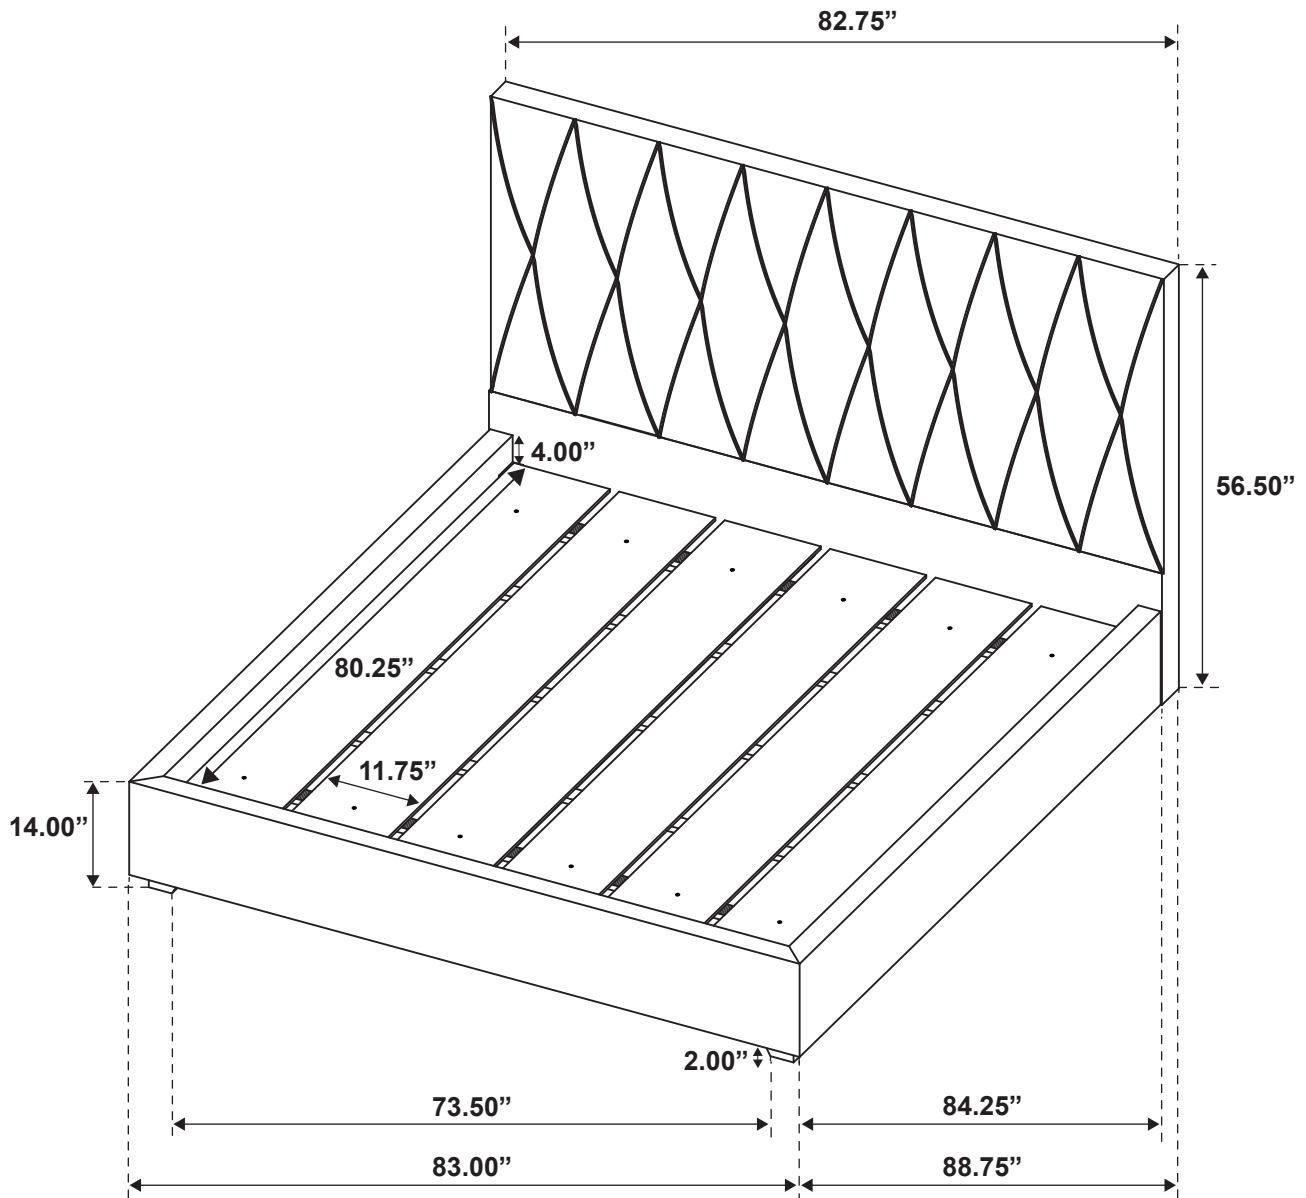

Note: Dimension tolerance $\pm 5\%$