
Coaster Teton TRUNDLE BED

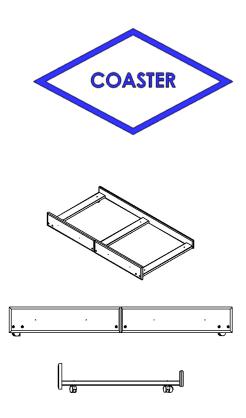

PARTS LIST:

***NOTE: CASTERS HAVE INSERTS WHICH MUST BE DRIVEN FLUSH WITH THE HOLES DRILLED, BEFORE THE CASTERS ARE INSERTED.

ATTEMPTING TO DRIVE THE INSERTS IN WITH THE CASTER WHEELS MAY RESULT IN DAMAGE TO THE WHEELS

- A) 1 -Trundle Fascia
- B) 1 -Back Rail
- C) 3 -Bottom Slats
- D) 12-3" Lag Bolts (4" Decorative for LAGUNA)
- E) 12-Washers
- F) 4 -Casters with inserts

TOOLS REQUIRED:

- 1) 7/16" Wrench or Socket Wrench
- 2) Phillips Head Screwdriver

NOTE: Tool recommended: Electric driver with 7/16" socket

ASSEMBLY INSTRUCTIONS:

NOTE:

Make sure you have <u>all</u> parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.

- 1.) Attach the front trundle fascia (A) to the bottom slats (C) using the 6 each 4" lag bolts and washers. Then attach the back rail (B) to the fascia and slats assembly using the remaining 6 each 4" lag bolts and washers.
- 2.) Attach inserts for the casters into the predrilled holes in the bottom slats. Insert the casters in these caster inserts. Middle bottom slat does not get casters. Assembly will be complete.