



ASSEMBLY INSTRUCTIONS *COASTER FINE FURNITURE*



Fine Furniture for every stage of life

600560PP(B1-B3) **Dual Power Sectional**

ITEM: 600560PP (B1-B3)

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

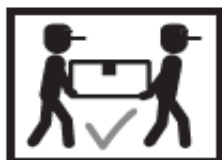

ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A LEFT LAF SEAT



1PC

B RIGHT LAF BACK



1PC

C LEFT LAF BACK



1PC

D CONSOLE BACK



1PC

E ADAPTER



1PC

F STEREO POWER ADAPTER



1PC

B2 (BOX 2)

G WEDGE SEAT



1PC

H RIGHT WEDGE BACK



1PC

I LEFT WEDGE BACK



1PC

B3 (BOX 3)

J RIGHT RAF SEAT



1PC

K RIGHT RAF BACK



1PC

L LEFT RAF BACK



1PC

M CONSOLE BACK



1PC

E ADAPTER



1PC

ITEM: **600560PP (B1-B3)**

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 600560PP (B1)

- | | | | | | | | |
|---|-------------------------|---|------|---|-------------------|---|------|
| 1 | THREADED BOLT
(60mm) |  | 2PCS | 2 | WING NUT
(BLK) |  | 2PCS |
|---|-------------------------|---|------|---|-------------------|---|------|

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 600560PP (B3)


- | | | | | | | | |
|---|-------------------------|---|------|---|-------------------|---|------|
| 1 | THREADED BOLT
(60mm) |  | 2PCS | 2 | WING NUT
(BLK) |  | 2PCS |
|---|-------------------------|---|------|---|-------------------|---|------|

ITEM: 600560PP (B1-B3)


ASSEMBLY INSTRUCTIONS




STEP 1

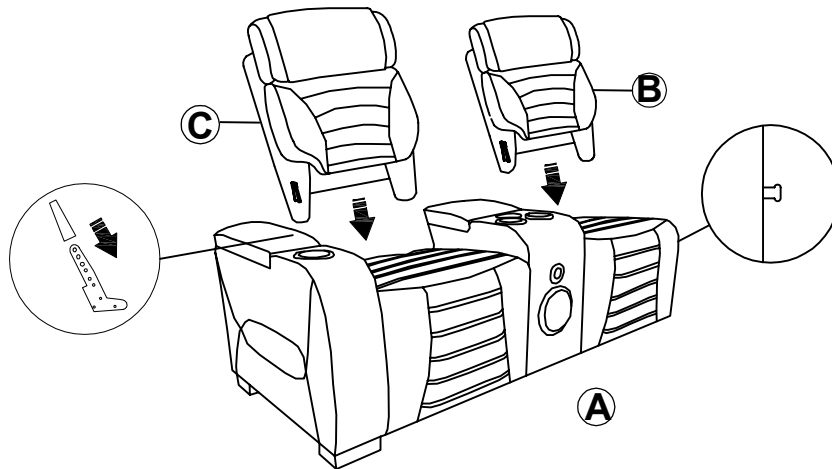

STEP 2

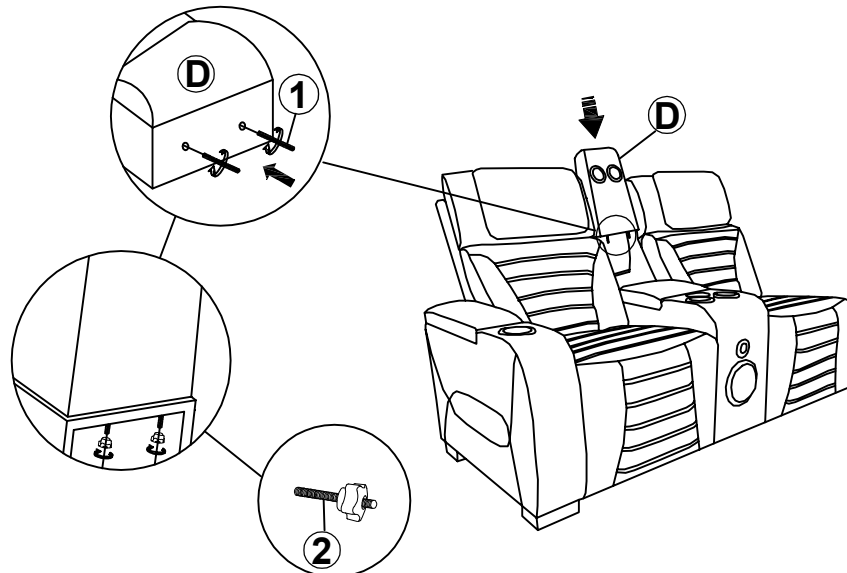

STEP 3

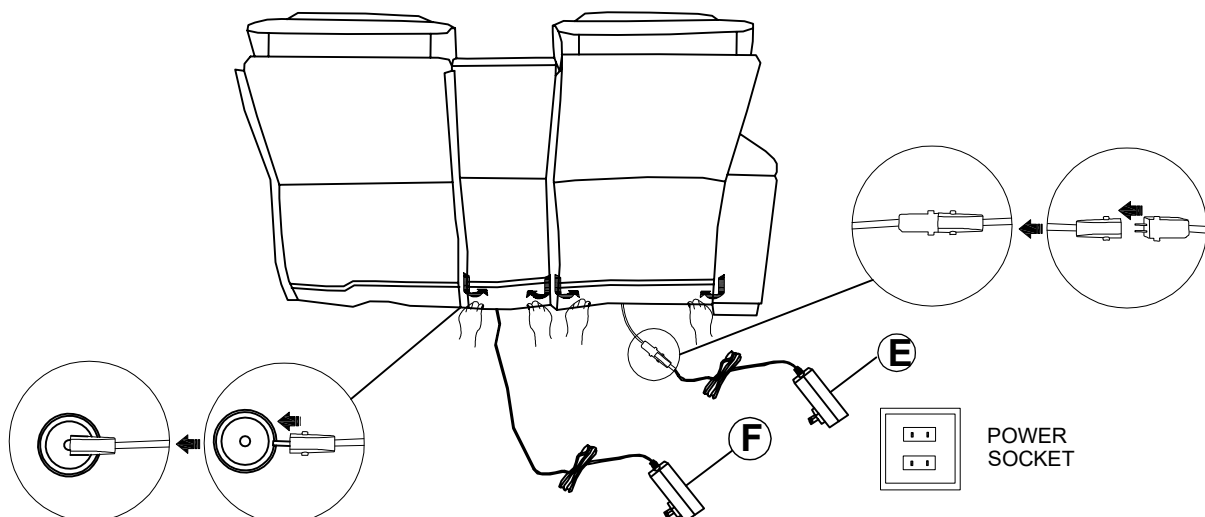


ITEM: 600560PP (B1-B3)

ASSEMBLY INSTRUCTIONS



STEP 4

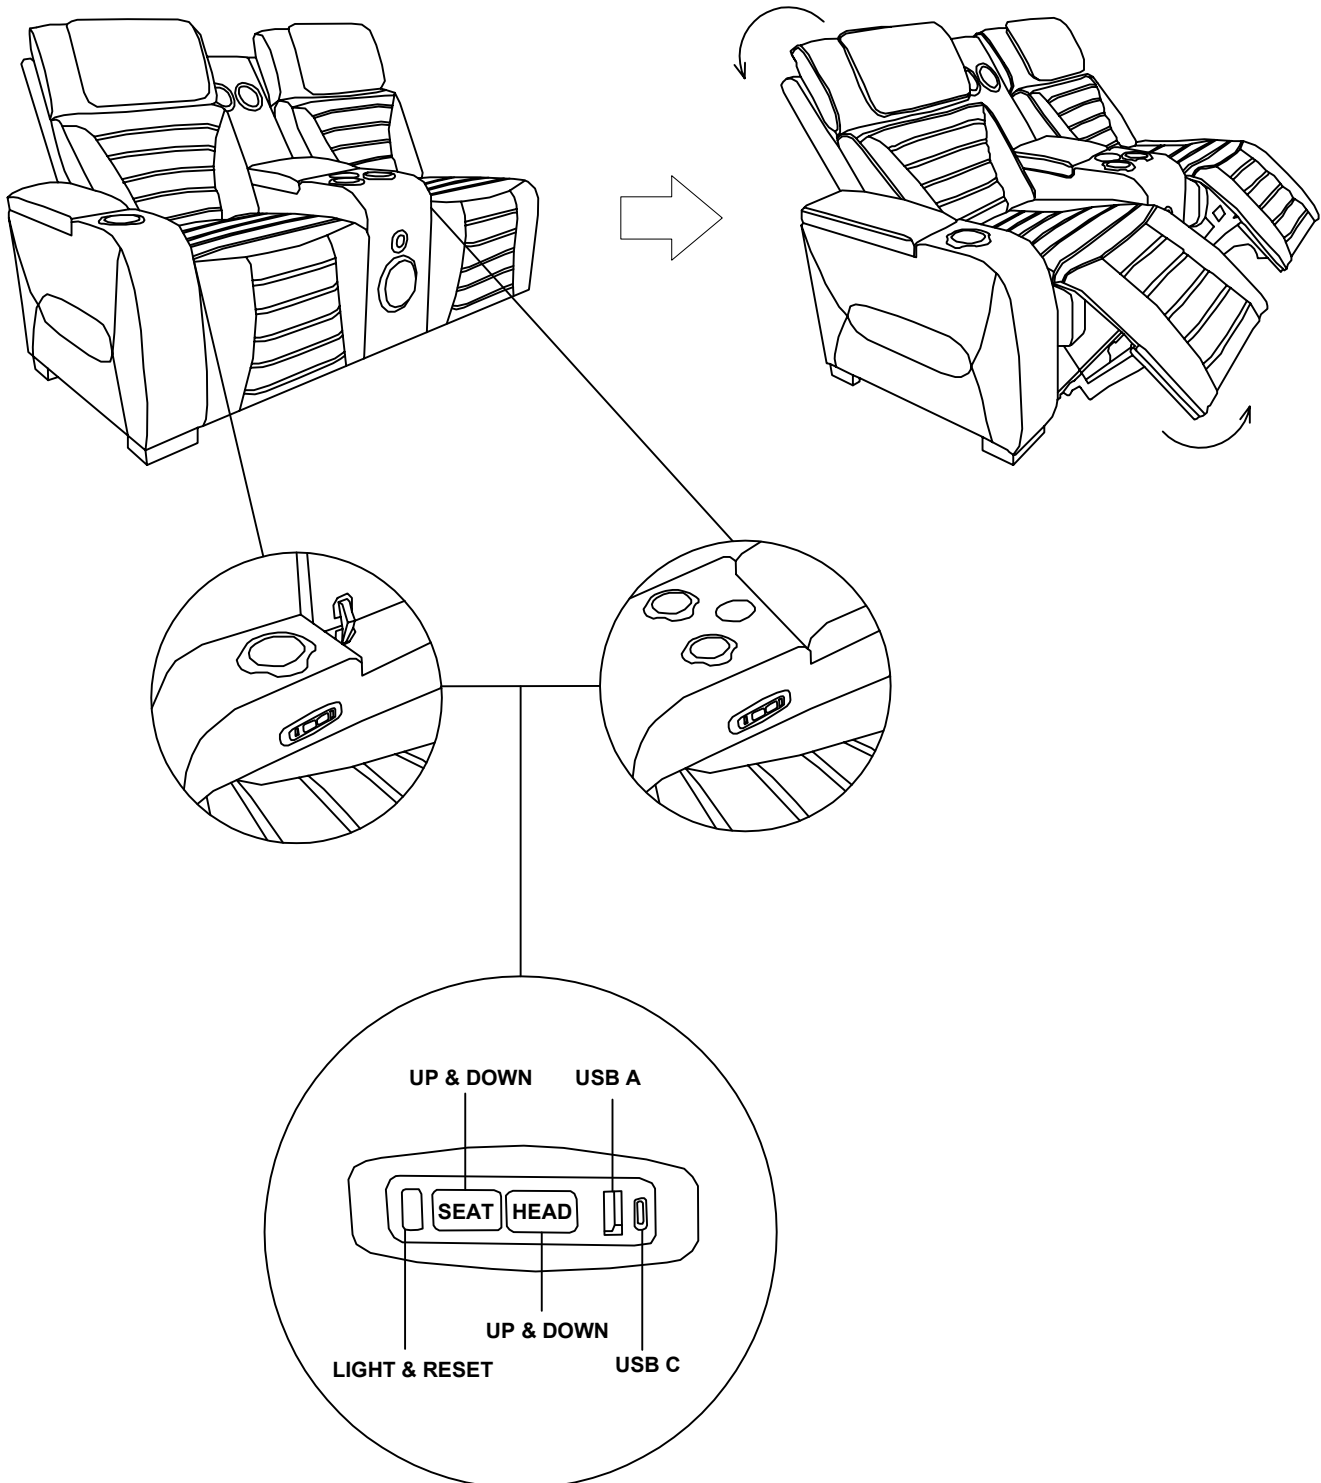


ITEM: **600560PP (B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 5

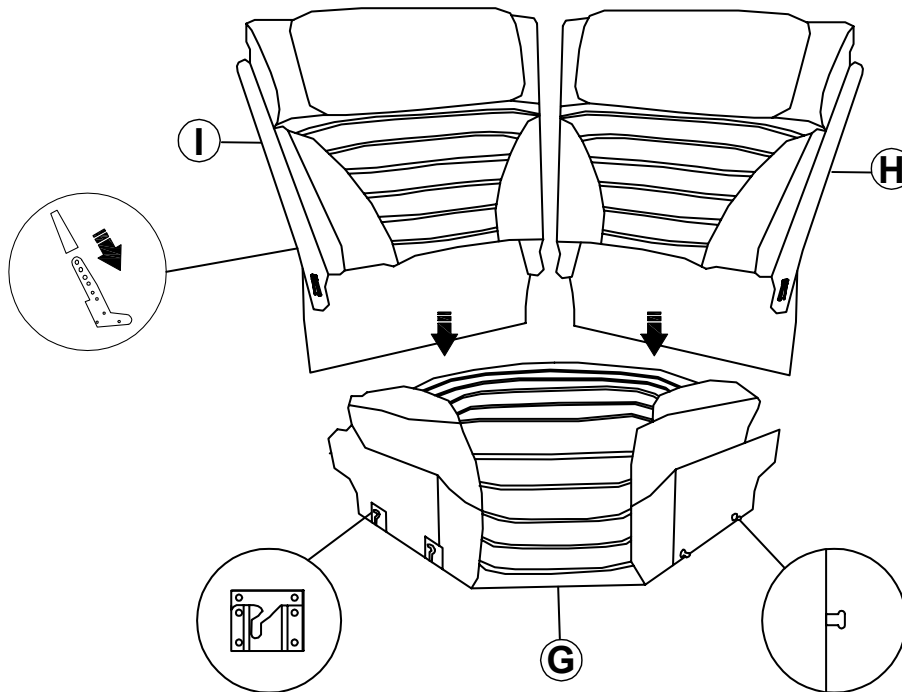

STEP 6

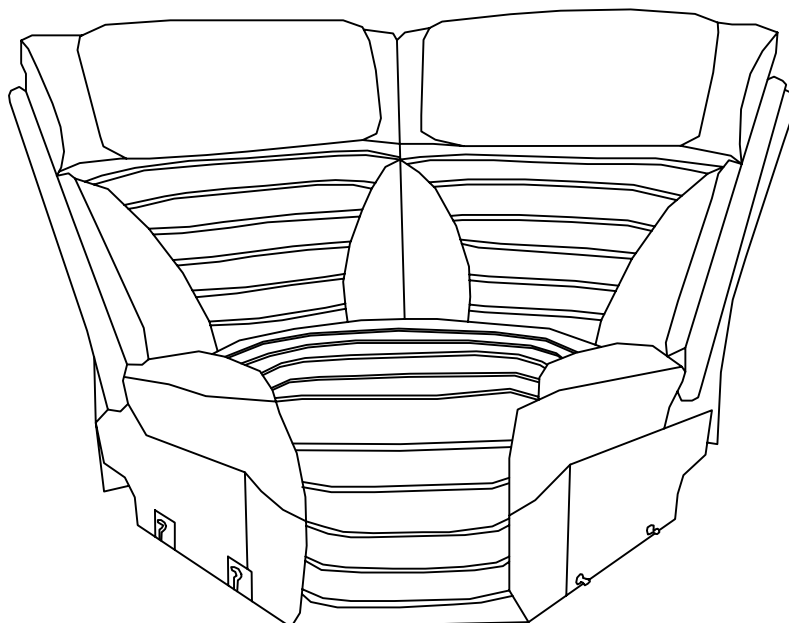


ITEM: 600560PP (B1-B3)


ASSEMBLY INSTRUCTIONS




STEP 7

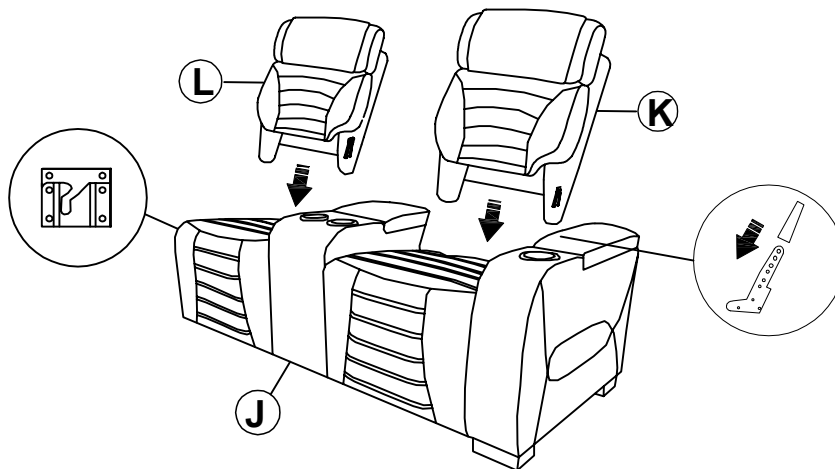

STEP 8

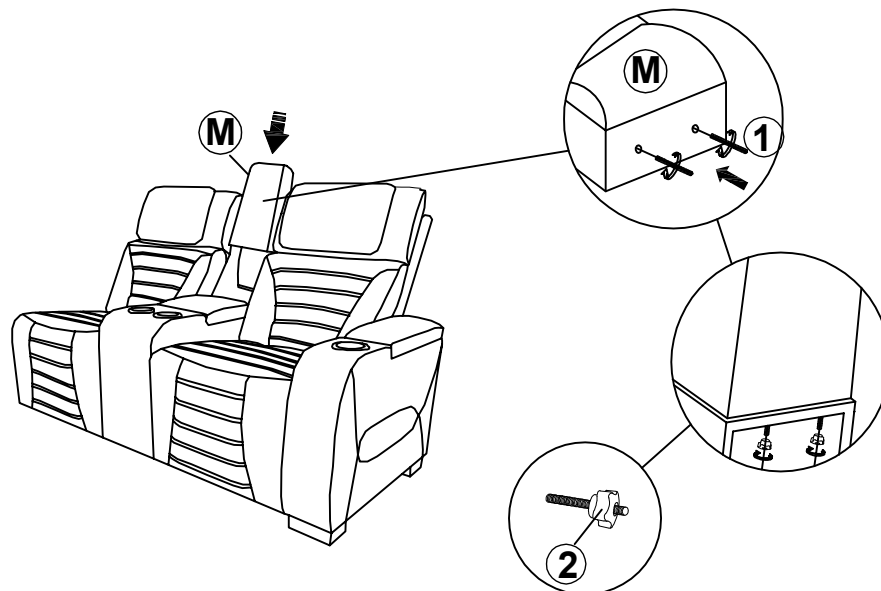


STEP 9

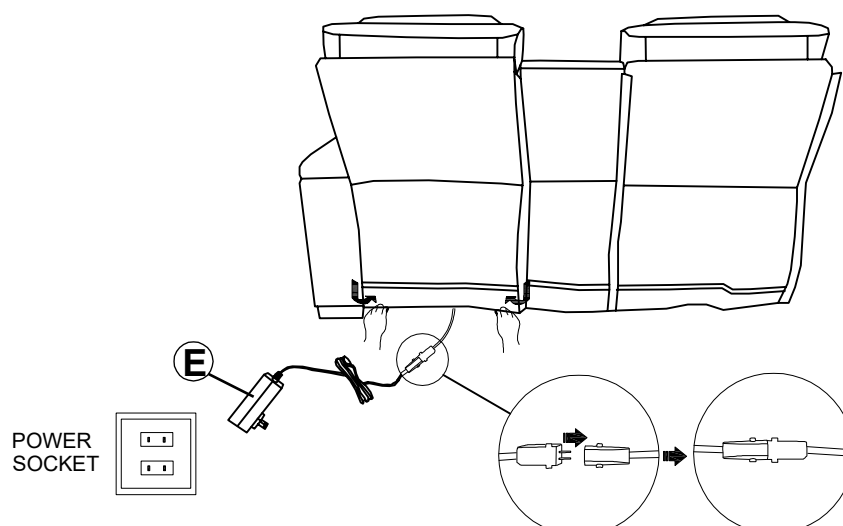

ITEM: **600560PP (B1-B3)**
ASSEMBLY INSTRUCTIONS



STEP 10


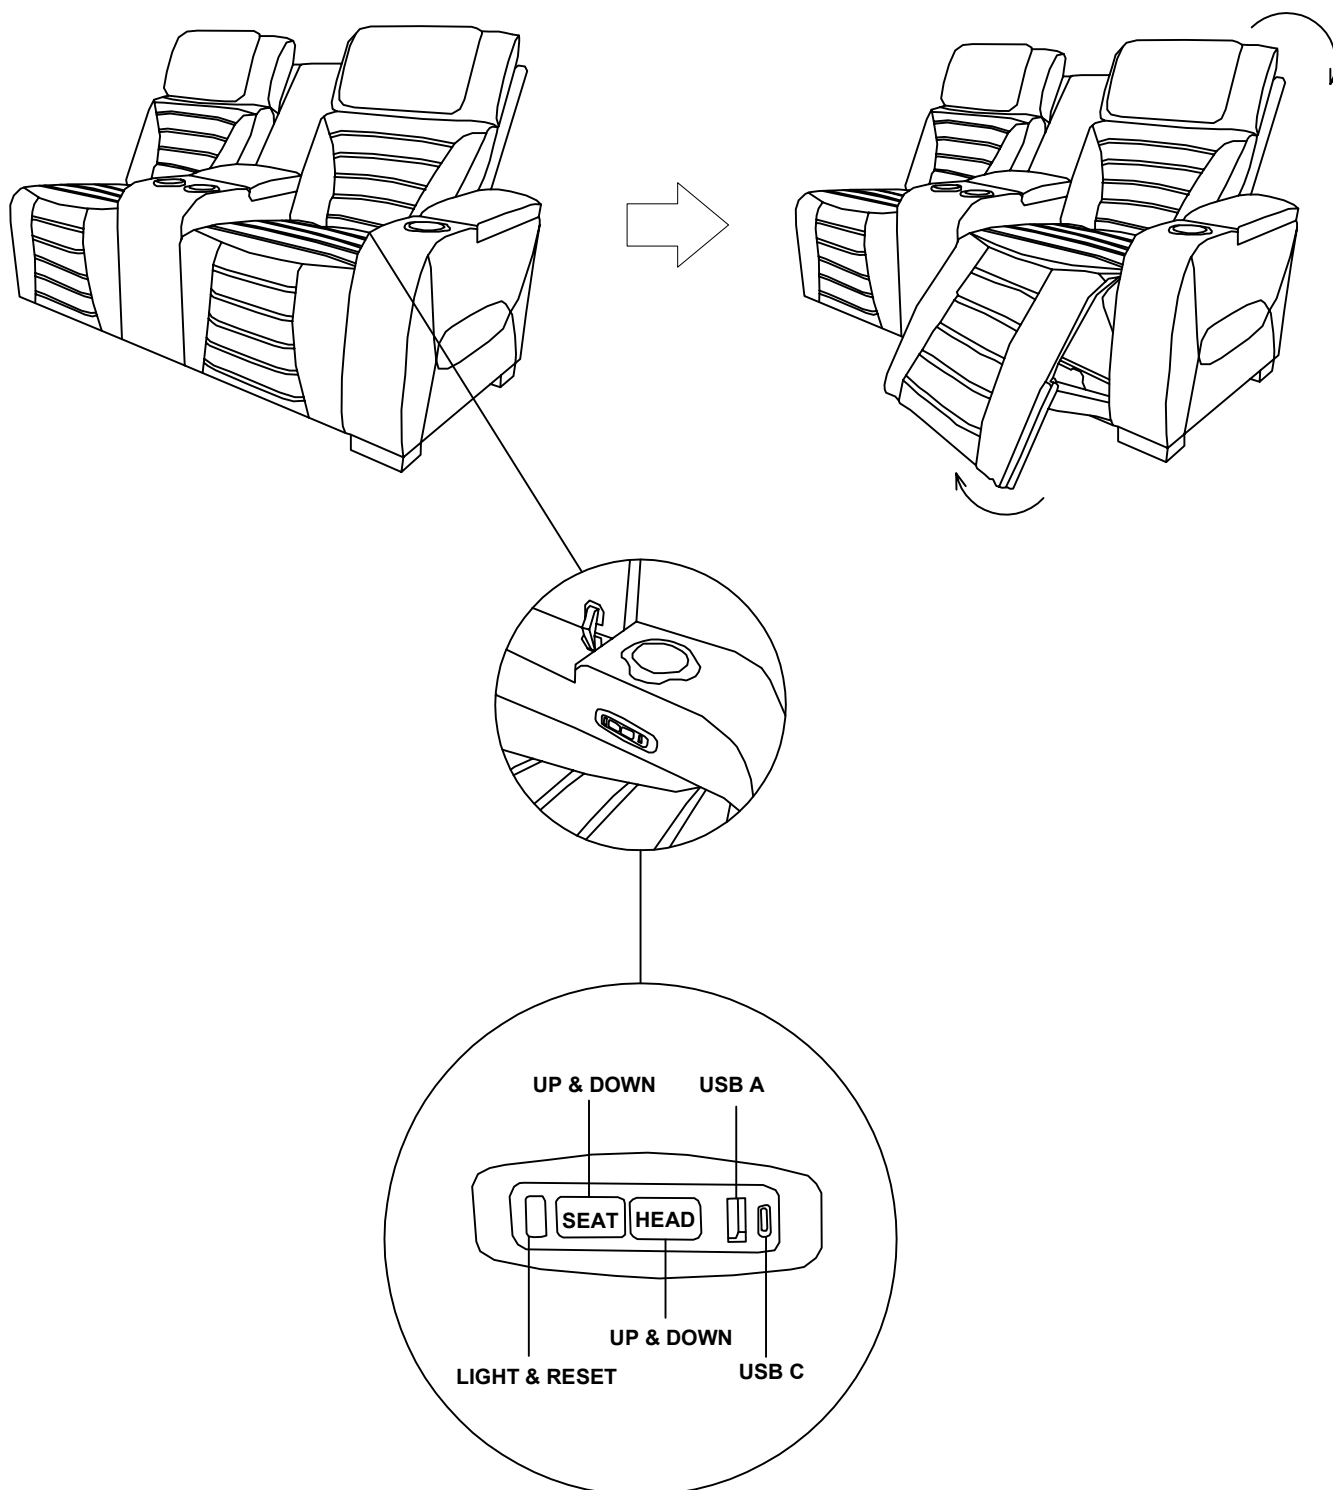


ITEM: **600560PP (B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 11 **COMPLETE**

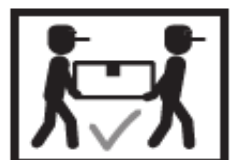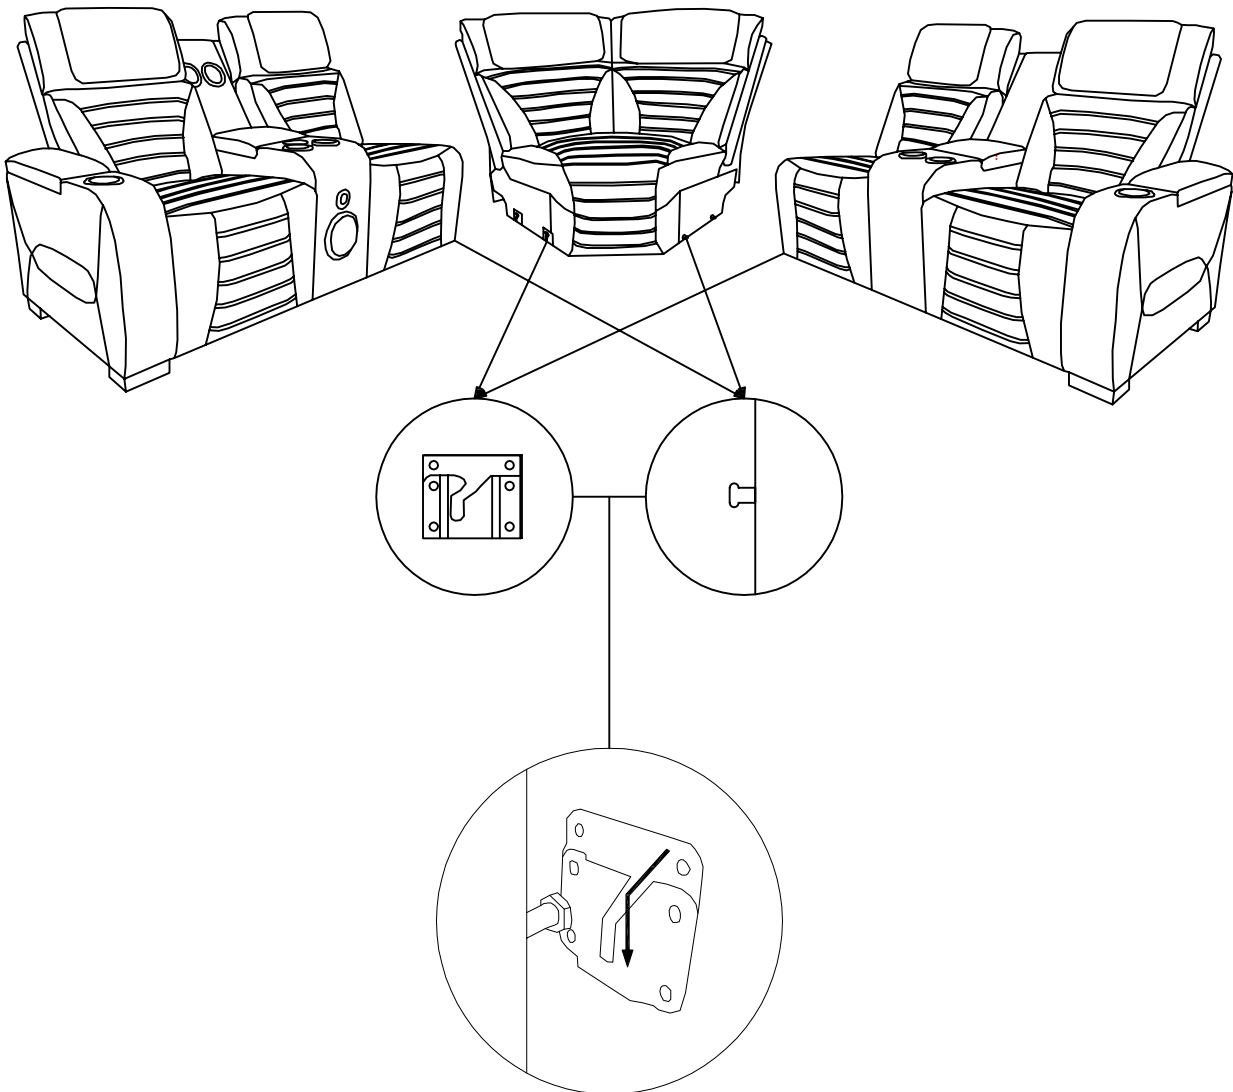

ITEM: **600560PP (B1-B3)**

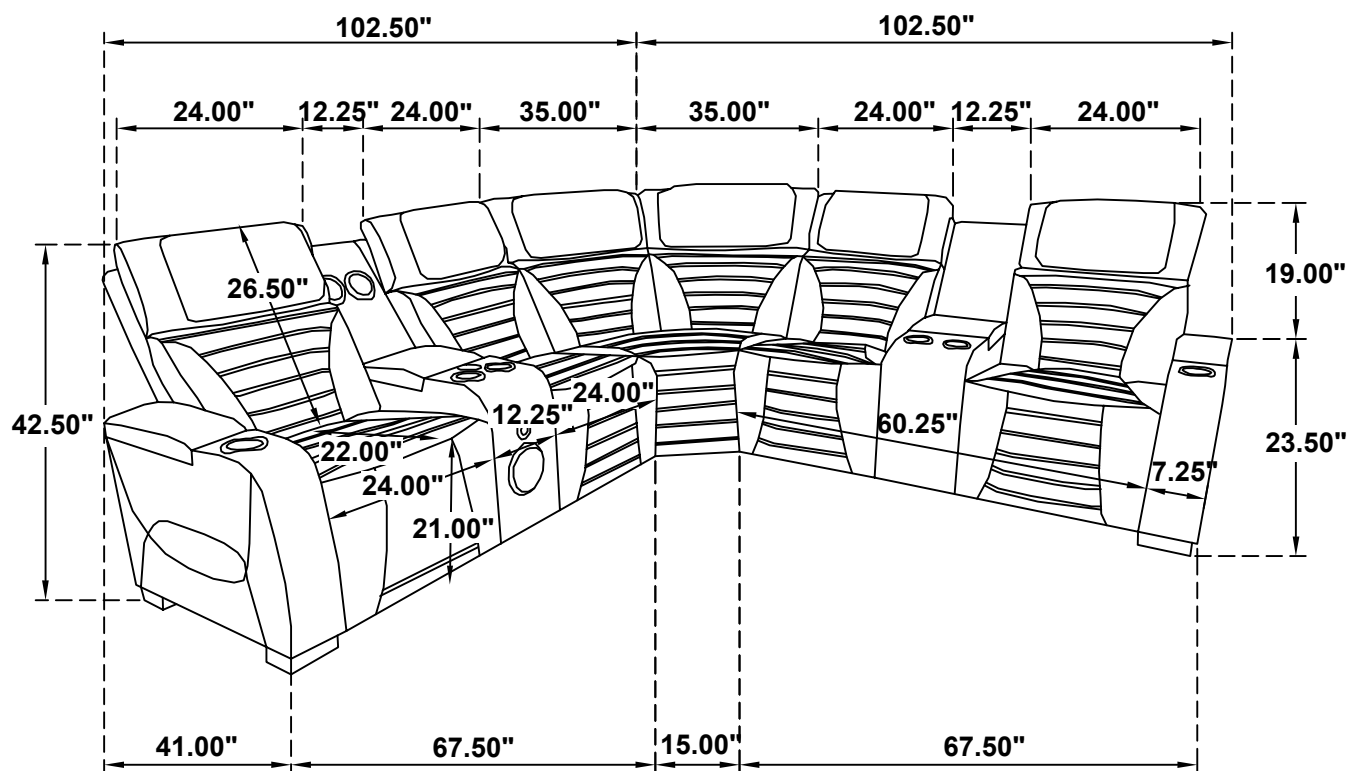

Note: Dimension tolerance $\pm 5\%$