


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

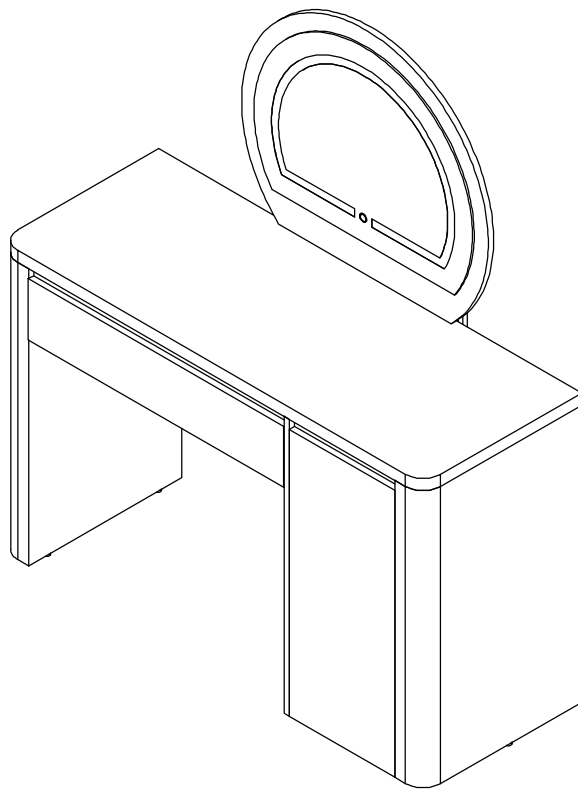

Fine Furniture for every stage of life

935790
VANITY

ITEM:935790



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

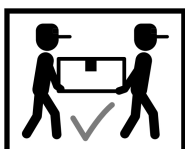

ASSEMBLY TIME 99 MINUTES


PARTS IDENTIFICATION

A TOP PANEL

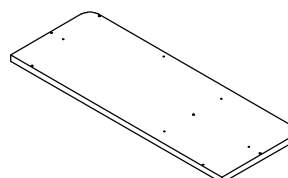


1PC

B LEFT PANEL




1PC

C RIGHT PANEL



1PC

D MIDDLE PANEL

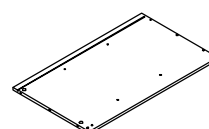

1PC

ITEM:935790




ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

E


LONG FRONT PANEL

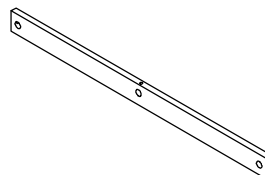

1PC

F


SHORT FRONT PANEL

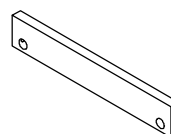

1PC

G

BACK PANEL

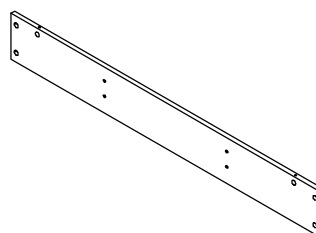

1PC

H


DOOR PANEL



1PC

I

CABINET MIDDLE PANEL

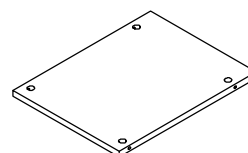

2PCS

ITEM:935790




ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

J

CABINET BOTTOM PANEL

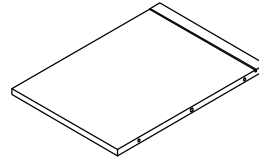

1PC

K


LARGE BACK PANEL



1PC

L


DRAWER FRONT PANEL

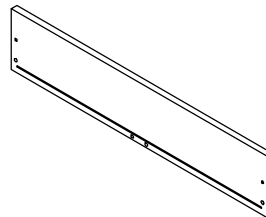

1PC

M


DRAWER LEFT PANEL

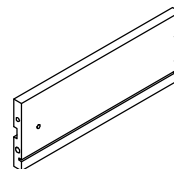

1PC

N


DRAWER RIGHT PANEL

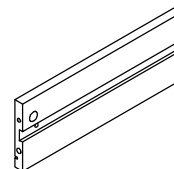

1PC

O

DRAWER BACK PANEL

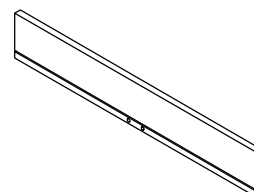

1PC


ITEM:935790



ASSEMBLY INSTRUCTIONS


PARTS IDENTIFICATION

P DRAWER BOTTOM PANEL

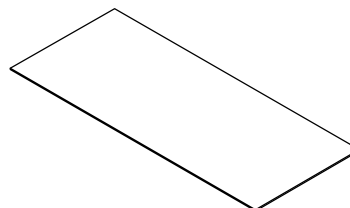


1PC

Q DRAWER SUPPORT PANEL

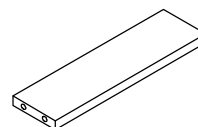


1PC

R MIRROR

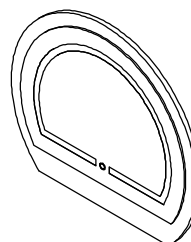


1PC

S CROSSBAR

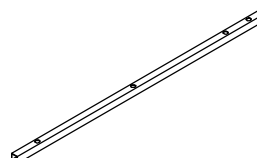


2PCS

T HINGE




2PCS

U SLIDE RAIL

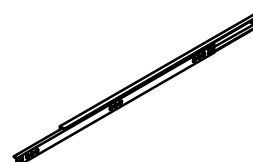

2PCS

V LED POWER ADAPTER

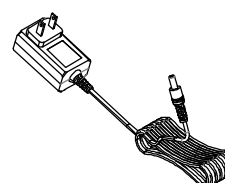

1PC


ITEM:935790



ASSEMBLY INSTRUCTIONS



Z

HARDWARE IDENTIFICATION

1	CAM BOLT (38MM)		29PCS	7	SCREW (8 x 15mm)		12PCS
2	CAM-LOCK (Ø15MM)		29PCS	8	BOLT		8PCS
3	WOOD DOWEL (8 x 30mm)		10PCS	9	CAP (16 x 16mm)		4PCS
4	LONG SCREW (8 x 35mm)		10PCS	10	STICKER		2PCS
5	SMALL BOLT (5/32" x9mm)		2PCS	11	GLUE		1PC
6	RAIL SCREW (8 x 12mm)		6PCS	12	ALLEN WRENCH (4mm)		1PC

STEP 1

Do not tighten until each step is completed or instructed.

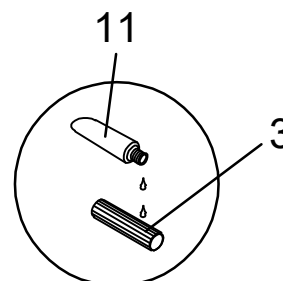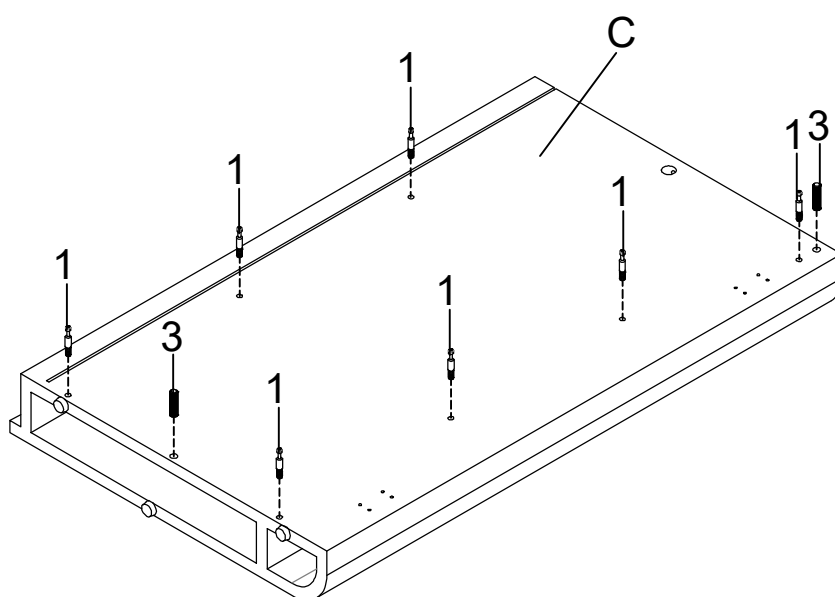


ITEM:935790




ASSEMBLY INSTRUCTIONS


STEP 2

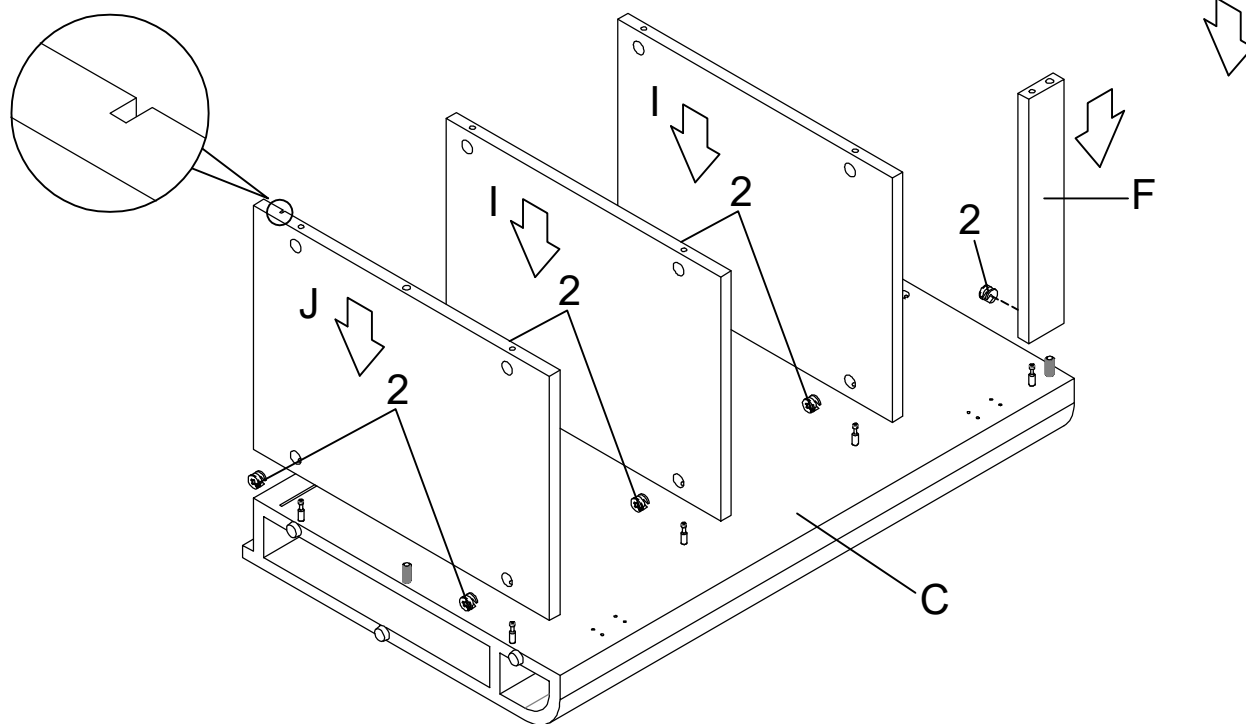


STEP 3

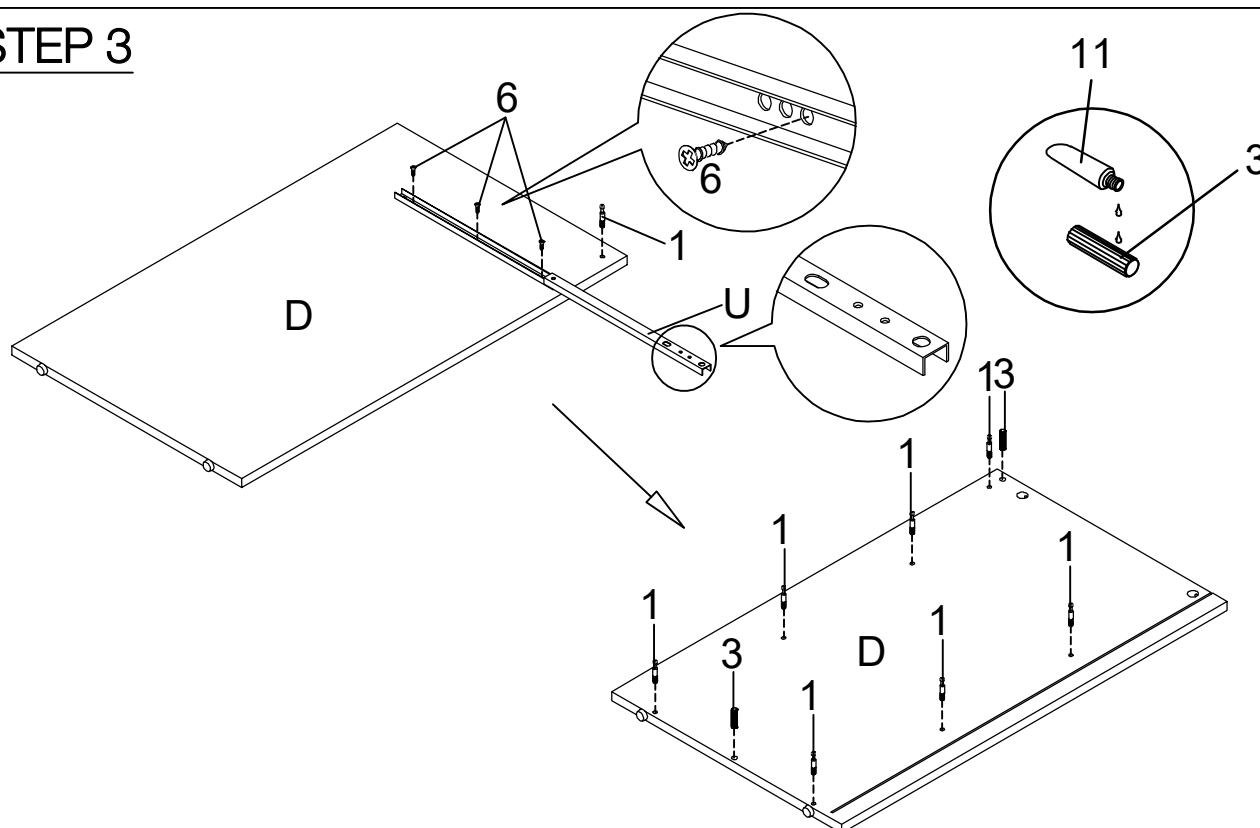


ITEM:935790
ASSEMBLY INSTRUCTIONS
STEP 4

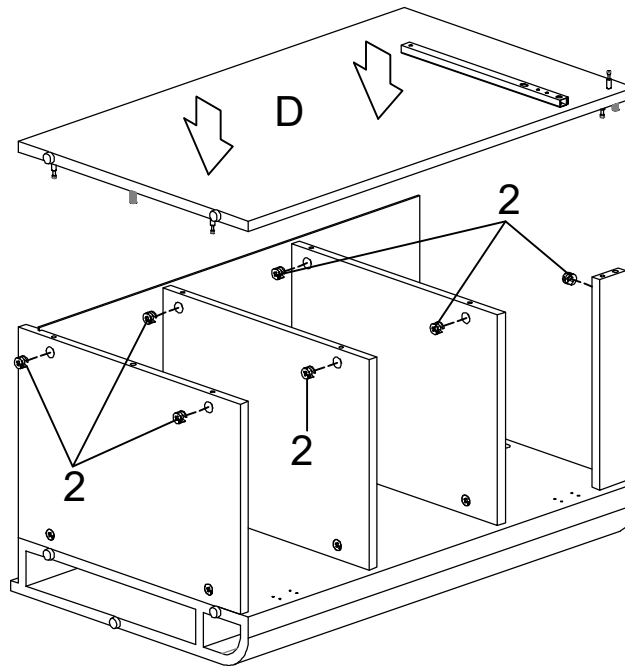


STEP 5

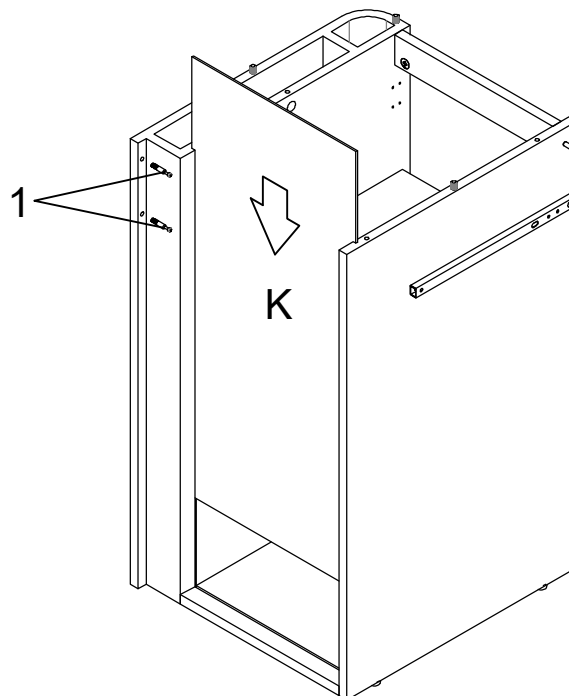


ITEM: 935790
ASSEMBLY INSTRUCTIONS
STEP 6

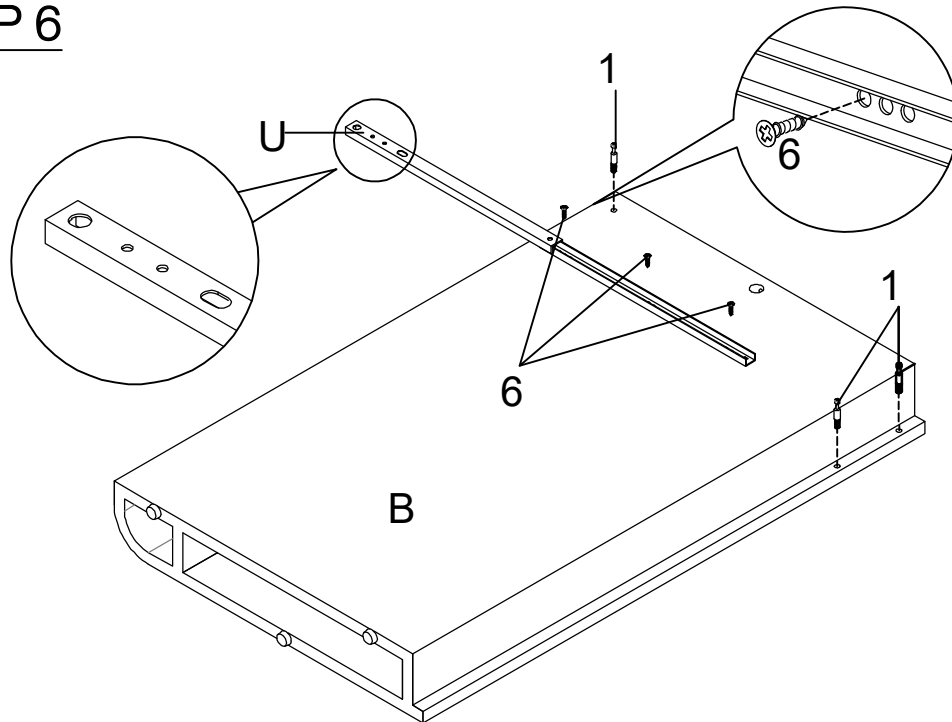


STEP 7

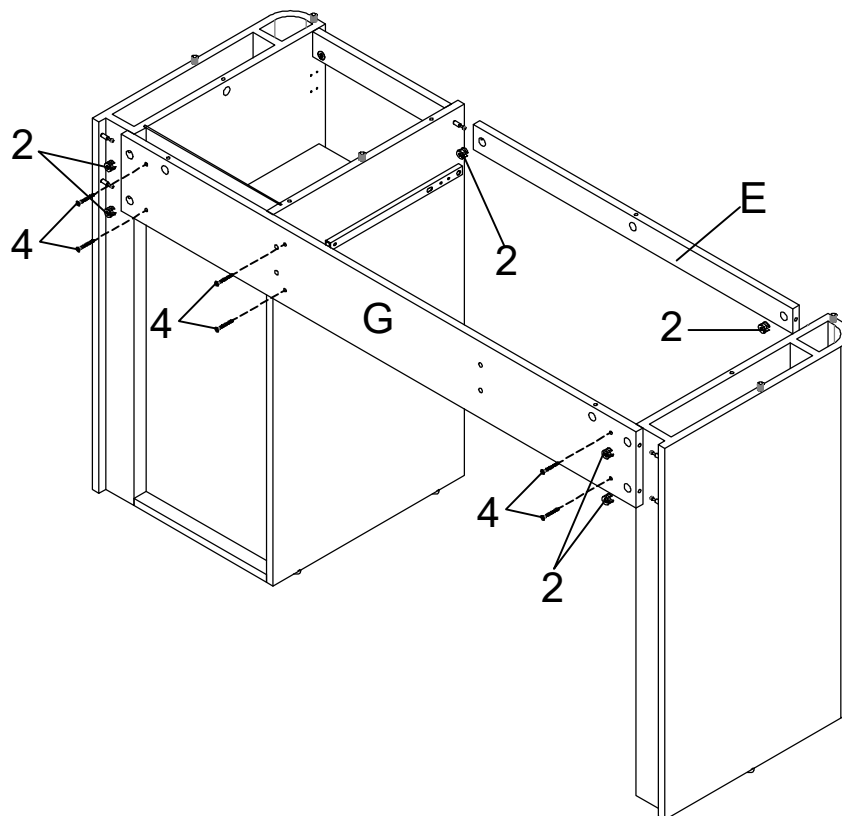


ITEM: 935790
ASSEMBLY INSTRUCTIONS
STEP 8

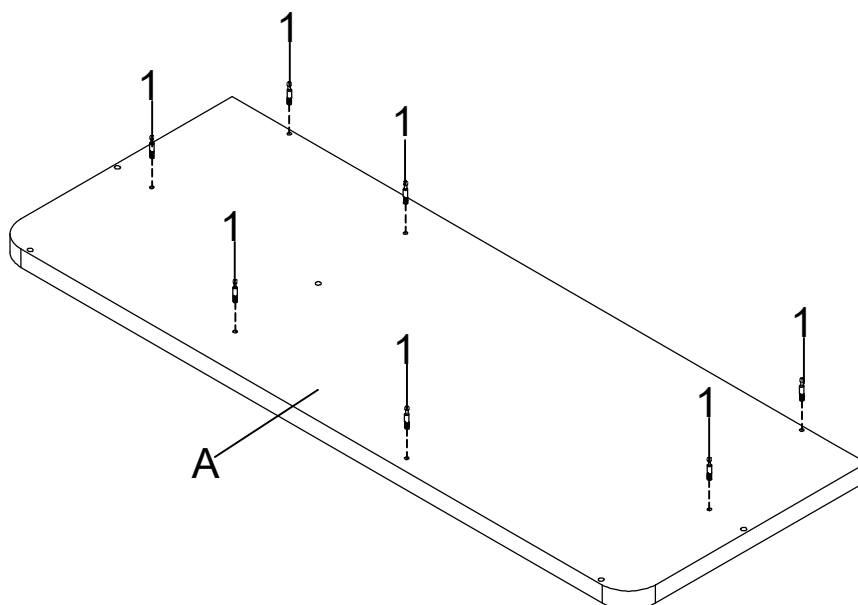


STEP 9

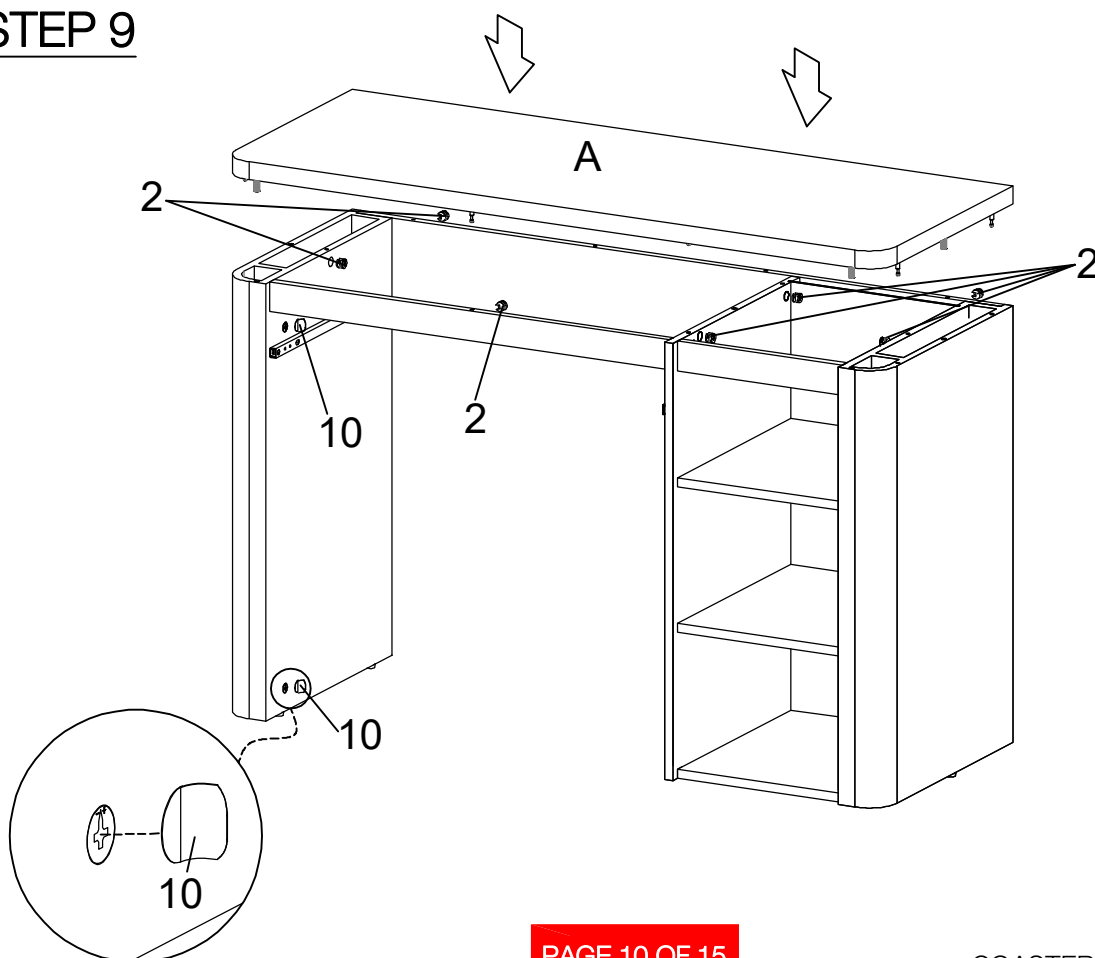


ITEM: 935790
ASSEMBLY INSTRUCTIONS
STEP 10

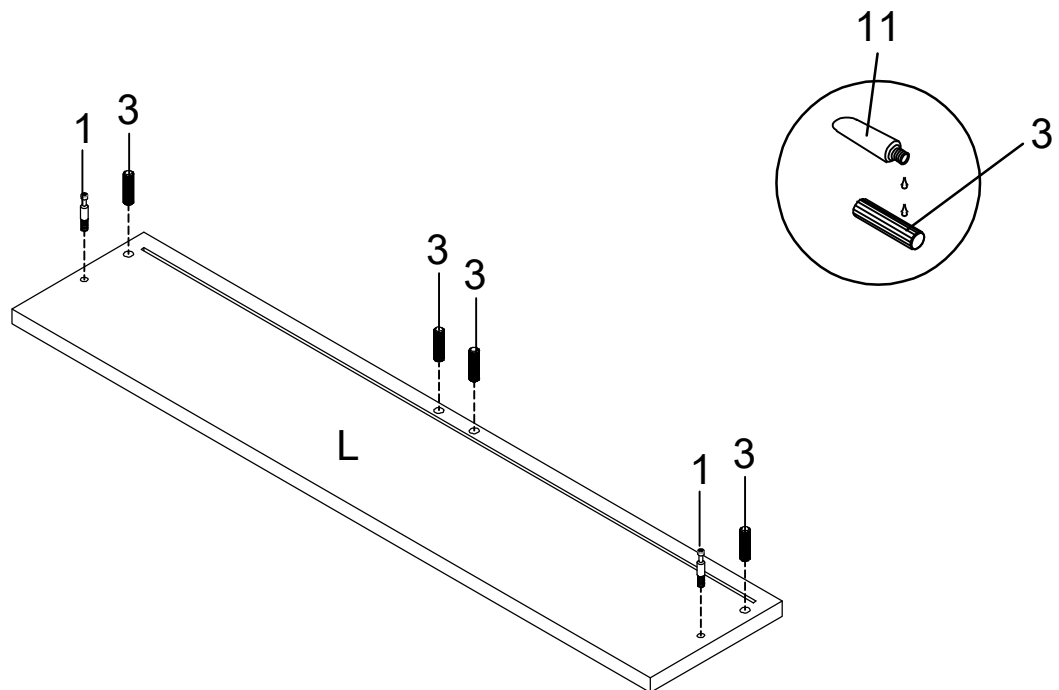


STEP 11

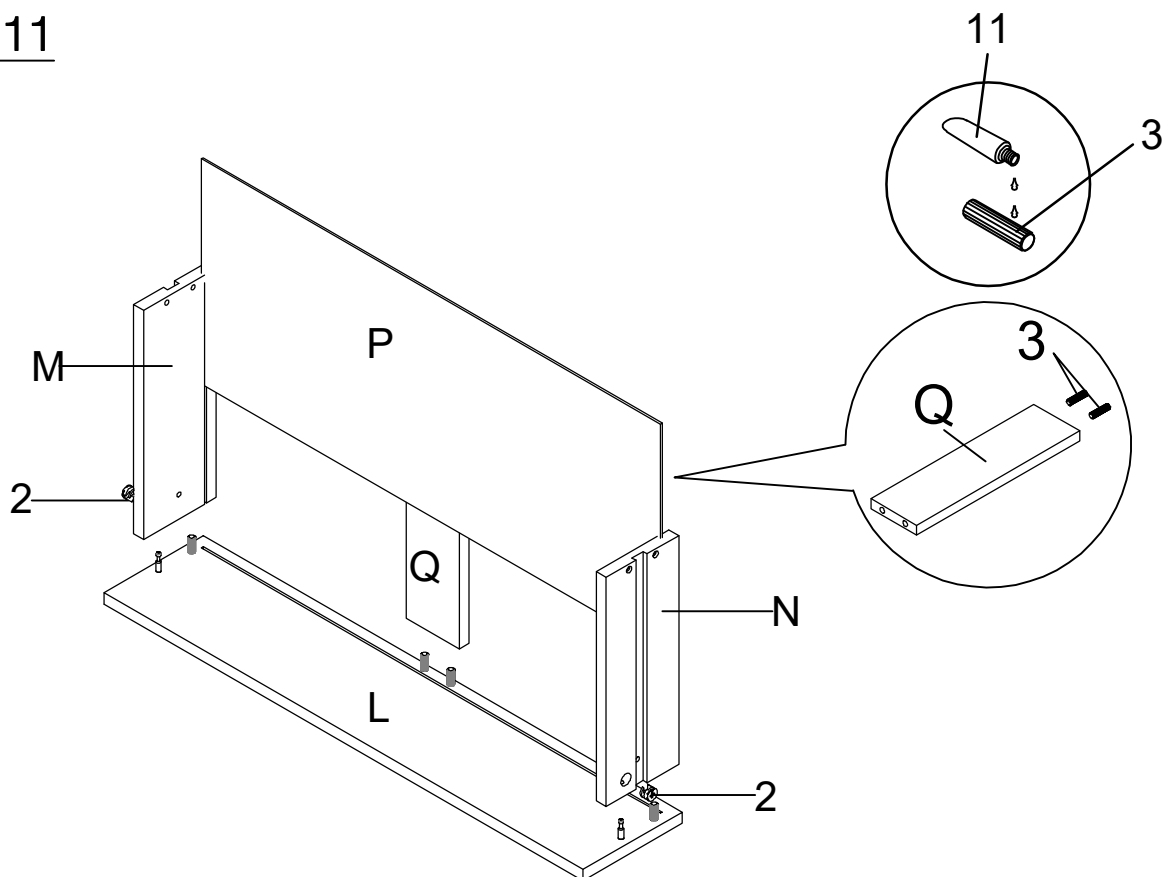



ITEM:935790
ASSEMBLY INSTRUCTIONS
STEP 12

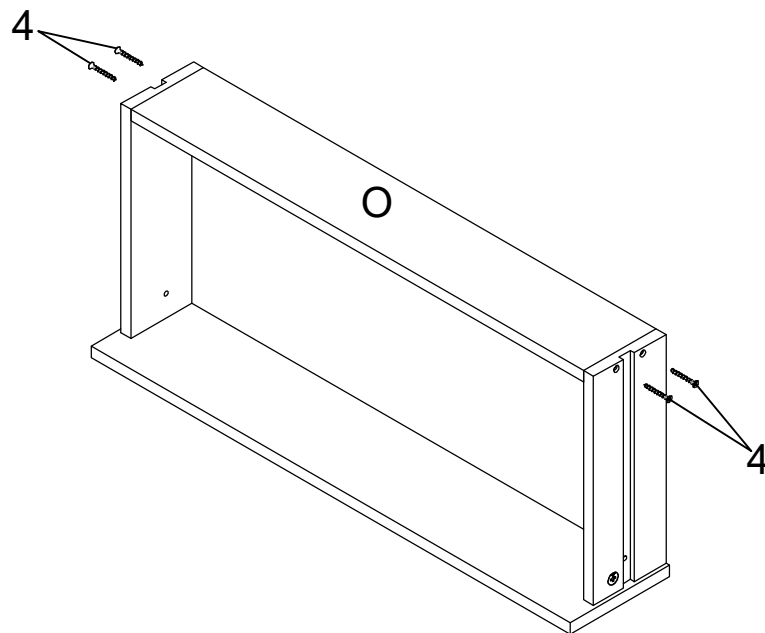



STEP 13

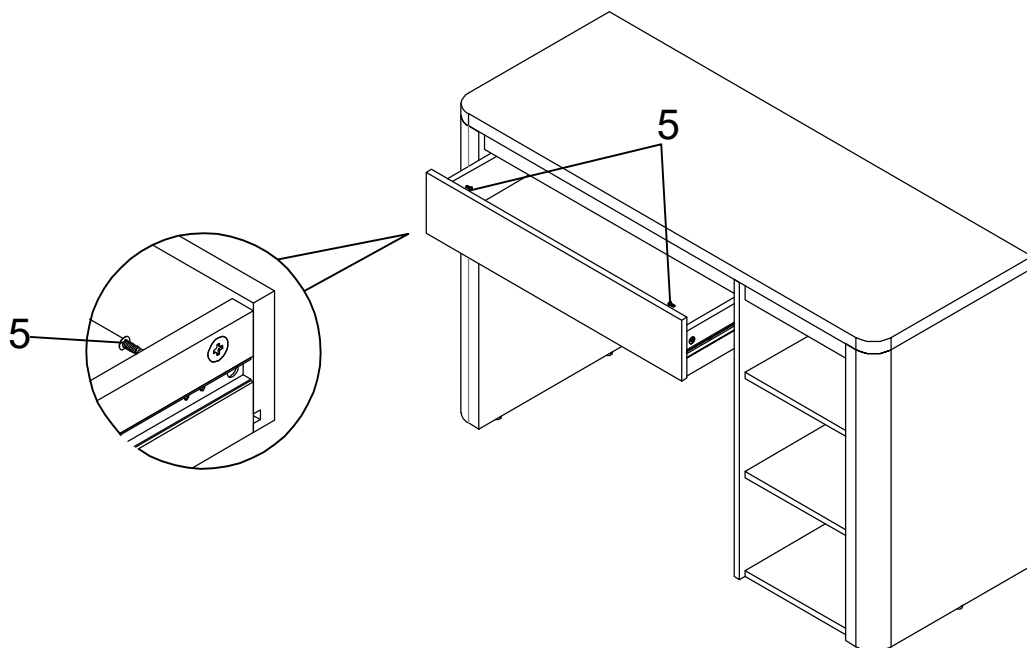

ITEM:935790
ASSEMBLY INSTRUCTIONS
STEP 14

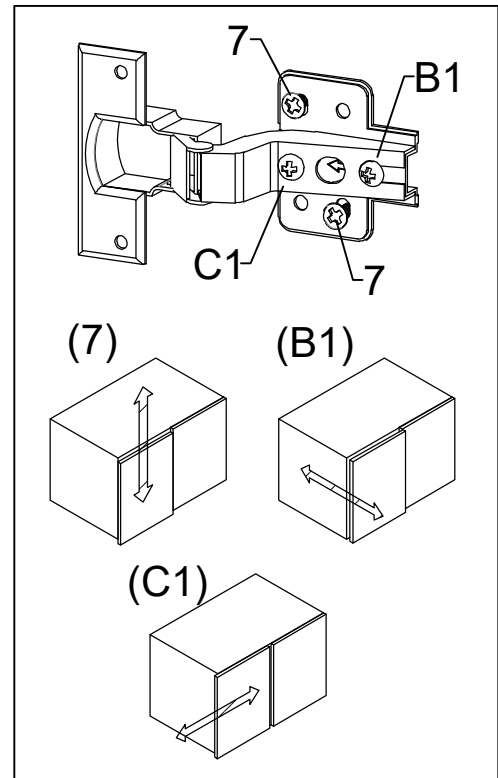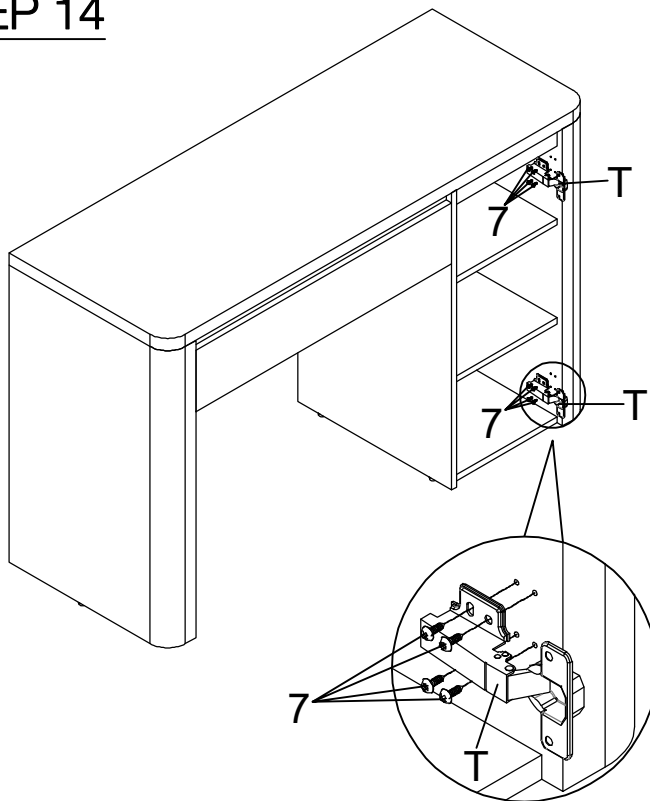


STEP 15

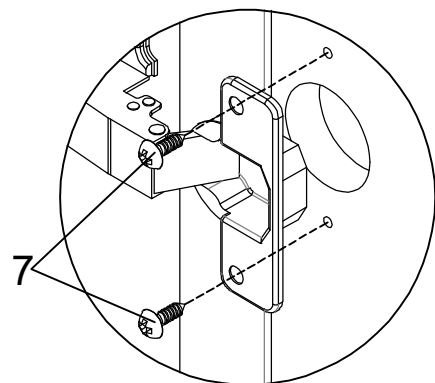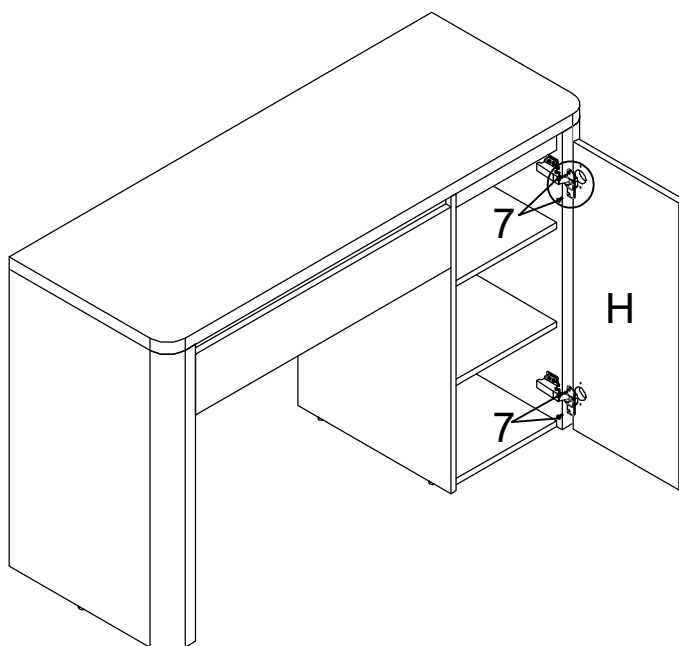



ITEM:935790
ASSEMBLY INSTRUCTIONS




STEP 16

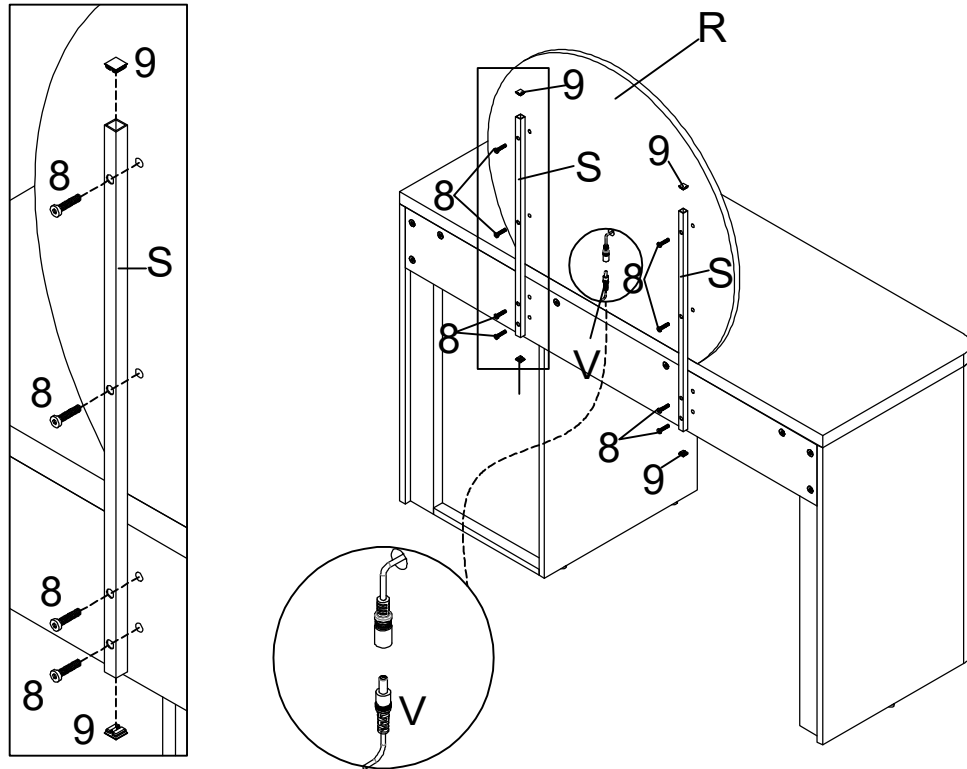

STEP 17
COMPLETE

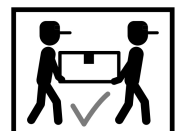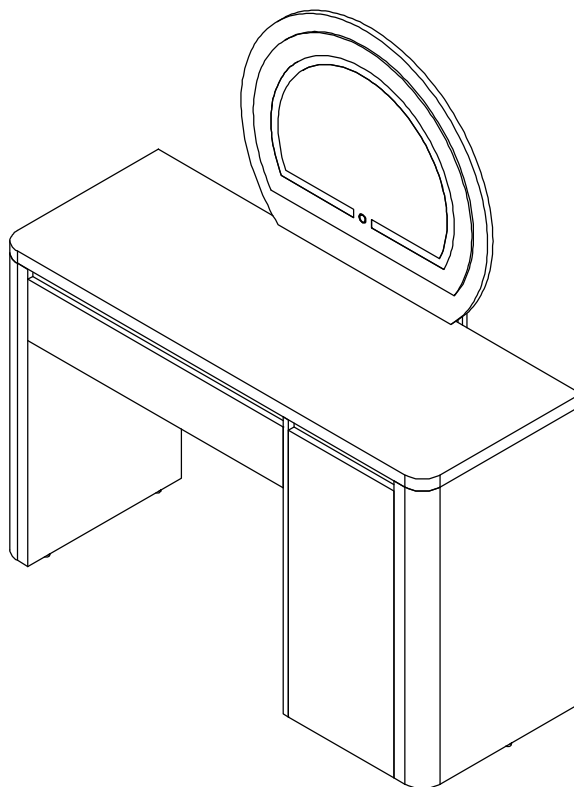

ITEM:935790 ASSEMBLY INSTRUCTIONS

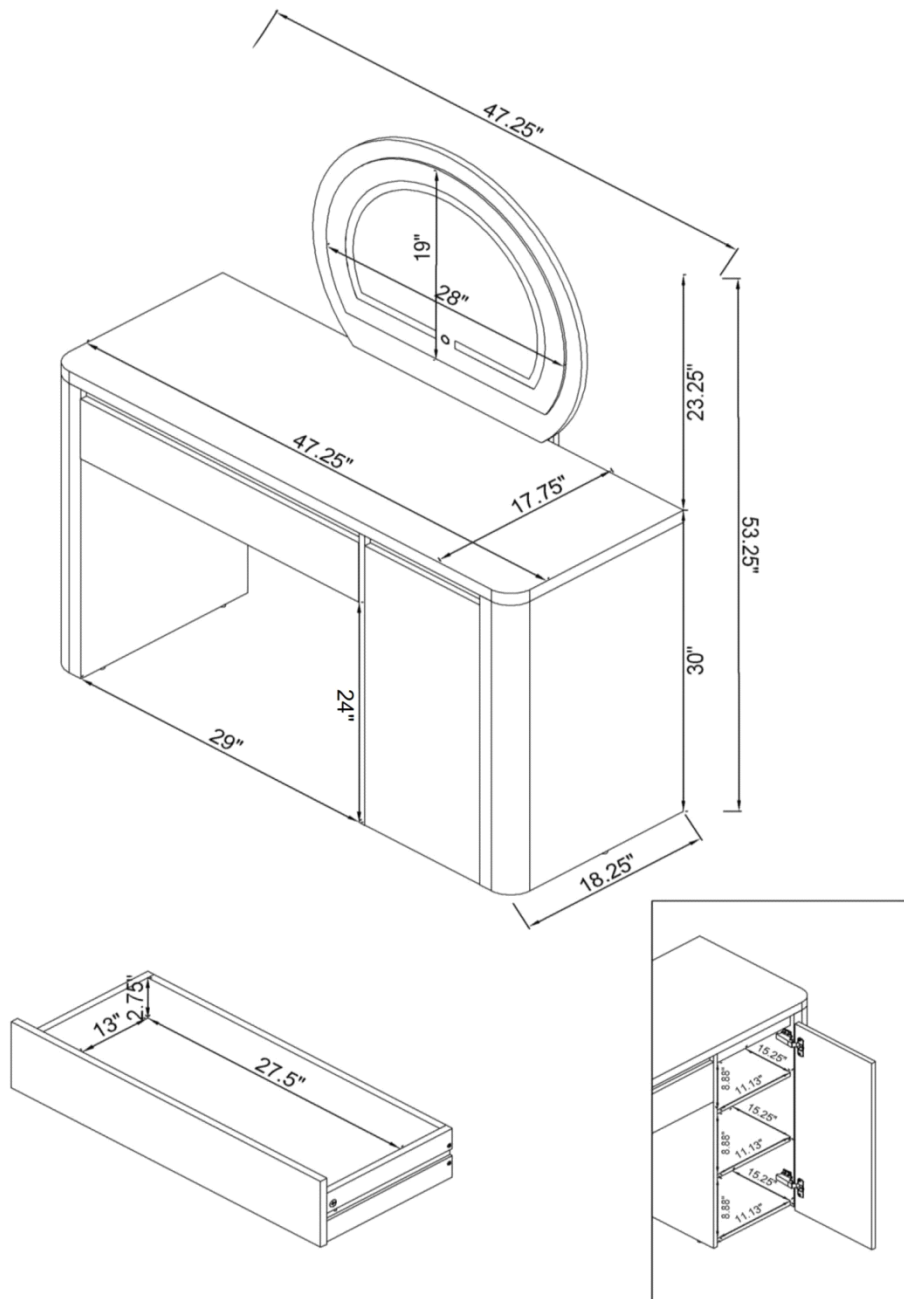

Note : Dimension tolerance $\pm 5\%$