


ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

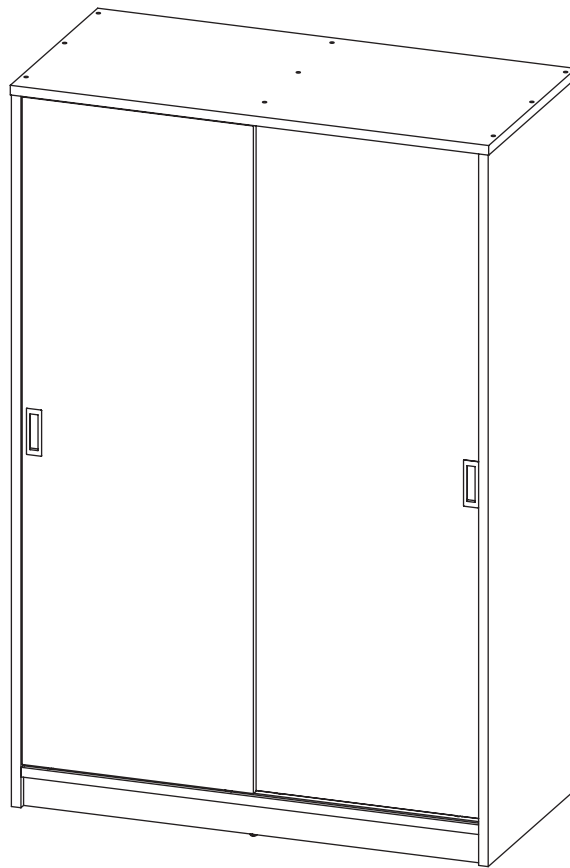

Fine Furniture for every stage of life

950441BLK
WARDROBE CABINET

ITEM:950441BLK



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!
















1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

90 MINUTES

PARTS IDENTIFICATION

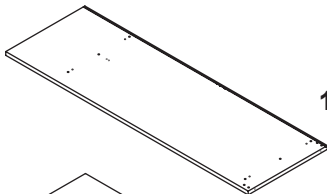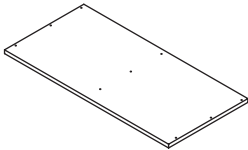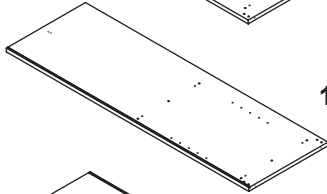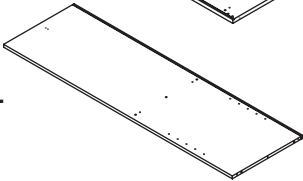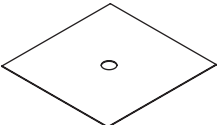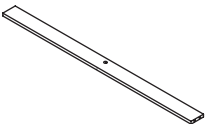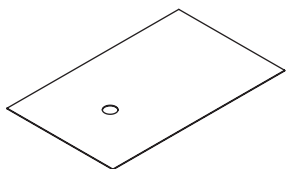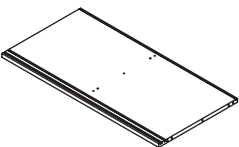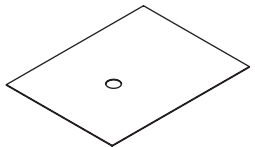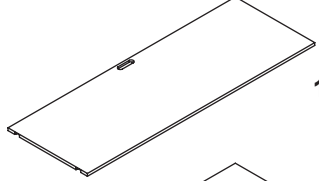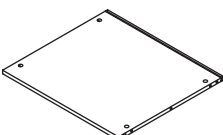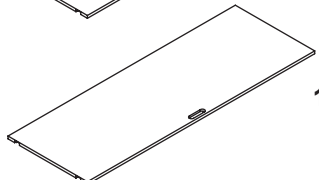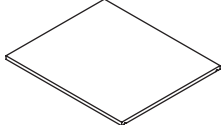A	LEFT SIDE PANEL		1 PC	I	TOP PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	J	LEFT UPPER BACK PANEL		1 PC
C	DIVIDER PANEL		1 PC	K	LEFT LOWER BACK PANEL		2 PCS
D	CROSS BRACE		2 PCS	L	RIGHT UPPER BACK PANEL		1 PC
E	BOTTOM PANEL		1 PC	M	RIGHT LOWER BACK PANEL		1 PC
F	BACK PARTITION PANEL		1 PC	N	LEFT DOOR		1 PC
G	CROSS PANEL		2 PCS	O	RIGHT DOOR		1 PC
H	ADJUSTABLE SHELF		1 PC				








NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 950441BLK

HARDWARE IDENTIFICATION

Z

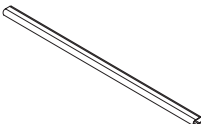NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	11	HANDLE L= 115mm BLK		2 PCS
2	WOODEN DOWEL Ø8x30mm		42 PCS	12	HANDLE BOLT Ø4x13mm BLK		4 PCS
3	CAM BOLT Ø7x35.5mm SR		18 PCS	13	ROD HOLDER		4 PCS
4	CAM LOCK Ø15x12mm SR		18 PCS	14	HINGE SCREW Ø4x15mm SR		8 PCS
5	SCREW Ø4.5x42mm SR		12 PCS	15	RUBBER Ø58mm BLK		4 SETS
6	PLASTIC FEET Ø15mm		6 PCS	16	BACK PANEL SUPPORT		6 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		4 PCS	17	BACK PANEL SUPPORT SCREW Ø3x19mm SR		6 PCS
8	PIN Ø5.8x25mm SR		4 PCS	18	STICKER Ø20mm		3 PCS
9	PULLEY		4 PCS	19	HANGING ROD L= 557mm SR		2 PCS
10	SCREW Ø3x12mm BLK		16 PCS				

Z9, Z10, Z11, Z12, Z13, Z15, Z19 not included in blister packaging.


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 950441BLK

COASTER
FINE FURNITURE

STEP 1

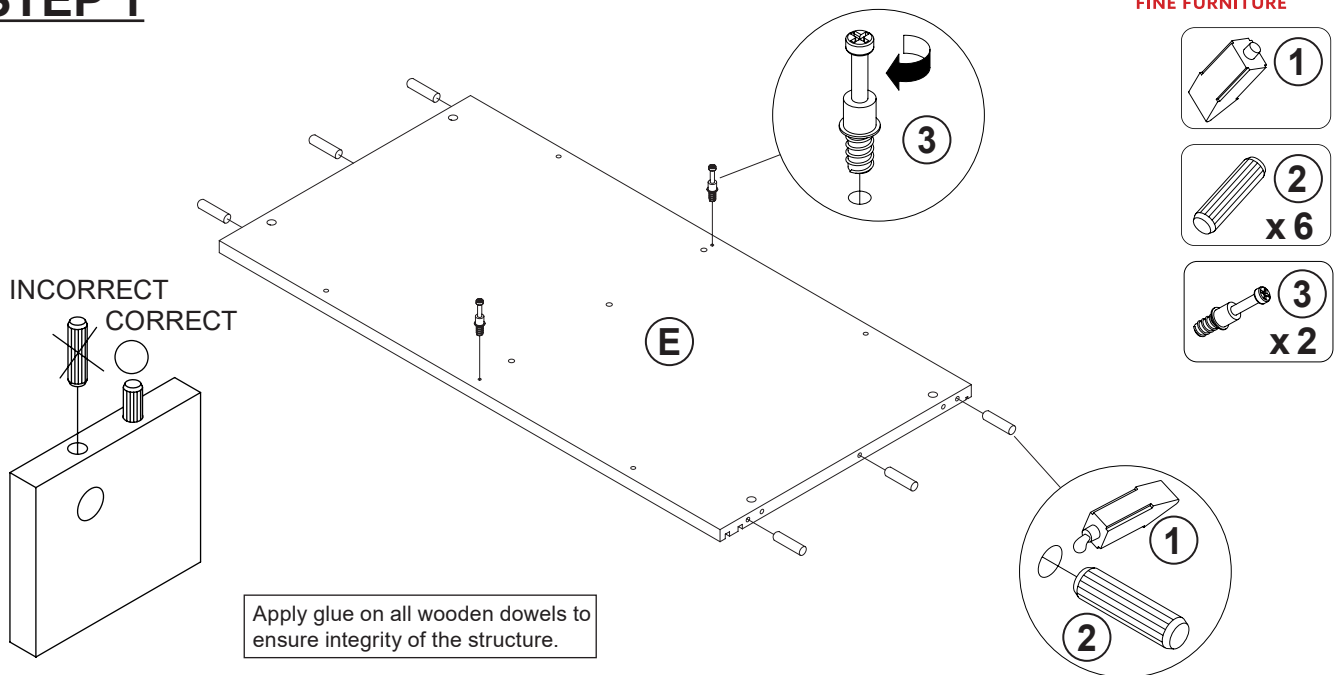


STEP 2

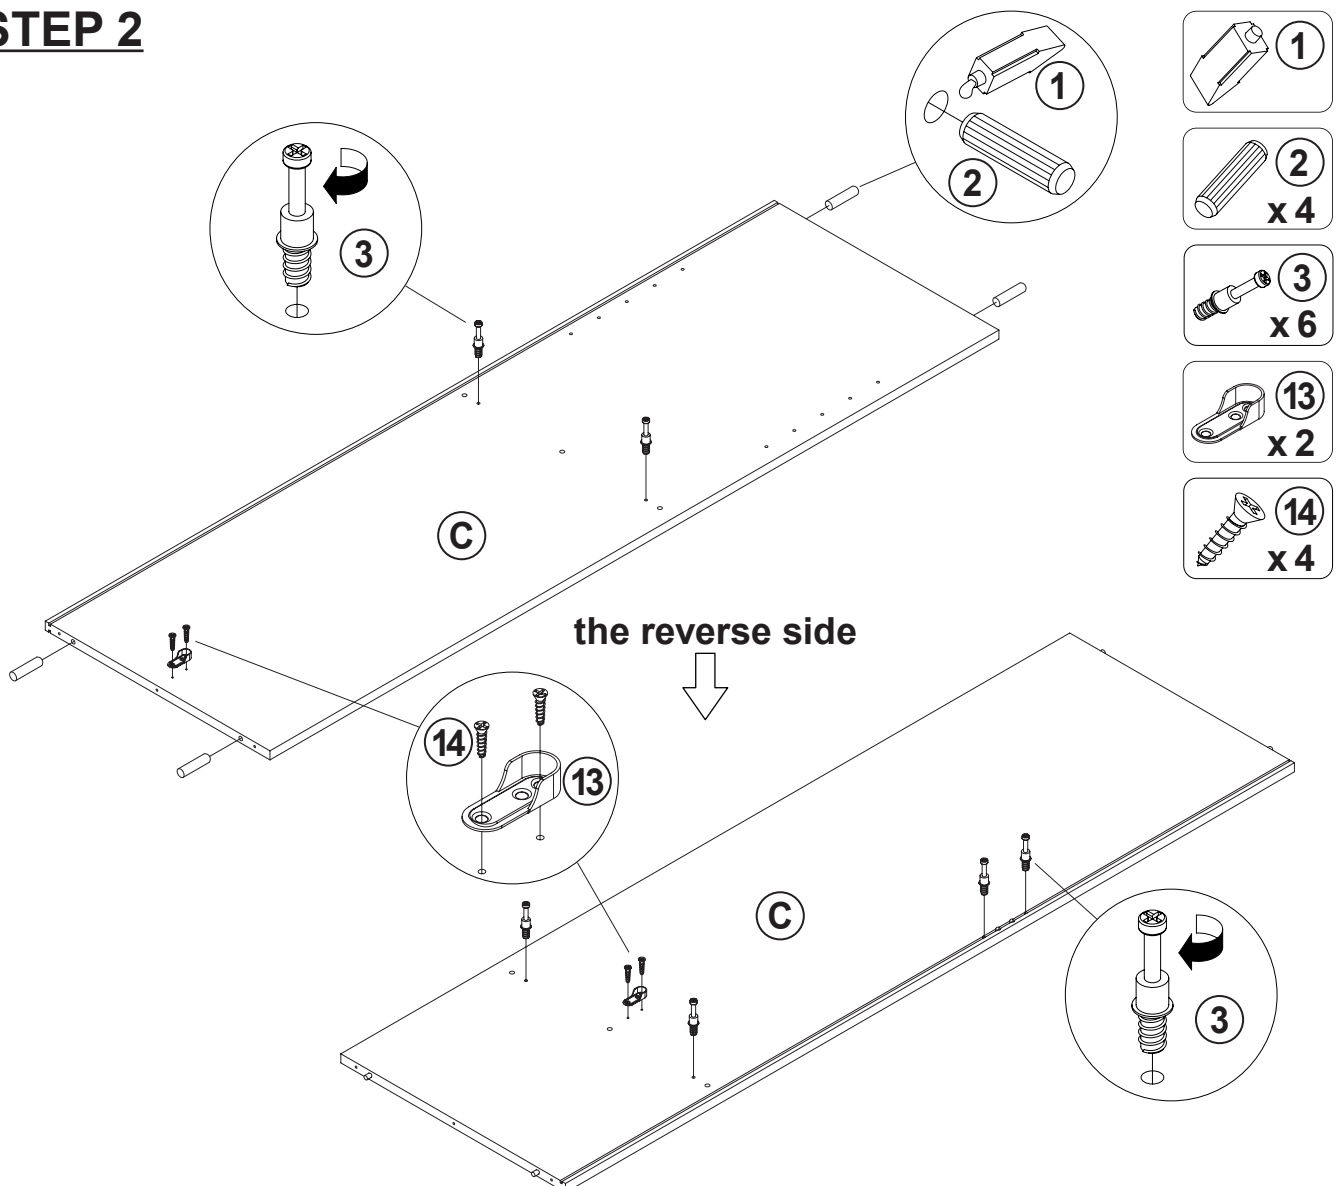


ITEM: **950441BLK**

STEP 3

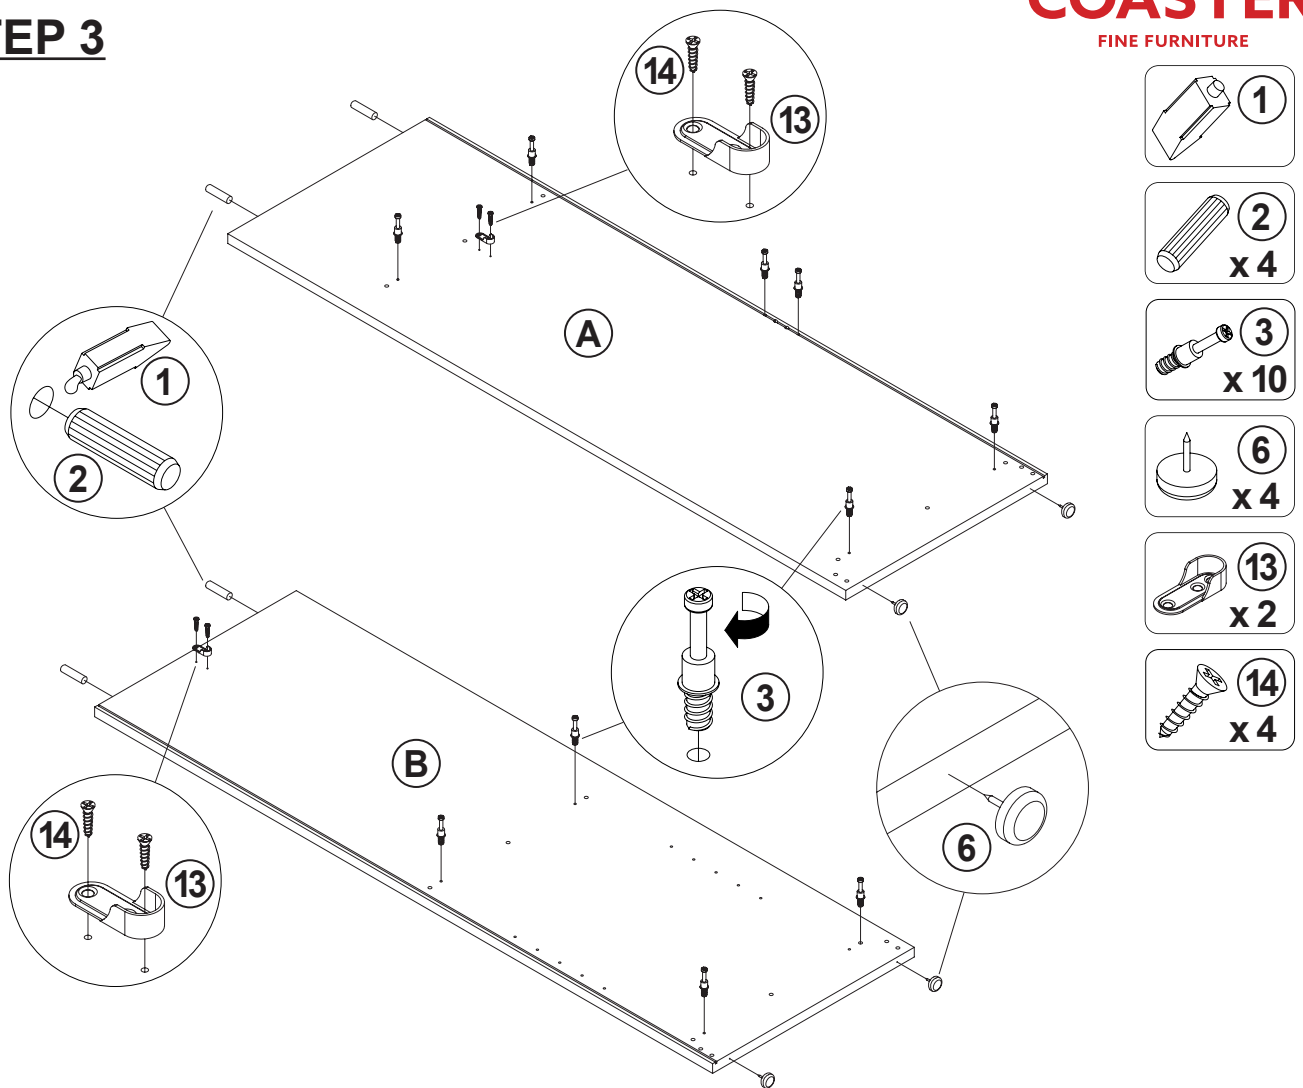


STEP 4

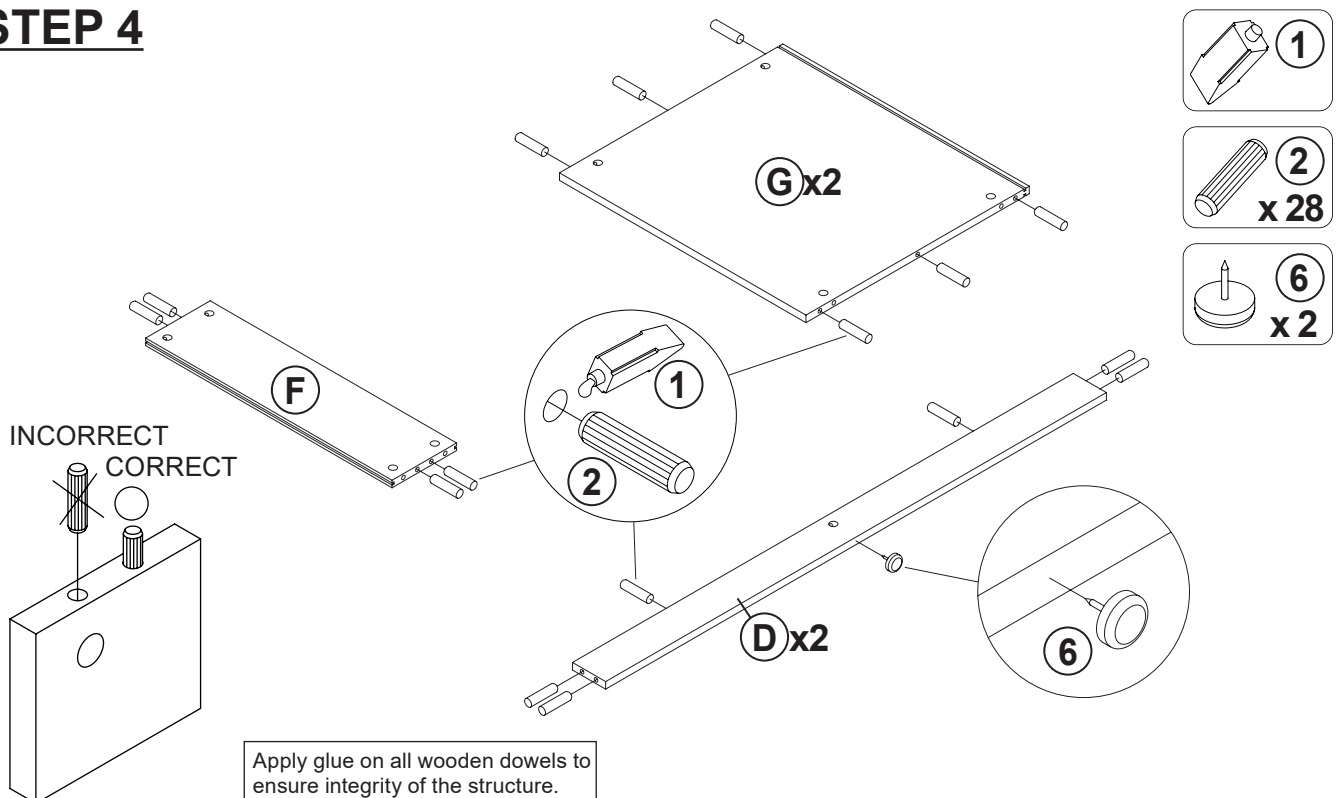


ITEM: **950441BLK**

COASTER
FINE FURNITURE

STEP 5

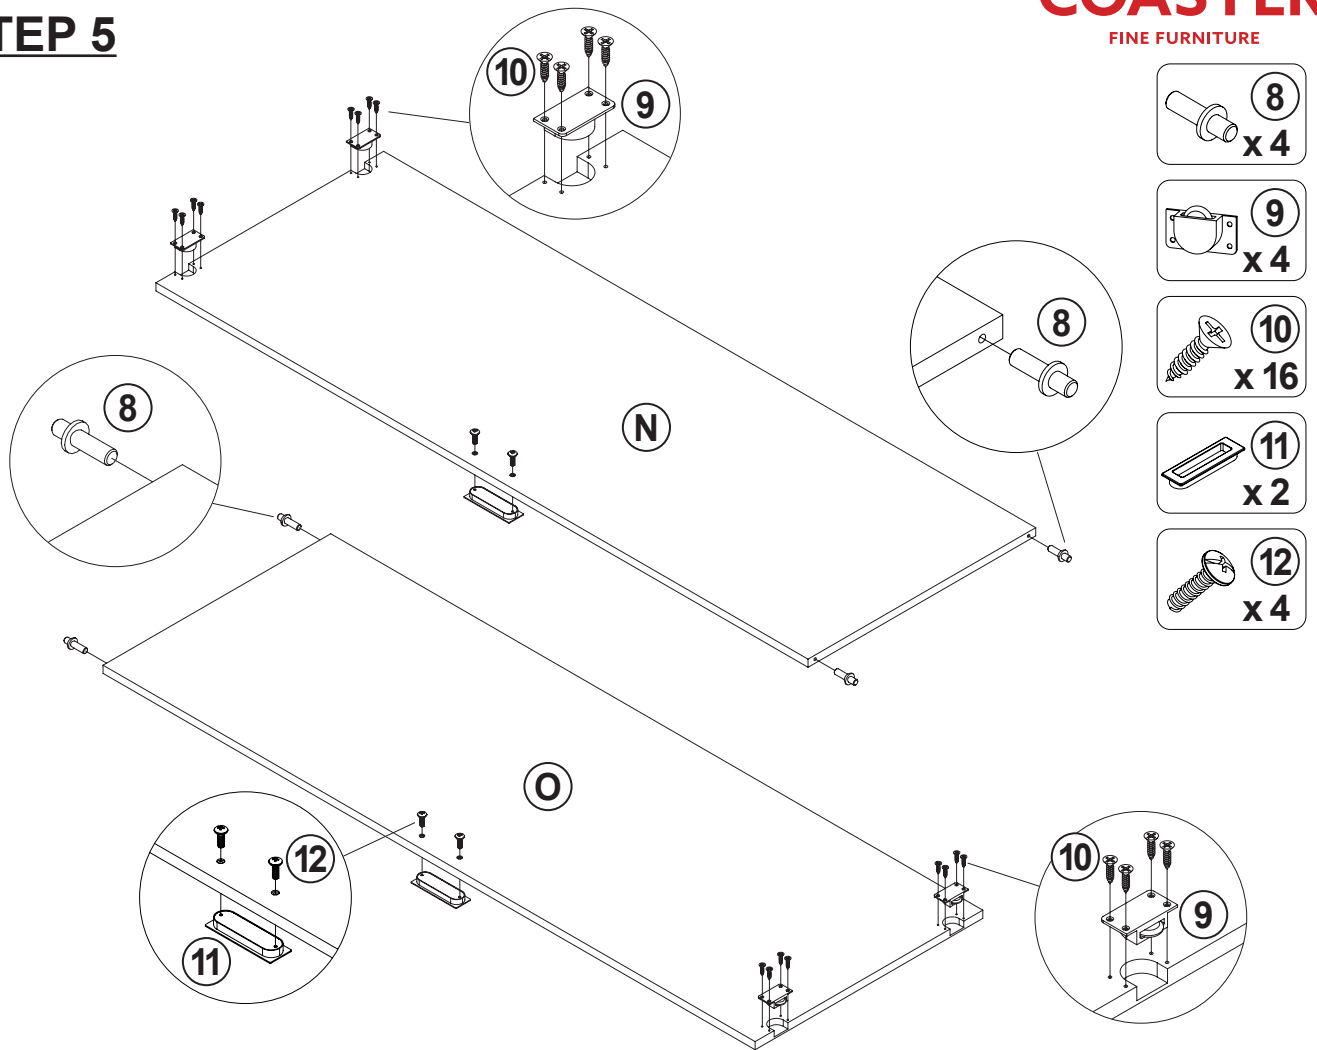




STEP 6

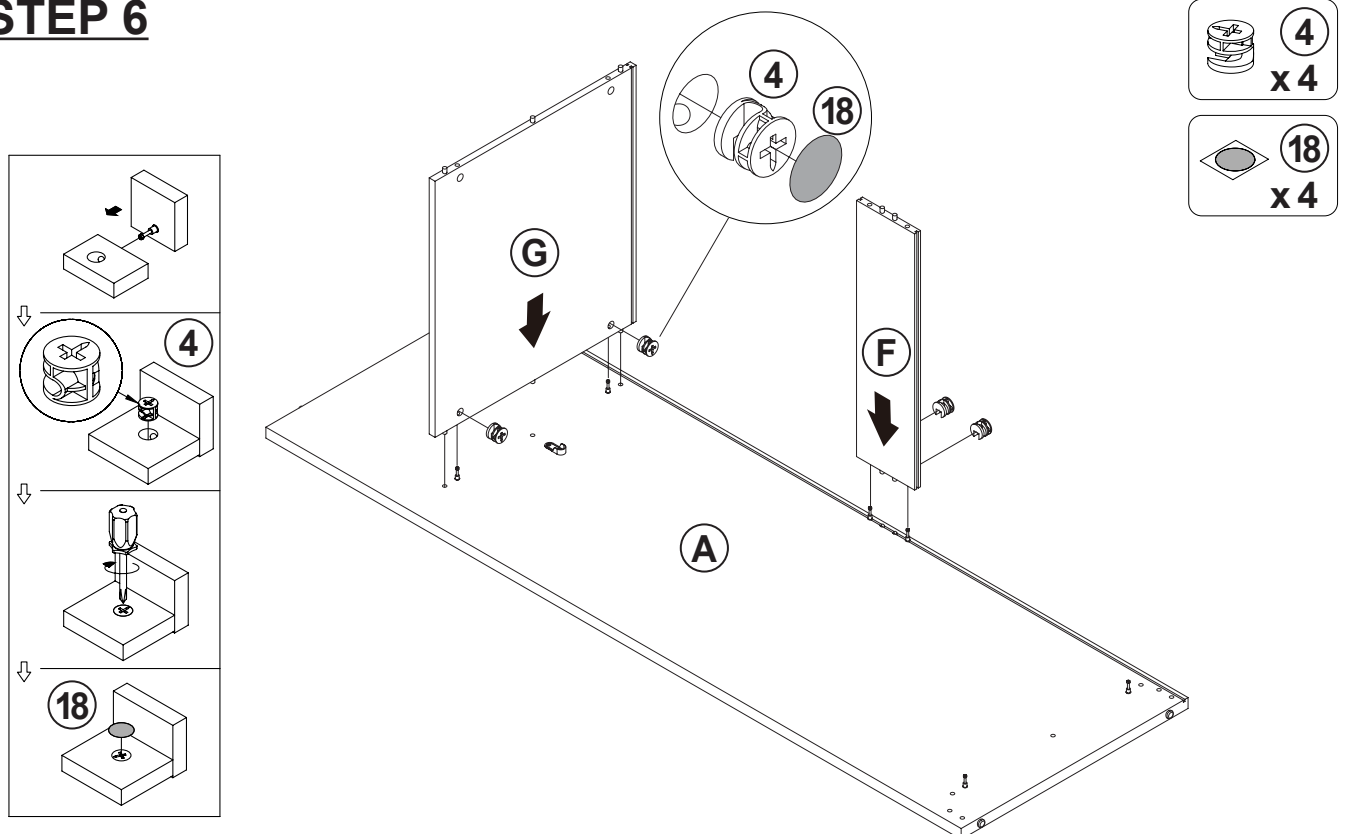



ITEM: **950441BLK**

COASTER
FINE FURNITURE

STEP 7

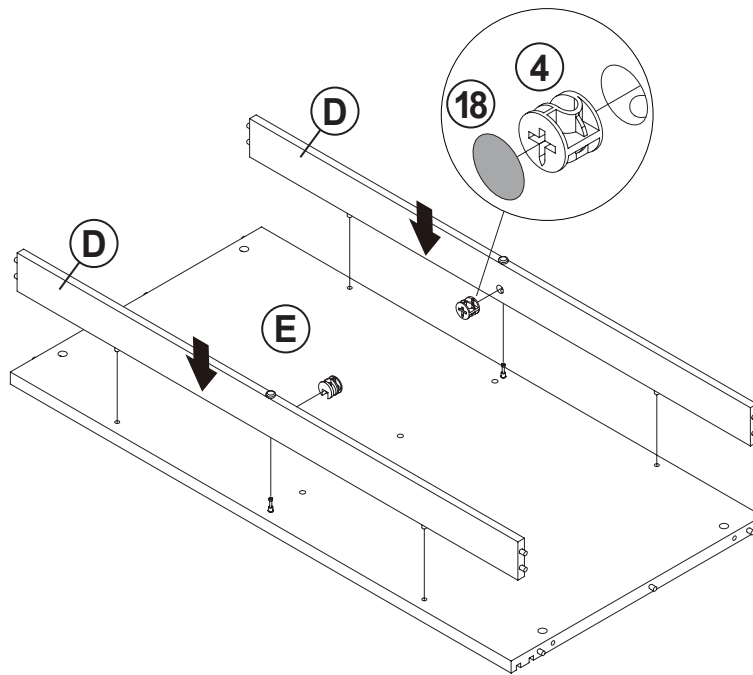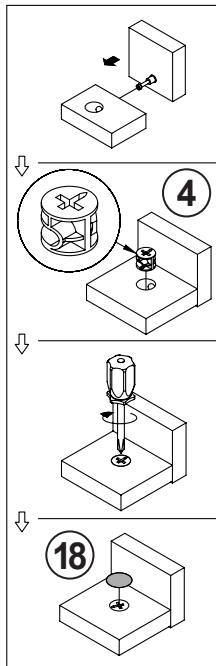


STEP 8

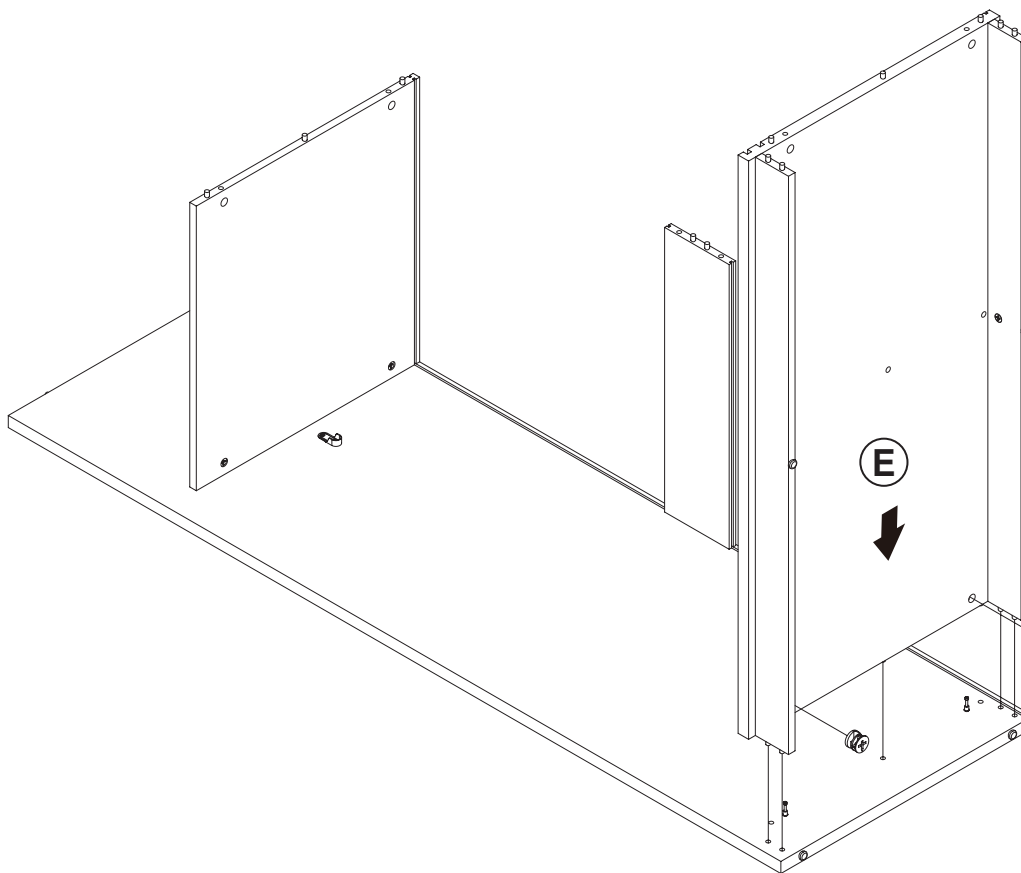


ITEM: **950441BLK**

STEP 9

COASTER
FINE FURNITURE

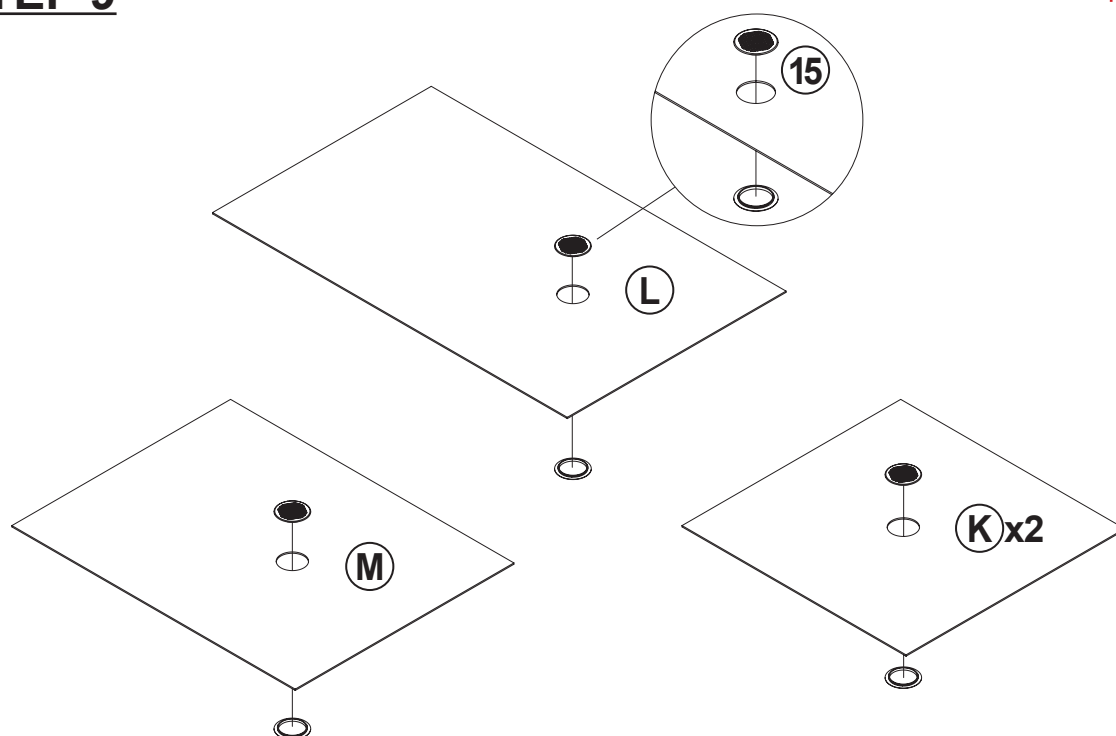


STEP 10






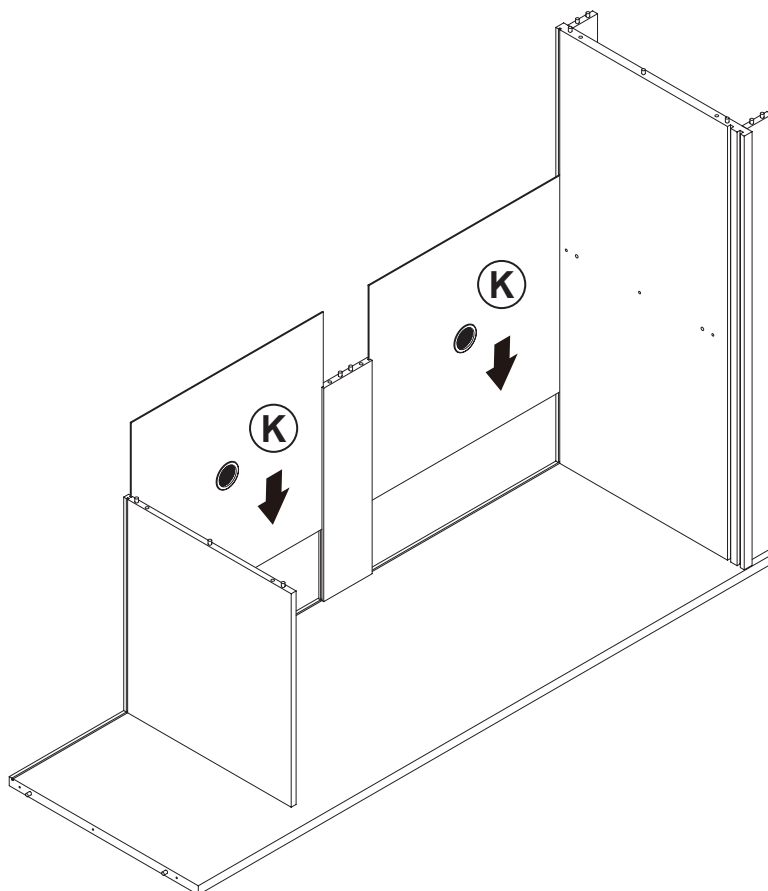


ITEM: **950441BLK**

STEP 11

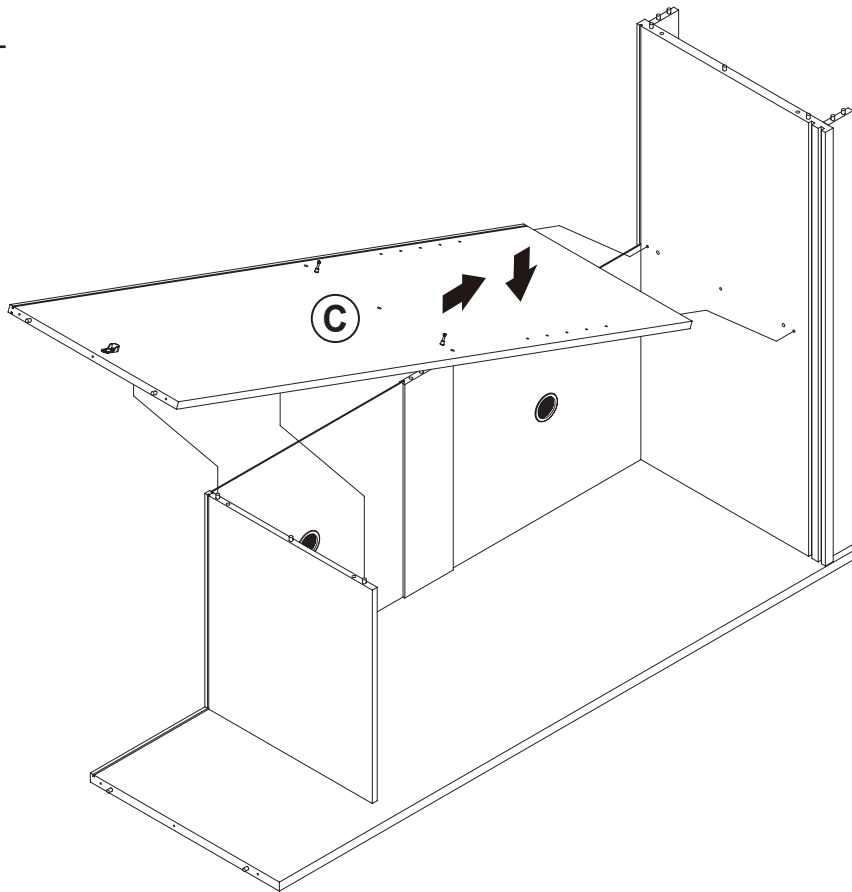


STEP 12

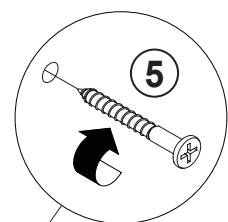
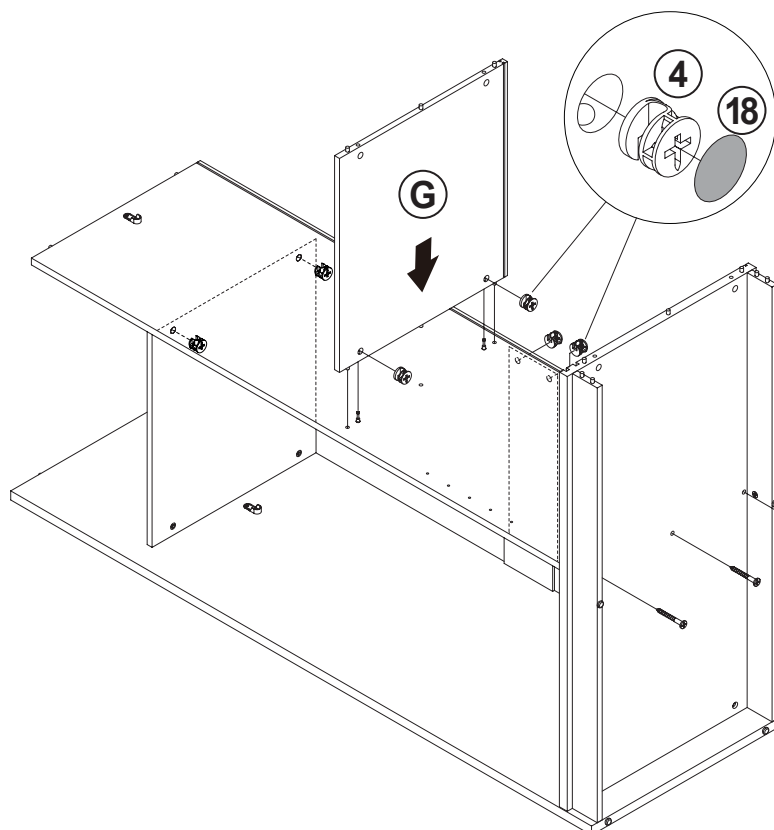
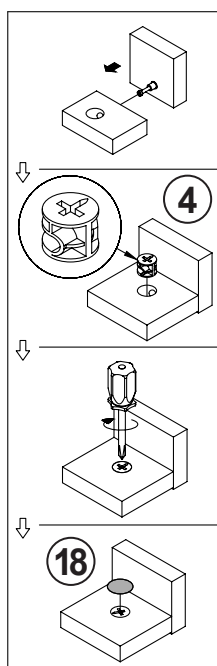


ITEM: **950441BLK**

STEP 13

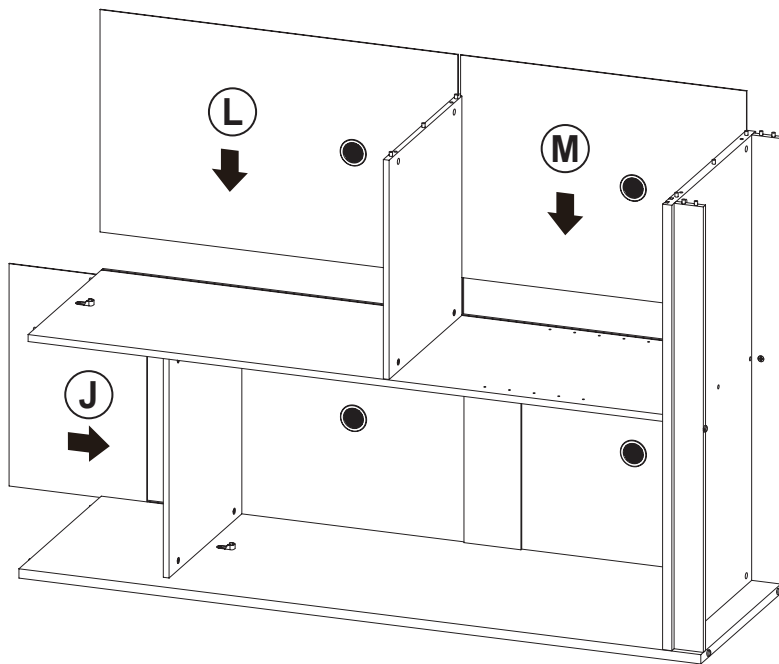



STEP 14

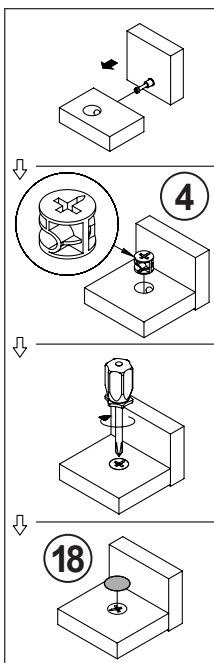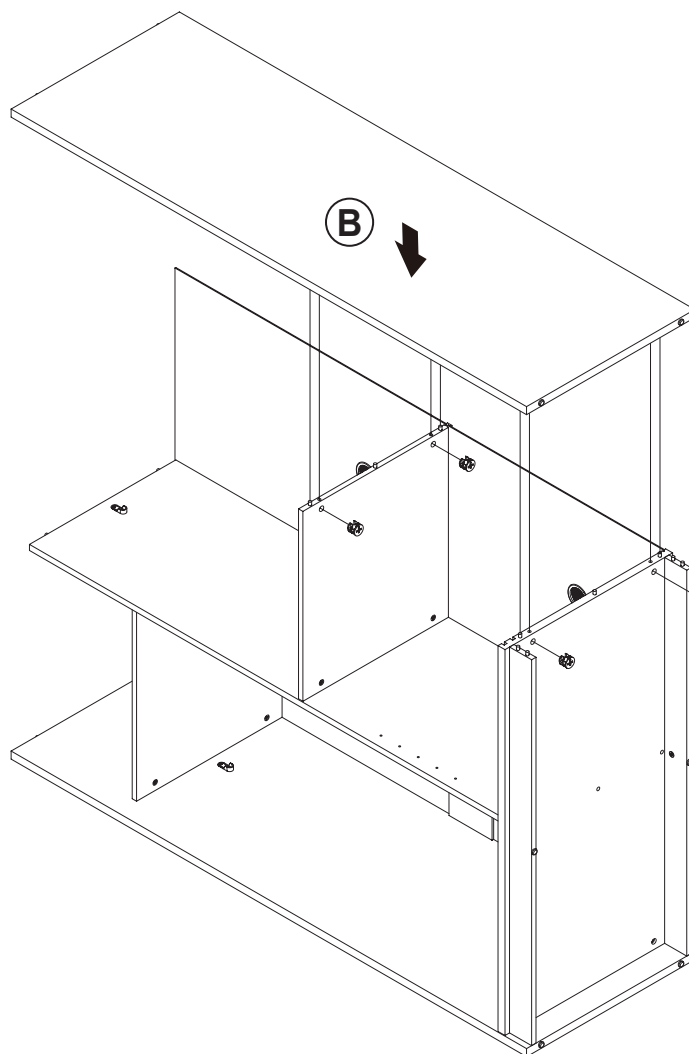





ITEM: **950441BLK**

COASTER
FINE FURNITURE

STEP 15

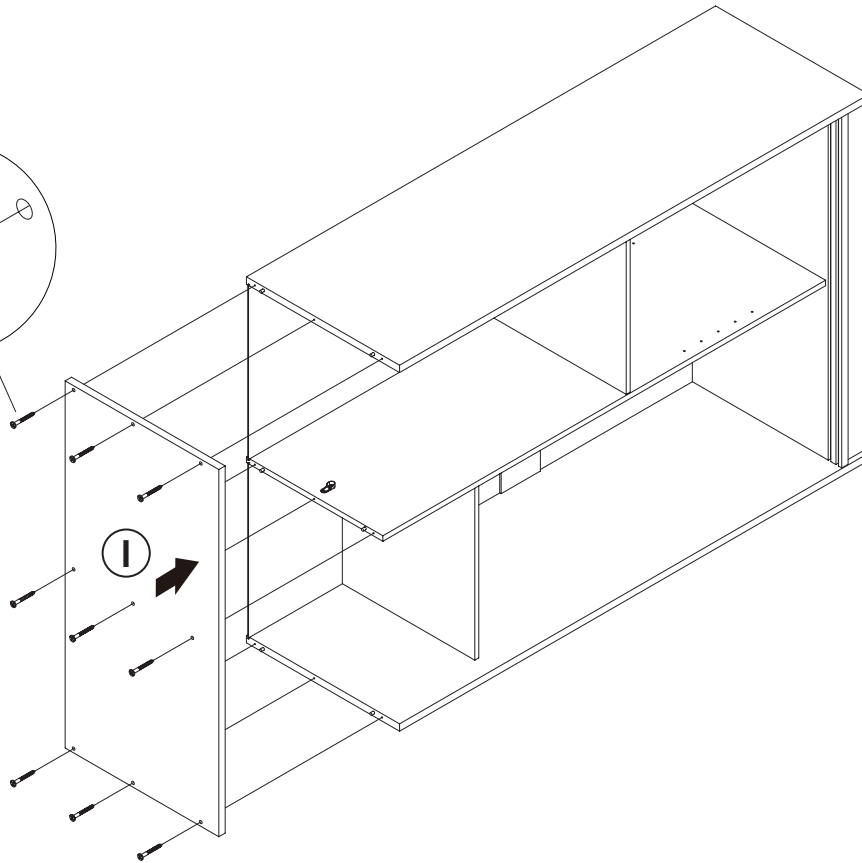





STEP 16

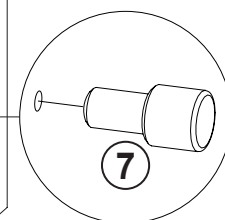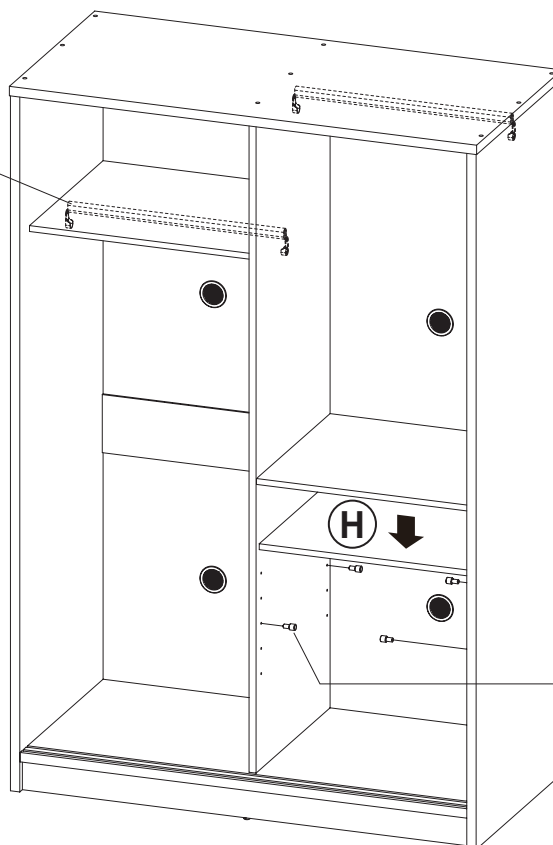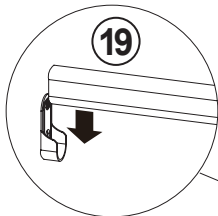

ITEM: **950441BLK**

STEP 17






COASTER
FINE FURNITURE

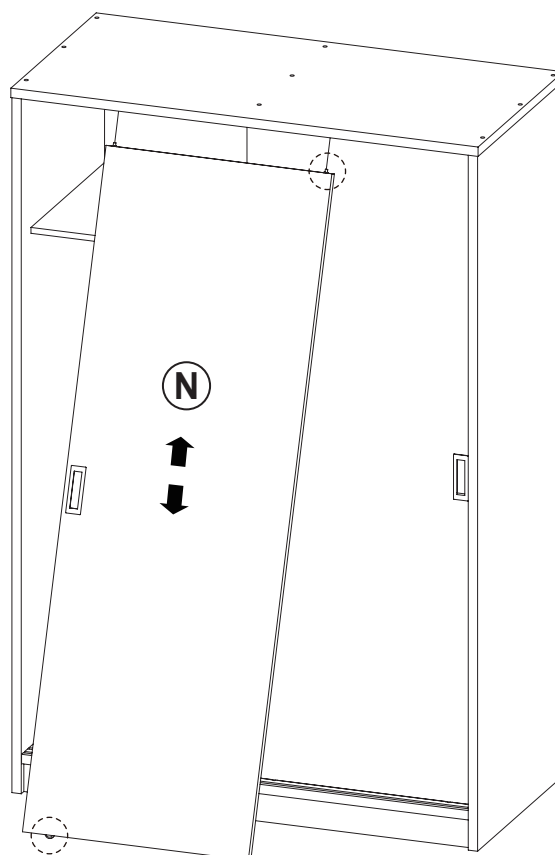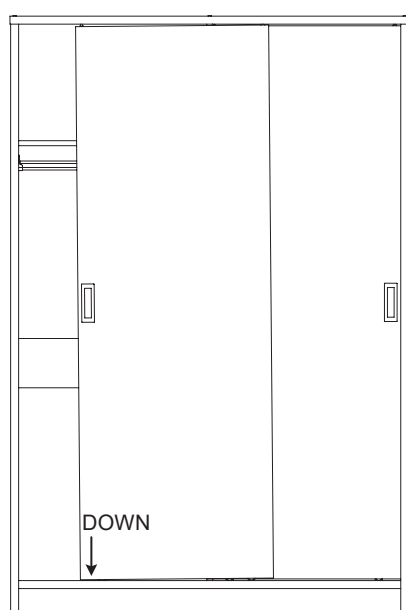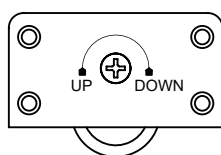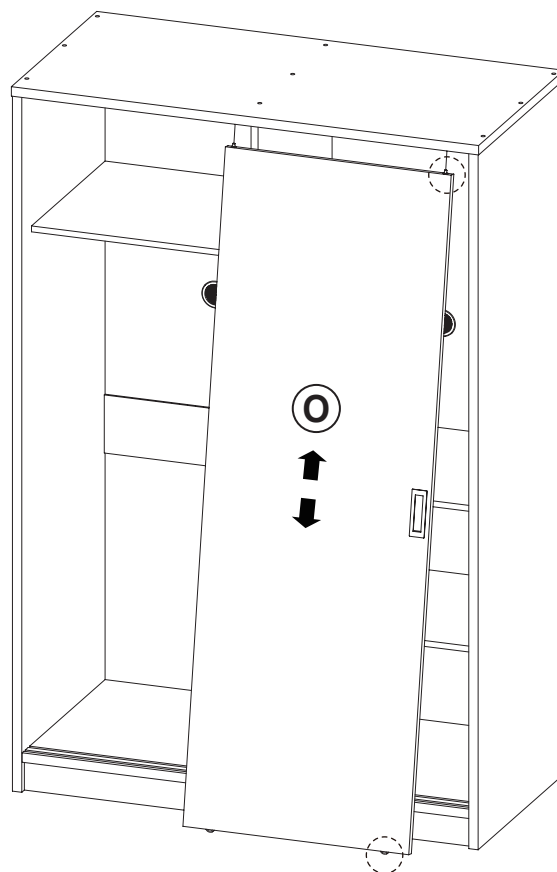


ITEM: **950441BLK**

STEP 18


COASTER
FINE FURNITURE

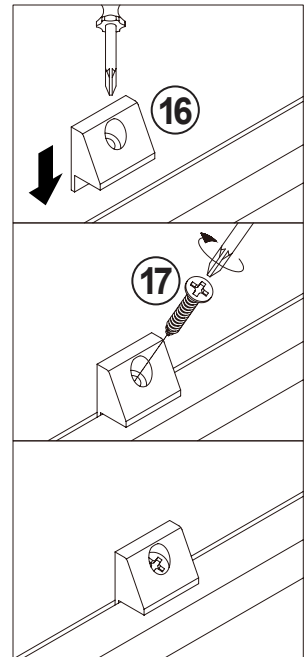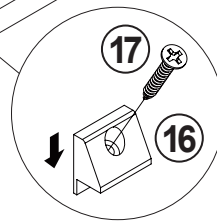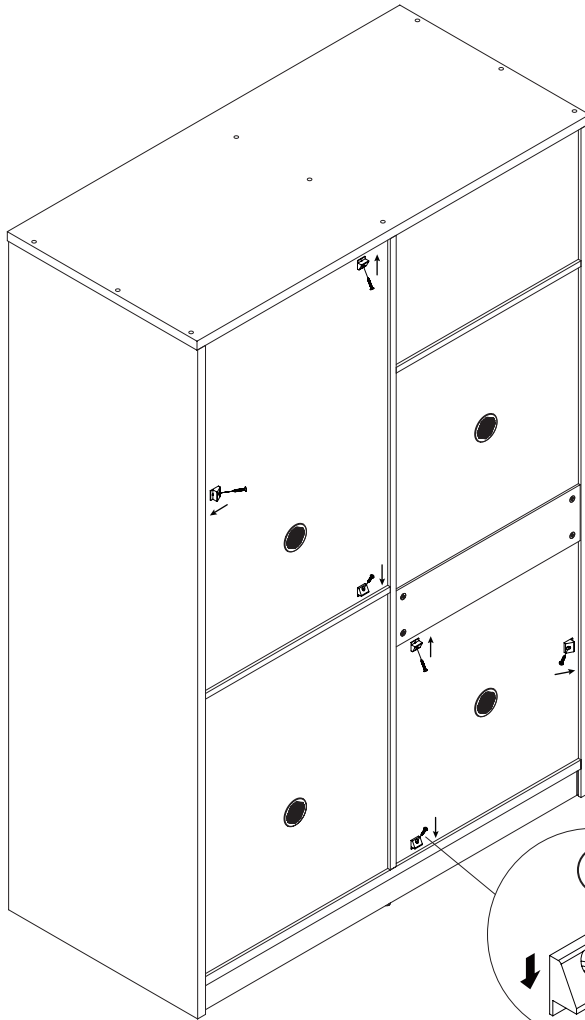

STEP 19
COMPLETE

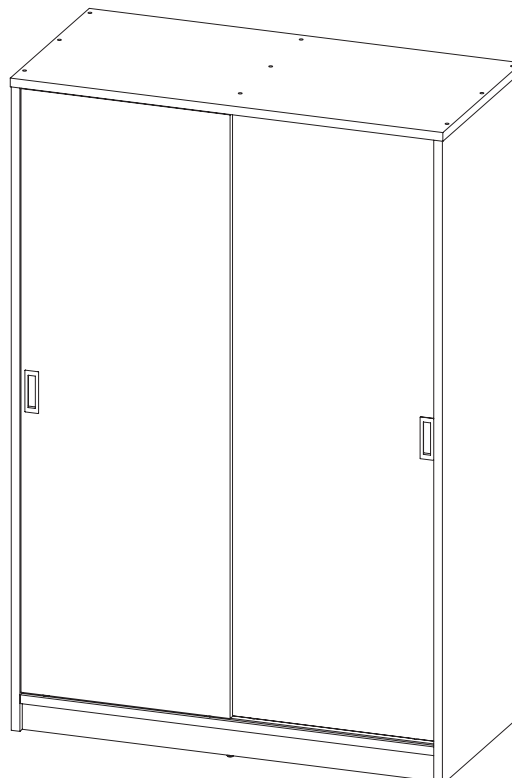

ITEM: **950441BLK**

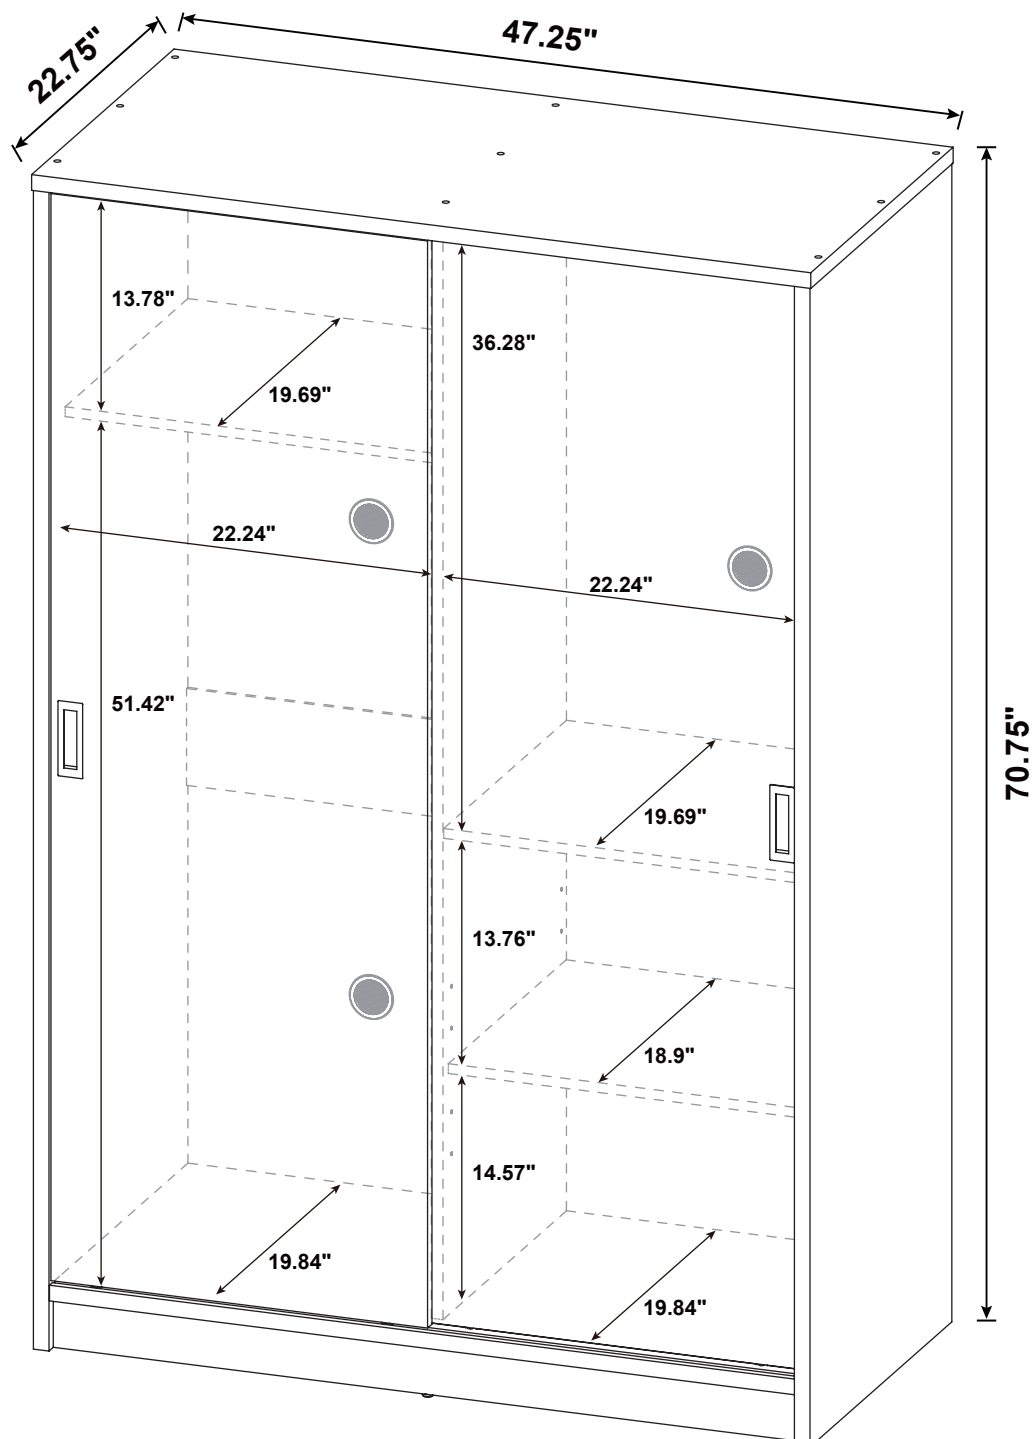

Note : Dimension tolerance $\pm 5\%$


ANTI-TIPPING INSTALLMENT INSTRUCTIONS
FURNITURE TIPPING RESTRAINT**WARNING**

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture may result in injury and damage.


This restraint must be screwed to a wood stud on the wall, using the long screw provided.

STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

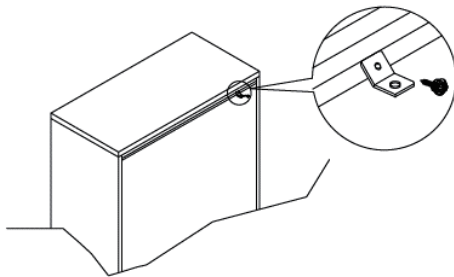**STEP 2**

Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

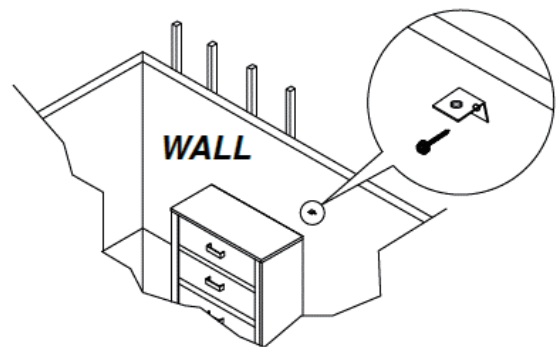**STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

