

# TWIN/FULL FRAME ASSEMBLY INSTRUCTIONS

## Step 1

Swing out CROSS ARMS to 90 degrees. See Figure 1.

## Step 2

Determine desired bed size (Twin or Full).

Overlap CROSS ARMS and engage SHOULDER RIVETS into proper keyholes. See Figure 2.

**Note: Both rivet heads must engage in keyhole slots.**

## Step 3

Install accessories as shown in Figure 3.

## Step 4

Slide SHEET PROTECTORS onto side rails. See Figure 4

Figure 1.

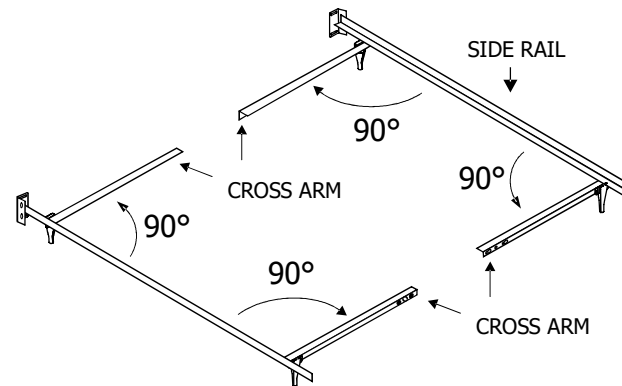


Figure 2.

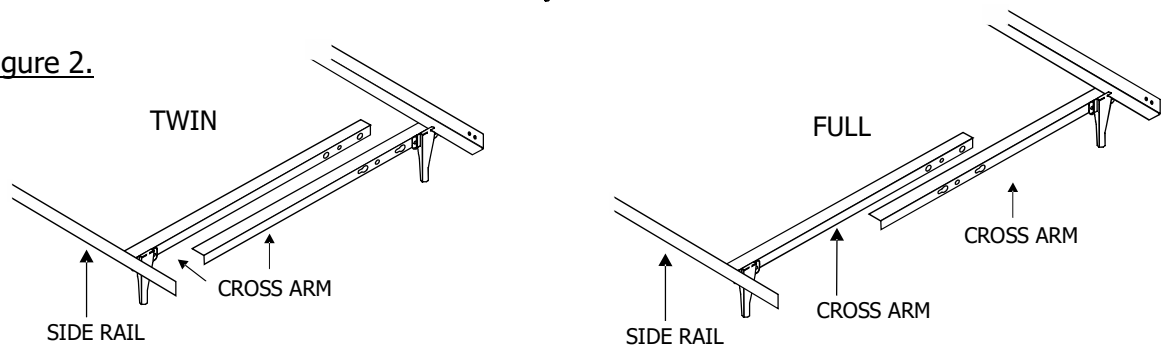


Figure 3.

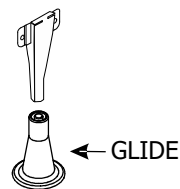


Figure 4.

