

TWIN/FULL BOLT-ON BED RAIL ASSEMBLY INSTRUCTIONS

Step 1

Swing out CROSS ARMS to 90 degrees. See Figure 1.

Step 2

Determine desired bedding size (Twin or Full)
Overlap CROSS ARMS and engage SHOULDERS RIVETS
into proper keyholes. See Figure 2.

Note1: Both rivet heads must engage in keyhole slots.

Step 3

Attach side Rails to headboard and footboard.
See Figure 3.

Step 4

Tap PLASTIC SOCKETS into Legs, insert ADJUSTABLE
GLIDE into SOCKET. Adjust glides so they touch the floor.
Tighten WING NUTS. See Figure 4 & 5.

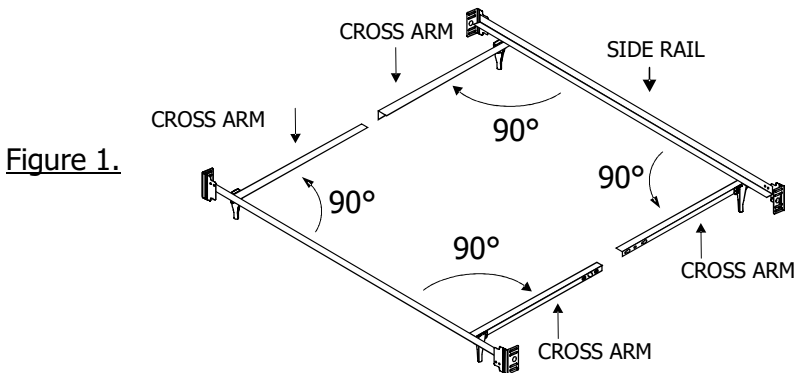


Figure 2.

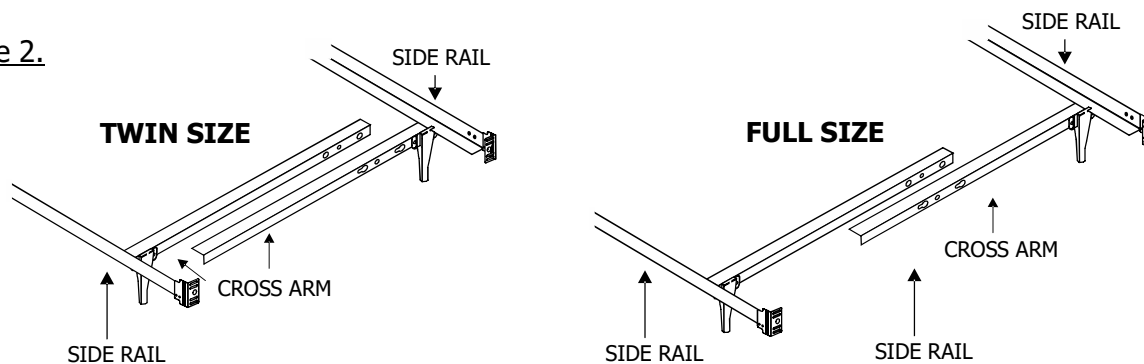


Figure 3.

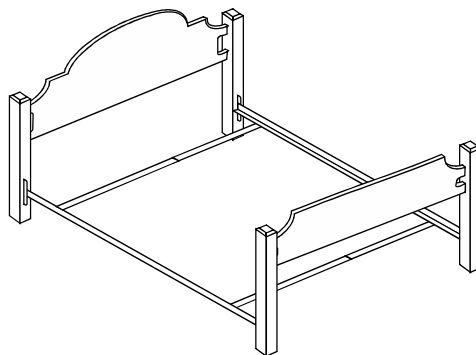


Figure 4.

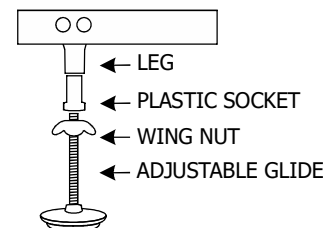


Figure 5.

