




7030-00220 KIT

<u>MAS90: 5043-43220</u>		
7109TTW TWIN FRAME HARDWARE		
<u>QTY:</u>	<u>DESCRIPTION:</u>	
8	1/4 X 4 HEX LAG BLK	
8	3/16 USS FL WASHER BLK	
10	6 X 1 1/4 PHIL FLAT PARTICLE BOARD SCREW	

	LAG BOLT
	WASHER
	PHIL FLAT PARTICLE BOARD SCREW


TETON TWIN/FULL
BOOKCASE BED

460120T

400839T

460120F

400839F

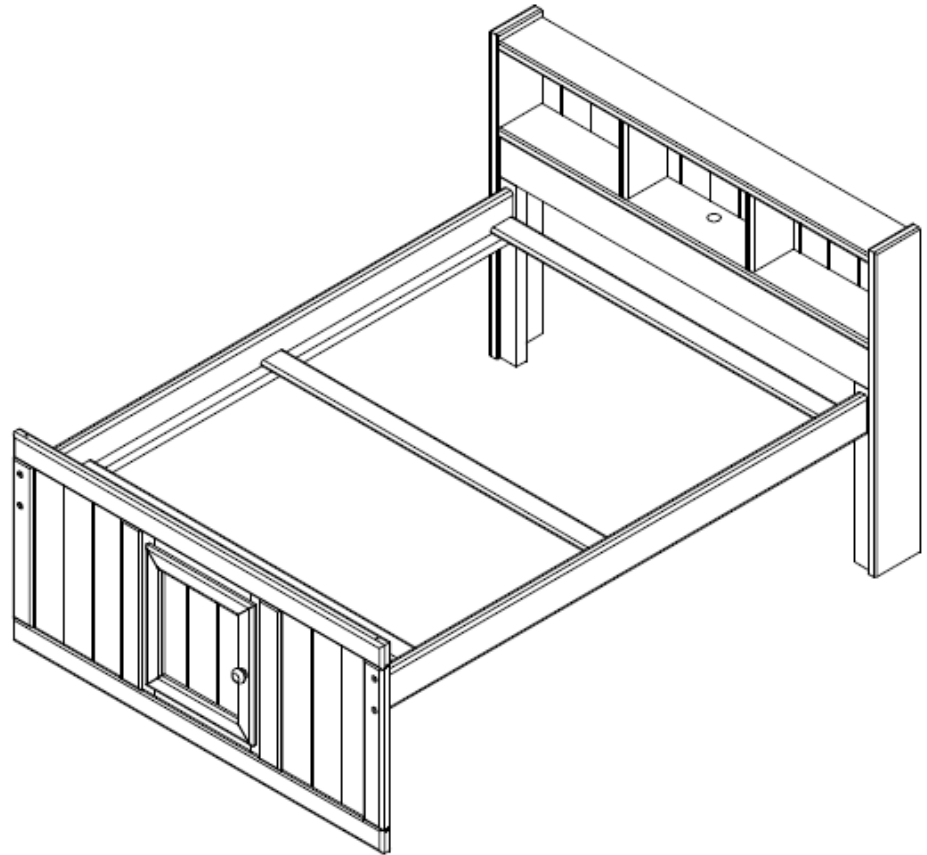

PARTS LIST:

- A) 8 -4 1/4" Lag Bolts
- B) 8 -Black Steel Washers
- C) 1 -Headboard Assembly
- D) 1 -Footboard Assembly
- E) 2 -5" x 75" Mattress Rails w/Support Cleats
- F) 3 -3 1/2" x 38 1/2"(Twin) or 53 1/2"(Full) Mattress Supports
- G) 10 -1 1/4" Wood Screws

TOOLS REQUIRED:

- 1) 7/16" Wrench or Socket Wrench
- 2) Phillips Head Screwdriver

NOTE: Tool recommended: Electric driver with 7/16" socket


ASSEMBLY INSTRUCTIONS:

NOTE:


Make sure you have all parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.

- 1) Attach two mattress rails(E) to headboard assembly(C) and footboard assembly(D) with 8 lag bolts and 8 washers, and tighten.
- 2) **Place 3 mattress supports on mattress rail support cleats, with one support in the center, and a support pushed tightly against each end assembly.**
- 3) **Secure mattress supports with 6 wood screws.**
- 4) Add the foundation and proper thickness mattress.(See dealer for details)

When used with a slot roll, the three individual slats should be placed evenly in the gaps and underneath the strapping before fastening.

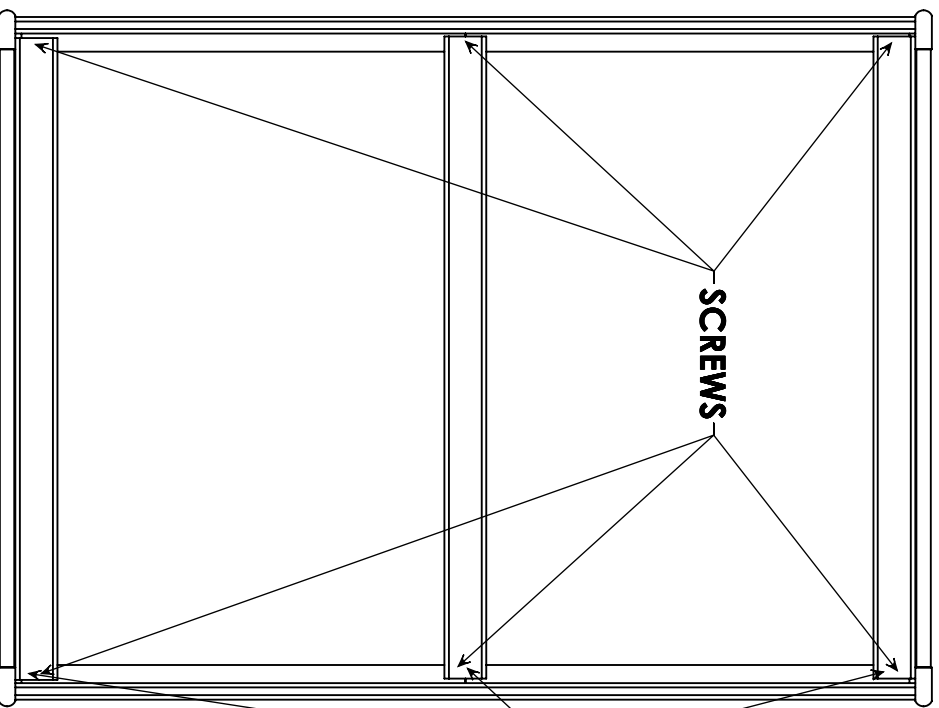

Installation of individual slats for use with Bunkie Board (Bunkie Board sold separately) See your retailer for purchase of Bunkie Board

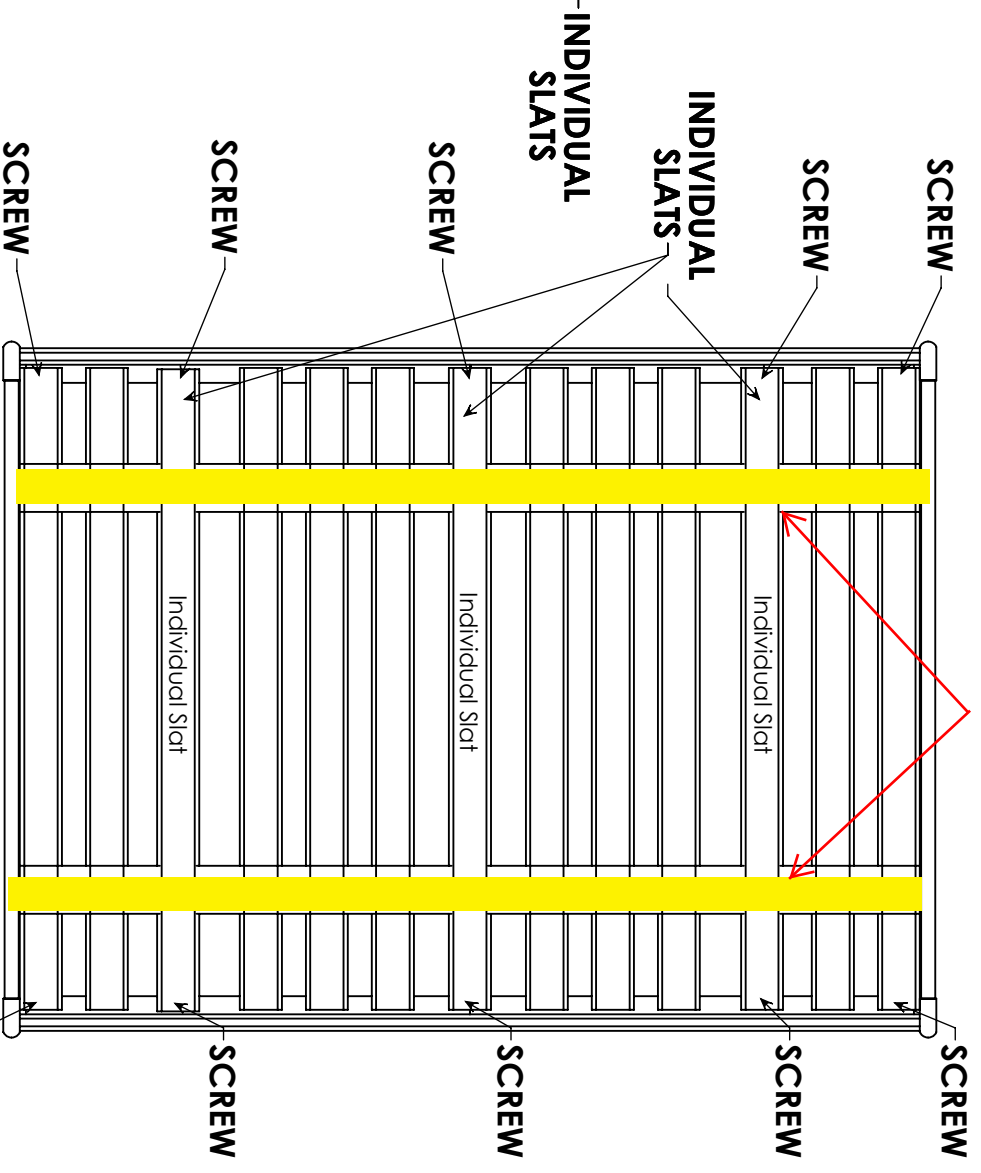

Installation of individual slats for use with Slot Roll (Slot roll sold separately) See your retailer for purchase of Slot Roll