

BOLT-ON BED RAIL ASSEMBLY INSTRUCTIONS

Step 1

Swing out CROSS ARMS to 90 degrees. See Figure 1.

Step 2

Determine desired bedding size (Queen or King)
Slide SHOULDERS RIVETS from CROSS ARMS into
proper keyholes of EXTENDER as indicated in Figure 2.

**Note1: Both rivet heads must engage in keyhole
slots.**

Note2: For Queen size do not use EXTENDERS.

Step 3

Secure tightly CENTER SUPPORT on EXTENDER or
CROSS ARM with NUTS and BOLTS. See Figures 3 & 4.

Step 4

Attach side Rails to headboard and footboard. See Figure 5.

Step 5

Tap PLASTIC SOCKETS into Legs, insert ADJUSTABLE GLIDE
into SOCKET. Adjust glides so they touch the floor.
Tighten WING NUTS. See Figure 6 & 7.


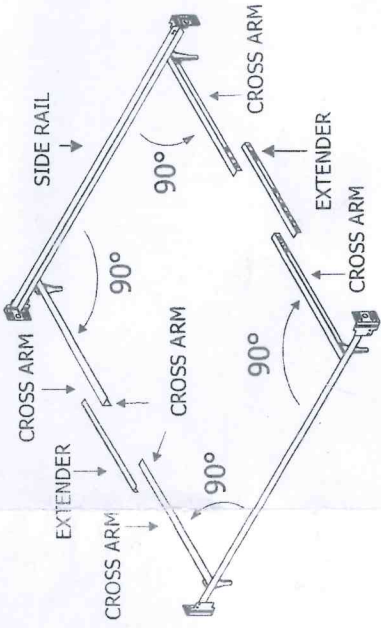


Figure 1.

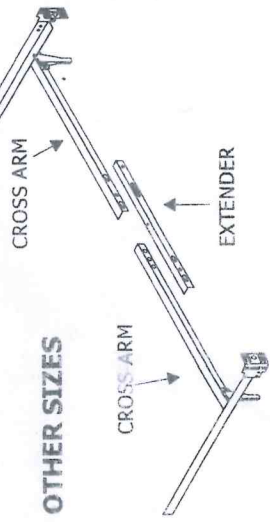

OTHER SIZES

QUEEN SIZE

Figure 2.

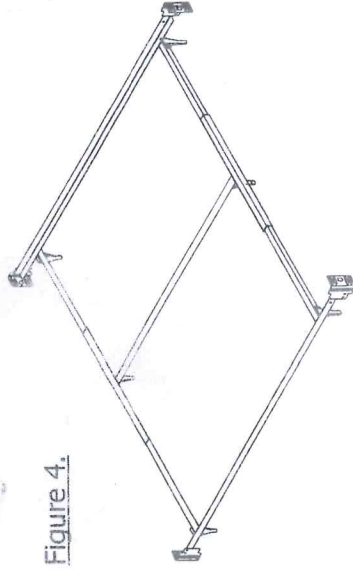


Figure 3.

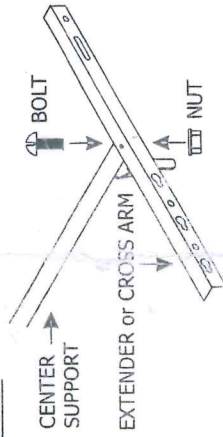


Figure 4.

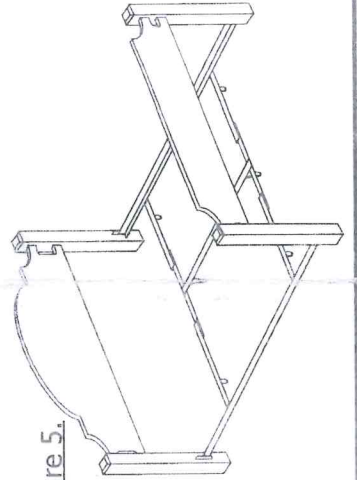


Figure 5.

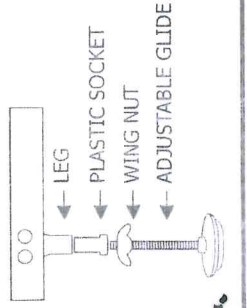


Figure 6.

Figure 7.