


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

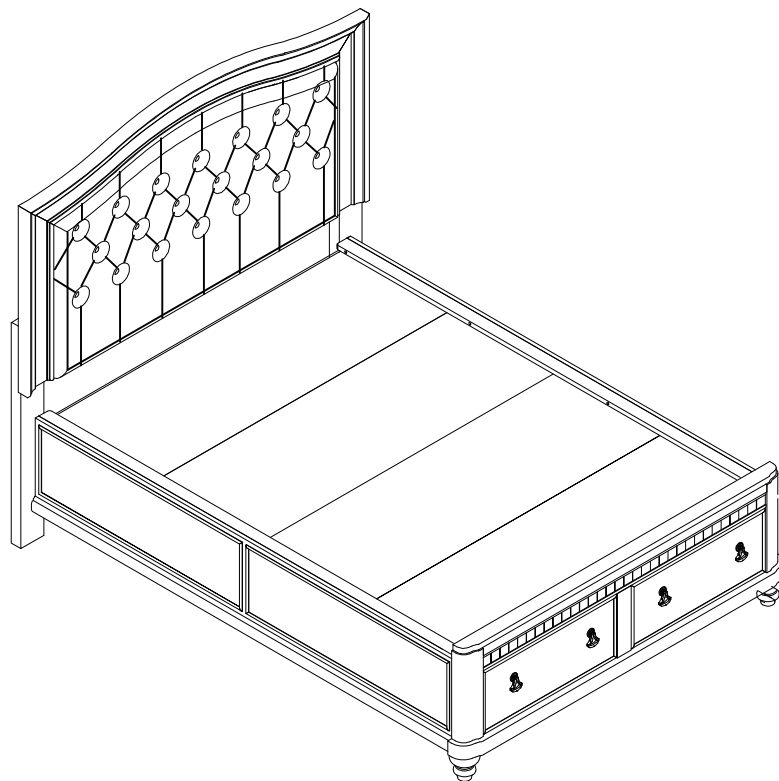

Fine Furniture for every stage of life

204180KW (B1-B3) ***California King Storage Bed***

ITEM: 204180KW (B1-B3)

ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

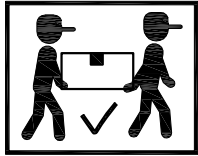


ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD
PANEL

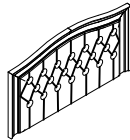


1PC

B LEFT
HEADBOARD
LEG



1PC


C RIGHT
HEADBOARD
LEG



1PC

B2 (BOX 2)

D STORAGE
FOOTBOARD

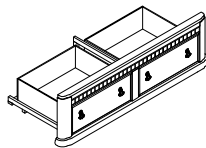


1PC

E FOOTBOARD
BUN FOOT



2PCS

F ROLL SLAT
(11PCS)



1SET

G FOOTBOARD SUPPORT
LEG WITH LEVELER



3PCS

H BED SLAT SUPPORT
WITH LEVELER



6PCS

I CONCEAL PANEL
(WITH "I" LABEL)



1PC

J CENTER RAIL SUPPORT
WITH LEVELER



2PCS


N CONCEAL PANEL
(WITH "N" LABEL)



3PCS

B3 (BOX 3)

K BED RAIL




2PCS

L CENTER RAIL




1PC

M RAIL CAP




2PCS

HB 204180KW (B1)
FROM BOX 1
HEADBOARD
COMPLETE

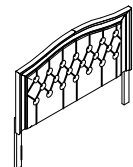

1PC

FB 204180KW (B2)
FROM BOX 2
STORAGE
FOOTBOARD
COMPLETE

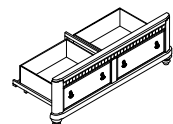

1PC

ITEM:204180KW (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







WARNING!








- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 204180KW (B1)

| | | | | | | | |
|---|-------------------------------------|---|------|---|--|---|------|
| 1 | BOLT (5/16" x 60mm - BLK) |  | 6PCS | 3 | FLAT WASHER (5/16" x 19 x 1.5mm - BLK) |  | 6PCS |
| 2 | LOCK WASHER (5/16" - BLK) |  | 6PCS | 4 | ALLEN WRENCH (4MM - BLK) |  | 1PC |

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 204180KW (B3)


| | | | | | | | |
|---|--|---|------|----|---|---|------|
| 5 | BOLT (1/4" x 32mm - BLK) |  | 4PCS | 9 | U-SQUARE WASHER (25 x 15 x 2mm - RBW) |  | 8PCS |
| 6 | ALLEN WRENCH (4MM - RBW) |  | 1PC | 10 | HEX NUT (5/16" x 17mm - RBW) |  | 8PCS |
| 7 | FLAT HEAD SCREW (4 x 32mm - RBW) |  | 6PCS | 11 | WRENCH (13MM - RBW) |  | 1PC |
| 8 | THREADED BOLT (5/16" x 75mm - RBW) |  | 8PCS | | | | |

NOTE:
Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 204180KW (B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 1

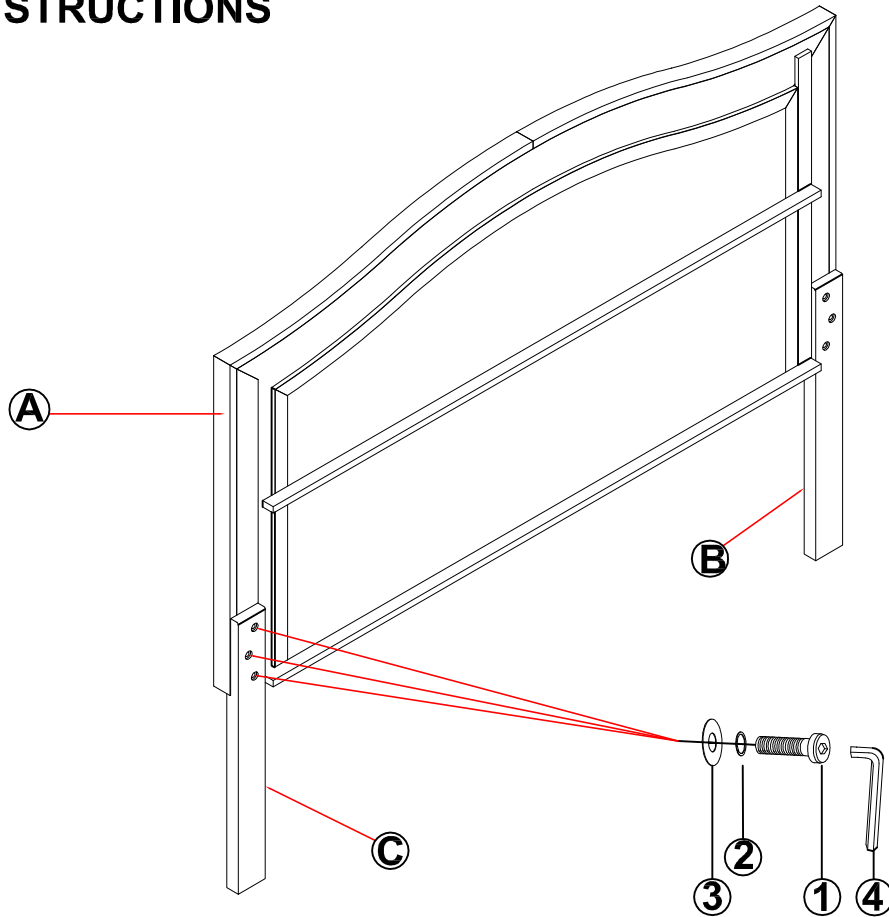


STEP 2

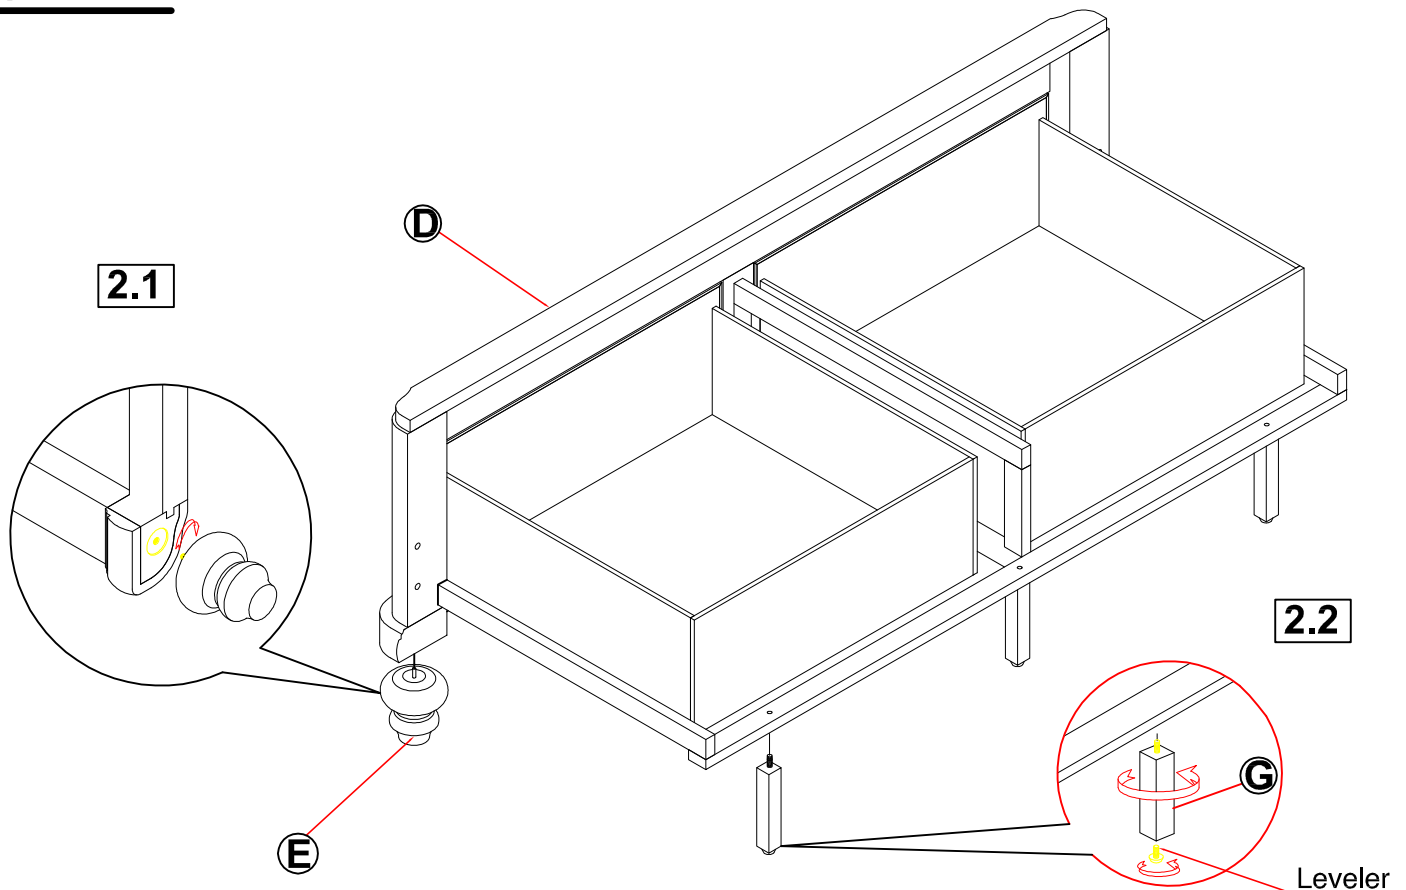


ITEM: 204180KW (B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 3

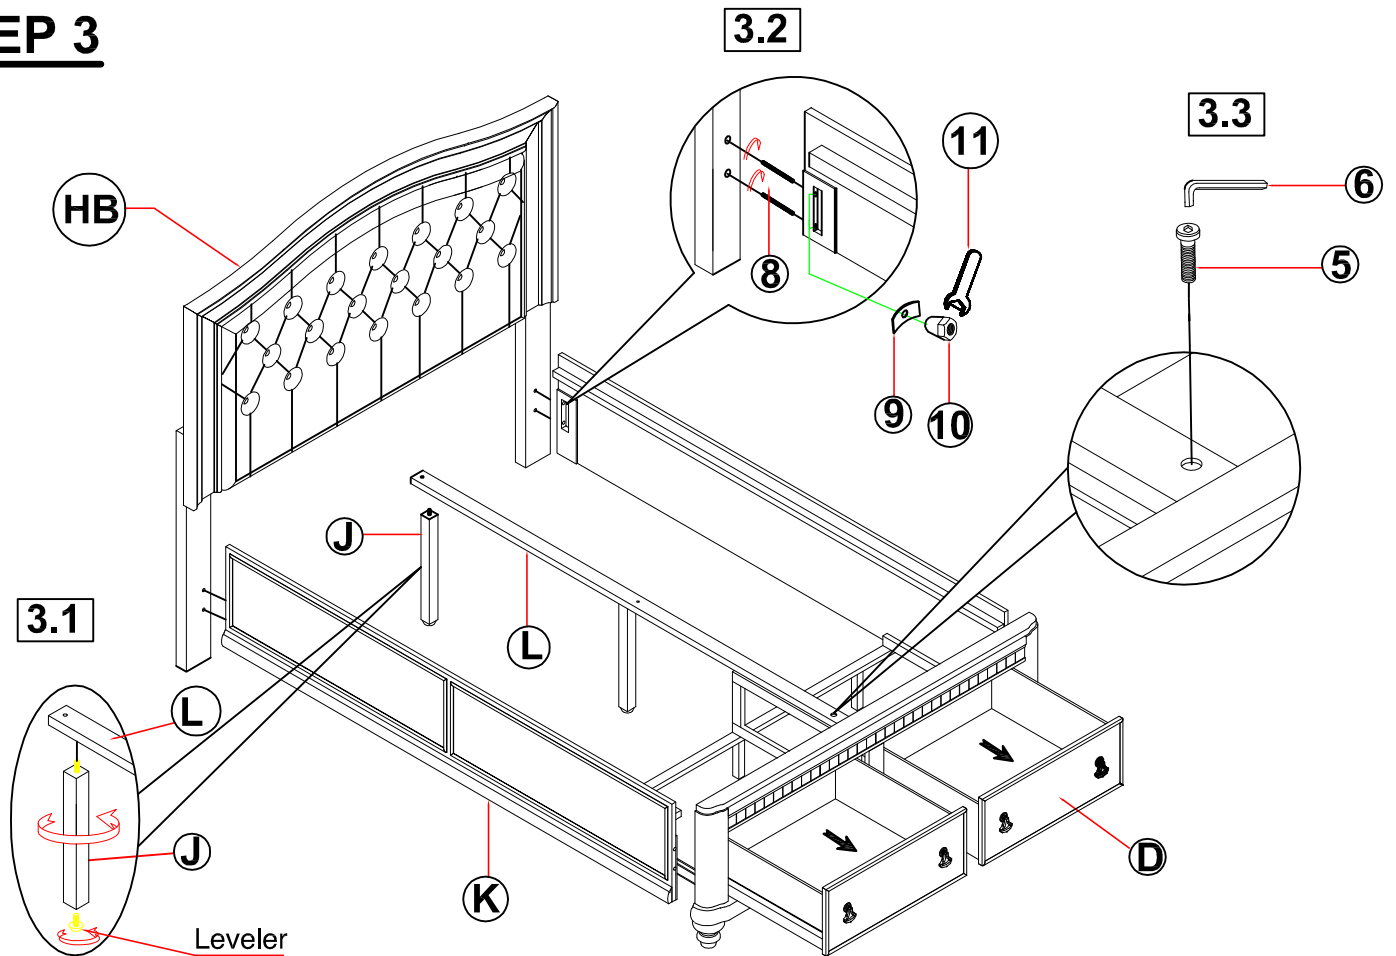


STEP 4

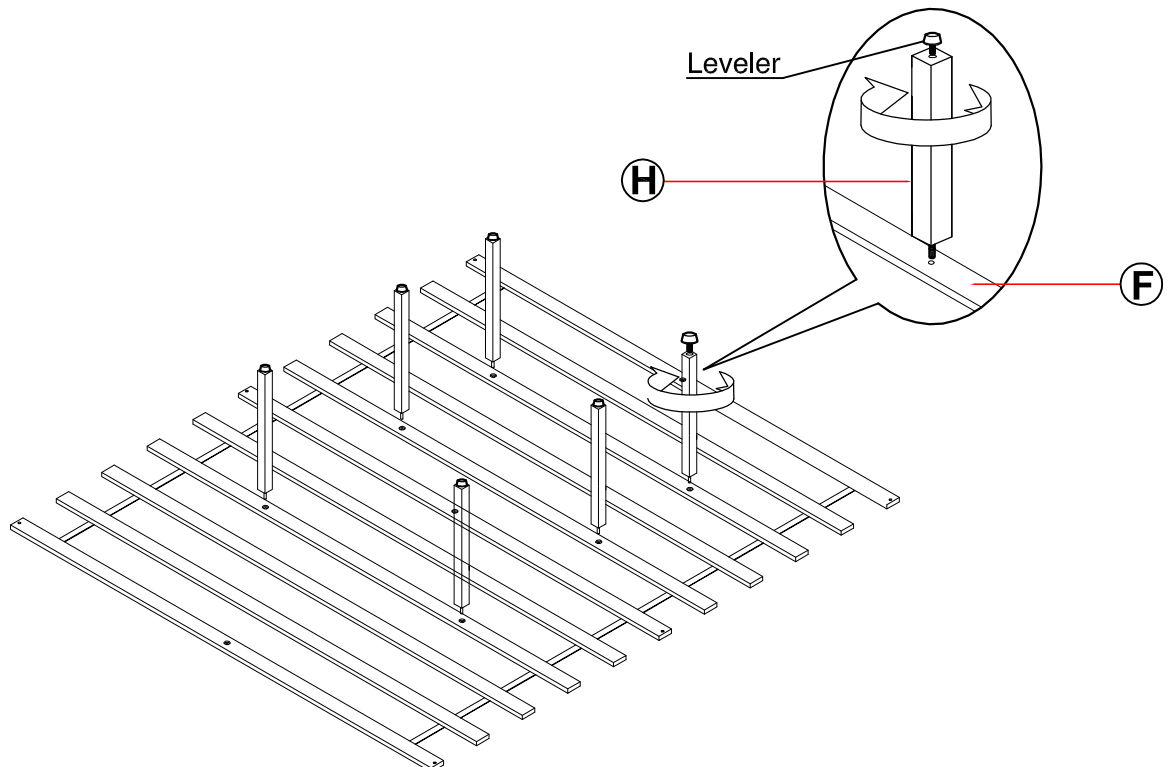


ASSEMBLY INSTRUCTIONS

STEP 5

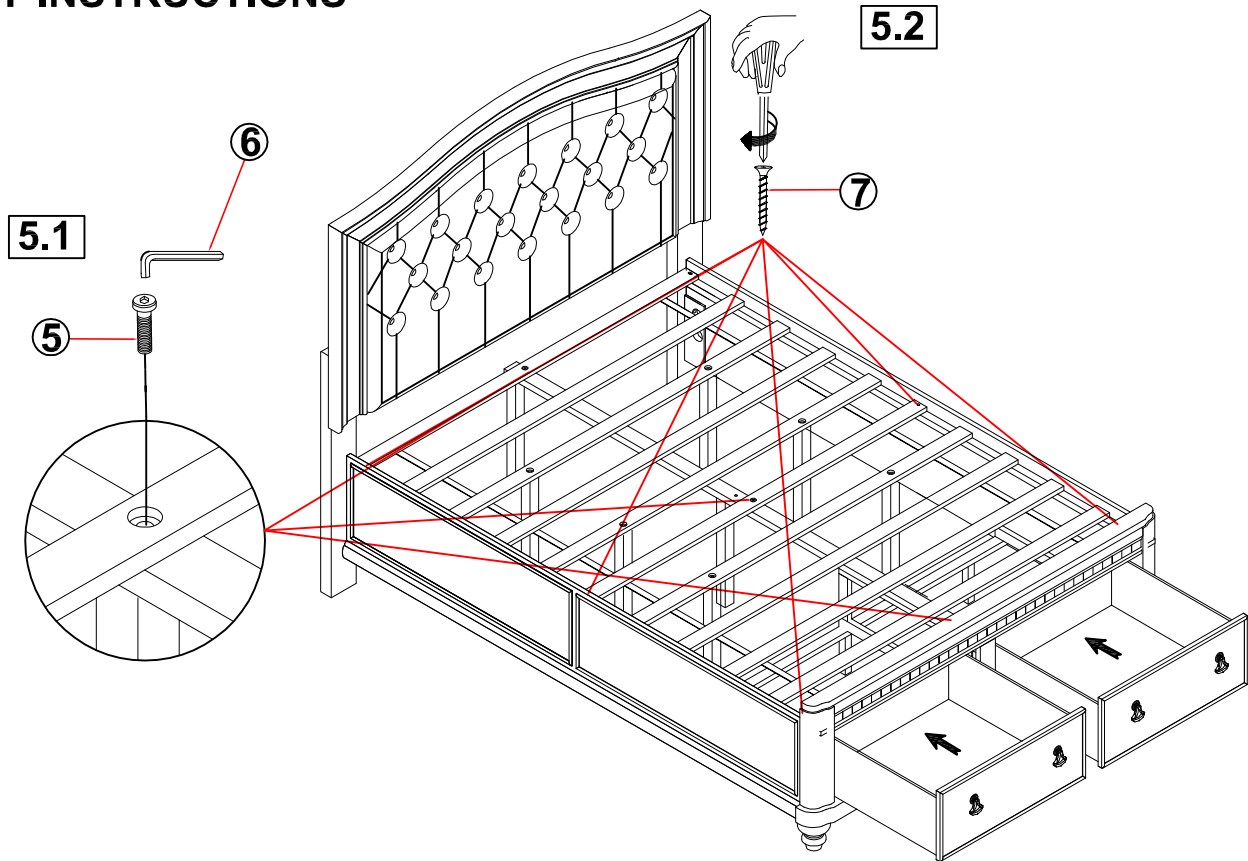


STEP 6

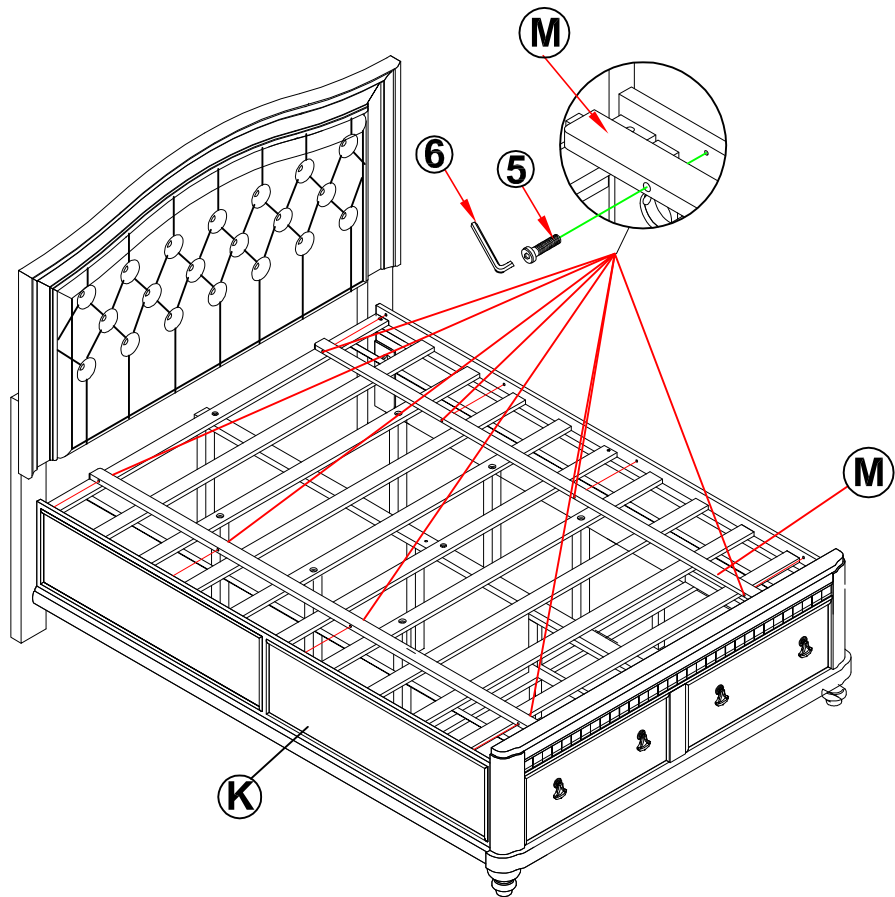



ITEM: **204180KW (B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 7

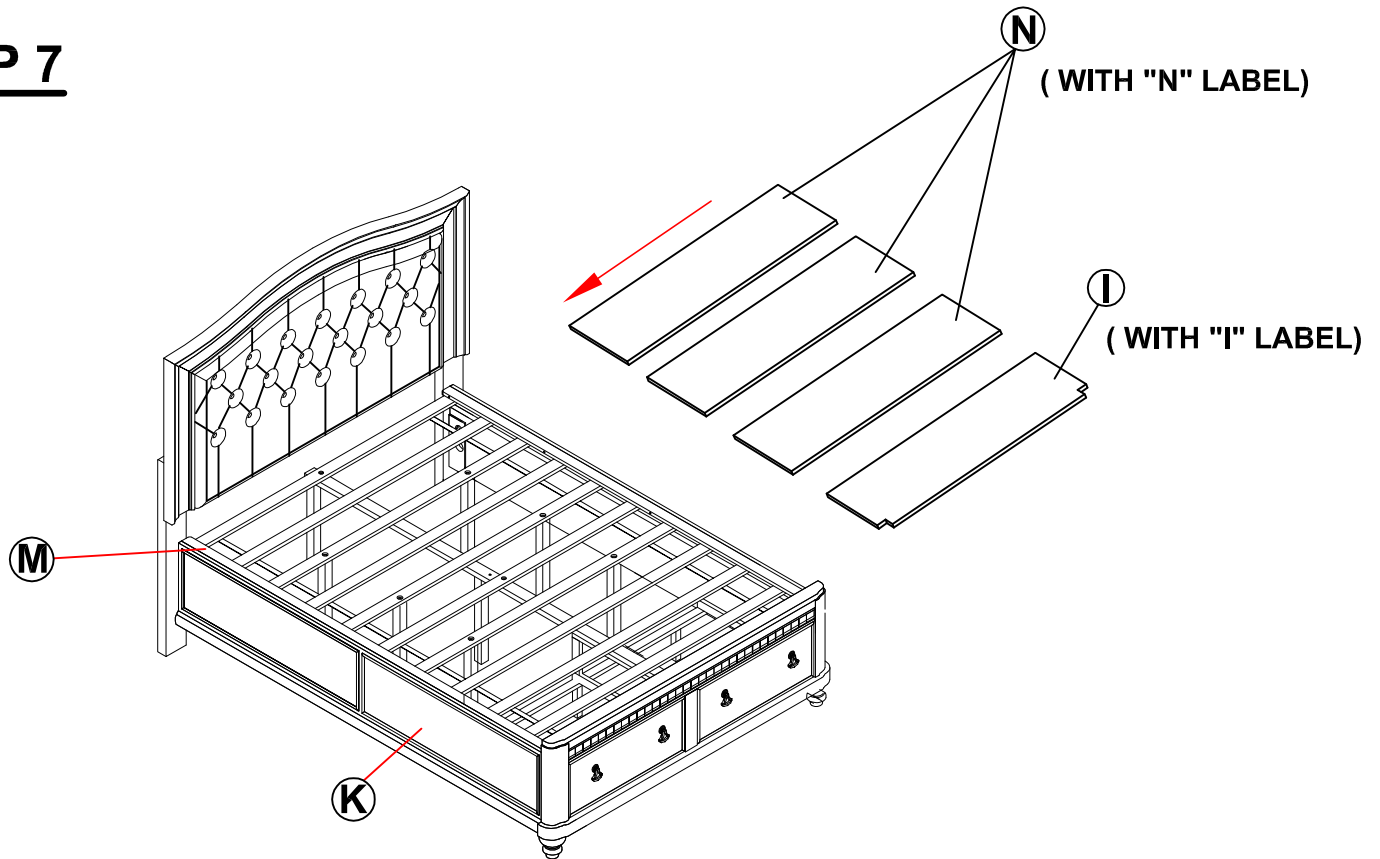

STEP 8
COMPLETE

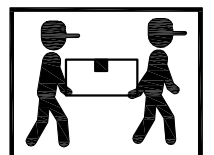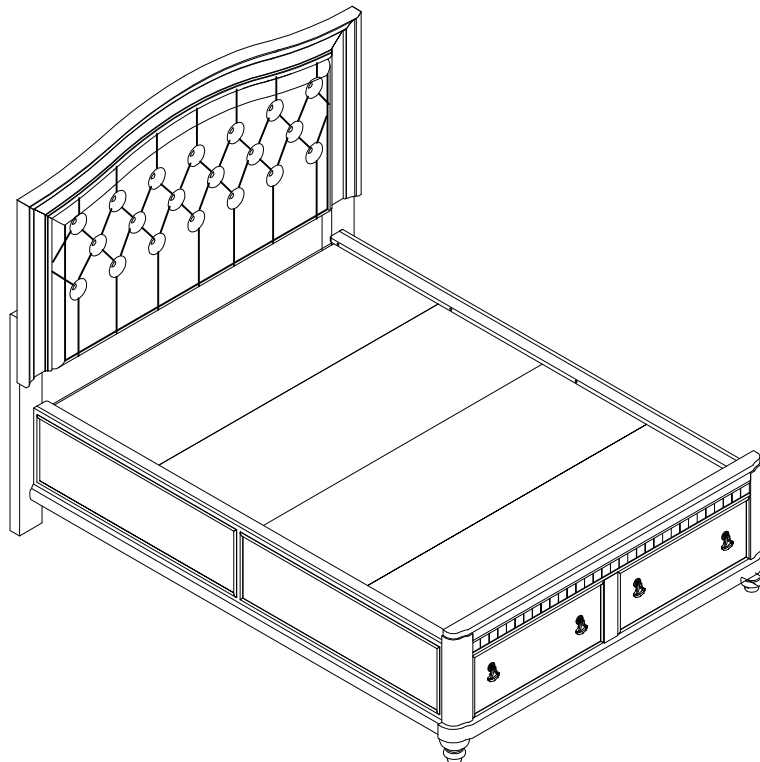


ITEM:204180KW (B1-B3)



INNER SIZE:73"x85"

INNER SIZE OF DRAWER : 34.4" x 24.4" x 10.8"

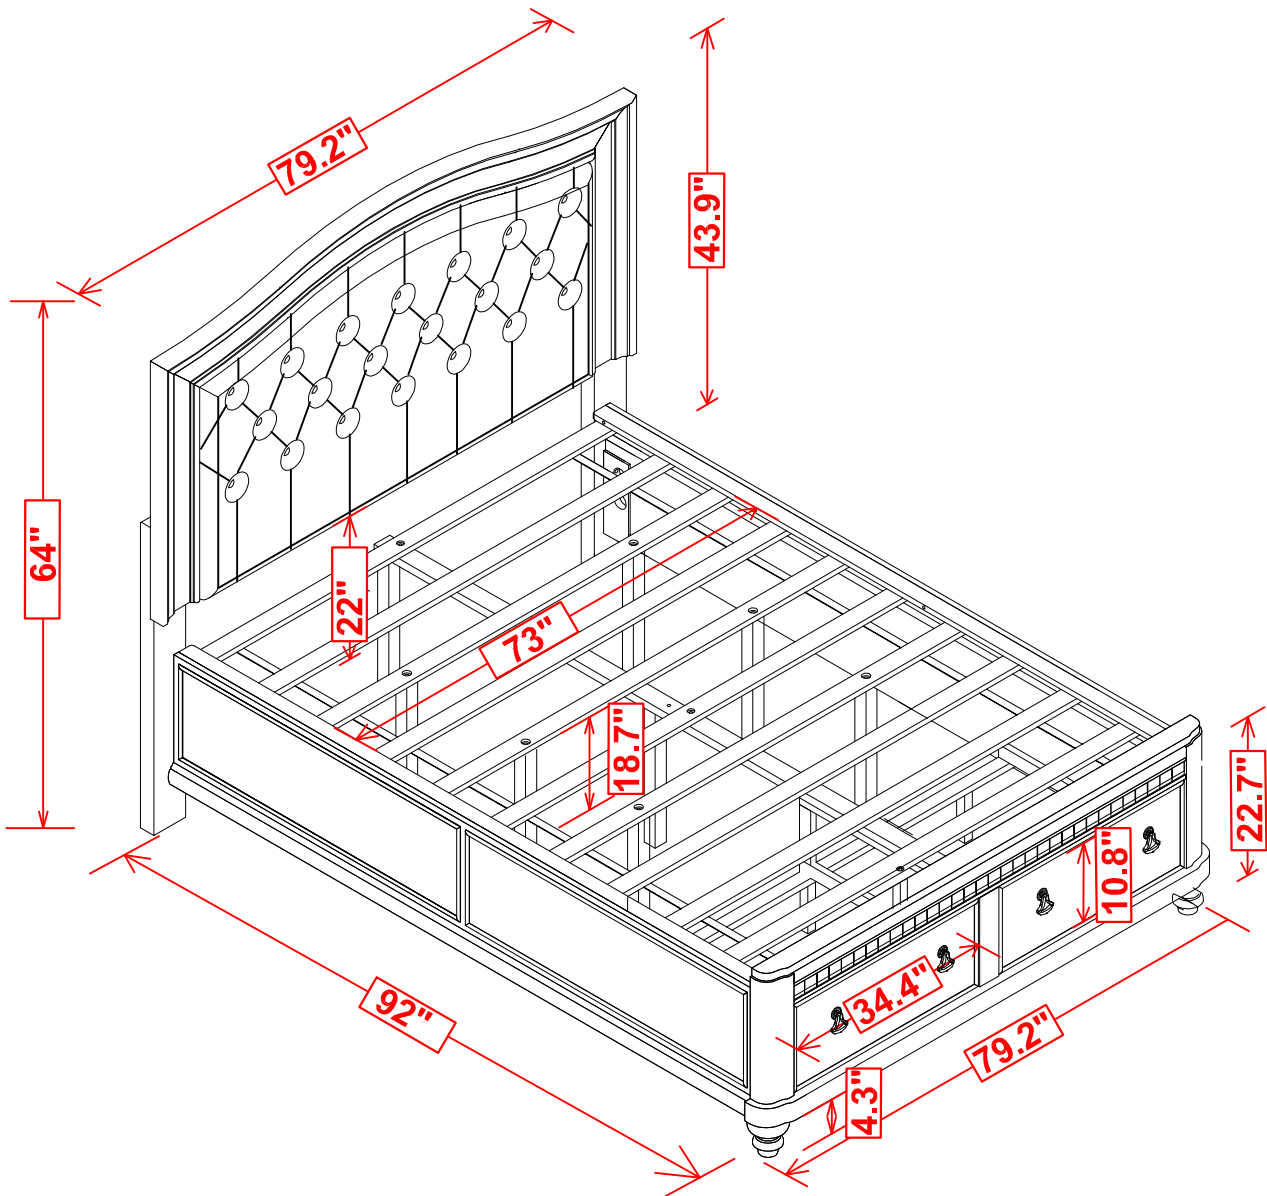

Note : Dimension tolerance $\pm 5\%$