


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

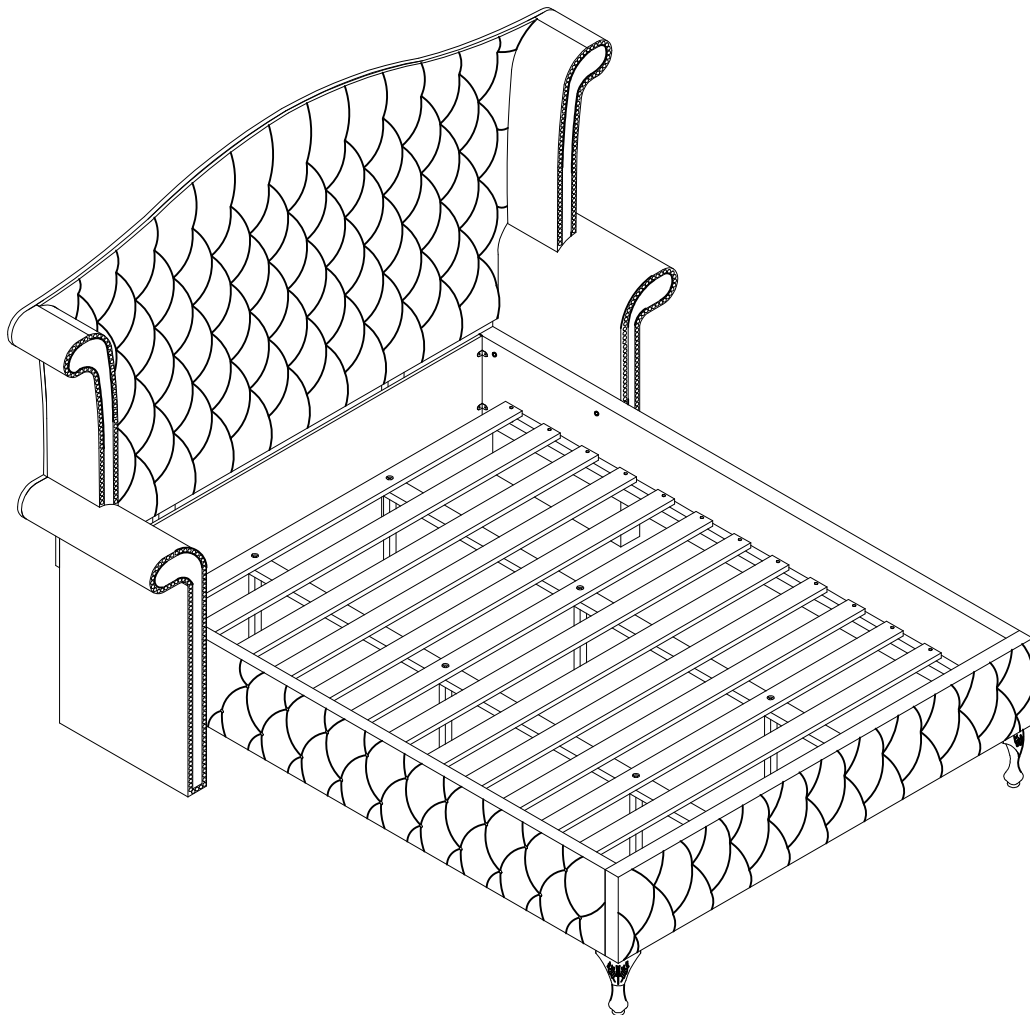

Fine Furniture for every stage of life

206101Q (B1-B3)
Queen Bed

ITEM: 206101Q (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

40 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD



1PC

B HEADBOARD
SUPPORT LEG



2PCS


C HEADBOARD PANEL



1PC

B2 (BOX 2)

D RIGHT EAR PANEL



1PC

E LEFT EAR PANEL



1PC

F EAR PANEL SUPPORT



2PCS


B3 (BOX 3)

G FOOTBOARD




1PC

H LEFT BED RAIL



1PC

I RIGHT BED RAIL



1PC

J BED SLAT



10PCS

K BED SLAT WITH
HOLES



3PCS

L BED SLAT
SUPPORT



6PCS

MV FOOTBOARD LEG



2PCS

N CENTER RAIL



2PCS

O CENTER RAIL
SUPPORT



2PCS

206101Q (B1)
FROM BOX 1
HB HEADBOARD COMPLETE



1PC

206101Q (B2)
FROM BOX 2
ER LEFT AND RIGHT EAR
PANEL COMPLETE



2PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 206101Q (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.















WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 206101Q (B3)


1	ALLEN WRENCH (4MM - RBW)		1PC	7	MEDIUM PAN HEAD SCREW (#4 x 25mm - RBW)		4PCS
2	BOLT 1 (Ø1/4" x 30mm - RBW)		4PCS	8	LONG PAN HEAD SCREW (#4 x 38mm - RBW)		32PCS
3	BOLT 2 (Ø1/4" x 38mm - RBW)		10PCS	9	BIG FLAT WASHER (Ø1/4" X 25 X 1.5mm - RBW)		22PCS
4	BOLT 3 (Ø1/4" x 60mm - RBW)		10PCS	10	SMALL FLAT WASHER (Ø1/4" X 19 X 1.5mm - RBW)		22PCS
5	BOLT 4 (Ø1/4" x 90mm - RBW)		8PCS	11	LOCK WASHER (Ø1/4" - RBW)		22PCS
6	SHORT PAN HEAD SCREW (#4 x 20mm - RBW)		4PCS	12	LEVELER (Ø1/4" X 25mm - BLK)		6PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS

STEP 1

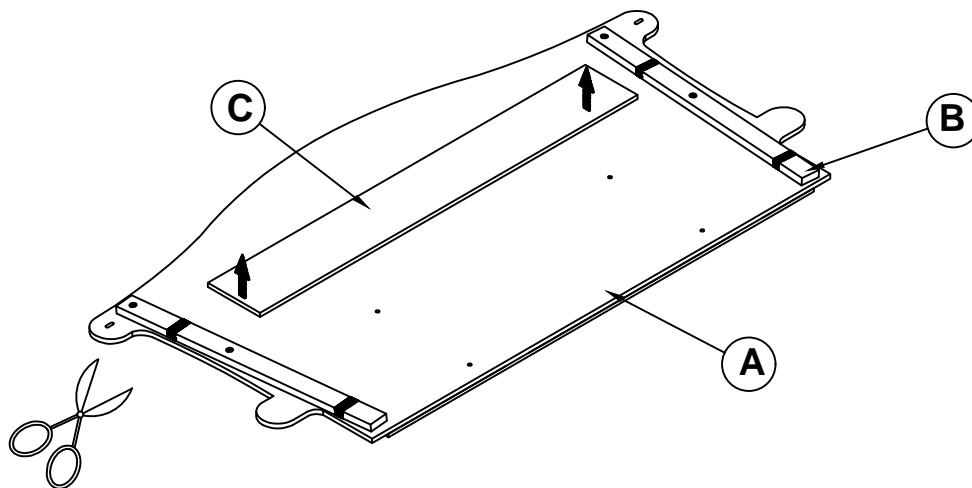


STEP 2

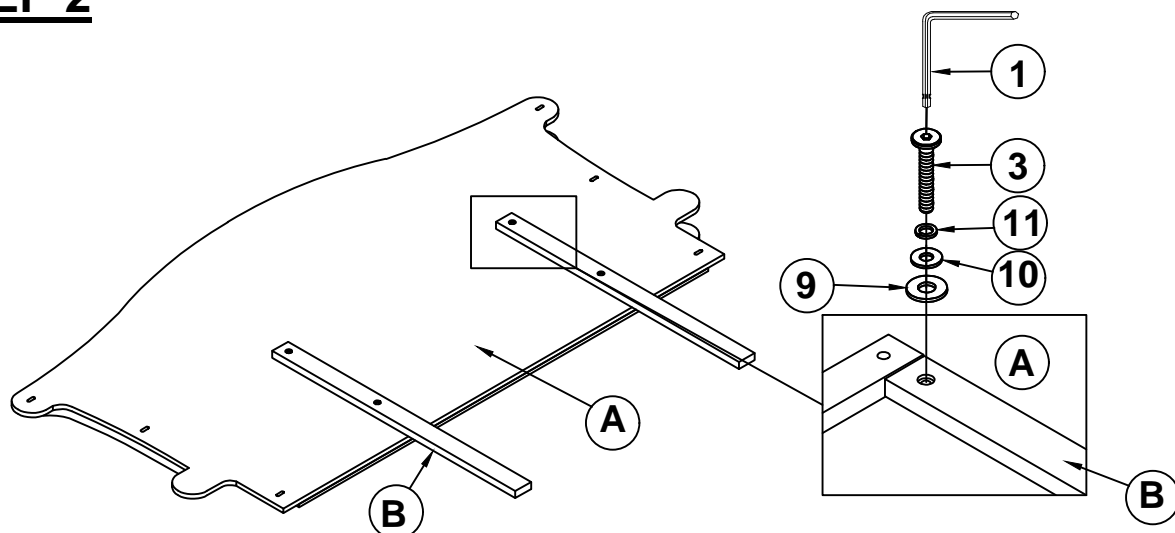


STEP 3

**NOTE : THE EAR PANELSUPPORTS ARE TO
LIFT UP THE BED RAILS**

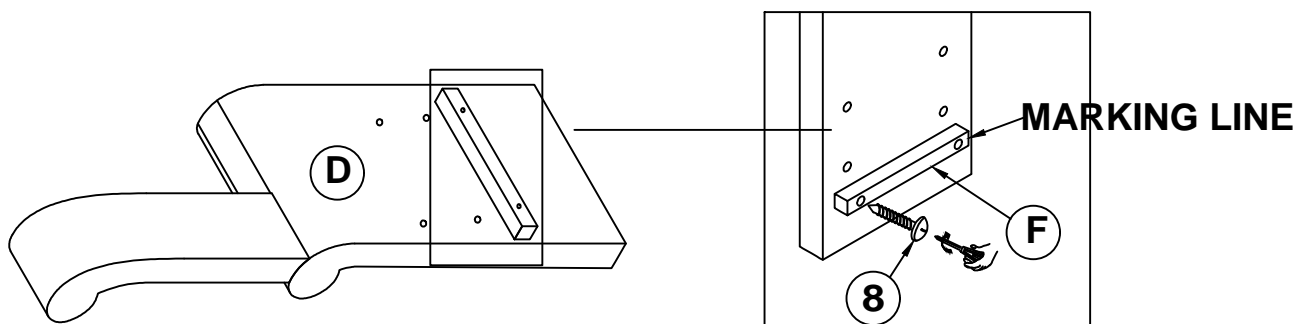


ASSEMBLY INSTRUCTIONS


STEP 4

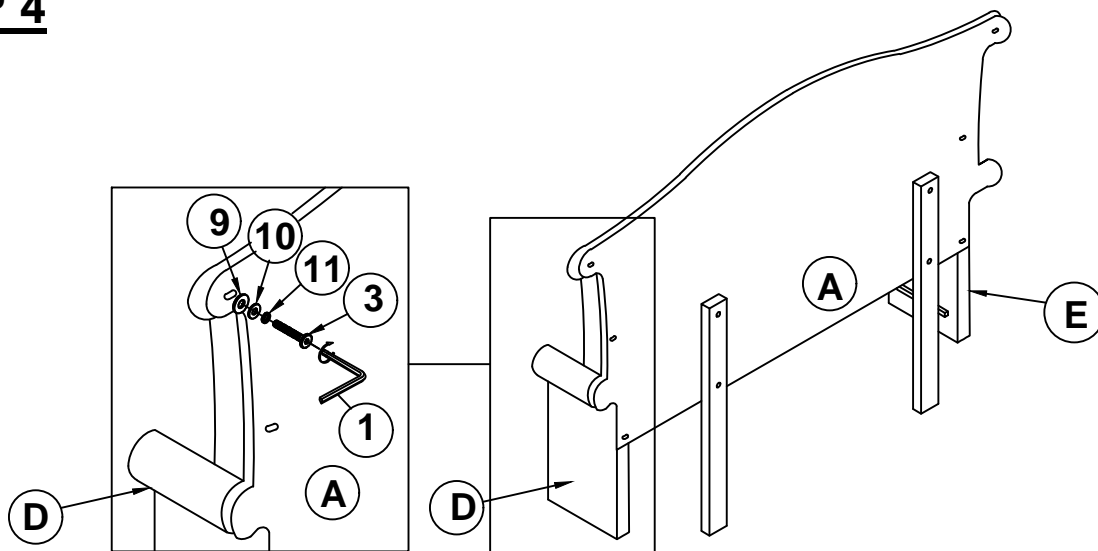

STEP 5

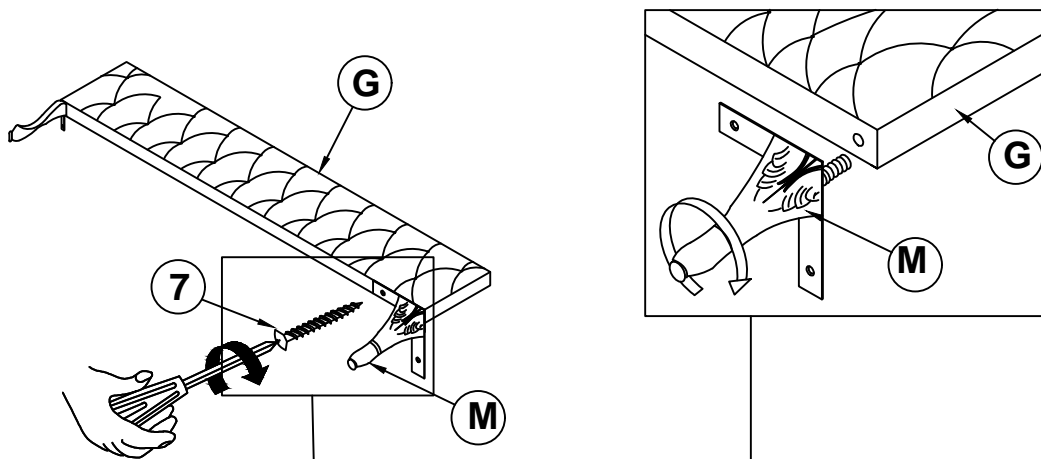


STEP 6

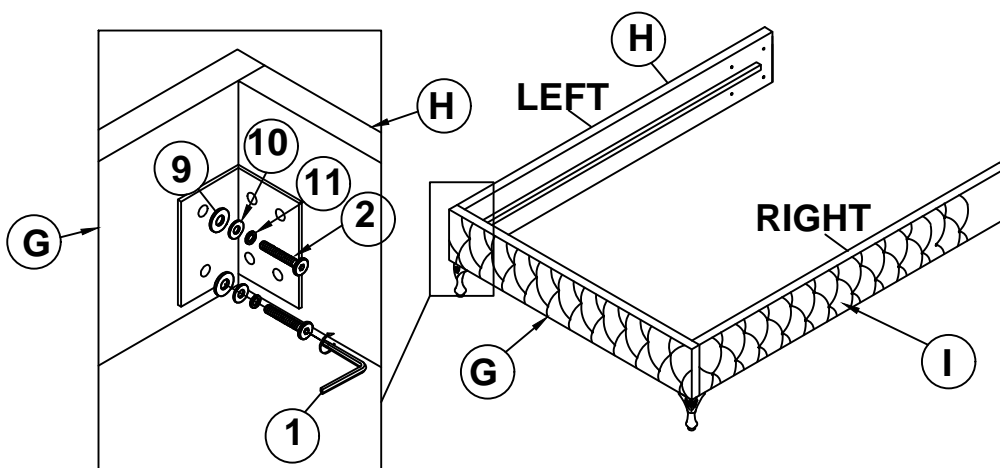


ASSEMBLY INSTRUCTIONS


STEP 7

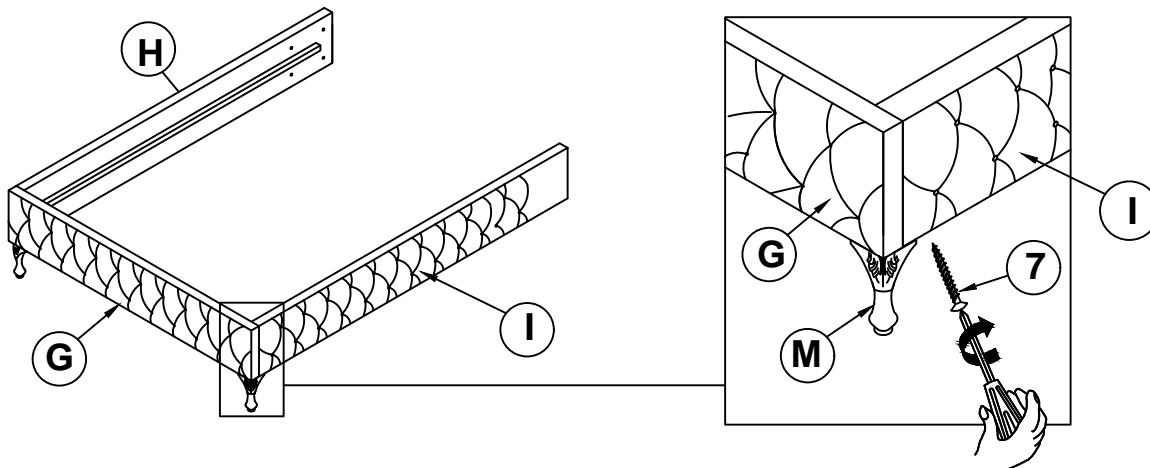

STEP 8


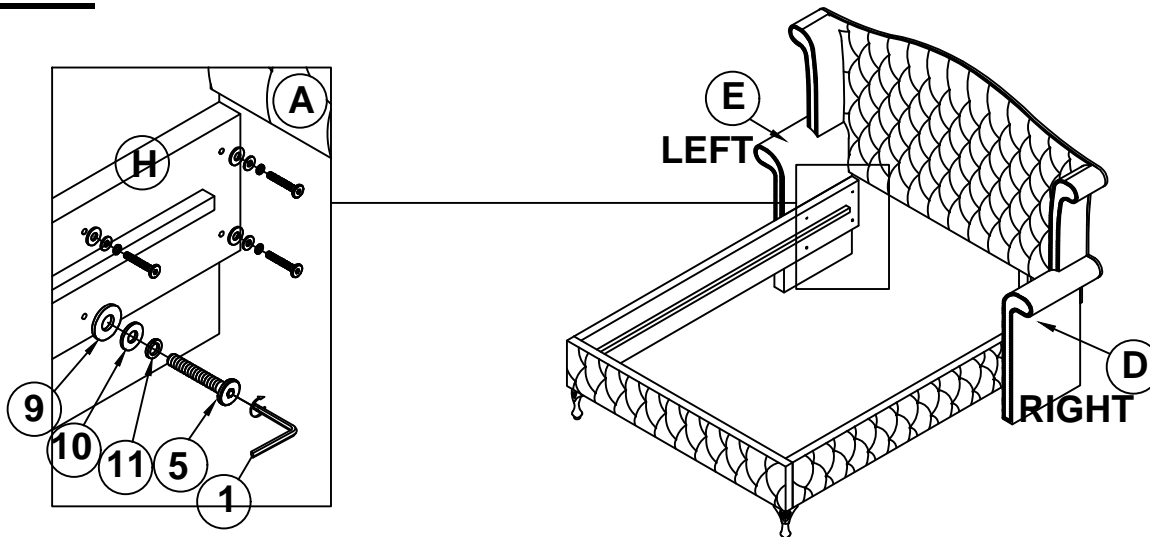


STEP 9


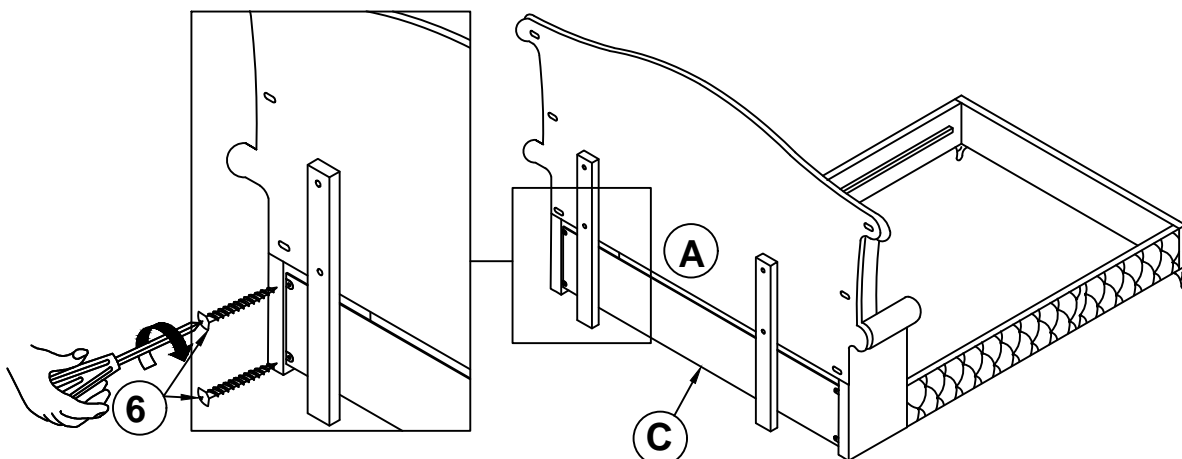


ASSEMBLY INSTRUCTIONS



STEP 10

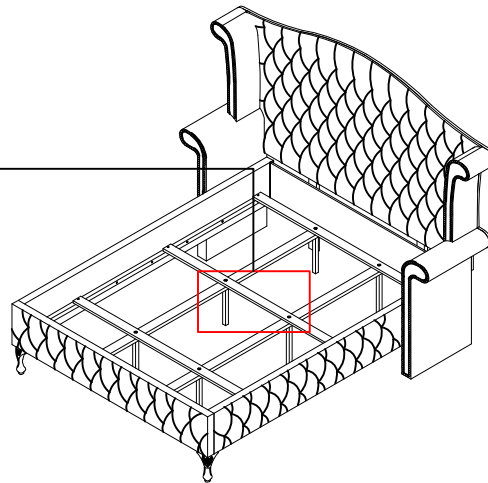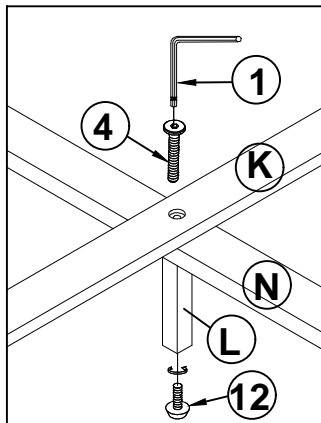

STEP 11

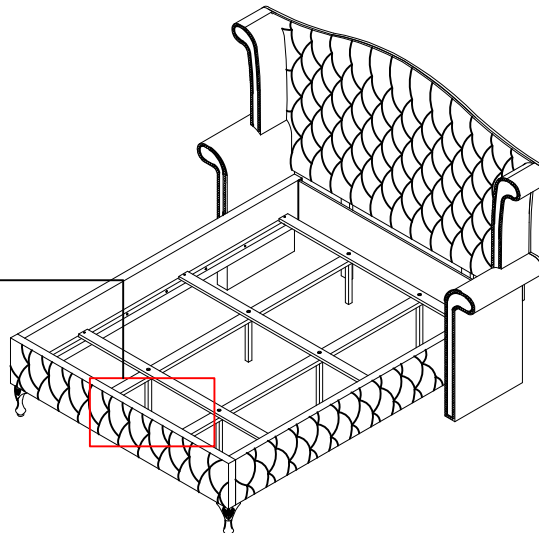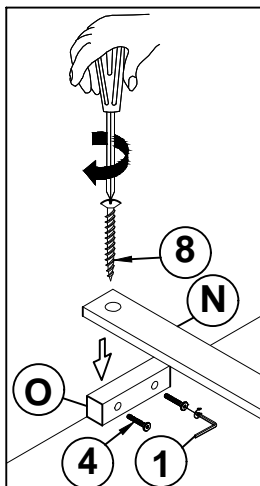

STEP 12

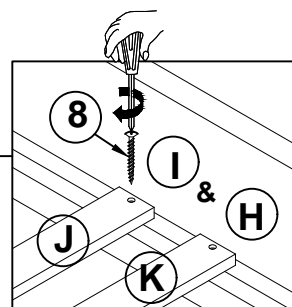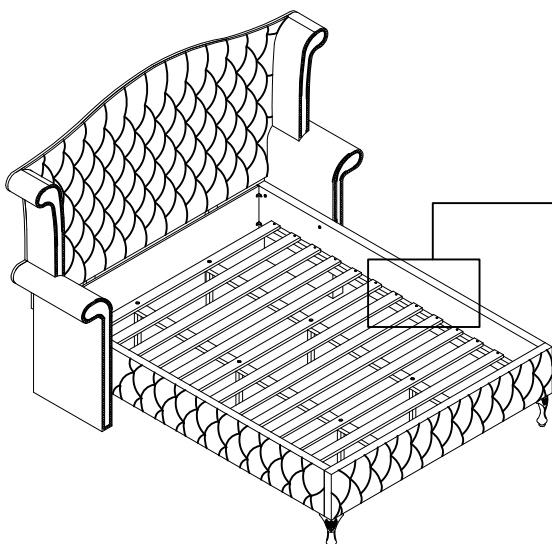


ITEM: **206101Q (B1-B3)**



ASSEMBLY INSTRUCTIONS

STEP 13


COMPLETE

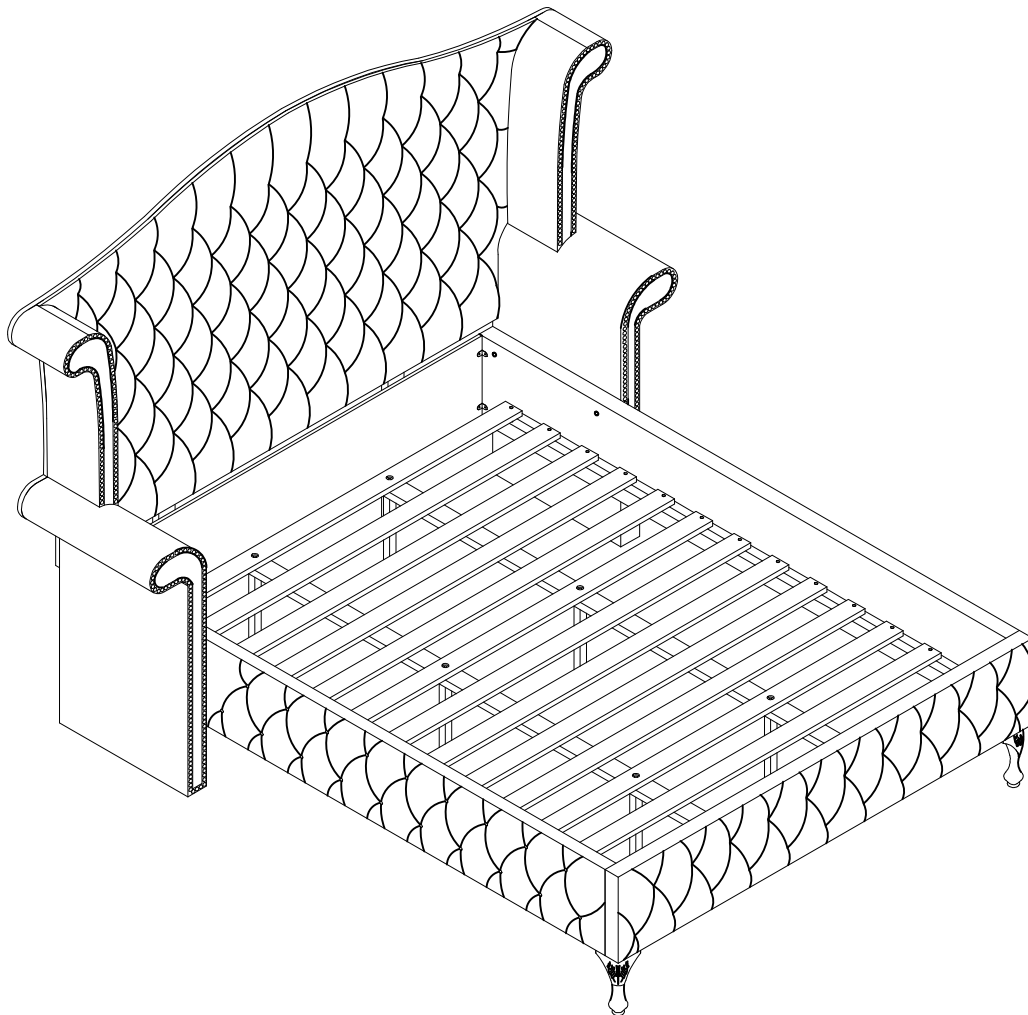

ITEM: **206101Q (B1-B3)**



INNER SIZE : 61.02" X 81.1"

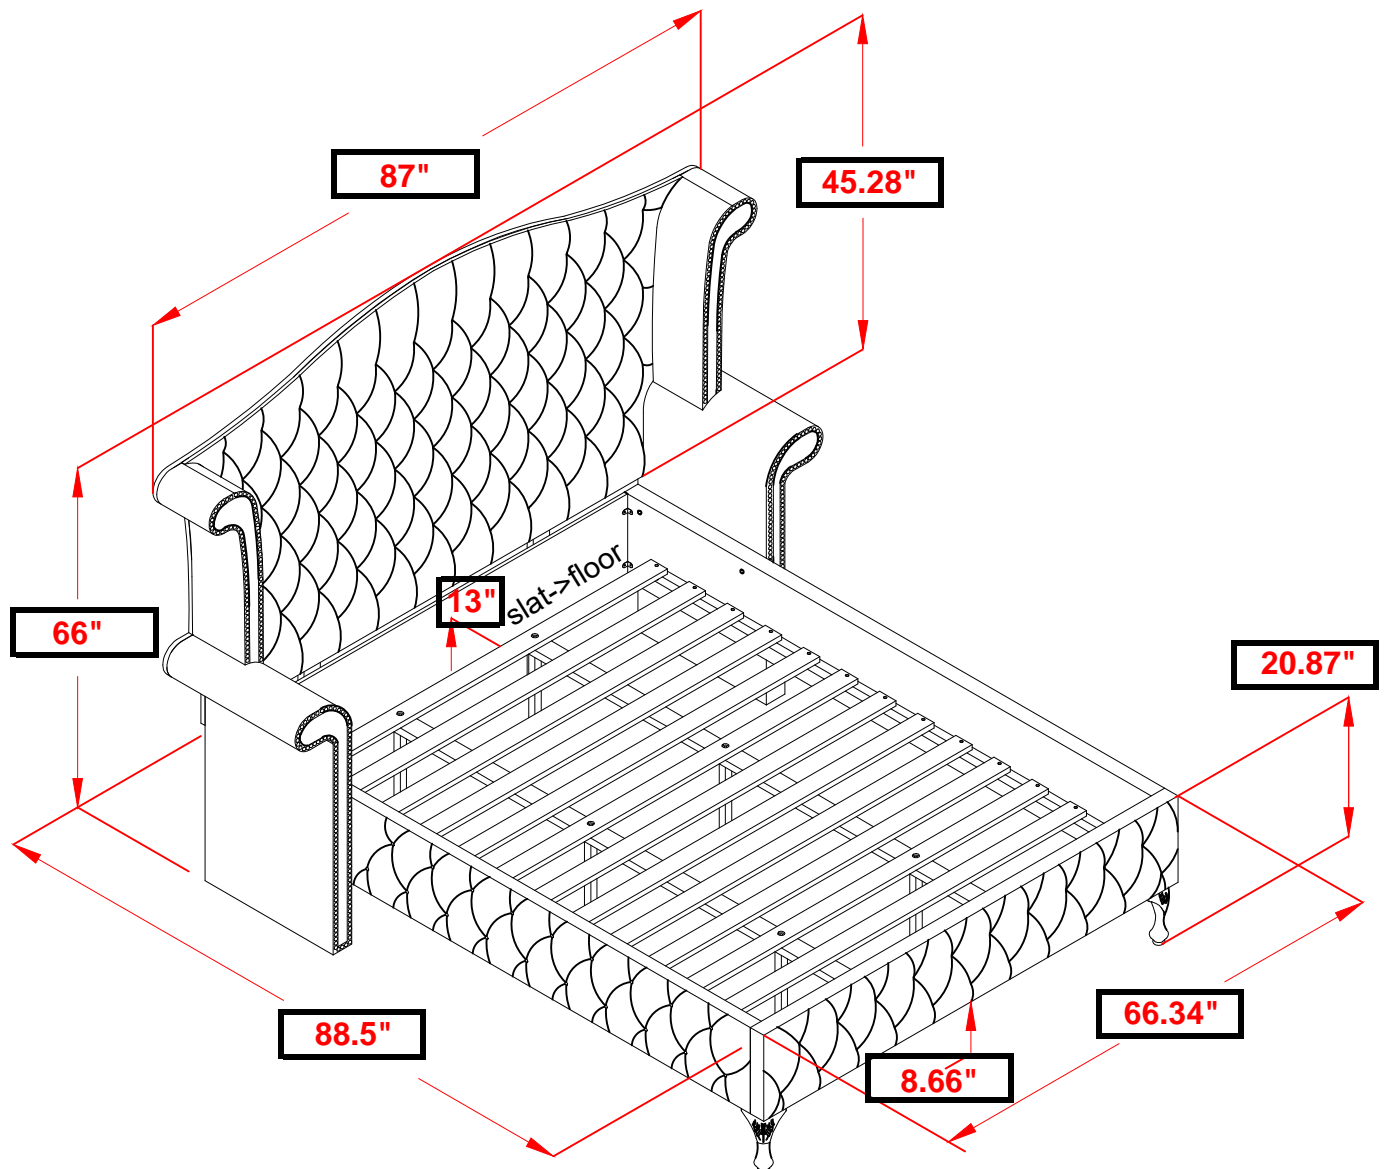

Note : Dimension tolerance $\pm 5\%$