

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## **223201KW (B1-B3)** **California King Storage Bed**

# ITEM: 223201KW (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

### WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD  
PANEL



1PC

C RIGHT  
HEADBOARD LEG



1PC

B HEADBOARD  
BOTTOM RAIL



1PC


D LEFT  
HEADBOARD LEG



1PC


### B2 (BOX 2)

E STORAGE  
FOOTBOARD  
WITH LEVELER




1PC

F ROLL SLAT  
(11PCS)



1SET

G CENTER RAIL




1PC

H CENTER RAIL  
SUPPORT WITH  
LEVELER



4PCS

I CONCEAL PANEL  
(WITH "I" LABEL)



4PCS


J BED SLAT  
SUPPORT WITH  
LEVELER



8PCS


### B3 (BOX 3)

K RIGHT STORAGE  
BED RAIL WITH  
LEVELER




1PC

L LEFT STORAGE  
BED RAIL WITH  
LEVELER




1PC

HB 223201KW (B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE

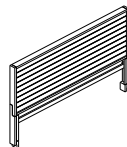

1PC

E 223201KW (B2)  
FROM BOX 2  
STORAGE  
FOOTBOARD



1PC

# ITEM: 223201KW (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.








### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




## HARDWARE IDENTIFICATION



### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223201KW (B1)

- |   |   |   |      |
|---|---|---|------|
| 1 | <b>LONG BOLT</b><br>( $\Phi 1/4"$ x 70mm- RBW)  |  | 6PCS |
| 3 | <b>SHORT BOLT</b><br>( $\Phi 1/4"$ x 40mm- RBW) |  | 4PCS |
| 5 | <b>ALLEN WRENCH</b><br>(4MM - RBW)              |  | 1PC  |

- |   |  |   |       |
|---|--|---|-------|
| 2 | <b>LOCK WASHER</b><br>( $\Phi 1/4"$ - RBW) |  | 10PCS |
| 4 | <b>FLAT WASHER</b><br>( $\Phi 1/4"$ - RBW) |  | 10PCS |

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 223201KW (B3)

- |    |  |   |        |
|----|--|---|--------|
| 6  | <b>BOLT WITH NUT</b><br>( $\Phi 1/4"$ x 30mm- RBW) |  | 12SETS |
| 8  | <b>FLAT HEAD SCREW</b><br>( $\Phi 4$ x 30mm - RBW) |  | 12PCS  |
| 10 | <b>ALLEN WRENCH</b><br>(4MM - RBW)                 |  | 1PC    |

- |   |  |   |       |
|---|--|---|-------|
| 7 | <b>FLAT WASHER</b><br>( $\Phi 1/4"$ - RBW) |  | 12PCS |
| 9 | <b>LOCK WASHER</b><br>( $\Phi 1/4"$ - RBW) |  | 12PCS |


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 223201KW (B1-B3)

## ASSEMBLY INSTRUCTIONS

### STEP 1

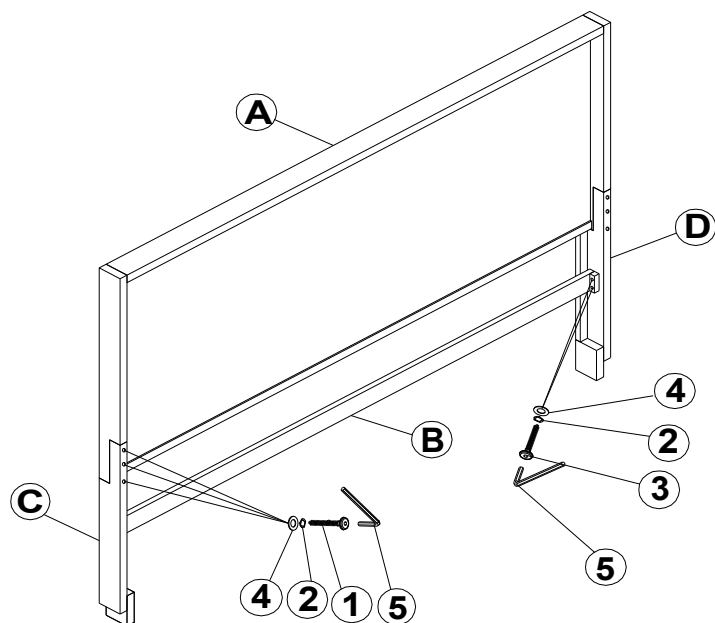


### STEP 2

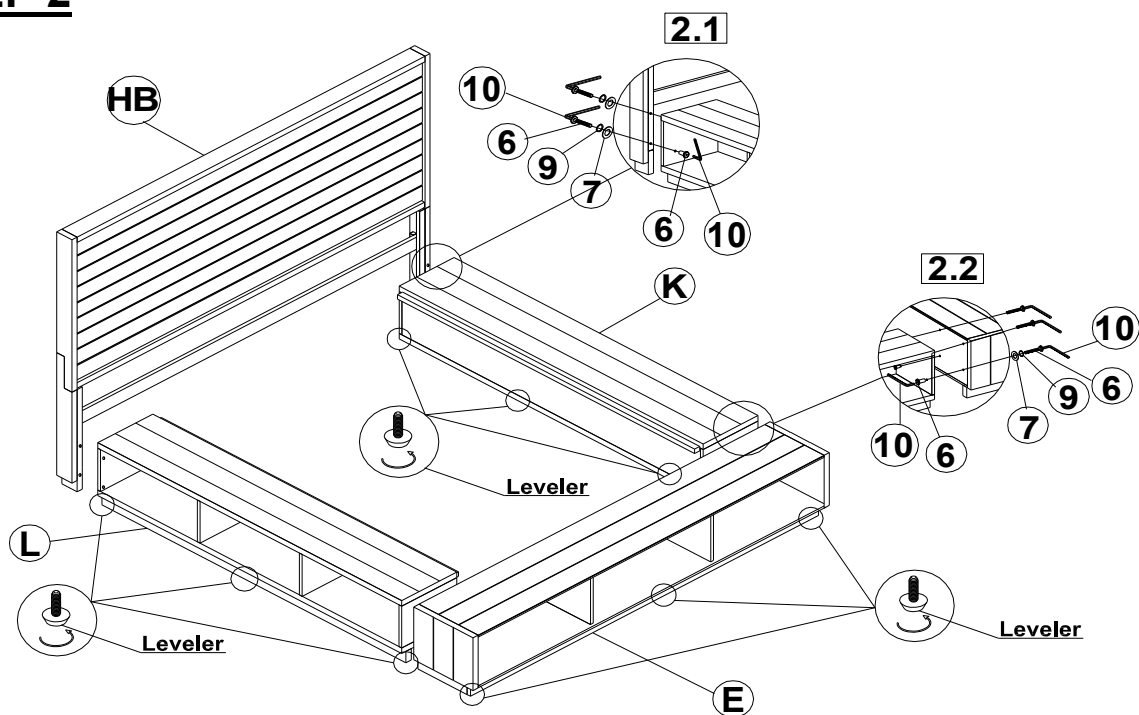


ITEM: **223201KW (B1-B3)**

## ASSEMBLY INSTRUCTIONS

### STEP 3

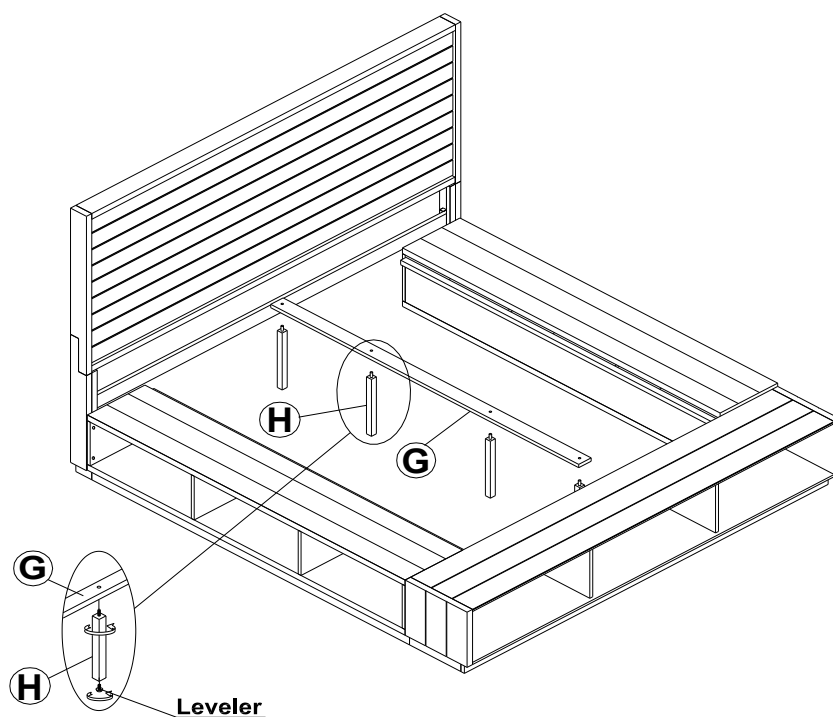

### STEP 4

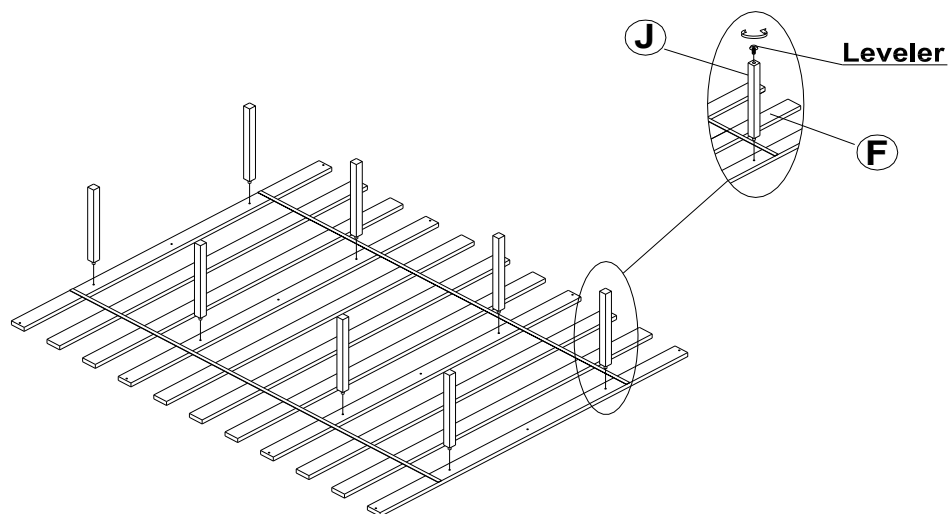


# ITEM: 223201KW (B1-B3)


## ASSEMBLY INSTRUCTIONS




### STEP 5

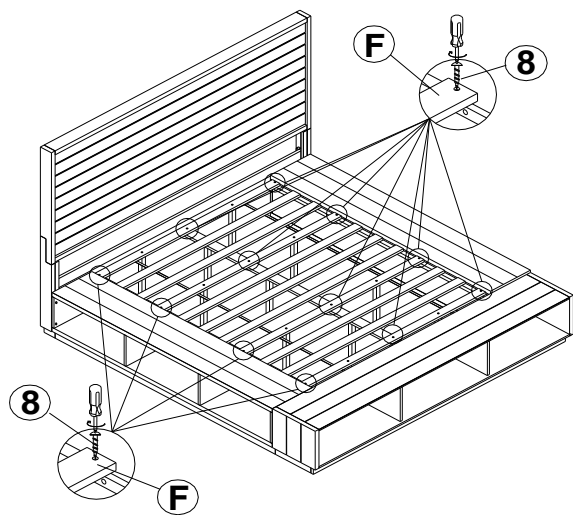

### STEP 6

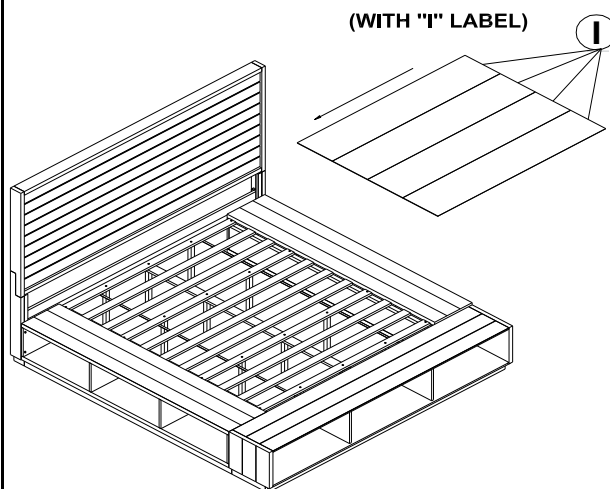


### STEP 7 COMPLETE

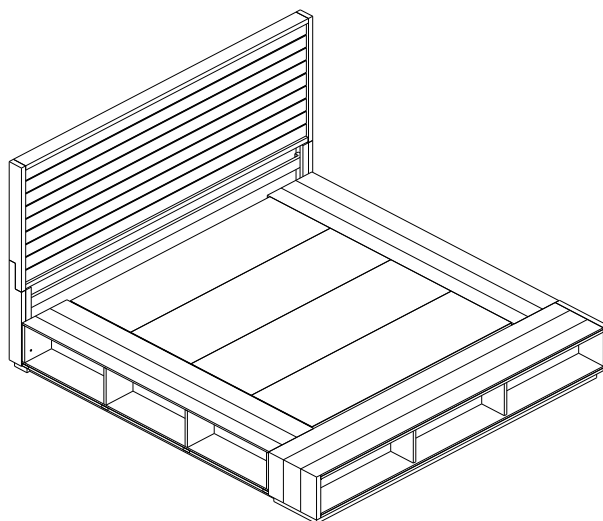

ITEM:223201KW (B1-B3)



INNER SIZE : 73" x 85"

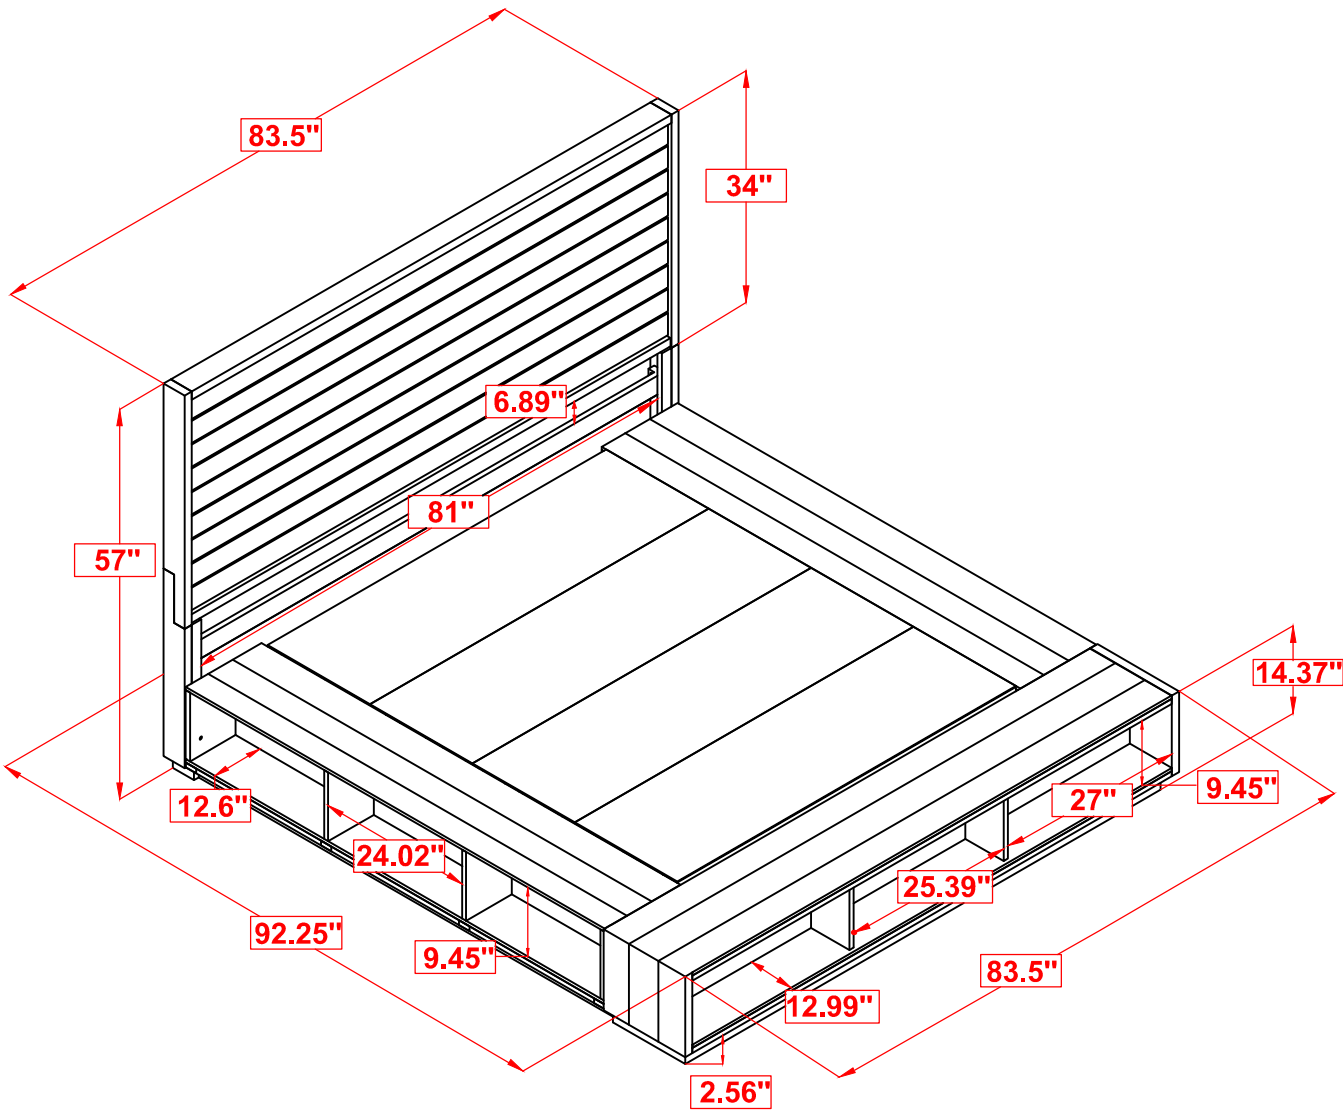

**Note :** Dimension tolerance  $\pm 5\%$