

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

803521 OFFICE DESK

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

80 MINUTES

PARTS IDENTIFICATION **LEFT SIDE LARGE TOP** 1 PC 1 PC Α **PANEL PANEL SMALL LEFT DIVIDER** В 1 PC **DRAWER** 1 PC **PANEL** FRONT PANEL **SMALL RIGHT DIVIDER** C 1 PC **DRAWER BACK** 1 PC K **PANEL PANEL SMALL LEFT** RIGHT SIDE D 1 PC **DRAWER SIDE** 1 PC **PANEL PANEL SMALL RIGHT BOTTOM PANEL** 2 PCS **DRAWER SIDE** 1 PC M **PANEL DRAWER** F 2 PCS 2 PCS **TOP PANEL** N **BOTTOM PANEL LARGE LEFT BACK** G 1 PC 0 **DRAWER** 1 PC **PANEL FRONT PANEL LARGE MIDDLE BACK** Н 1 PC P **DRAWER BACK** 1 PC **PANEL PANEL**

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:803521 FINE FURNITURE **LARGE LEFT** Q **DRAWER SIDE** 1 PC Т **CROSS BAR** 2 PCS **PANEL LARGE RIGHT RIGHT BACK** R **DRAWER SIDE** 1 PC 1 PC **PANEL PANEL** S **DOOR** 1 PC **FOOT** 2 PCS **HARDWARE IDENTIFICATION** Ζ

_			<u> </u>				
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	12	HINGE (Ø 26mm SR)		2 PCS
2	WOODEN DOWEL Ø 8x30mm		30 PCS	13	HINGE SCREW (Ø 4x15mm SR)	attitut (A	8 PCS
3	CAM BOLT (Ø7x35.5mm SR)		16 PCS	14	LONG BOLT (M6x35mm SR)		6 PCS
4	CAM LOCK (Ø 15x12mm SR)		16 PCS	15	BOLT (M6x28mm SR)		4 PCS
5	LONG SCREW (Ø 4.5x42mm SR)	attitute 100	12 PCS	16	SHORT BOLT (M6x15mm SR)		4 PCS
6	SCREW (Ø 4.3x35mm SR)	MILITATE &	8 PCS	17	CROSS BAR SCREW (Ø 4x25mm RBW)	AND THE PROPERTY OF THE PARTY O	6 PCS
7	DOOR CATCH		1 PC	18	ALLEN WRENCH (4mm SR)		1 PC
8	GLIDES (L = 450mm WHT)	CL CR CP 01 0 00 DR	2 SET	19	STICKER Ø 20mm		3 PCS
9	SHORT SCREW (Ø 3x12mm SR)		28 PCS	20	IRON BAR (Ø 9.5x359mm SR)		2 PCS
10	HANDLE L=106mm		3 PCS	21	IRON 80mm		4 PCS
11	HANDLE BOLT (Ø 4x23mm SR)		6 PCS	22	"L" SUPPORT IRON 300mm		2 PCS

Z8,Z10,Z12,Z20,Z21,Z22 not included in blister packaging.


ITEM:803521 STEP 1 8 (CR) **D B B** the reverse side 8(CL) **(C) (C)** \Rightarrow the reverse side **INCORRECT** CORRECT 8)(CL) Apply glue on all wooden dowels to ensure integrity of the structure. (CR) **PAGE 4 OF 13** COASTERFURNITURE.COM










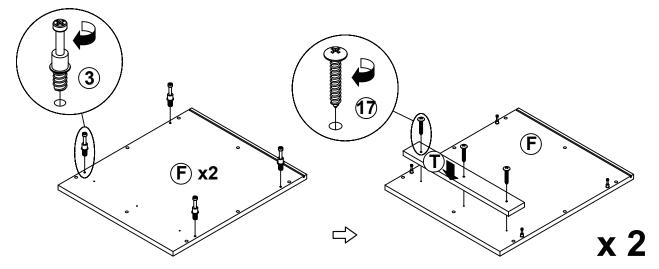

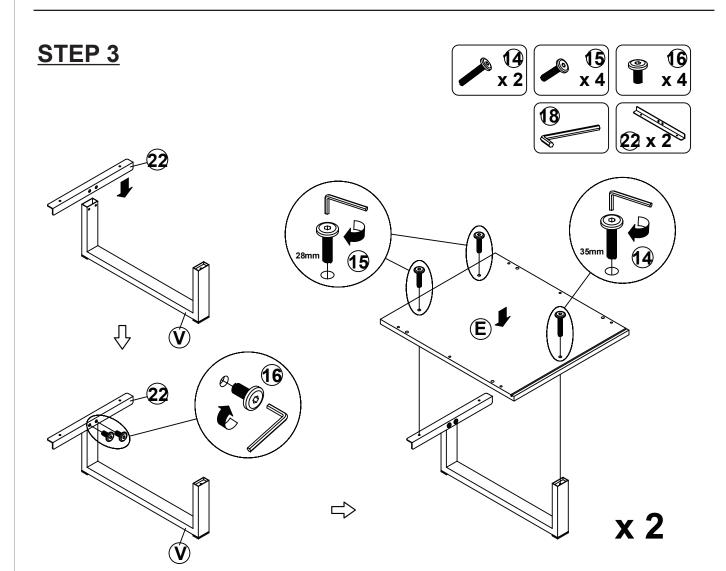



ITEM: **803521 STEP 4**








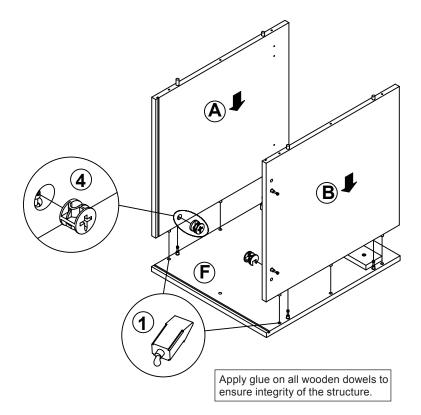

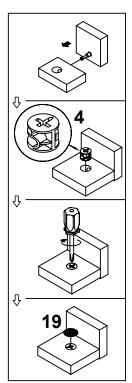

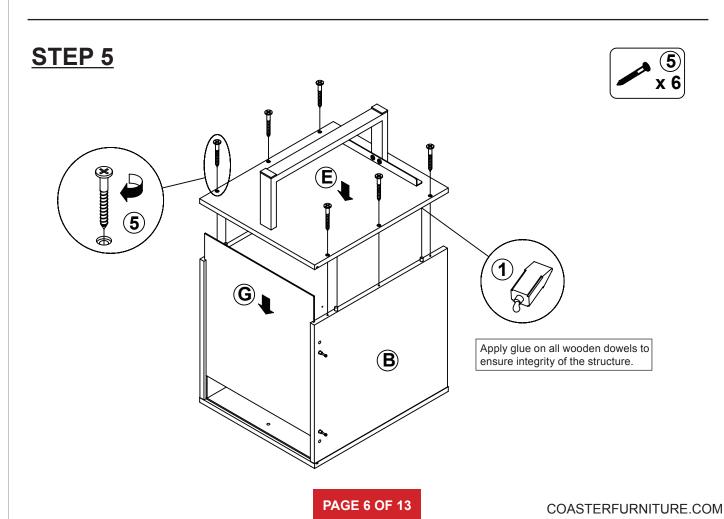



ITEM: **803521 STEP 6**










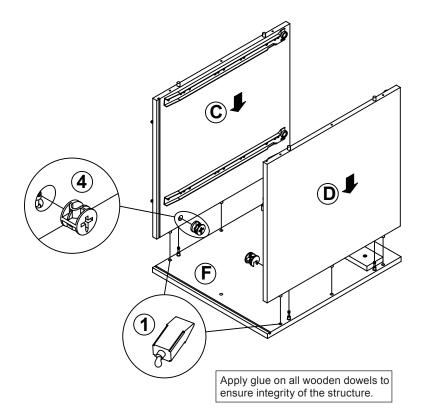

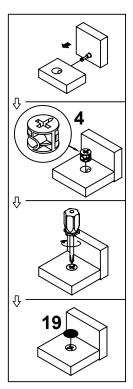

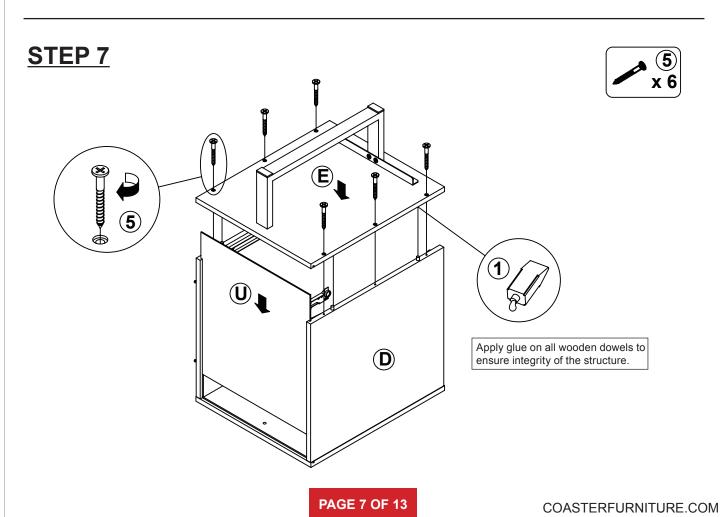

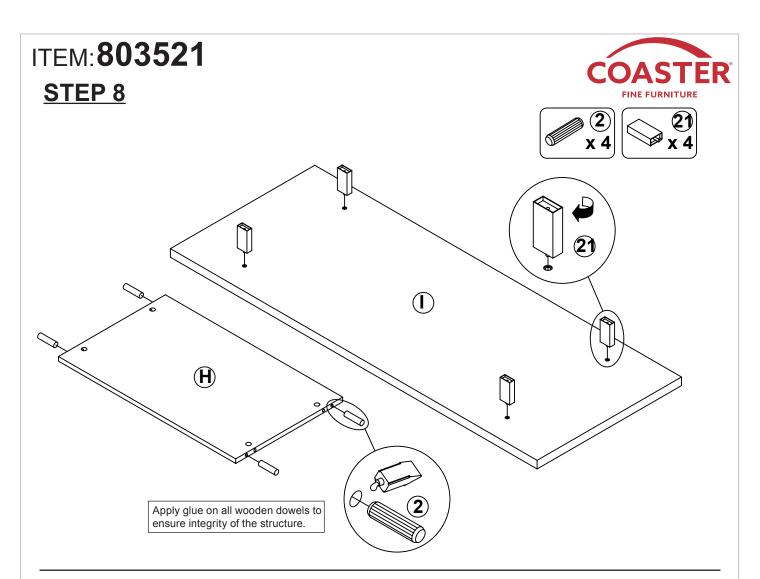

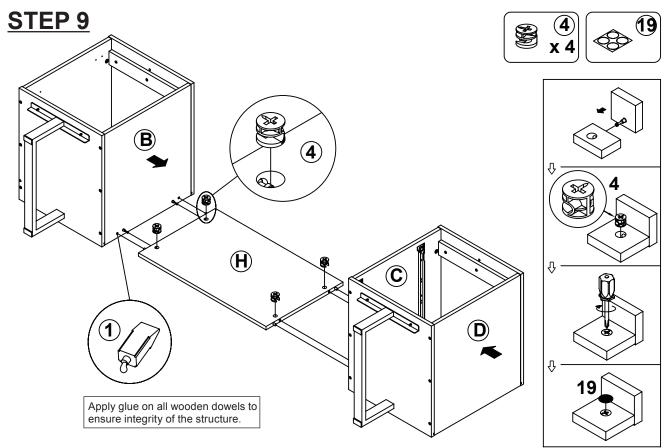


ITEM: **803521 STEP 10**







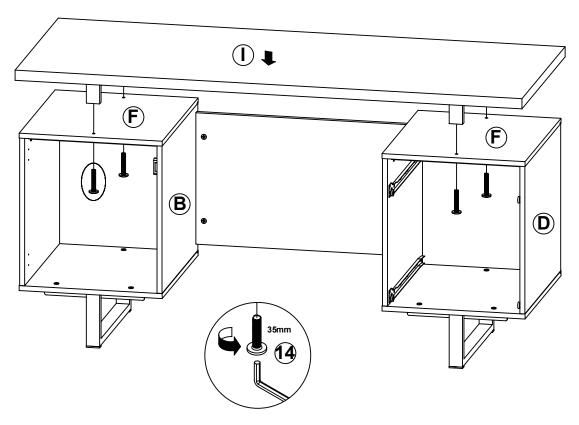


STEP 11











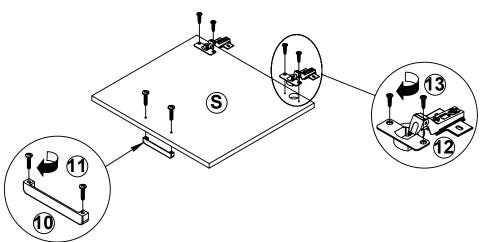


STEP 12-1

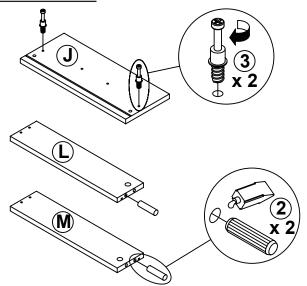


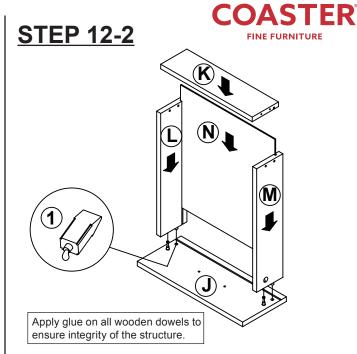


STEP 12-3

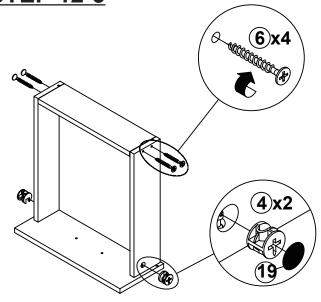



STEP 12-4

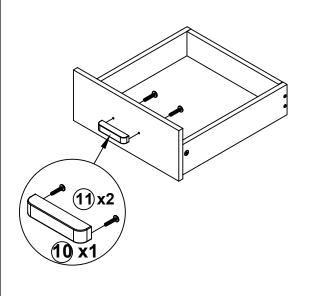


STEP 12-5

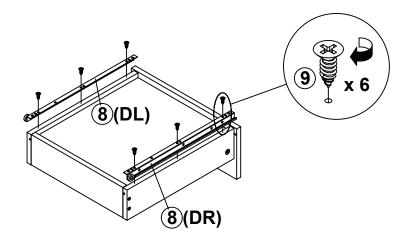

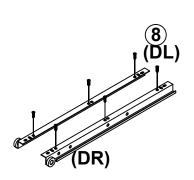


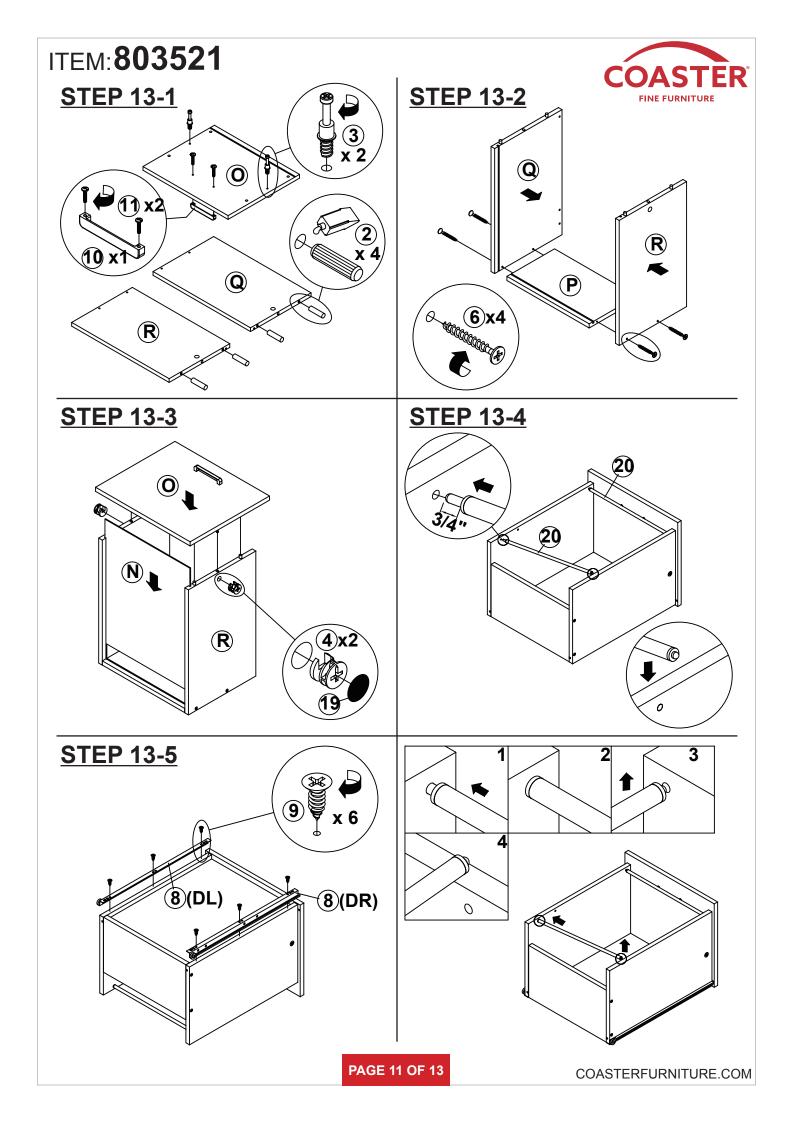



ITEM:803521 **STEP 14** 1 01 -(C) (C) (A) (B)

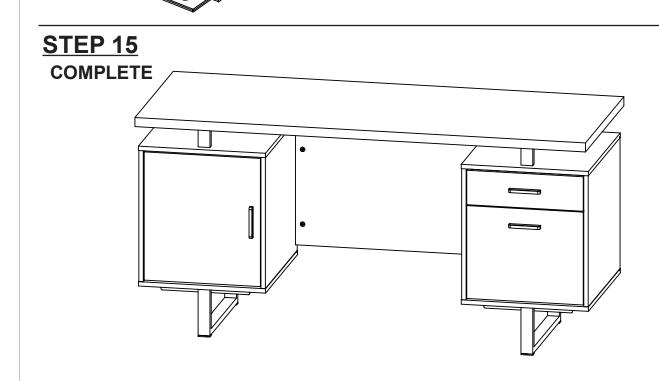



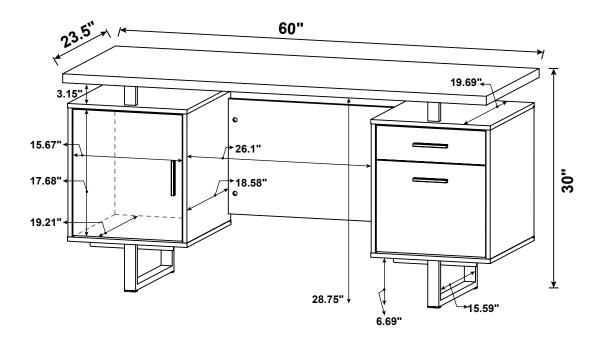

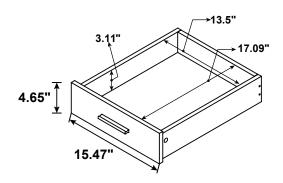

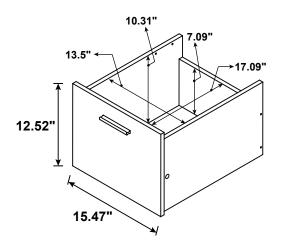

Note: Dimension tolerance ±5%