

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

223250SQ (B1-B3) Red Red Red

REVISION 0: 06/10/2018 REVISION 1: 04/22/2019 REVISION 2: 08/27/2019 REVISION 3: 01/11/2021

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

	PARTS IDENTIFICATION					
B1 (BOX 1)						
A HEADBOARD PANEL		1PC	н	CENTER RAIL		1PC
B HEADBOARD LEG	<u> </u>	2PCS	1	ROLL SLAT (13PCS)		1SET
C CENTER RAIL SUPPORT		1PC	J	CENTER RAIL SUPPORT WITH LEVELER		3PCS
B2 (BOX 2) D FOOTBOARD		1PC	к	CONCEAL PANEL		1PC
B3 (BOX 3)			L	DRAWER SUPPORT LEG WITHOUT LEVELER		4PCS
RIGHT E STORAGE SIDE RAIL		1PC	нв	223250SQ (B1) * FROM BOX 1 HEADBOARD COMPLETE		1PC
LEFT F STORAGE SIDE RAIL		1PC	D	223250SQ (B2) * FROM BOX 2 FOOTBOARD		1PC
G TRESTLE BAR		1PC				
NOTE:						

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z - B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 223250SQ (B1)


1	SHORT BOLT (M6 x 40mm - BLK)	@	2PCS	5	BIG FLAT WASHER (Ø20 x Ø8 x 2mm - BLK)		8PCS
2	LONG BOLT (M8 x 60mm - BLK)	©	8PCS	6	Z-ALLEN WRENCH (4mm - WHT)	A P	1PC
3	LOCK WASHER (Ø13 x Ø8 x 2mm - BLK)	0	10PCS	7	ALLEN WRENCH (5mm - BLK)		1PC
4	SMALL FLAT WASHER (Ø16 x Ø6.5 x 1mm - BLK)	0	2PCS				


Z - B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 223250SQ (B3)


8	BOLT 1 (M8 x 20mm - BLK)	@	2PCS	14	BIG FLAT WASHER (Ø20 x Ø8 x 2mm - BLK)		16PCS
9	BOLT 2 (M8 x 40mm - BLK)	@	4PCS	15	SMALL FLAT WASHER (Ø16 x Ø6.5 x 1mm - BLK)	<u></u>	2PCS
10	BOLT 3 (M6 x 50mm - BLK)		2PCS	16	Z-ALLEN WRENCH (4mm - WHT)		1PC
11	BOLT 4 (M8 x 50mm - BLK)		6PCS	17	ALLEN WRENCH (5mm - BLK)		⇒ 1PC
12	BOLT 5 (M8 x 60mm - BLK)	@	4PCS	18	LONG PAN HEAD SCREW (Ø7 x Ø1 1/4" - BLK)	Opposition	26PCS
13	LOCK WASHER (Ø13 x Ø8 x 2mm - BLK)	0	18PCS	19	SHORT PAN HEAD SCREW (Ø6 x Ø5/8" - BLK)	Oppos	4PCS


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

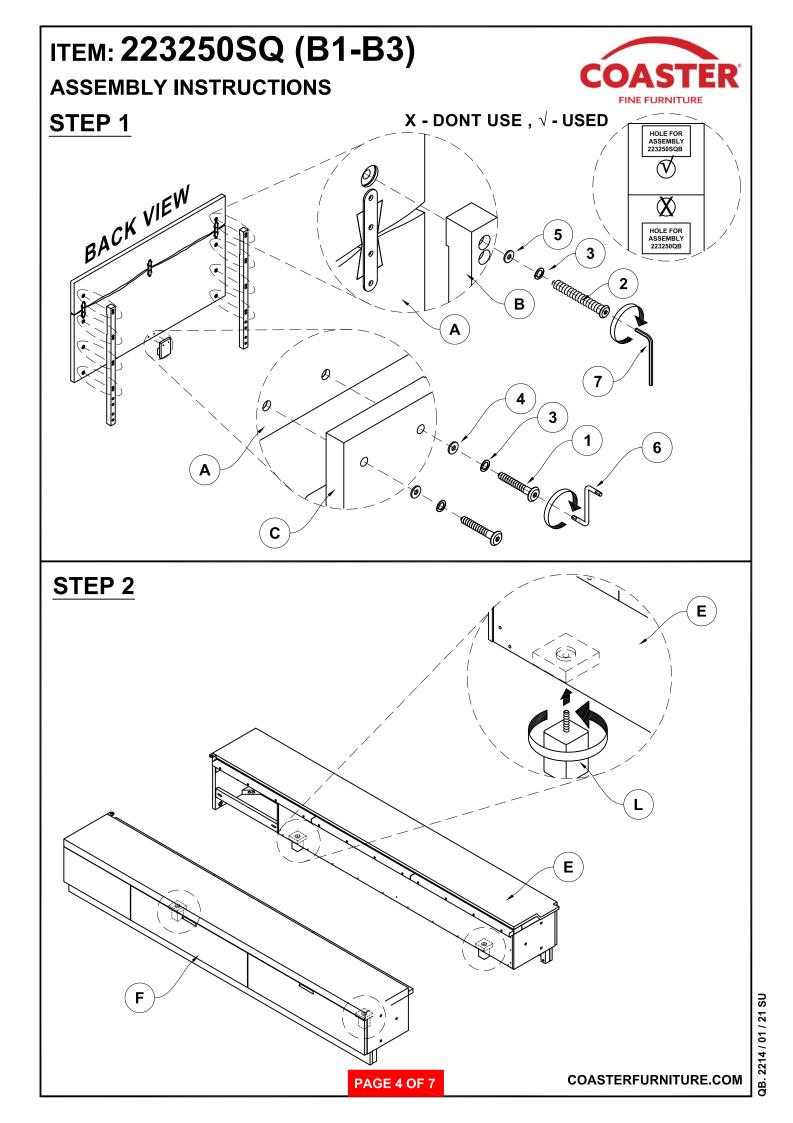

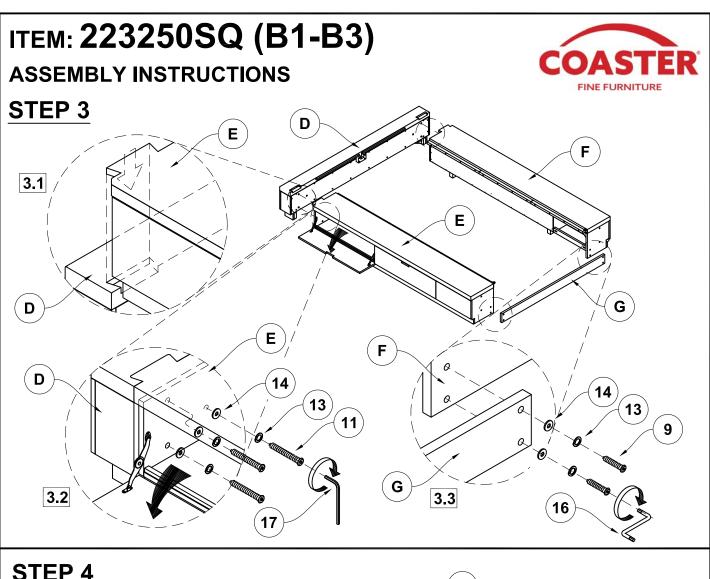

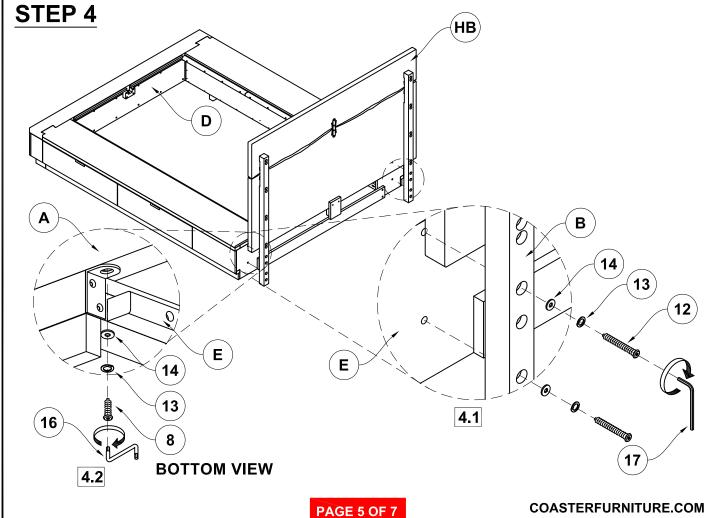


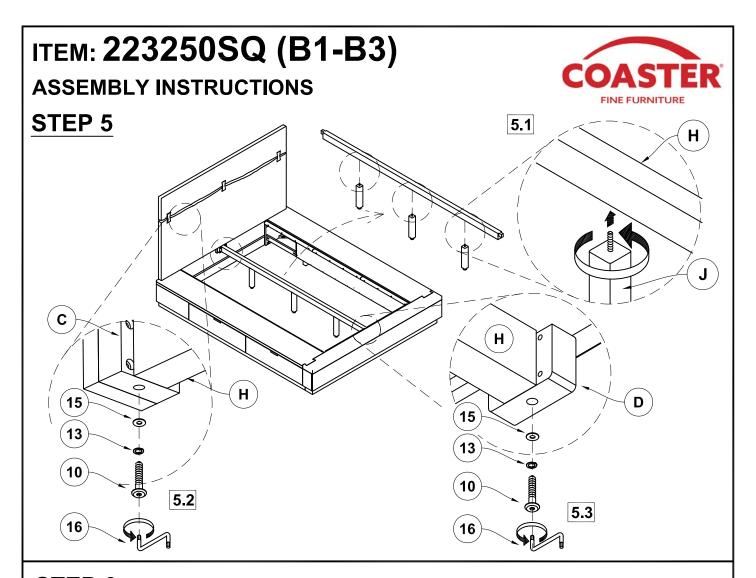

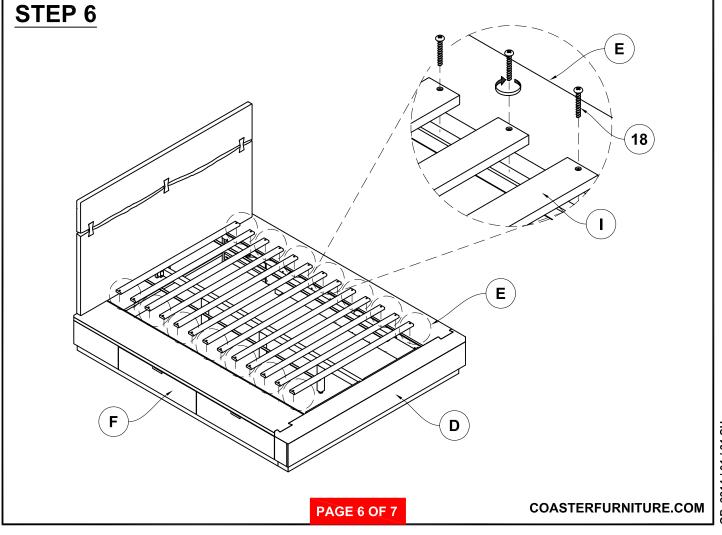



ASSEMBLY INSTRUCTIONS



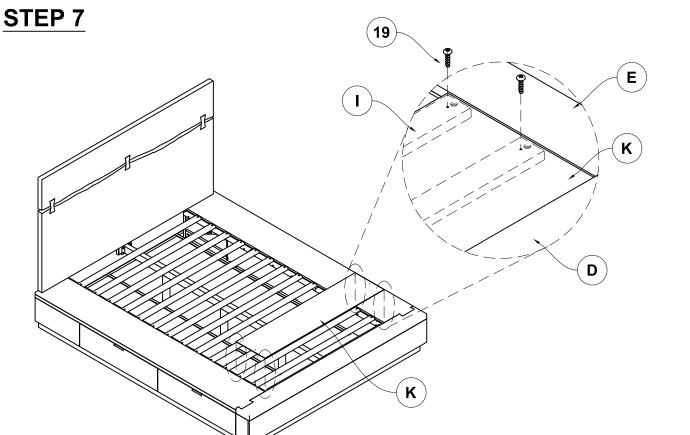

STEP 8 COMPLETE

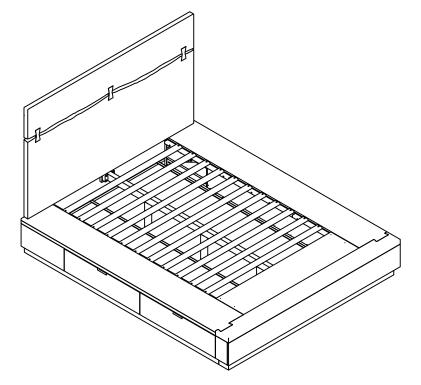






Inner Size: 72.50"W X 86.00"D

Open Cubby A: 31.75"W X 10.50"D X 7.50"H X 0.50"T Open Cubby B: 31.00"W X 10.50"D X 7.50"H X 0.50"T

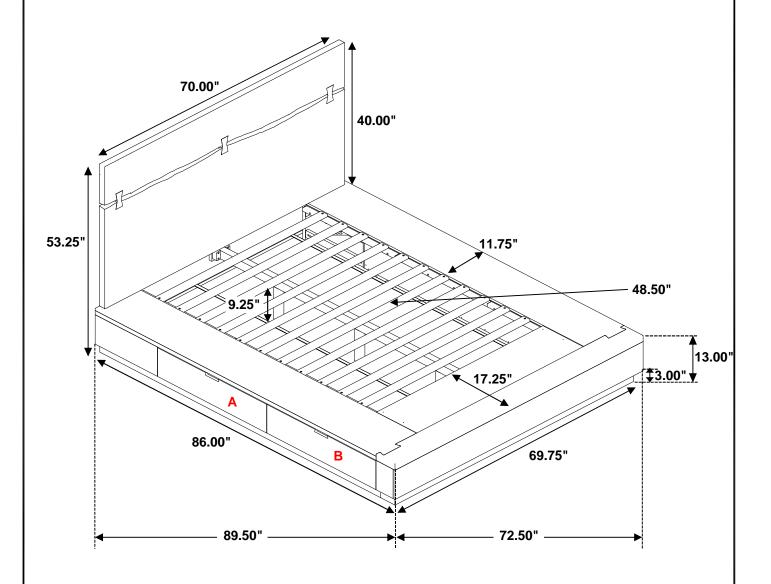

Note: Dimension tolerance ±5%