

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

### 130503 BARSTOOL

REVISION 0 : 06/16/2020 REVISION 1 : 09/15/2020 REVISION 2 : 08/01/2022

PAGE 1 OF 3

COASTERFURNITURE.COM

### ITEM: 130503

### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly. Warning!



- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME 5 MINUTES

### PARTS IDENTIFICATION

|   | PART<br>NAME    | FIGURE | QTY |   | PART<br>NAME | FIGURE | QTY |
|---|-----------------|--------|-----|---|--------------|--------|-----|
| Α | CHAIR BACK      |        | 1PC | F | BASE         | 0      | 1PC |
| В | CHAIR SEAT      |        | 1PC | G | COVER RING   |        | 1PC |
| С | BACK<br>SUPPORT | 0 0 0  | 1PC |   |              |        |     |
| D | GAS<br>CYLINDER |        | 1PC |   |              |        |     |
| E | FOOT REST       |        | 1PC |   |              |        |     |

### HARDWARE IDENTIFICATION


|   | HARDWARE<br>NAME      | FIGURE   | QTY |   | HARDWARE<br>NAME   | FIGURE | QTY |
|---|-----------------------|----------|-----|---|--------------------|--------|-----|
| 1 | BOLTS<br>M6x20MM      | <b>)</b> | 3РС | 6 | ALLEN WRENCH<br>M5 |        | 1PC |
| 2 | BOLTS<br>M6x20MM      |          | 7PC | 7 |                    |        |     |
| 3 | GASKET<br>M6x18x1.5MM | 0        | 3РС | 8 |                    |        |     |
| 4 | SPRING GASKET<br>M6   |          | 3РС | 9 |                    |        |     |
| 5 | ALLEN WRENCH<br>M4    |          | 1PC |   |                    |        |     |

PAGE 2 OF 4

## ITEM:130503 ASSEMBLY INSTRUCTIONS




### STEP 1

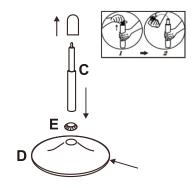


Place the chair seat (A) upside down on a soft surface. Then attach the foot rest (B) to the chair seat (A) using the bolt (1) and tighten with the allen wrench (2).


### STEP 2

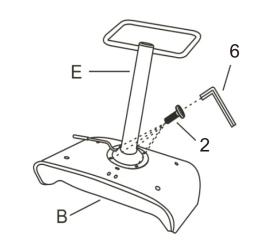

### STEP3

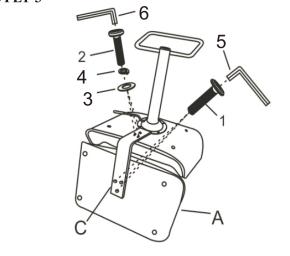

### STEP 4

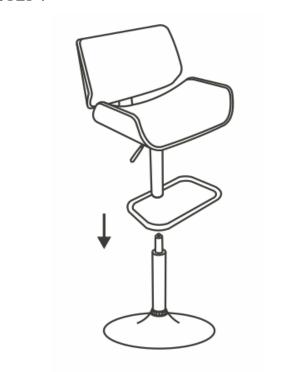


### STEP 5



### ITEM:130503 ASSEMBLY INSTRUCTIONS



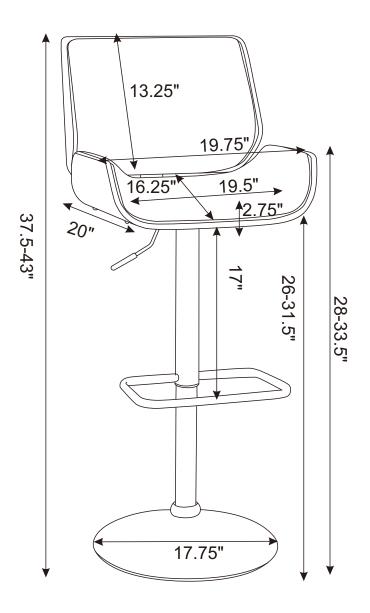

Note:Dimension tolerance±5%