


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

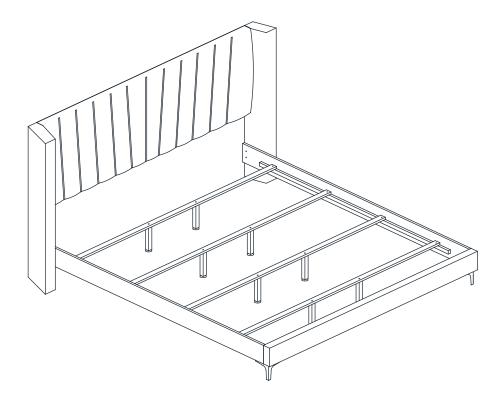

Fine Furniture for every stage of life

301161KE (B1&B2) Eastern King Bed

REVISION 0 : 10/19/2023

PAGE 1 OF 6

COASTERFURNITURE.COM

ITEM: 301161KE (B1&B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

Α	HEADBOARD PANEL		1PC	E FOOTBOARD LEG	2PCS						
В	LEFT HEADBOARD LEG (WITH "L" LABEL)		1PC	F BED SLAT	4PCS						
С	RIGHT HEADBOARD LEG (WITH "R" LABEL)		1PC	G BED SLAT SUPPORT	8PCS						
D	FOOTBOARD PANEL		1PC								
<u>B2 (BOX 2)</u>											
н	LEFT BED RAIL (WITH "H" LABEL)		1PC	I RIGHT BED RAIL (WITH "I" LABEL)	1PC						

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.

PAGE 2 OF 6

ITEM: 301161KE (B1&B2)

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 301161KE (B1)

1	BOLT 1 (M8 x 20MM - RBW)		4PCS	7	BIG LOCK WASHER (5/16" x 13 Ø - RBW)	Ø	4PCS			
2	BOLT 2 (M8 x 35MM - RBW)		4PCS	8	BIG FLAT WASHER (5/16" x 22 Ø - RBW)	\bigcirc	4PCS			
3	BOLT 3 (M6 x 15MM - RBW)		6PCS	9	WOOD DOWEL (M10Ø x 30MM)		4PCS			
4	BOLT 4 (M6 x 35MM - RBW)	(6)) <u>))))))))))))))))))))))))))))))))))</u>	14PCS	10	FLAT HEAD SCREW (M4 x 32MM - RBW)	3) >	8PCS			
5	SMALL LOCK WASHER (1/4" X 12 Ø - RBW)	Ø	6PCS	11	SMALL ALLEN WRENCH (M4 x 100MM - BLK)		1PC			
6	SMALL FLAT WASHER (1/4" X 19 Ø - RBW)	\bigcirc	6PCS	12	BIG ALLEN WRENCH (M5 x 65MM - BLK)	Ĺ	1PC			
NOTE: Phillips head screw driver is required in the assembly process; however, manufacturer does not provided this item.										

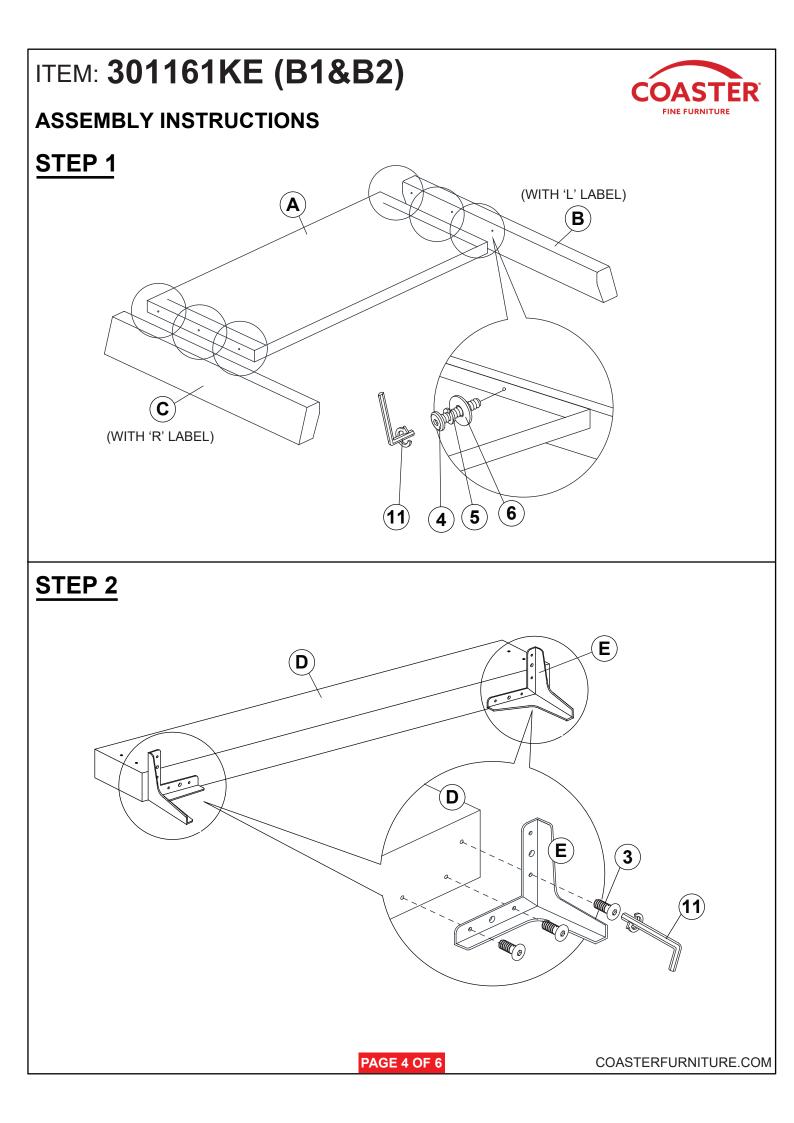

ITEM: 301161KE (B1&B2)

ASSEMBLY INSTRUCTIONS



STEP 3

