


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

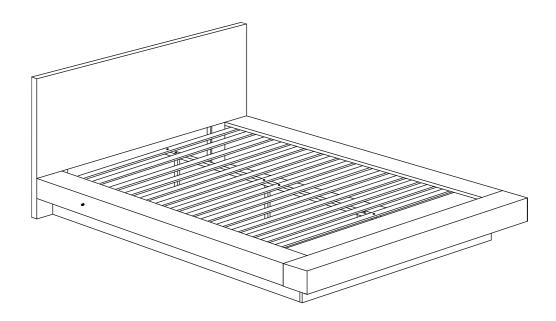

Fine Furniture for every stage of life

200711KE (B1-B3) Eastern King Bed

REVISION 0: 05/14/2008 REVISION 1: 12/04/2012 REVISION 2: 01/21/2013 REVISION 3: 02/15/2017 REVISION 4: 08/09/2017 REVISION 5: 09/11/2018 REVISION 6: 12/02/2019 REVISION 7: 08/04/2020 REVISION 8: 11/01/2023 REVISION 9: 03/12/2024

PAGE 1 OF 9

COASTERFURNITURE.COM



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

35 MINUTES

PARTS IDENTIFICATION

B 1	(BOX 1)		•				
Α	HEADBOARD		1PC				
B2 (BOX 2)							
В	FOOTBOARD		1PC				
С	LEFT BED RAIL		1PC				
D	RIGHT BED RAIL		1PC				
<u>B3</u>	B3 (BOX 3)						
E	CONCEAL PANEL		1PC				
F	LEFT BED RAIL TOP		1PC				
G	RIGHT BED RAIL TOP		1PC				
н	FOOTBOARD TOP		1PC				
I	ROLL SLAT (7PCS)		2SETS				
J	CENTER RAIL		1PC				
		PAGE 2 OF 9	COASTERFURNITURE.COM				



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

K	CENTER RAIL SUPPORT WITH LEVELER	3PCS
L	BOTTOM TRESTLE BAR	3PCS
MF1	LIGHT SET WITH SCREW	1SET
Α	200711KE (B1) FROM BOX 1 HEADBOARD	1PC
В	200711KE (B2) FROM BOX 2 FOOTBOARD	1PC



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.


HARDWARE IDENTIFICATION


Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 200711KE (B1)


1	ALLEN WRENCH (M4 - BLK)		1PC
2	SHORT BOLT WITH WASHER (M6 x 30mm - BLK)	9.000p	10PCS
3	LONG BOLT WITH WASHER (M6 x 45mm - BLK)	97 9 90	10PCS
4	LONG BOLT (M6 x 45mm - BLK)		16PCS
5	WOOD DOWEL (M8 x 30mm)		19PCS
6	ZIG ZAG SPRING CLICK (1.5 x 20.5 x 24 - BRN)		5PCS
7	FLAT HEAD SCREW (M4 x 16mm - BLK)	Orange .	22PCS
8	BARREL NUT (M6 x 13mm - BLK)	(4)	10PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

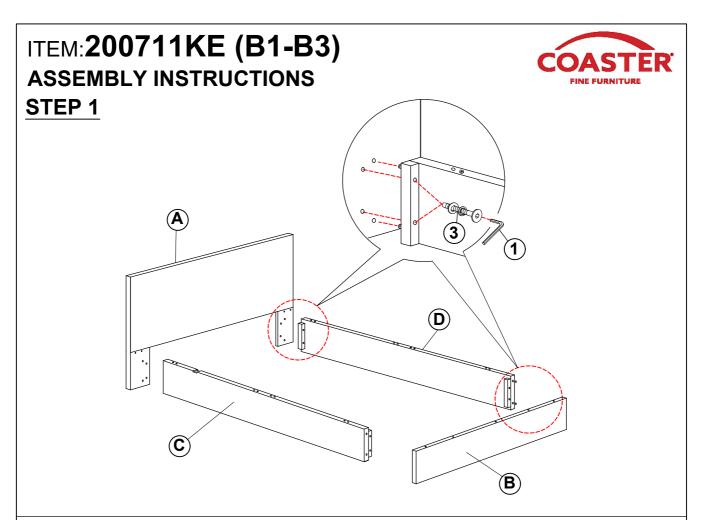


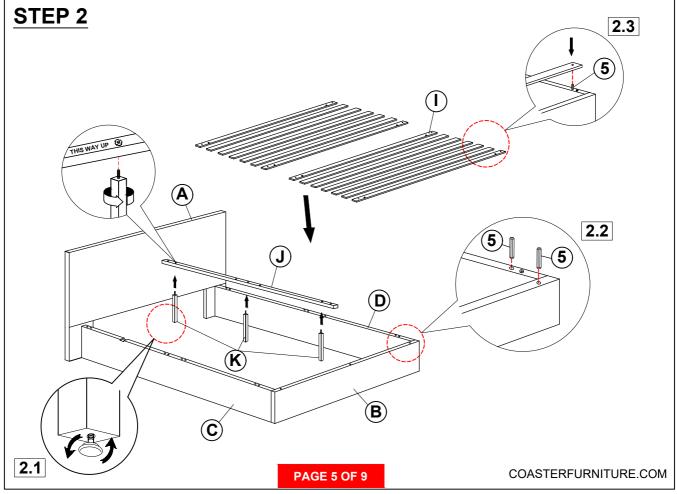

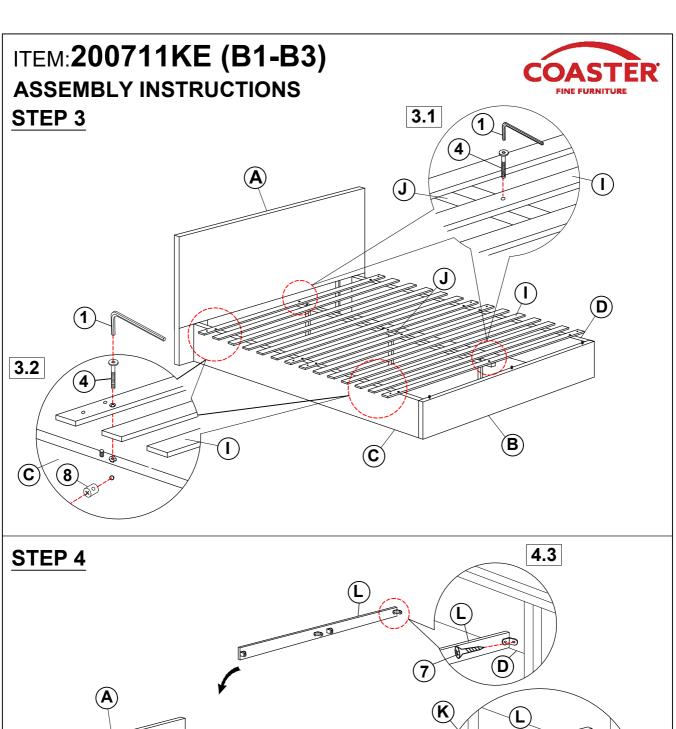

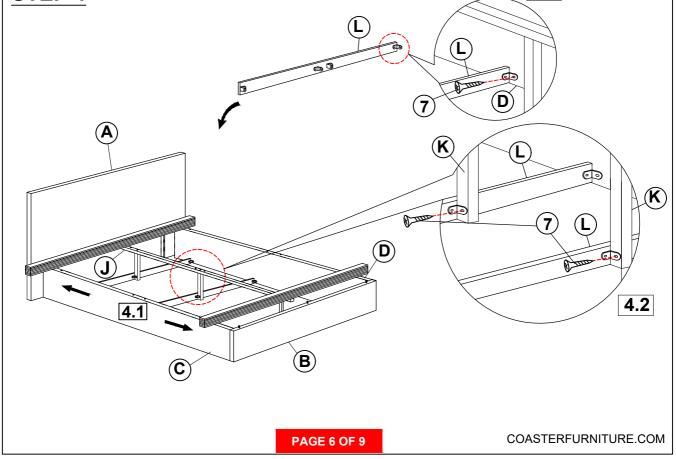


ITEM:200711KE (B1-B3) **ASSEMBLY INSTRUCTIONS** STEP 5 5.1 5.3 **(J**) **D** 5.2 FRONT B **(C)** (I) \bigcirc **(8**) 8 STEP 6 PUT WIRE HEAD TO BED INSIDE MF1 D 6.4 6.1 6 MF1 6.5 MF1 (F)MF1 MF1 MF1 MF1 6.2 (MF1) 6.3 COASTERFURNITURE.COM PAGE 7 OF 9

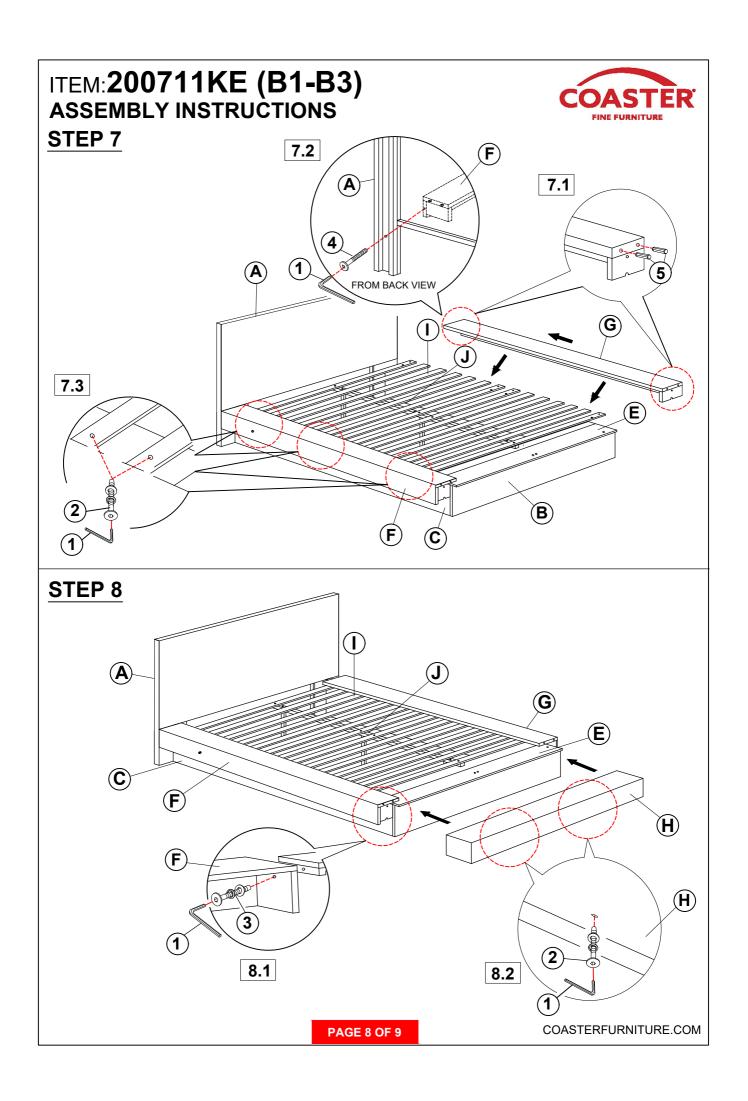




ASSEMBLY INSTRUCTIONS STEP 9 COMPLETE

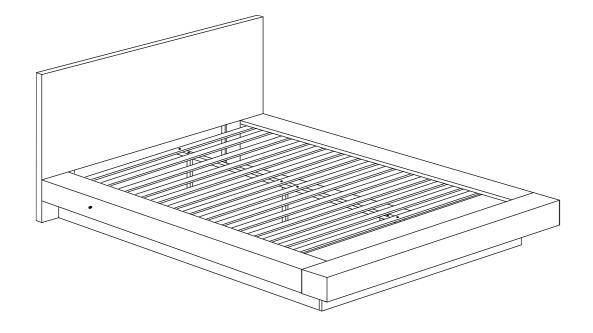





Inner Size: 76.00"W x 81.00"D

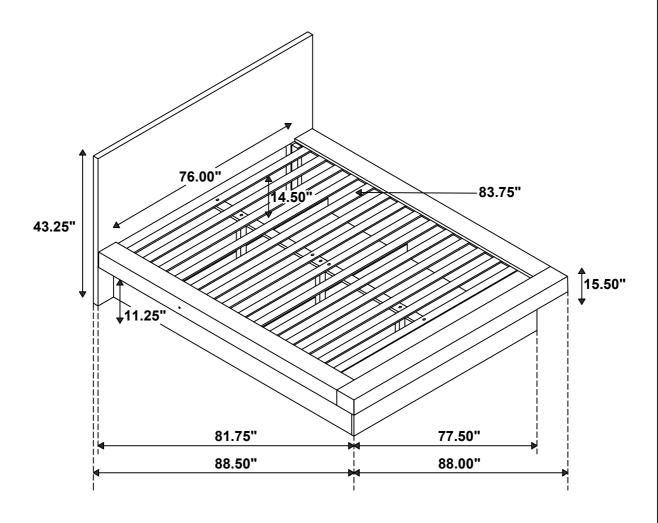

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM