

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

300833Q(B1-B3)
Queen Bed

ITEM: 300833Q(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.








ASSEMBLY TIME






35 MINUTES

PARTS IDENTIFICATION





B1 (BOX 1)

<p>A HEADBOARD PANEL</p>  <p>1PC</p>	<p>D CENTER RAIL SUPPORT WITH LEVELER</p>  <p>3PCS</p>
<p>B LEFT HEADBOARD LEG</p>  <p>1PC</p>	<p>E FOOTBOARD LEG</p>  <p>2PCS</p>
<p>C RIGHT HEADBOARD LEG</p>  <p>1PC</p>	

B2 (BOX 2)

<p>F LEFT PANEL</p>  <p>1PC</p>	<p>I NIGHTSTAND SIDE PANEL</p>  <p>4PCS</p>
<p>G RIGHT PANEL</p>  <p>1PC</p>	<p>J NIGHTSTAND BACK PANEL</p>  <p>4PCS</p>
<p>H NIGHTSTAND TOP & BOTTOM PANEL</p>  <p>4PCS</p>	

B3 (BOX 3)

<p>K BED RAIL</p>  <p>2PCS</p>	<p>M CENTER RAIL</p>  <p>1PC</p>
<p>L FOOTBOARD PANEL</p>  <p>1PC</p>	<p>N ROLL SLAT (6PCS)</p>  <p>2SETS</p>

ITEM:300833Q(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

















WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 300833Q (B1)

1	SMALL ALLEN WRENCH (M4 x 55mm - BLK)		1PC	9	FLAT WASHER (M6 - RBW)		18PCS
2	BIG ALLEN WRENCH (M5 x 100mm - BLK)		1PC	10	FLAT HEAD SCREW (M4 x 25mm - RBW)		34PCS
3	BOLT 1 (M8 x 80mm - RBW)		2PCS	11	WOOD DOWEL (M8 x 25mm - NTL)		32PCS
4	BOLT 2 (M6 x 35mm - RBW)		12PCS	12	CAM NUT		28PCS
5	BOLT 3 (M6 x 40mm - RBW)		8PCS	13	CAM BOLT		28PCS
6	BOLT 4 (M6 x 60mm - RBW)		8PCS	14	DECORATIVE STICKER		36PCS
7	BOLT 5 (M6 x 50mm - RBW)		4PCS				
8	LOCK WASHER (M6 - RBW)		18PCS				

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 300833Q(B1-B3)




ASSEMBLY INSTRUCTIONS


STEP 1

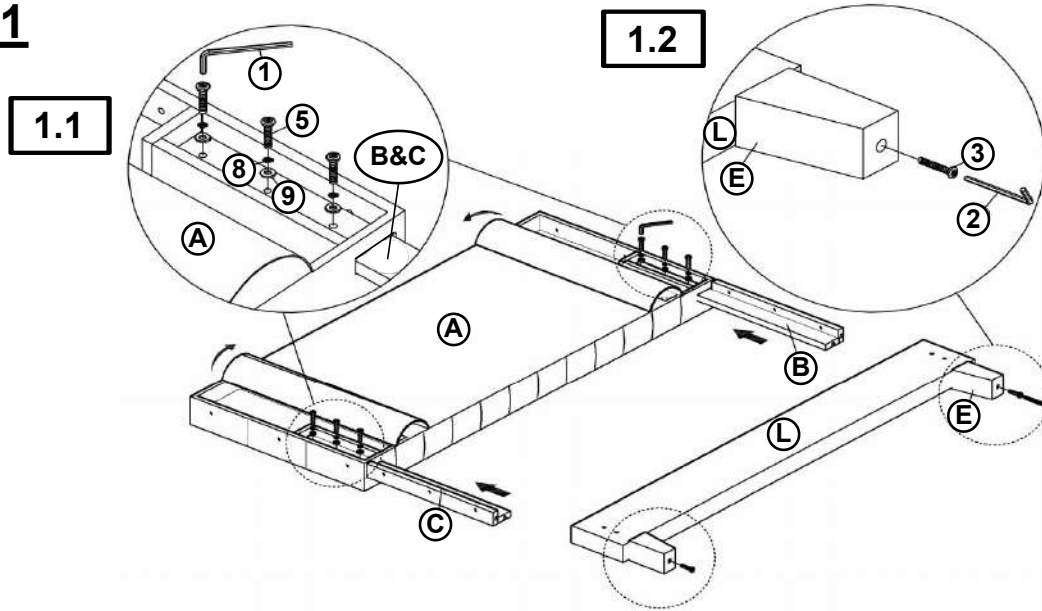

STEP 2

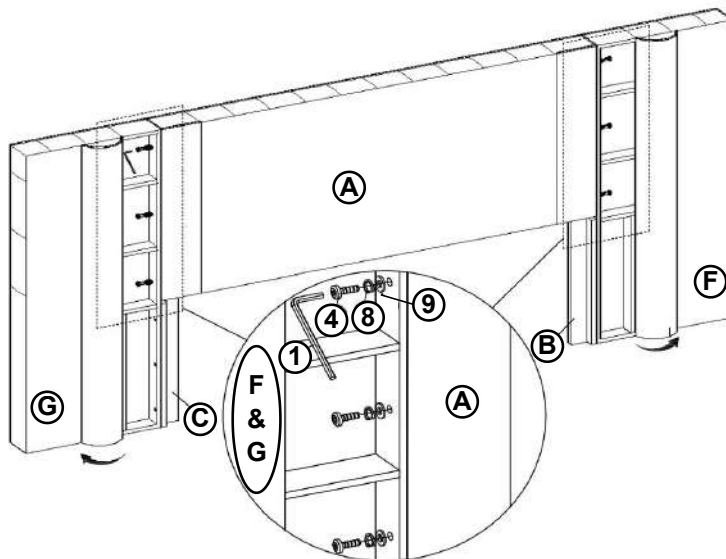

STEP 3

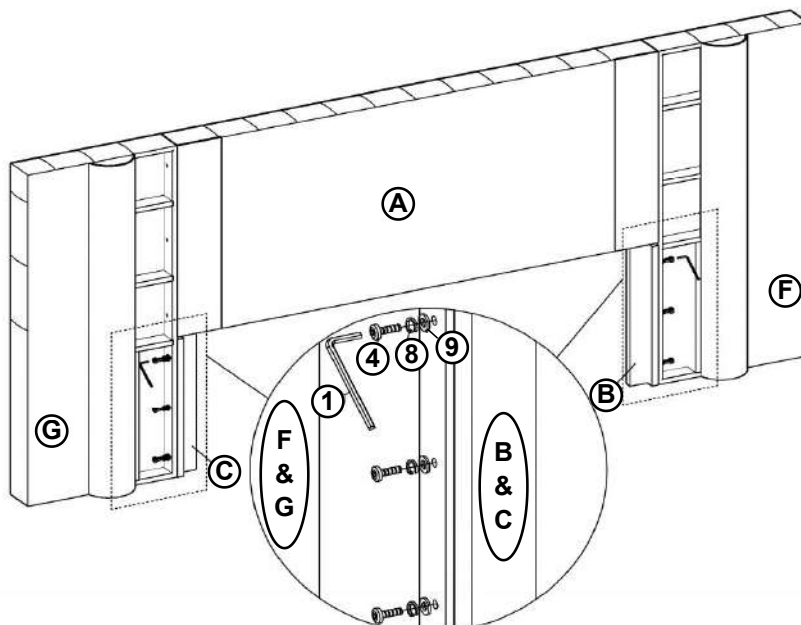


ITEM: **300833Q(B1-B3)**




ASSEMBLY INSTRUCTIONS


STEP 4

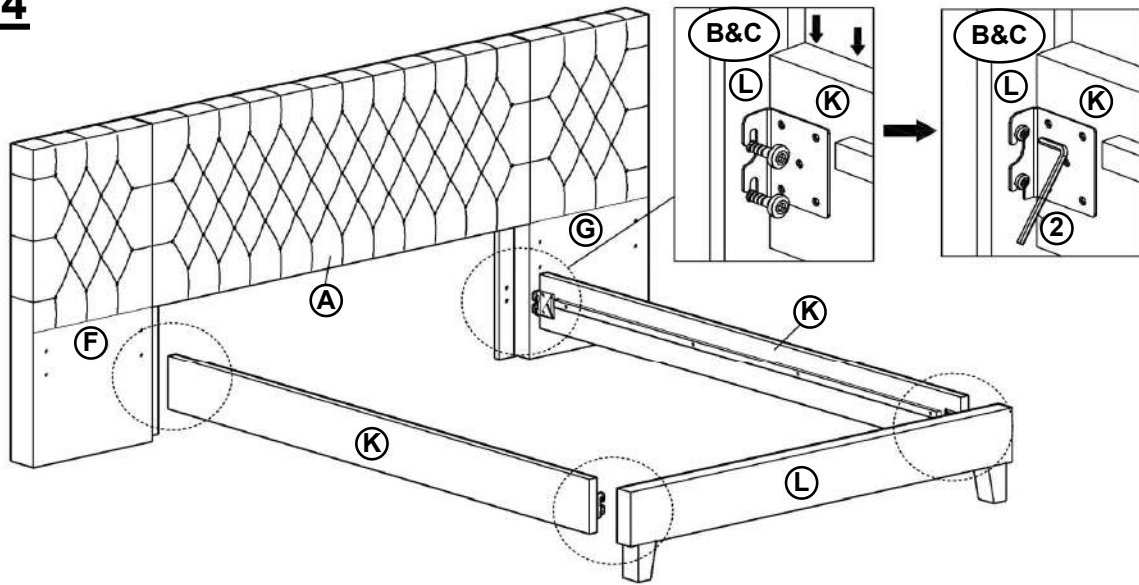


STEP 5

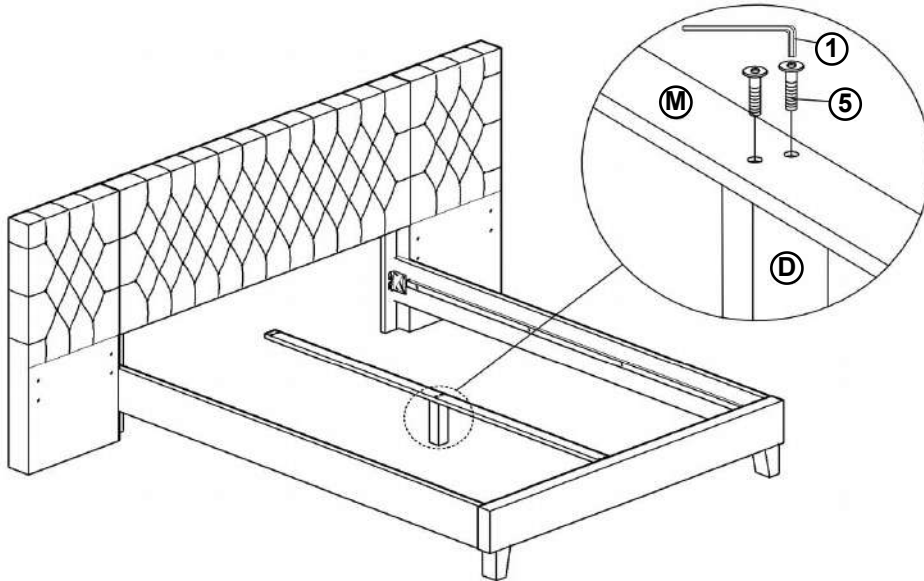


STEP 6

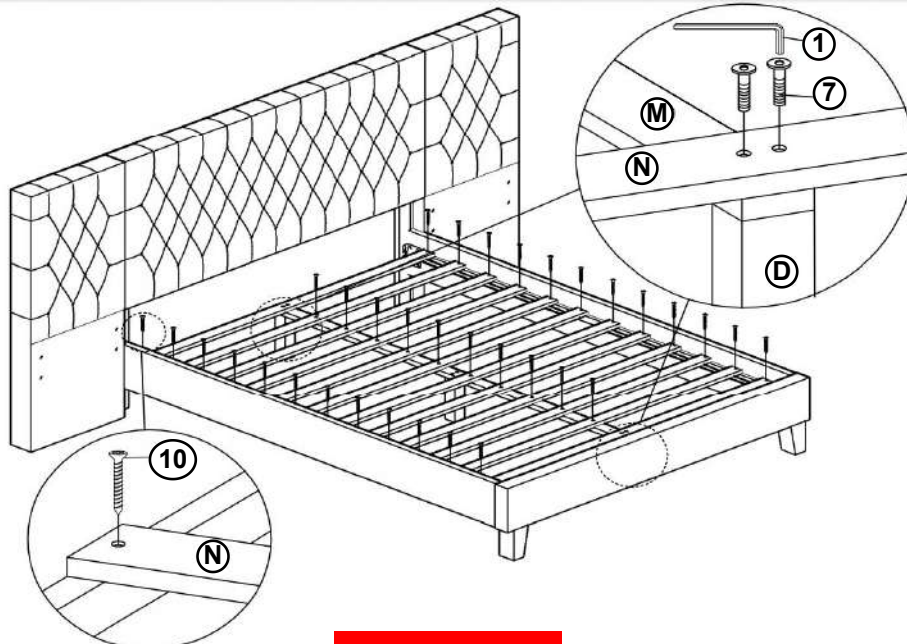


ASSEMBLY INSTRUCTIONS
STEP 7

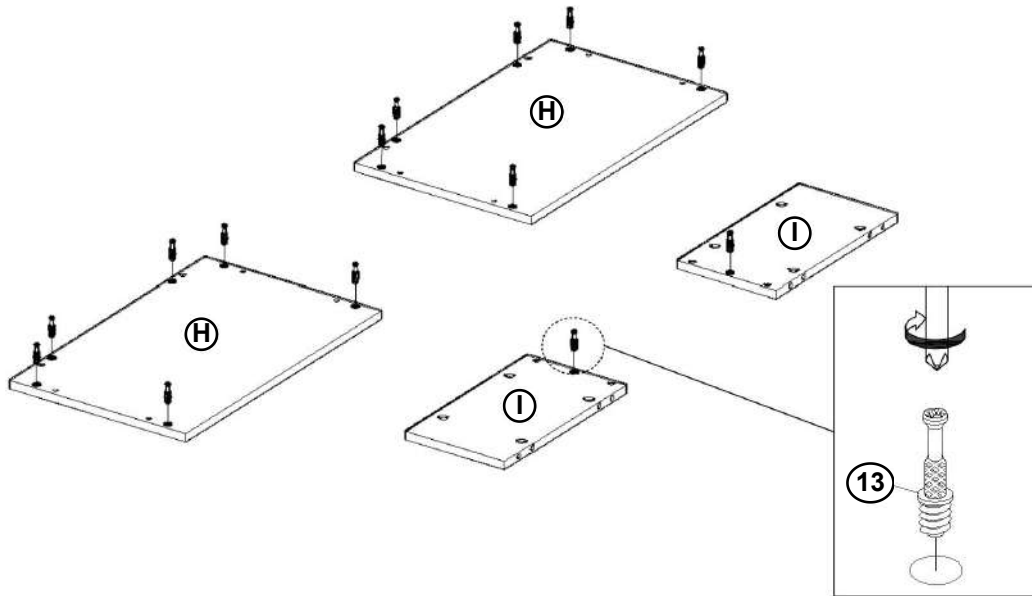

STEP 8

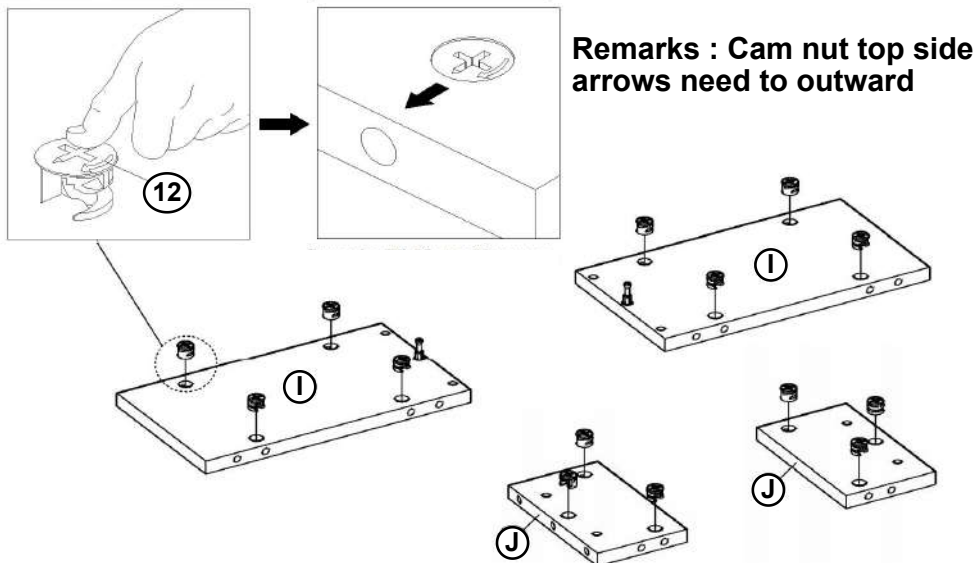


STEP 9

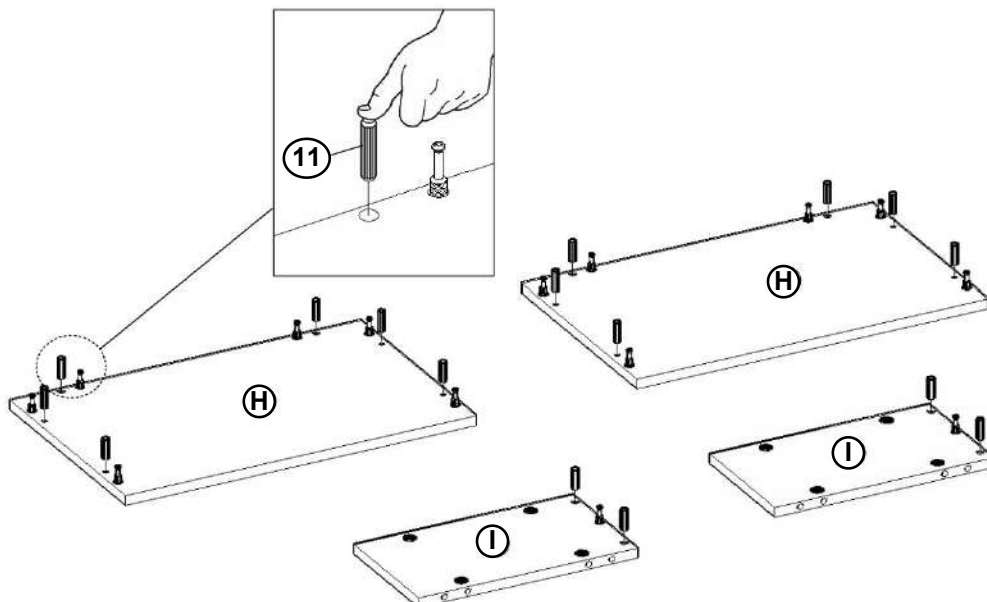


ASSEMBLY INSTRUCTIONS


STEP 10

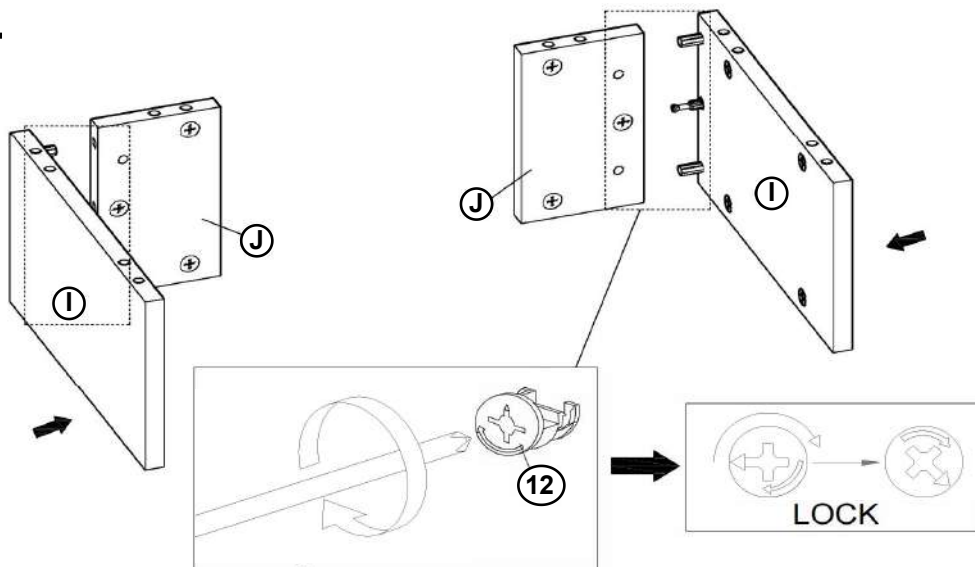

STEP 11

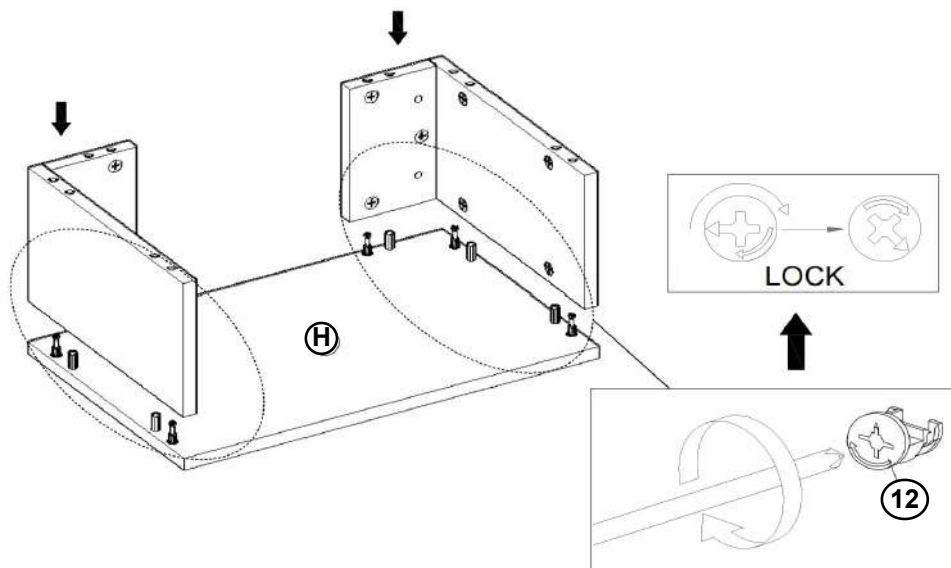


STEP 12

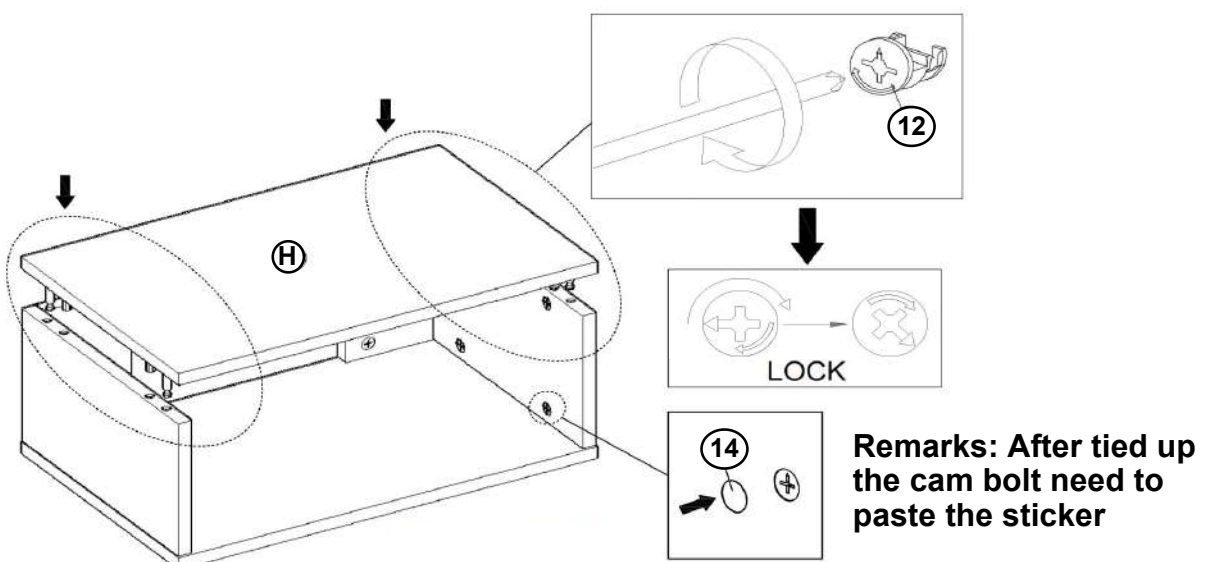

ITEM: **300833Q(B1-B3)**




ASSEMBLY INSTRUCTIONS
STEP 13

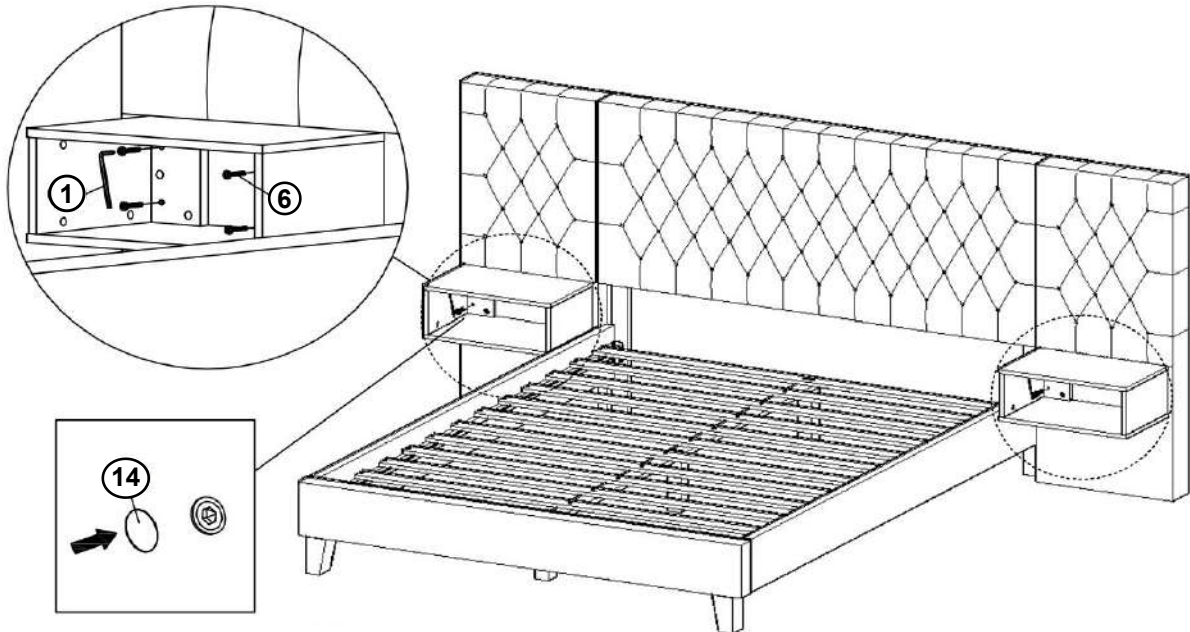

Remarks: After tied up the bolts need to paste the sticker


STEP 14
COMPLETE

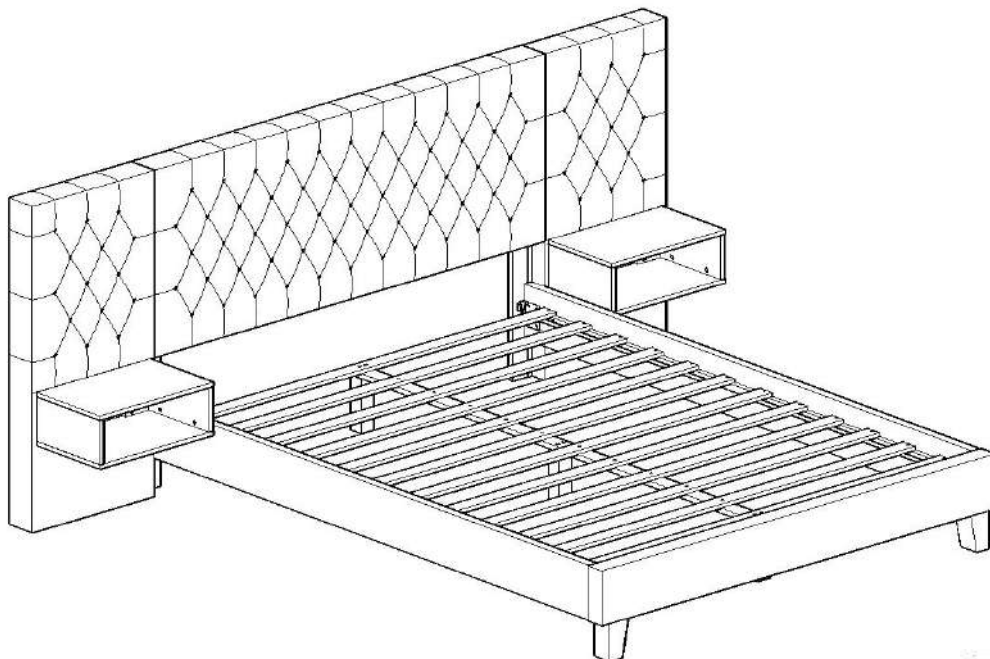

ITEM: 300833Q(B1-B3)



Inner Size : 61.00"W X 81.25"D

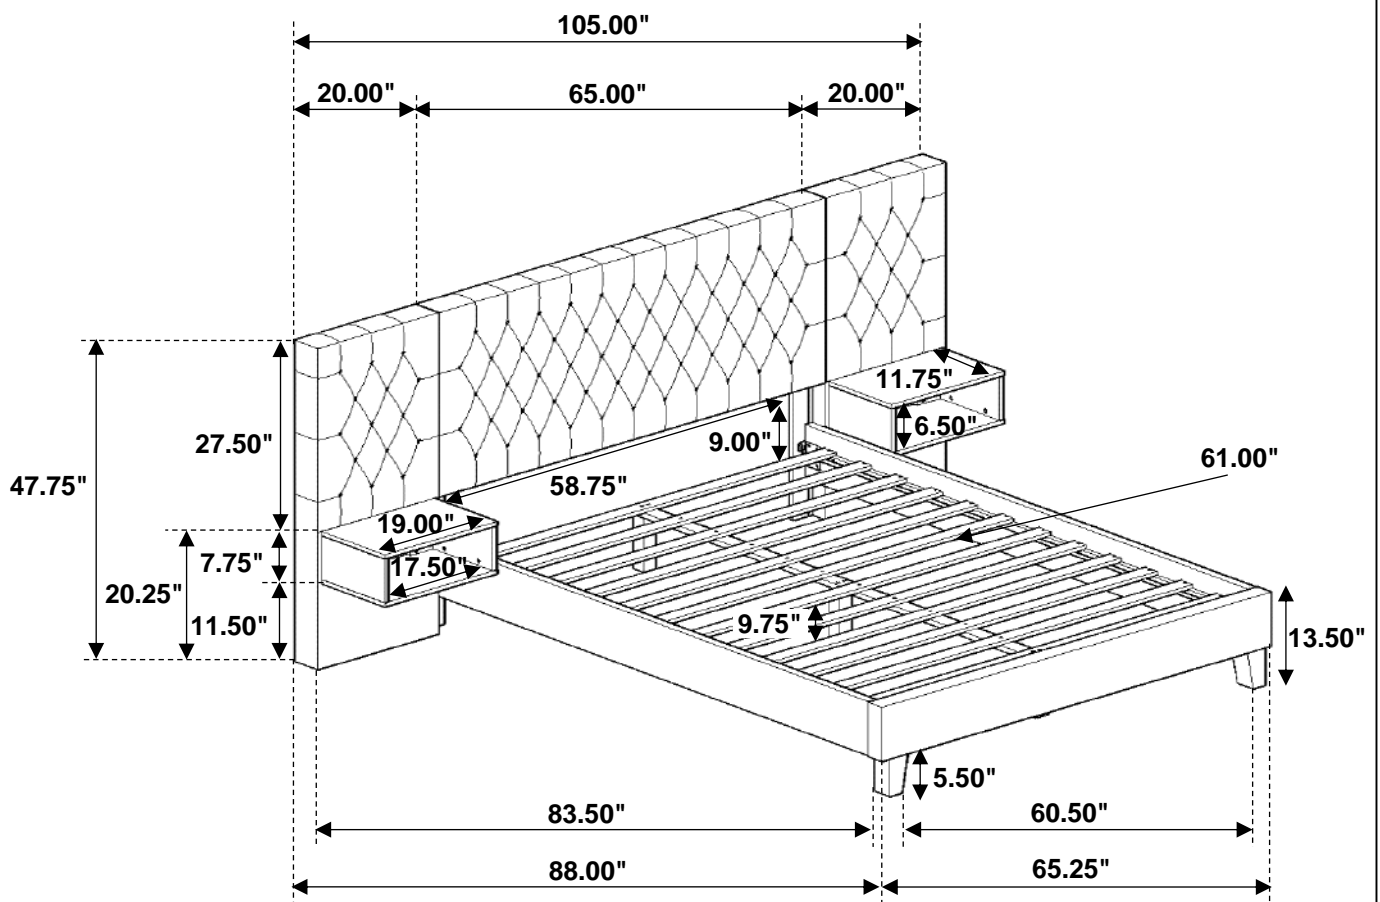

Note : Dimension tolerance $\pm 5\%$