


# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

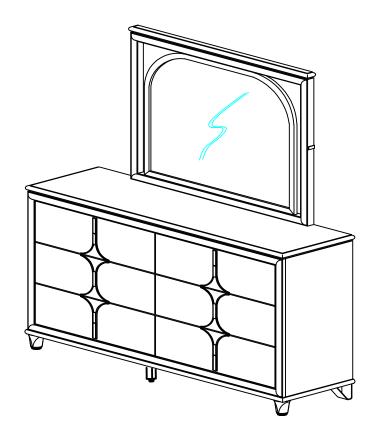

Fine Furniture for every stage of life

224954 *Mirror* 

REVISION 0: 06/20/2024

COASTERFURNITURE.COM

PAGE 1 OF 3

## ITEM: 224954






#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

8 MINUTES

#### **PARTS IDENTIFICATION**

A DRESSER
\* FROM BOX
ITEM # 224953

B MIRROR

C MIRROR SUPPORT
(PACKED WITH MIRROR)

1PC

1PC

### **HARDWARE IDENTIFICATION**


1	BOLT (M6 x 35mm - RBW)	8PCS
2	LOCK WASHER (M6 x 12mm - RBW)	8PCS
3	FLAT WASHER (1/4" x 19mm - RBW)	8PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)	1PC

# ITEM:**224954**


# COASTER

## **ASSEMBLY INSTRUCTIONS**



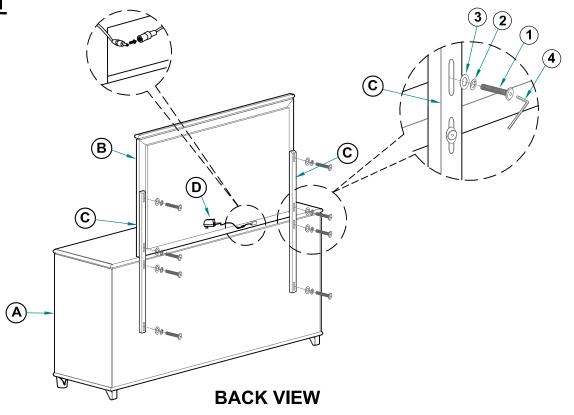

### STEP 2 COMPLETE

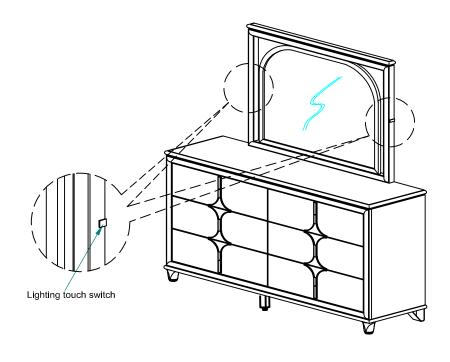


XX.

COASTERFURNITURE.COM

PAGE 3 OF 3



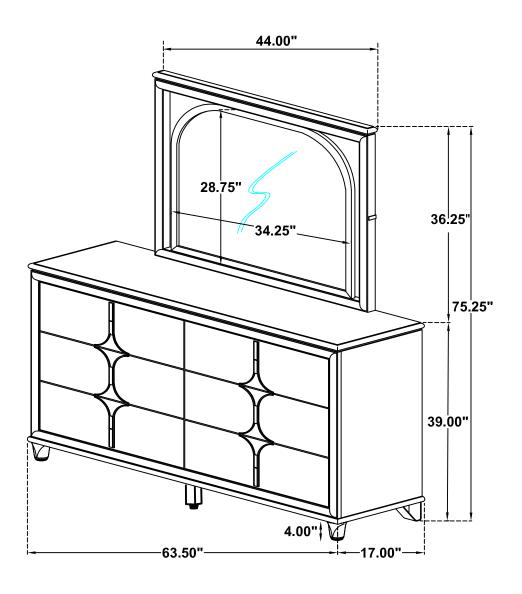

Note : Dimension tolerance ±5%