

REVISION 0 : 07/11/2024

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM: 306120KE(B1&B2) ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.






20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)


A HEADBOARD



1PC

B2 (BOX 2)

B FOOTBOARD



1PC

C BED RAIL

2PCS

HARDWARE IDENTIFICATION

Z-B2(BOX 2) - HARDWARE PACK IS LOCATED IN 306120KE(B2)

| 1 | BOLT (M8 X 25MM) | 8PCS |
|-------|-----------------------------------|------|
| 2 | ALLEN WRENCH (M5 X 65MM - BLK) | 1PC |
| NOTE: | | |

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




COASTERFURNITURE.COM

ITEM: 306120KE(B1&B2)

ASSEMBLY INSTRUCTIONS



STEP 1

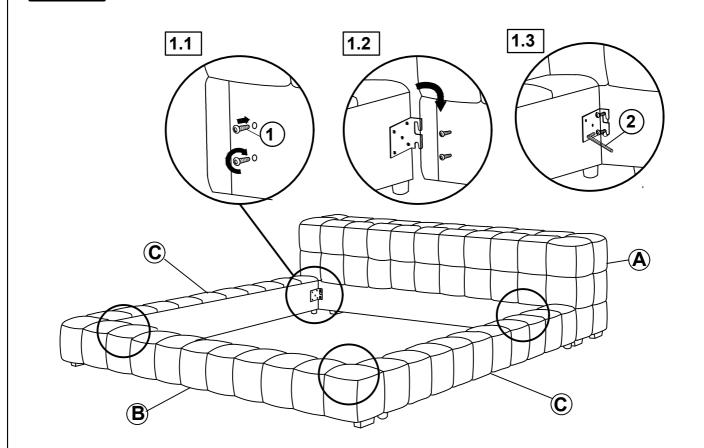

STEP 2 COMPLETE

