

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE




Fine Furniture for every stage of life


REVISION 0: 11/12/2024




PAGE 1 OF 20

COASTERFURNITURE.COM

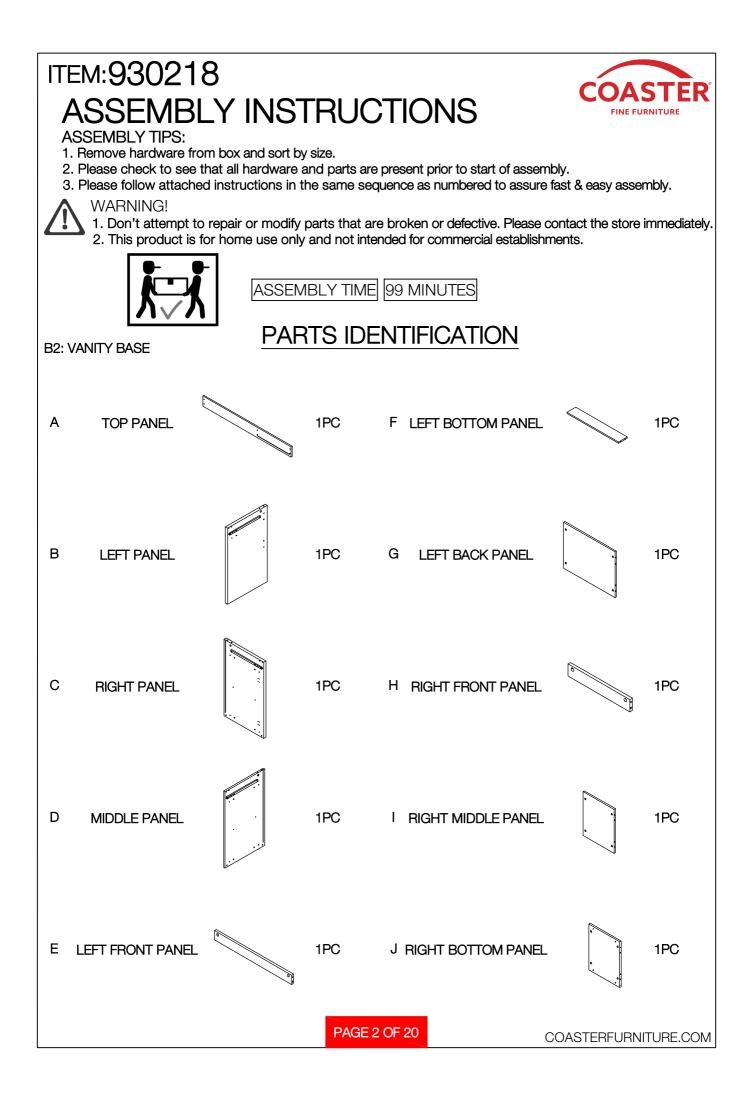

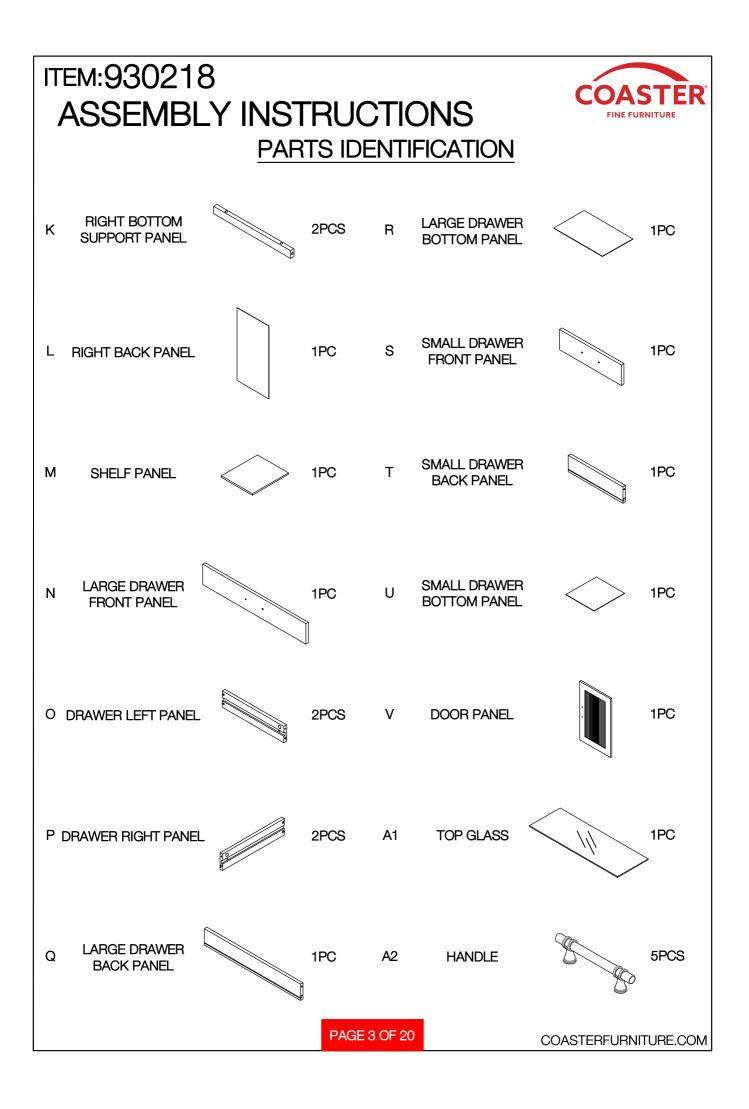


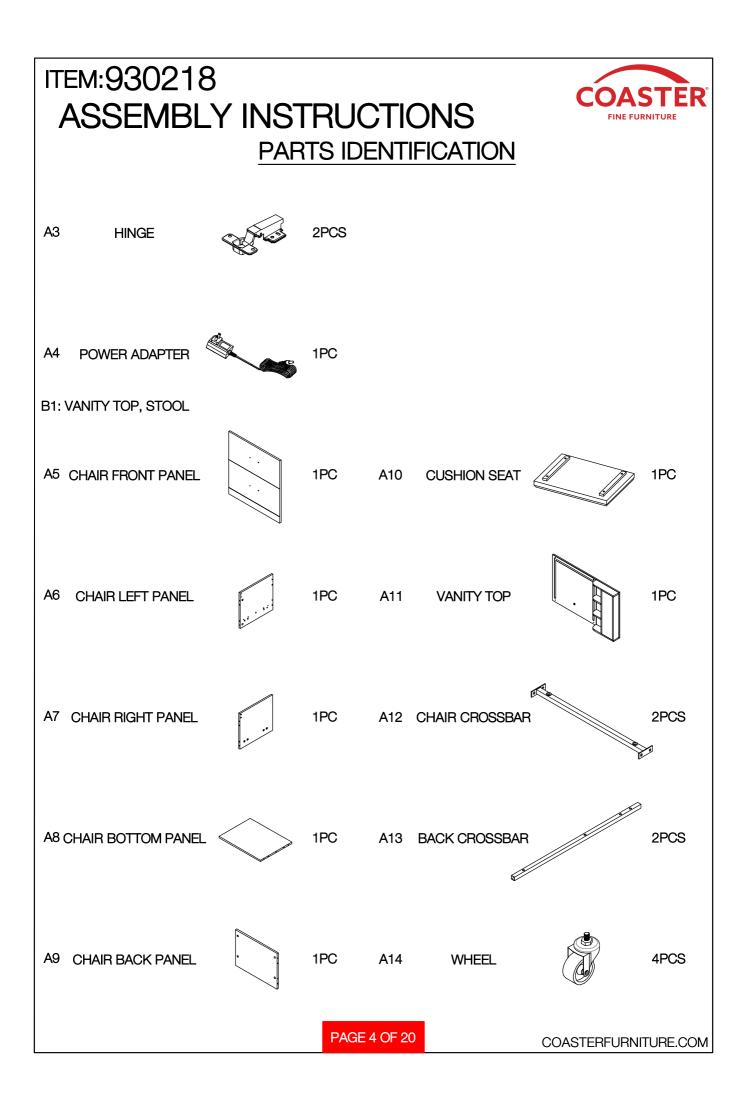



ITEM:930218 ASSEMBLY INSTRUCTIONS z HARDWARE IDENTIFICATION						FINE F	COASTER FINE FURNITURE	
1	CAM BOLT (35MM)	ost m	34PCS	12	SUCTION CUP	\bigcirc	6PCS	
2	SMALL CAM BOLT (33MM)	ora m	3PCS	13	SHORT SCREW	S	12PCS	
3	CAM-LOCK (Ø15MM)		33PCS	14	STICKER	\oslash	24PCS	
4	SMALL CAM-LOCK (Ø12MM)		4PCS	15	SHELF PIN	0P	4PCS	
5	WOOD DOWEL (8 x 30mm)		43PCS	16	FOOT PIN	J	6PCS	
6	SMALL WOOD DOWEL (6 x 30mm)		4PCS	17	CAP (16 x 16mm WHT)		4PCS	
7	LONG SCREW (8 x 38mm)	OIDDIDDD	8PCS	18	GLUE		1PC	
8	DRAWER BOLT (5/32" x 10mm)	٣	4PCS	19	HOOK		3PCS	
9	HANDLE BOLT (M4 x 20mm)		10PCS	20	ALLEN WRENCH (4mm)		1PC	
10 ^C	COARSE THREAD SCREWS (7# x 50mm)	0.7.7.00000	4PCS	21	HEXAGONAL KEY (8mm)		1PC	
11	BOLT (1/4" x 25mm)	Q	16PCS					
Hardware pack is located in 930218B2								
			PAGE					


PAGE 5 OF 20


COASTERFURNITURE.COM

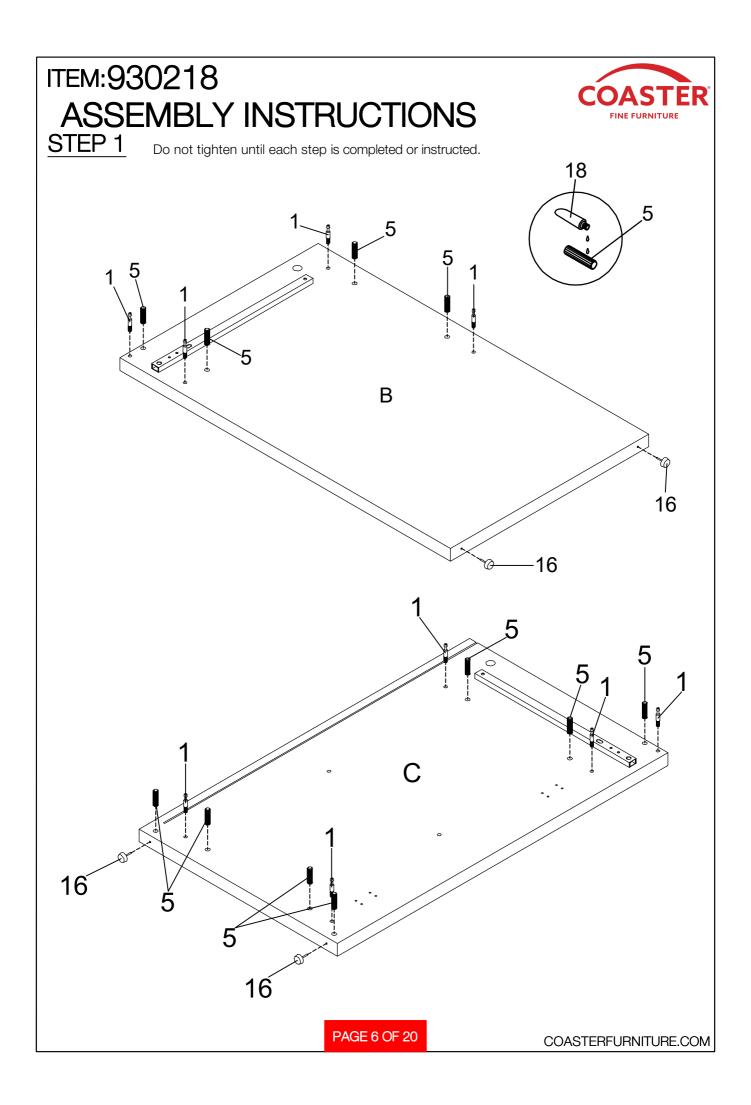


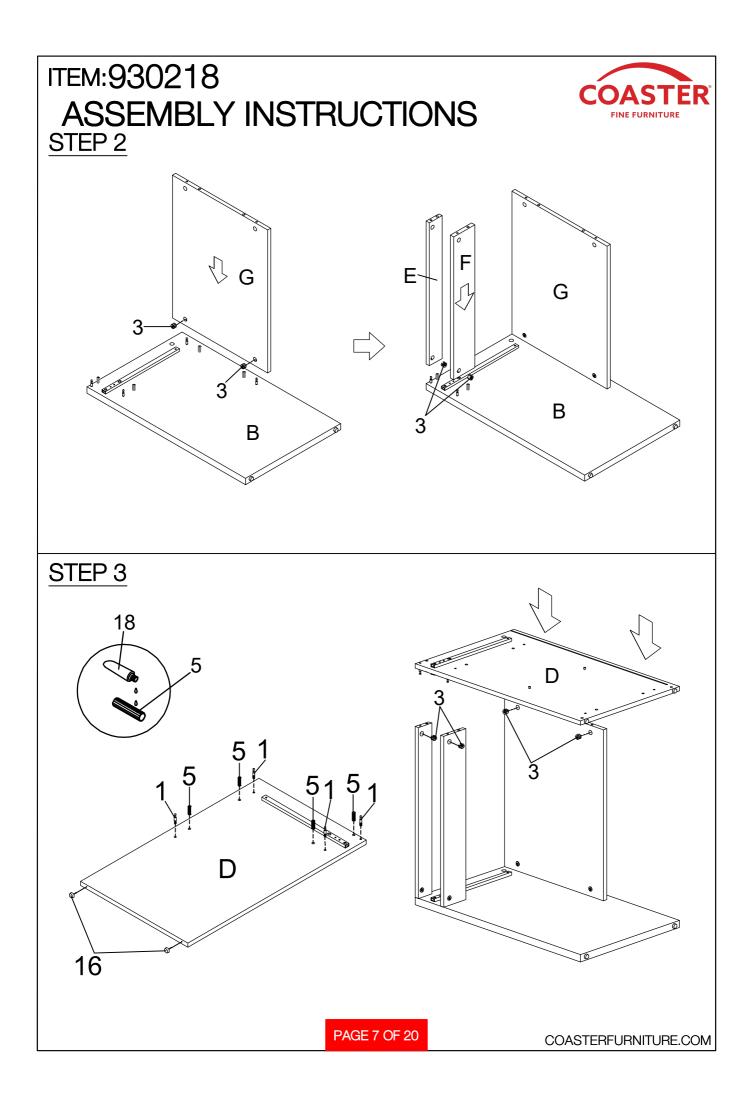


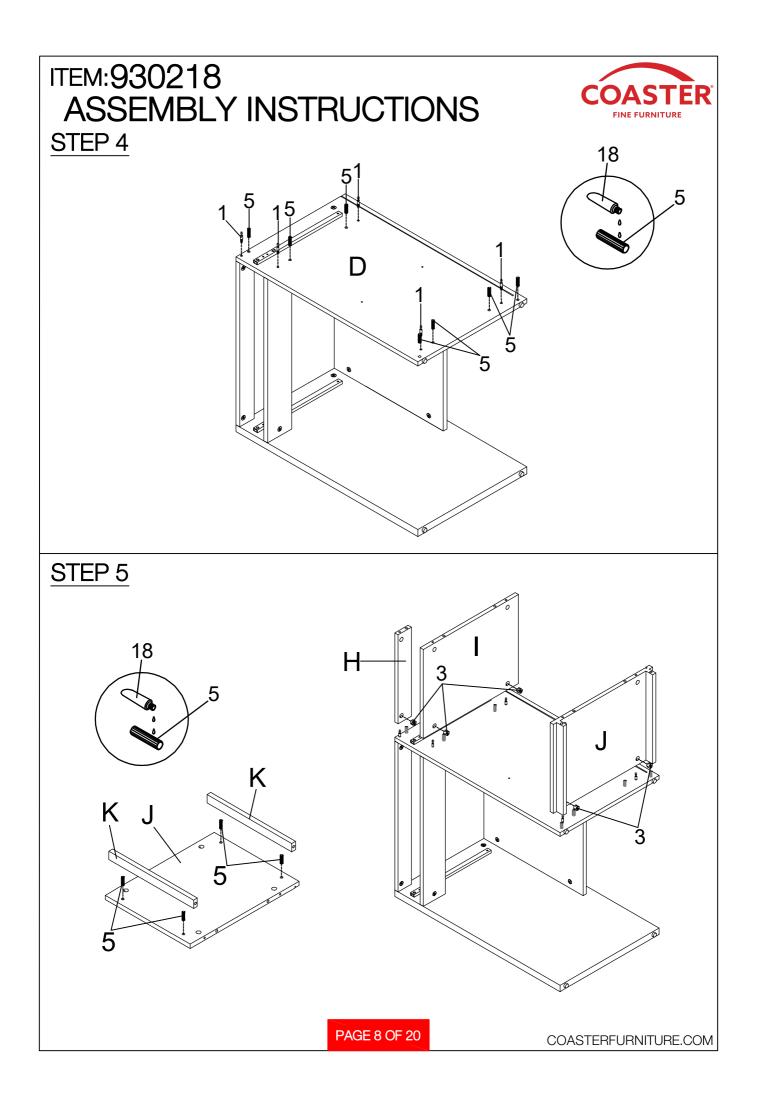


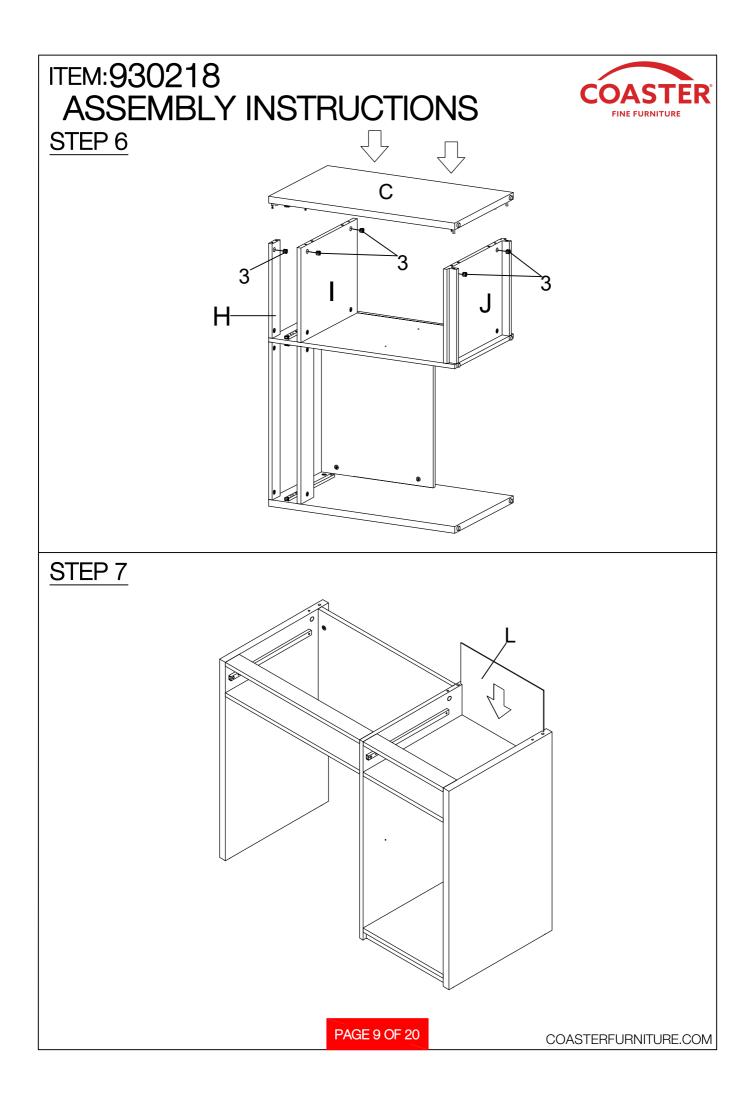


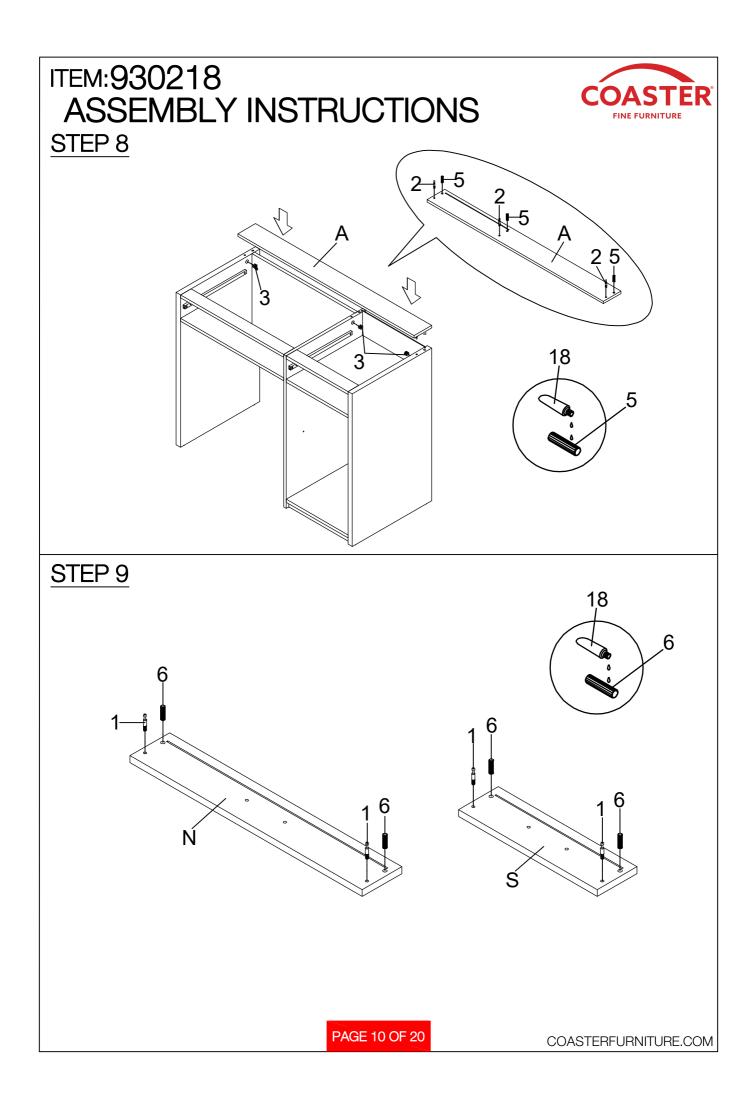


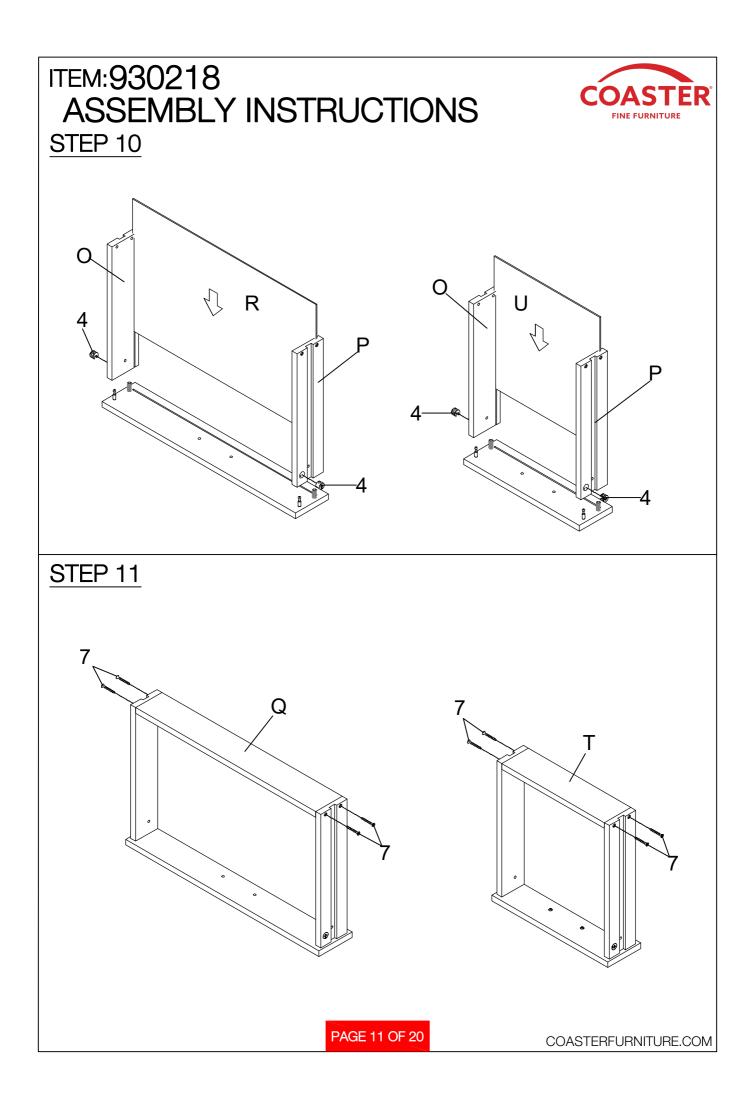


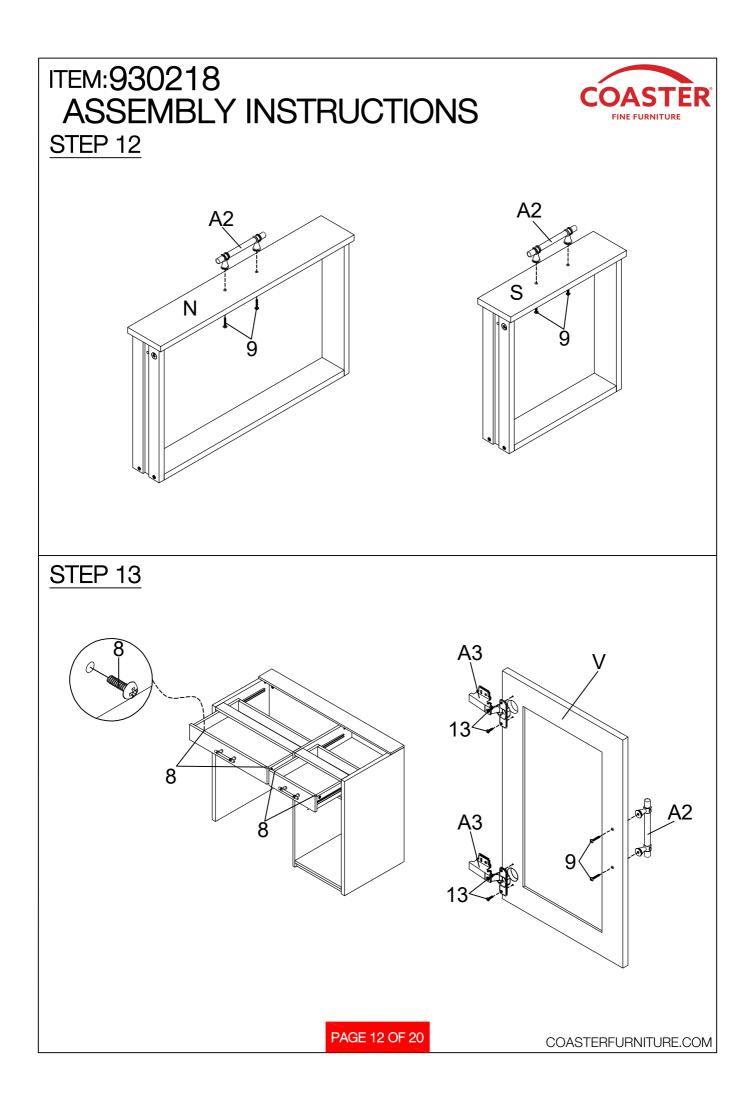


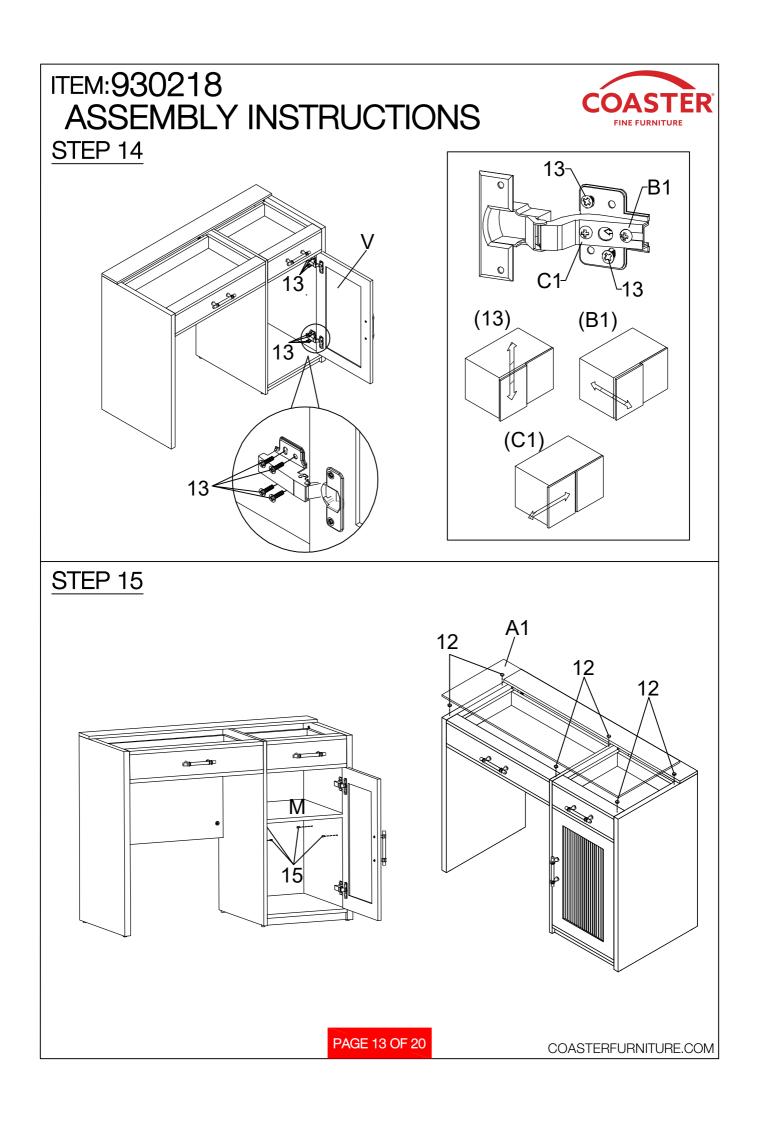


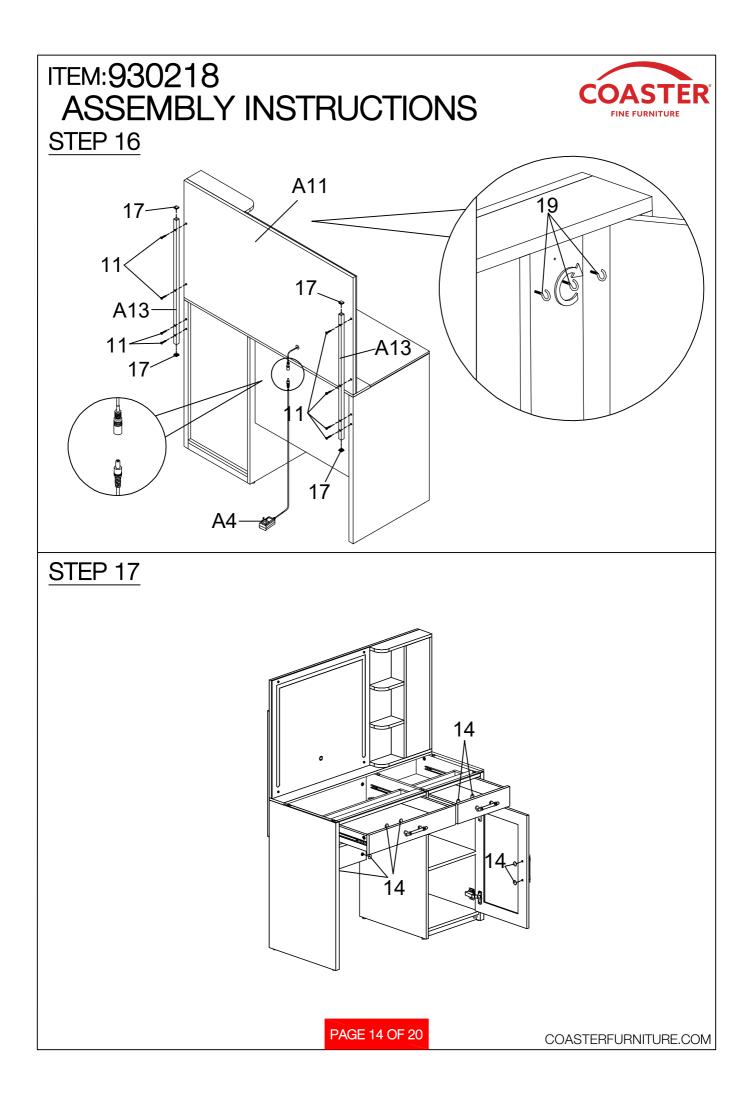


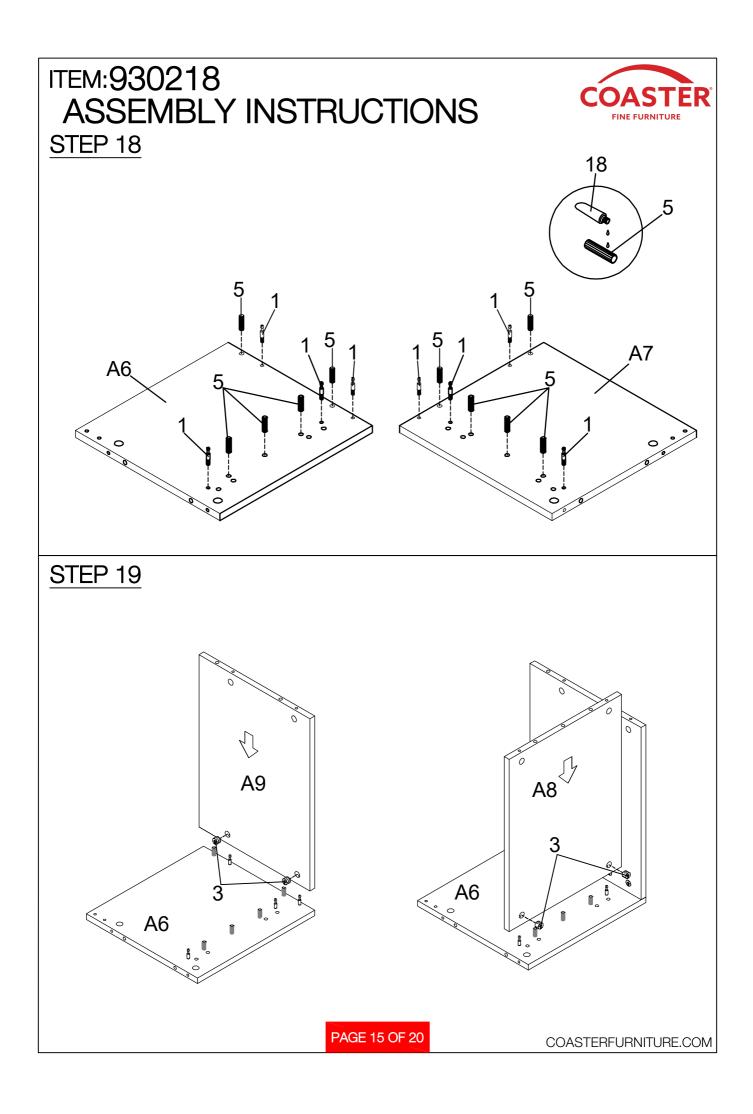

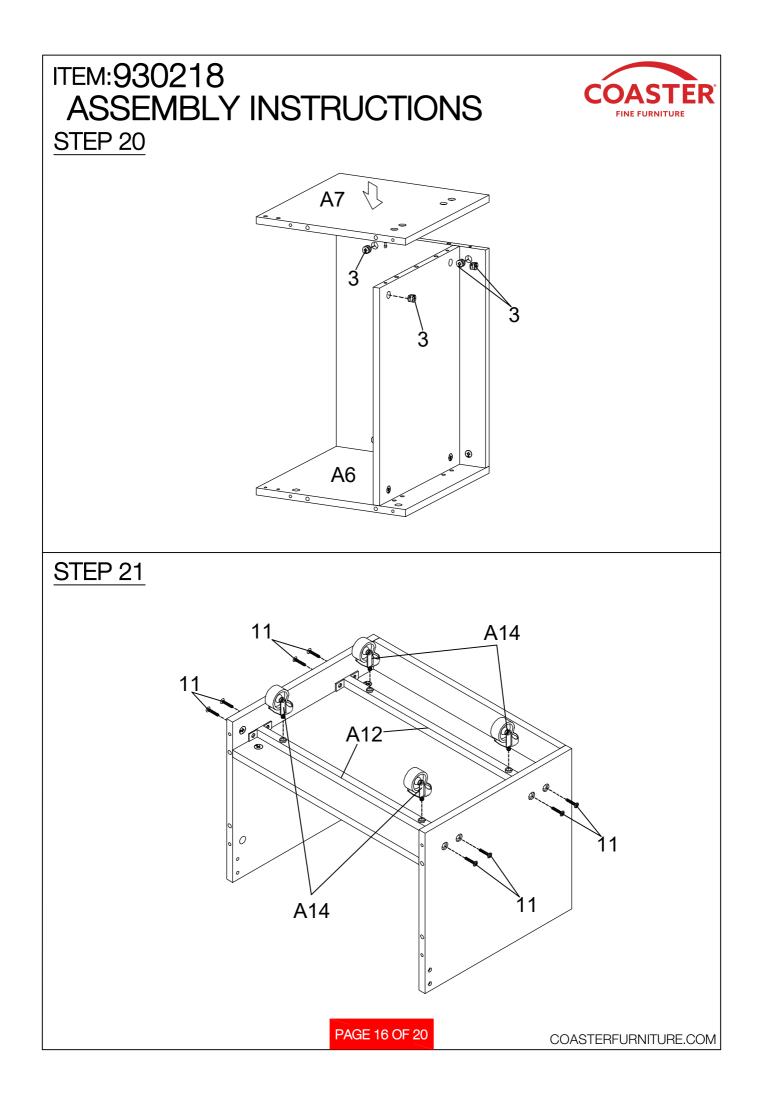

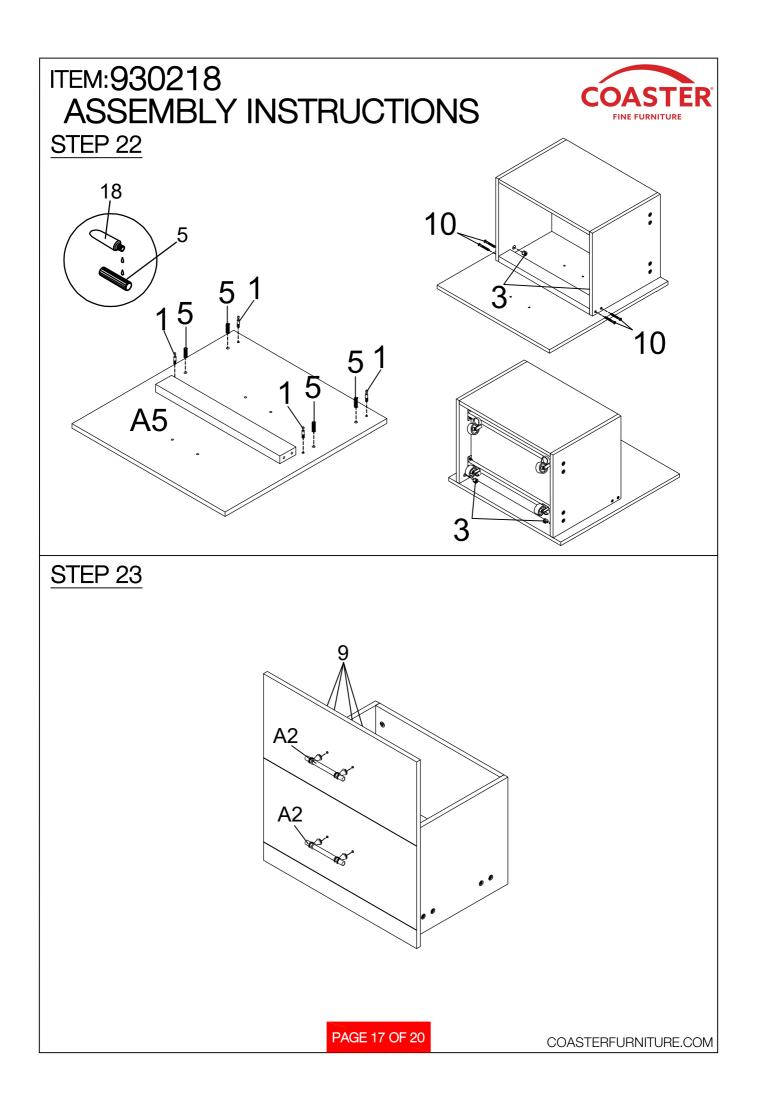

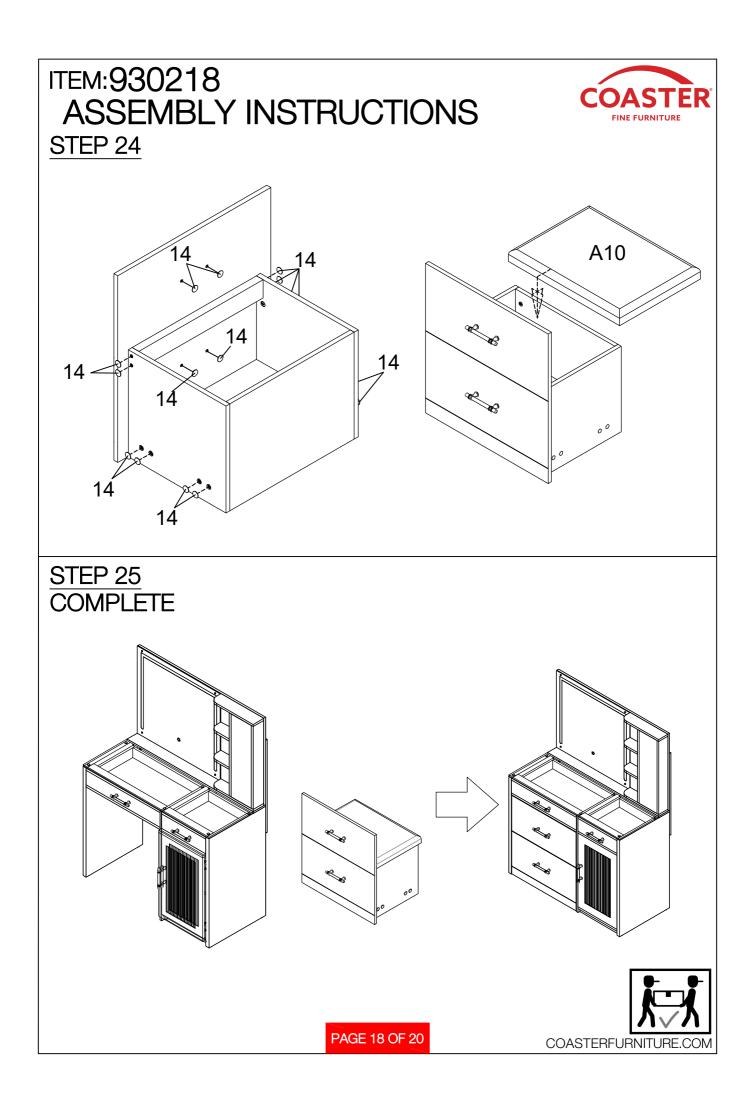

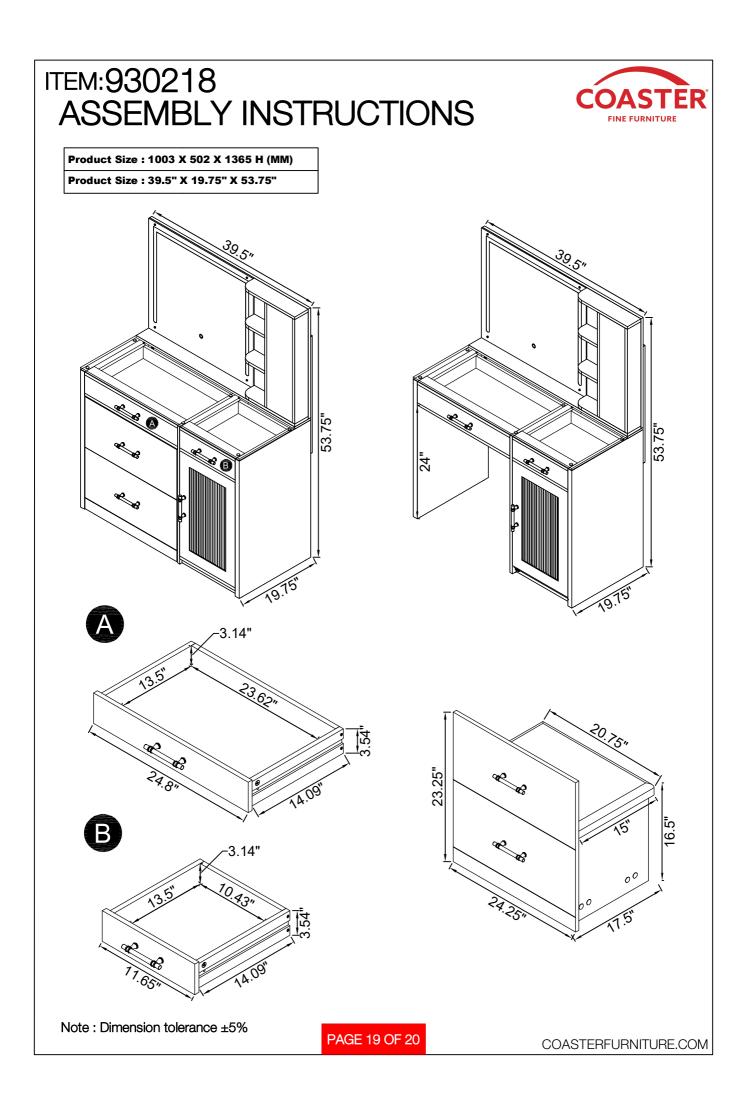

ITEM: 930218 ANTI-TIPPING INSTALLMENT INSTRUCTIONS



FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture. This restraint may protect against tipping furniture. Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


<u>STEP 1</u>

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

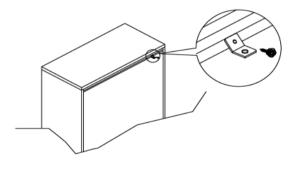

STEP 2

Locate the other bracket on the wall over a plastic wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

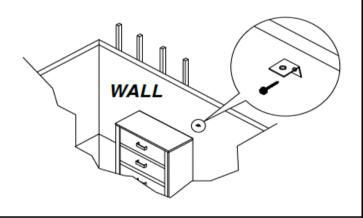

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

