

# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

# 225041KW (B1-B3) California King Bed

REVISION 0 : 11/22/2024

PAGE 1 OF 7

COASTERFURNITURE.COM

## ITEM: 225041KW(B1-B3) ASSEMBLY INSTRUCTIONS ASSEMBLY TIPS:



1. Remove hardware from box and sort by size.


WARNING!

- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

# $\triangle$

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

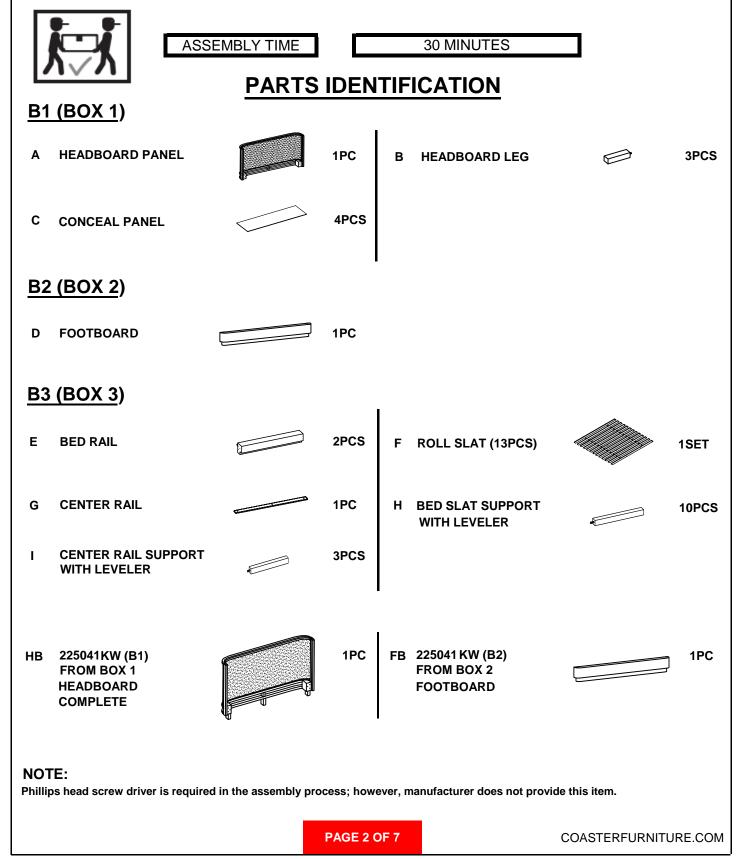

# ITEM: 225041KW(B1-B3)

### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




#### WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

## **HARDWARE IDENTIFICATION**


## Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 225041KE (B3)

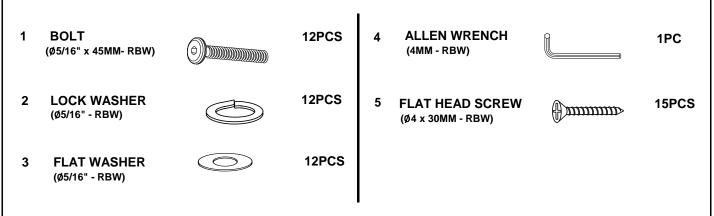



#### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.




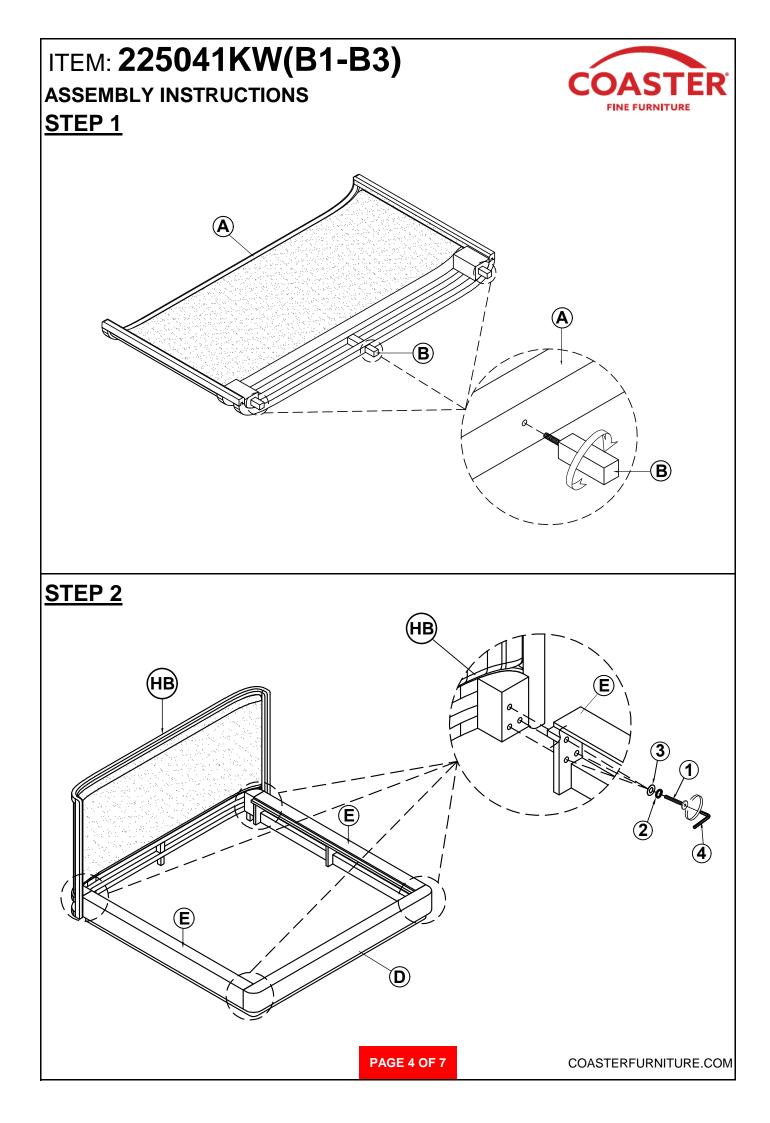

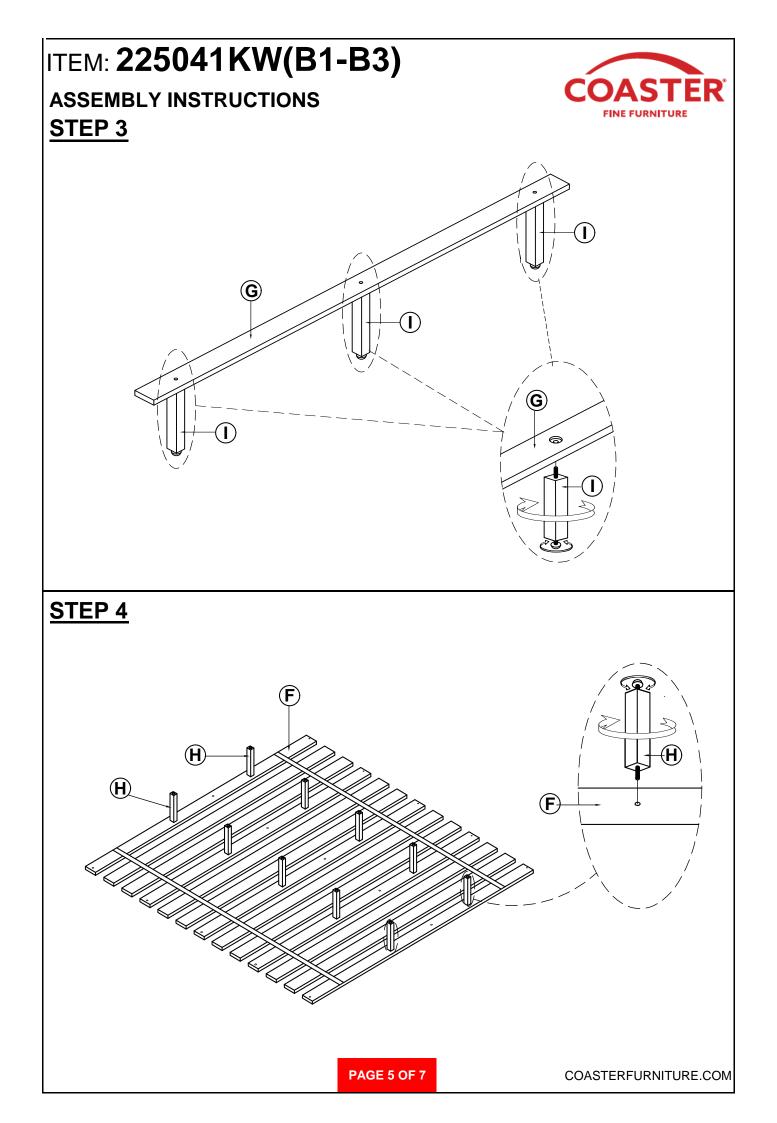

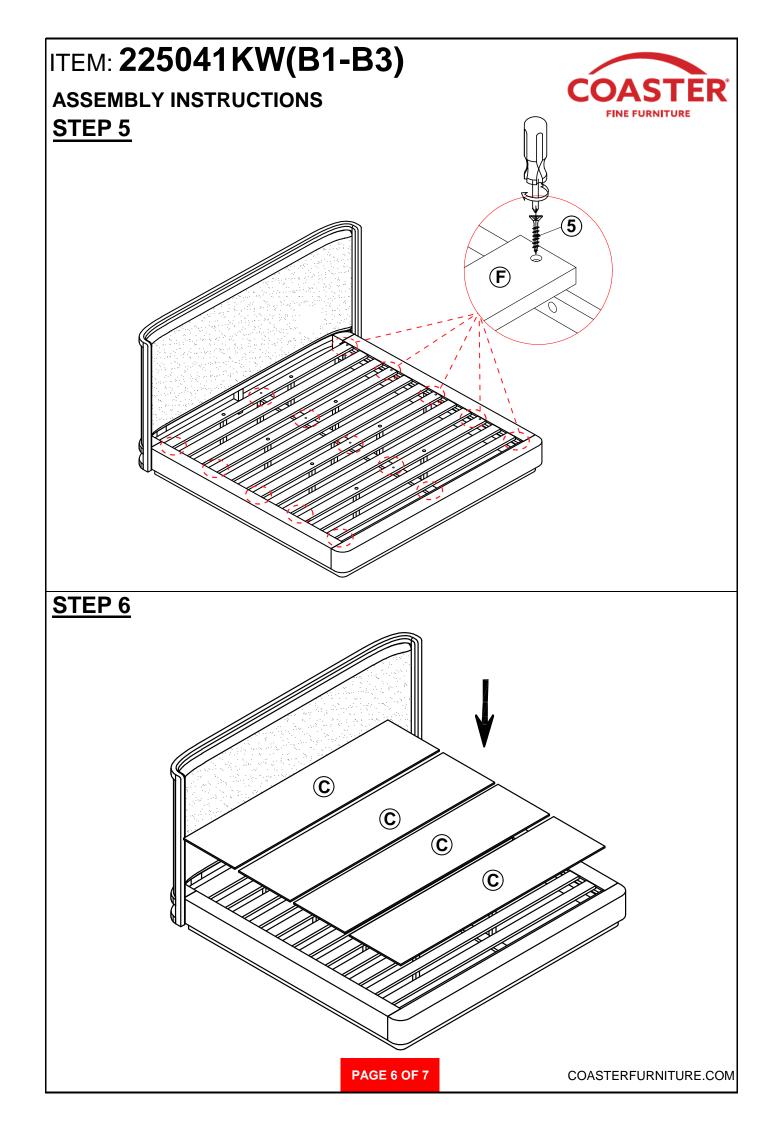

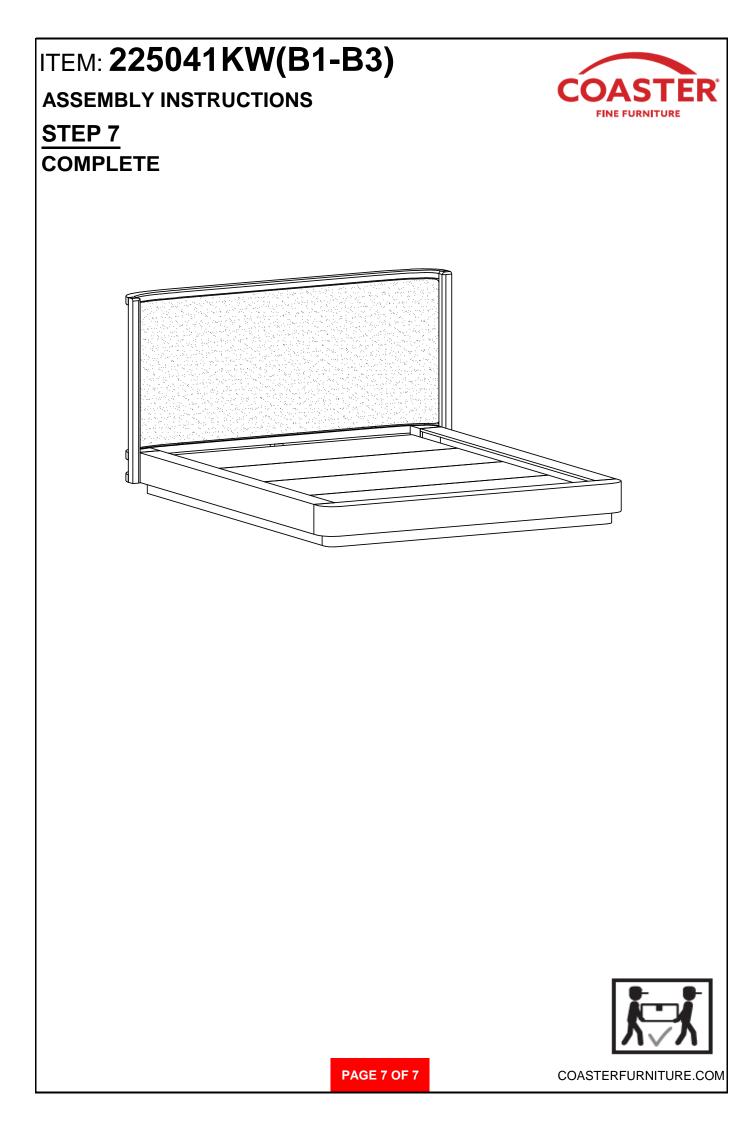

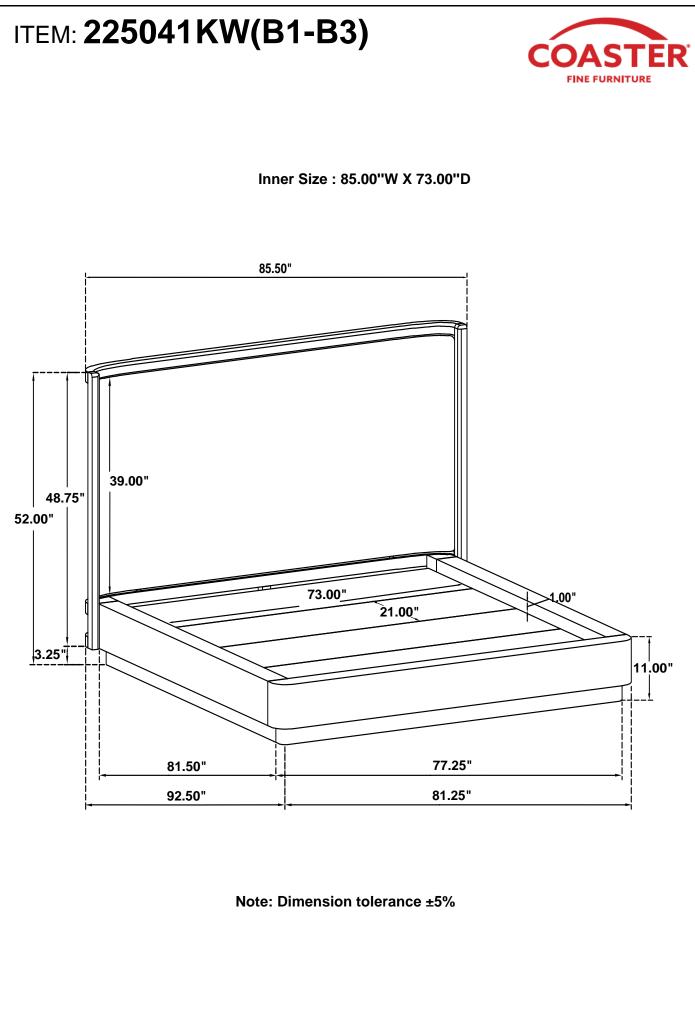

COASTERFURNITURE.COM