




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

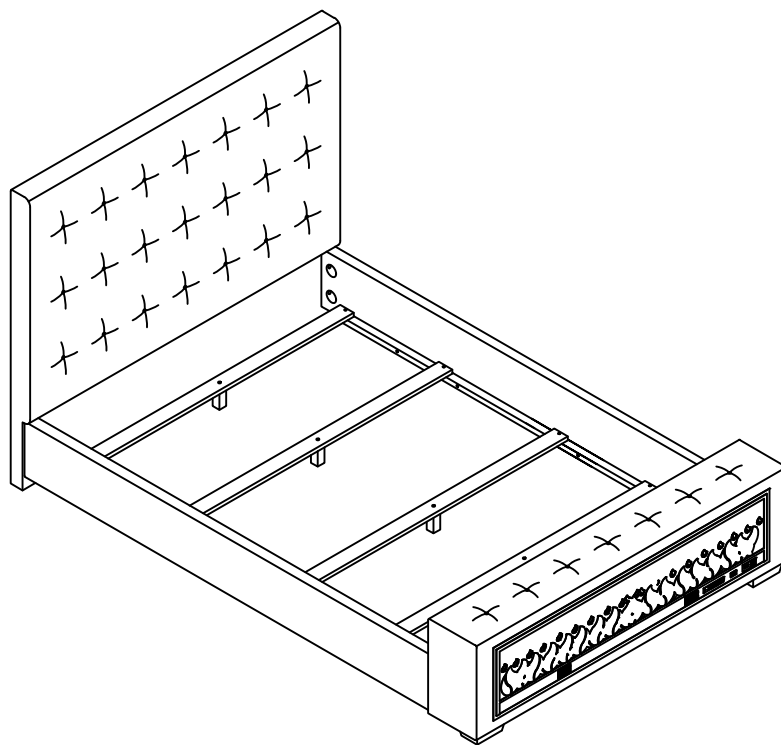

Fine Furniture for every stage of life

305811Q(B1-B3)
Queen Bed

ITEM: 305811Q(B1-B3)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

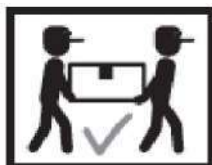


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)


A HEADBOARD

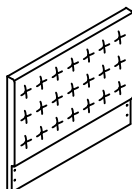

1PC

B2 (BOX 2)

B FOOTBOARD PANEL

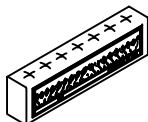

1PC

C FOOTBOARD LEG



2PCS

D REMOTE CONTROL



1PC

B3 (BOX 3)

E BED RAIL



2PCS

F BED SLAT



4PCS


G BED SLAT SUPPORT
WITH LEVELER



4PCS


B 305811Q(B

HB 305811Q(B1)
FROM BOX 1
HEADBOARD

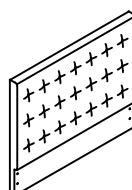

1PC

FB 305811Q(B2)
FROM BOX 2
FOOTBOARD
COMPLETE



1PC

ITEM: 305811Q(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 305811Q(B3)

1	THREADED BOLT (Ø 5/16" x 90mm - BLK)		8PCS	4	WRENCH (14mm - BLK)		1PC
2	CURVED WASHER (Ø 5/16" - BLK)		8PCS	5	SHORT FLAT HEAD SCREW (M4 x 30mm - BLK)		8PCS
3	HEX NUT (Ø 5/16" - BLK)		8PCS	6	LONG FLAT HEAD SCREW (M4 x 50mm - BLK)		8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **305811Q(B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 1

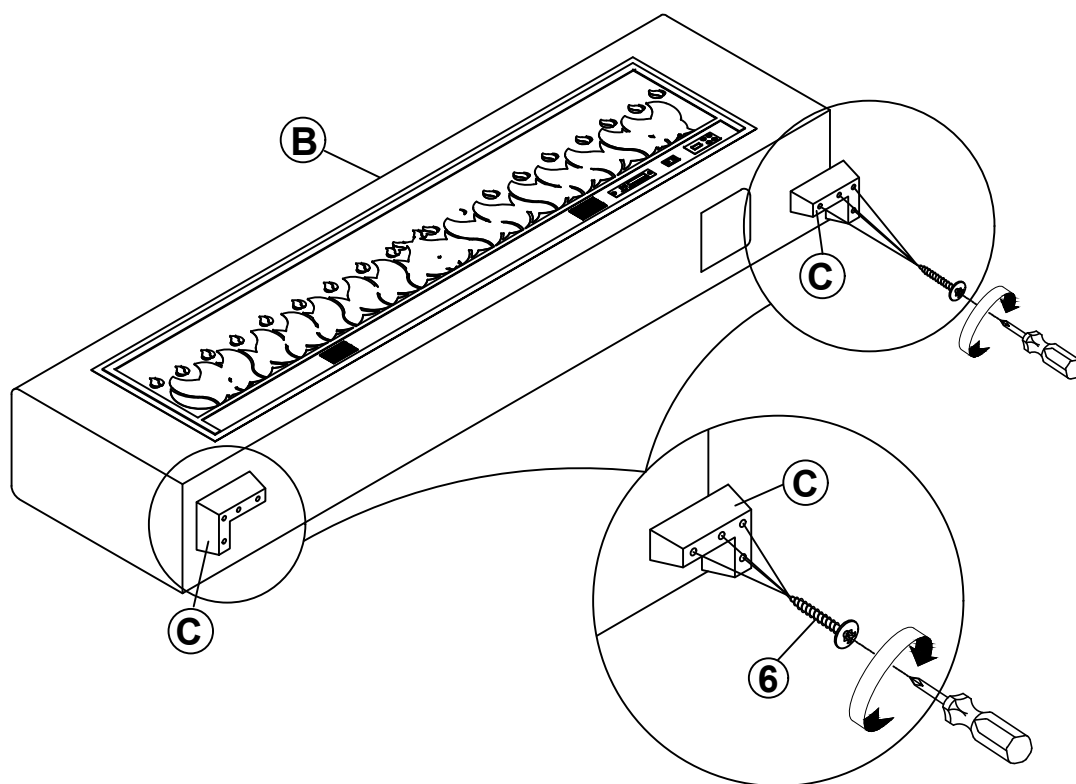


STEP 2

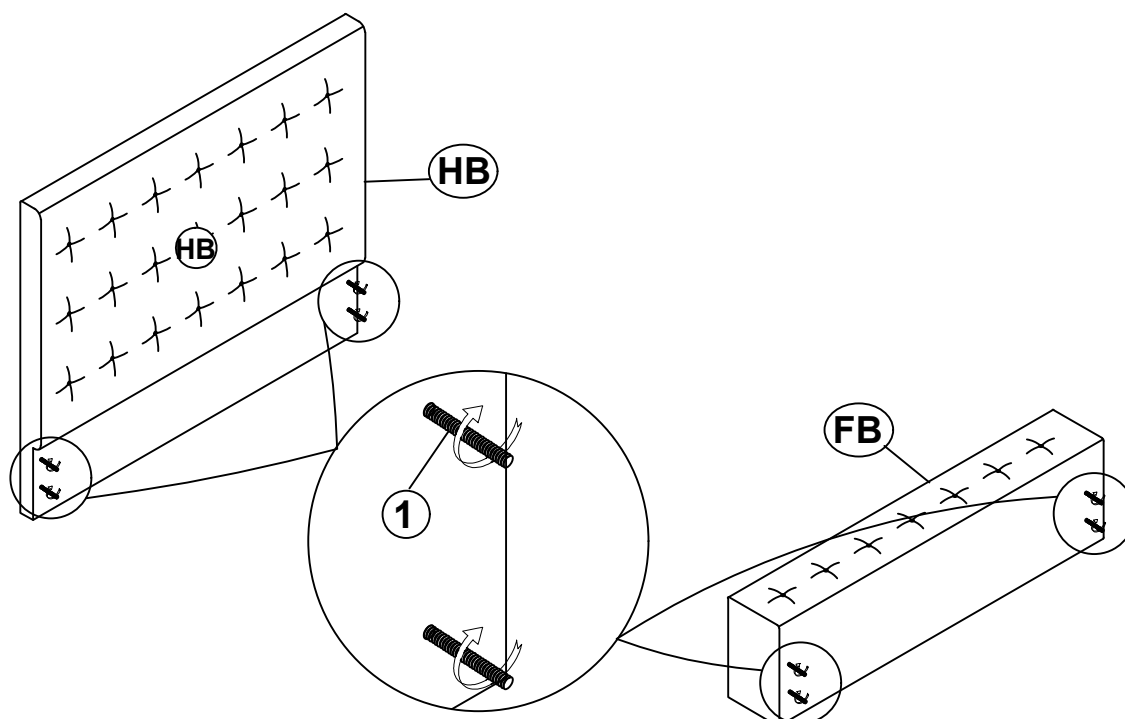


ITEM: **305811Q(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 3

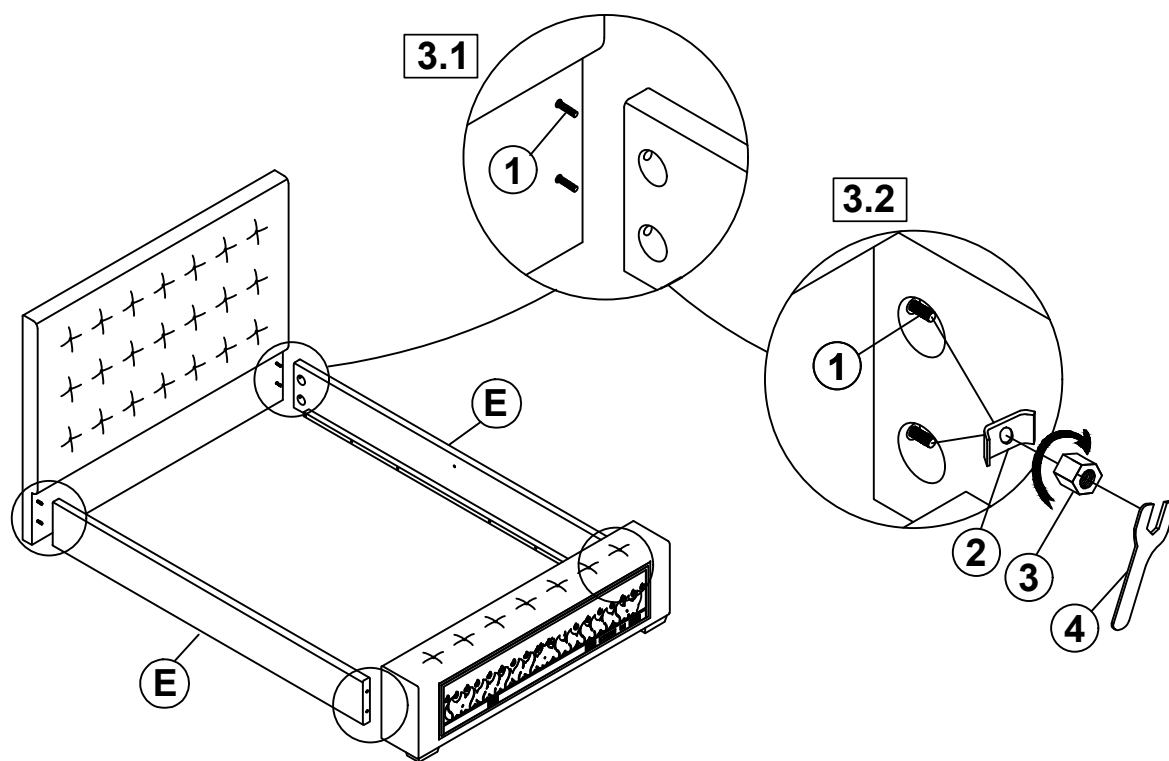



STEP 4

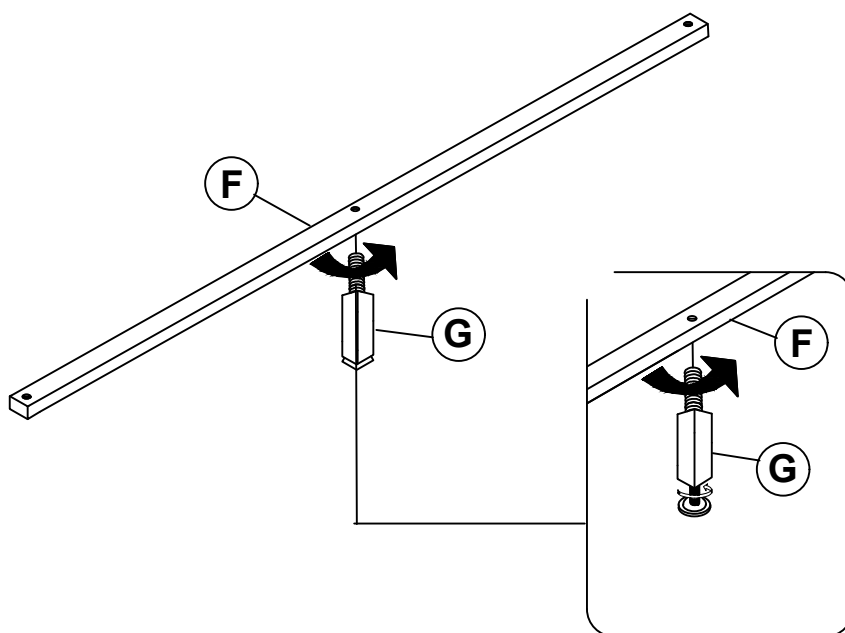

ITEM: **305811Q(B1-B3)**





ASSEMBLY INSTRUCTIONS

STEP 5

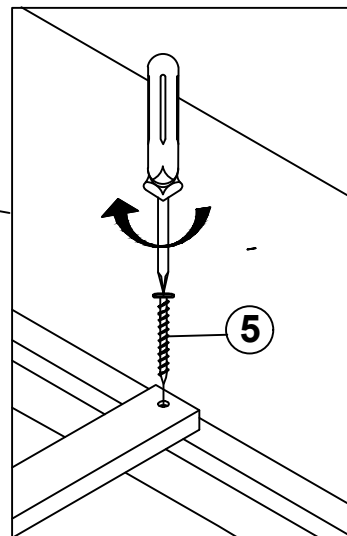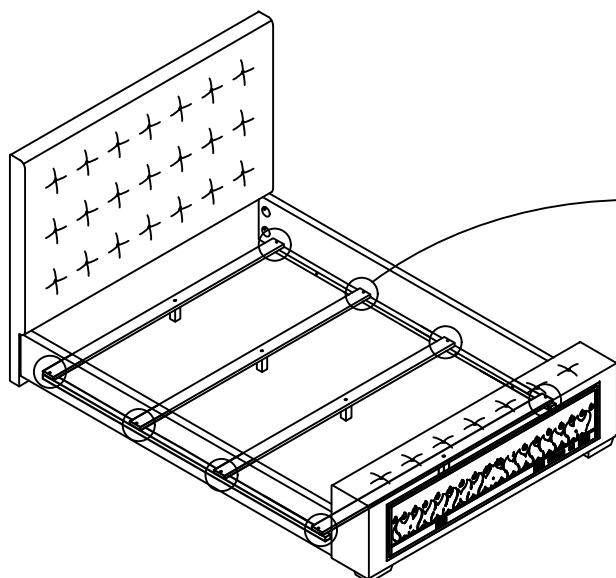

STEP 6

Bluetooth RS01

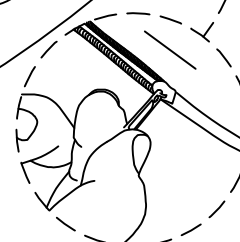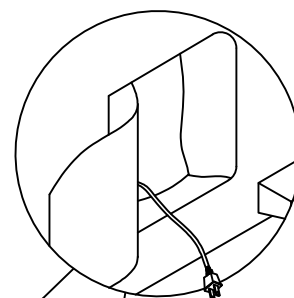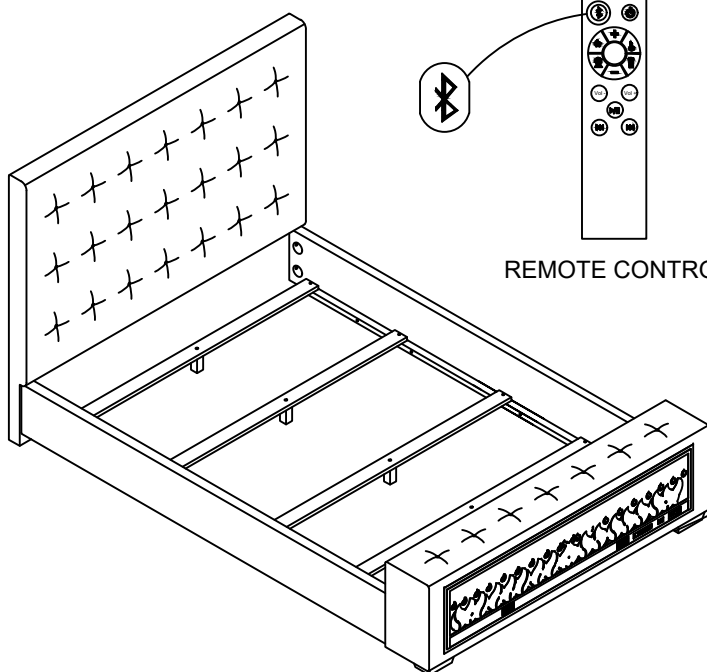
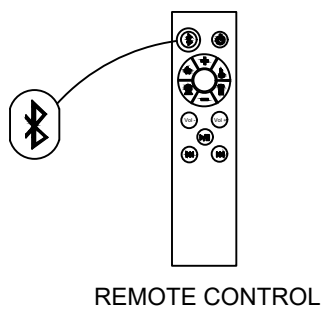


OPENING THE ZIPPER
HERE FOR ASSEMBLY.

ITEM: **305811Q(B1-B3)**

ASSEMBLY INSTRUCTIONS


STEP 7 COMPLETE

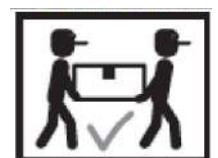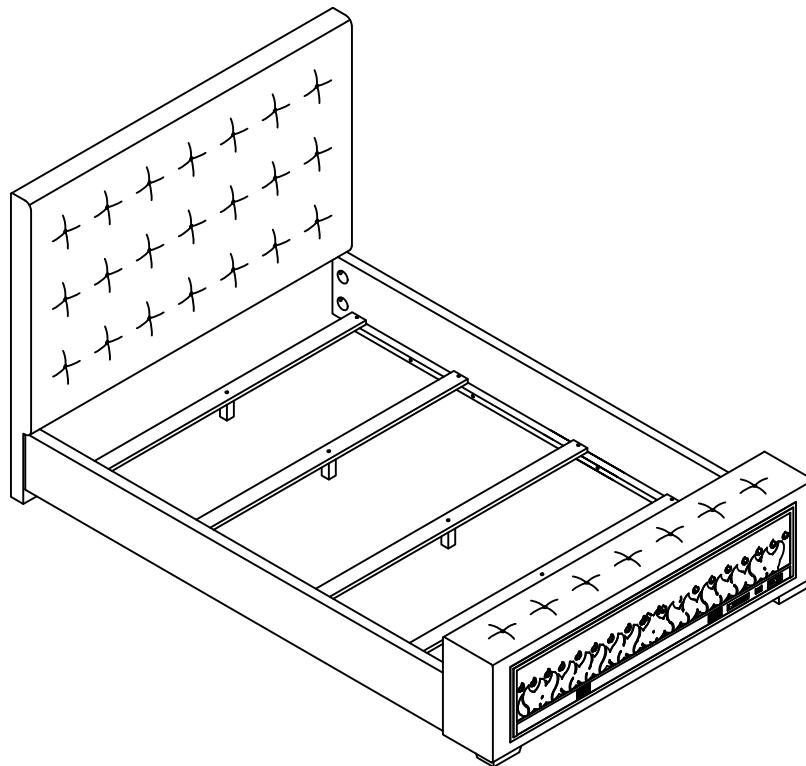

ITEM: **305811Q(B1-B3)**



Inner Size: 61.00"W X 81.00"D

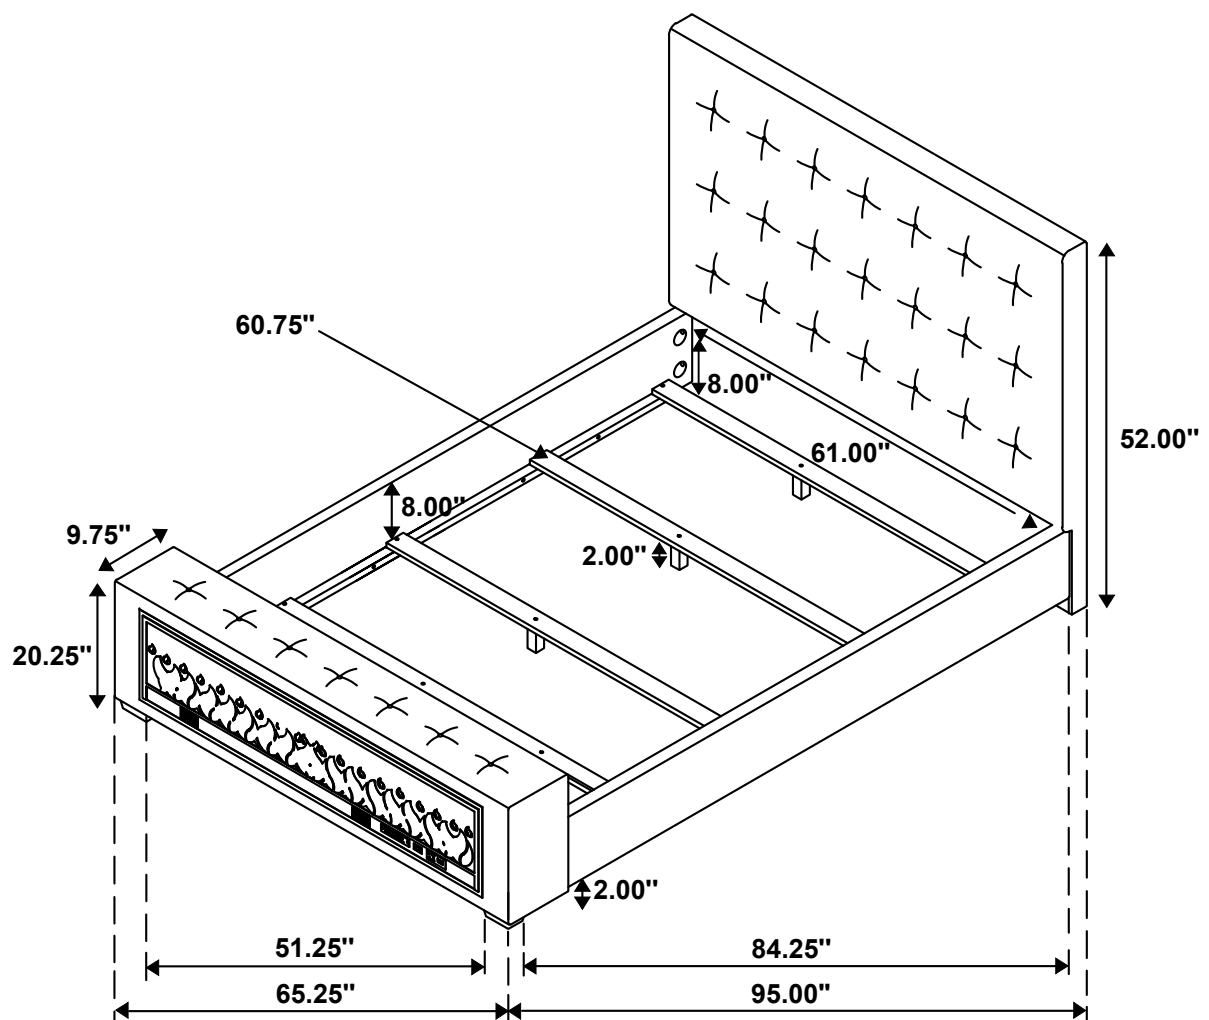

Note : Dimension tolerance $\pm 5\%$