




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

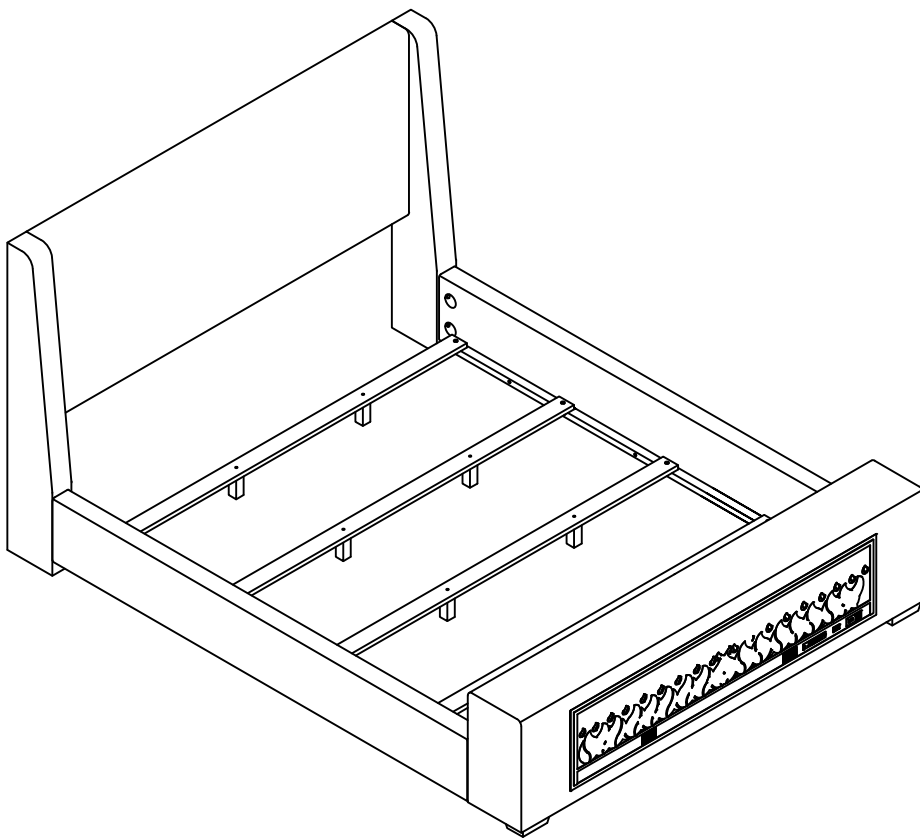

Fine Furniture for every stage of life

305821KW(B1-B3) **California King Bed**

REVISION 0: 12/31/2024

ITEM: 305821KW(B1-B3)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

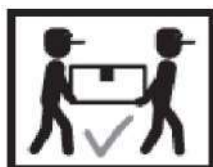


ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD

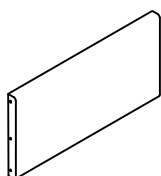


1PC

B LEFT HEADBOARD LEG



1PC


C RIGHT HEADBOARD LEG



1PC

B2 (BOX 2)

D FOOTBOARD PANEL

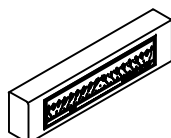


1PC

E FOOTBOARD LEG



2PCS

F REMOTE CONTROL



1PC

B3 (BOX 3)

G BED RAIL



2PCS

H BED SLAT




4PCS

I BED SLAT SUPPORT WITH LEVELER




8PCS

HB 305821KW(B1)
FROM BOX 1
HEADBOARD
COMPLETE

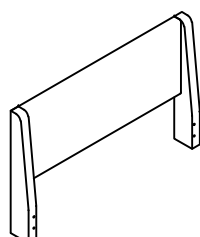

1PC

FB 305821KW(B2)
FROM BOX 2
FOOTBOARD
COMPLETE

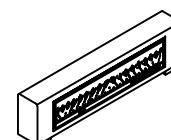

1PC

ITEM: 305821KW(B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.








WARNING!







1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1(BOX 1) - HARDWARE PACK IS LOCATED IN 305821KW(B1)

1	THREADED BOLT (Ø 5/16" x 90mm - BLK)		6PCS	4	LOCK WASHER (Ø 5/16" - BLK)		6PCS
2	CURVED WASHER (Ø 5/16" - BLK)		6PCS	5	WRENCH (14mm - BLK)		1PC
3	HEX NUT (Ø 5/16" - BLK)		8PCS				

Z-B3(BOX 3) - HARDWARE PACK IS LOCATED IN 305821KW(B3)

6	THREADED BOLT (Ø 5/16" x 90mm - BLK)		8PCS	9	WRENCH (14mm - BLK)		1PC
7	CURVED WASHER (Ø 5/16" - BLK)		8PCS	10	SHORT FLAT HEAD SCREW (M4 x 30mm - BLK)		8PCS
8	HEX NUT (Ø 5/16" - BLK)		8PCS	11	LONG FLAT HEAD SCREW (M4 x 50mm - BLK)		8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **305821KW(B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 1

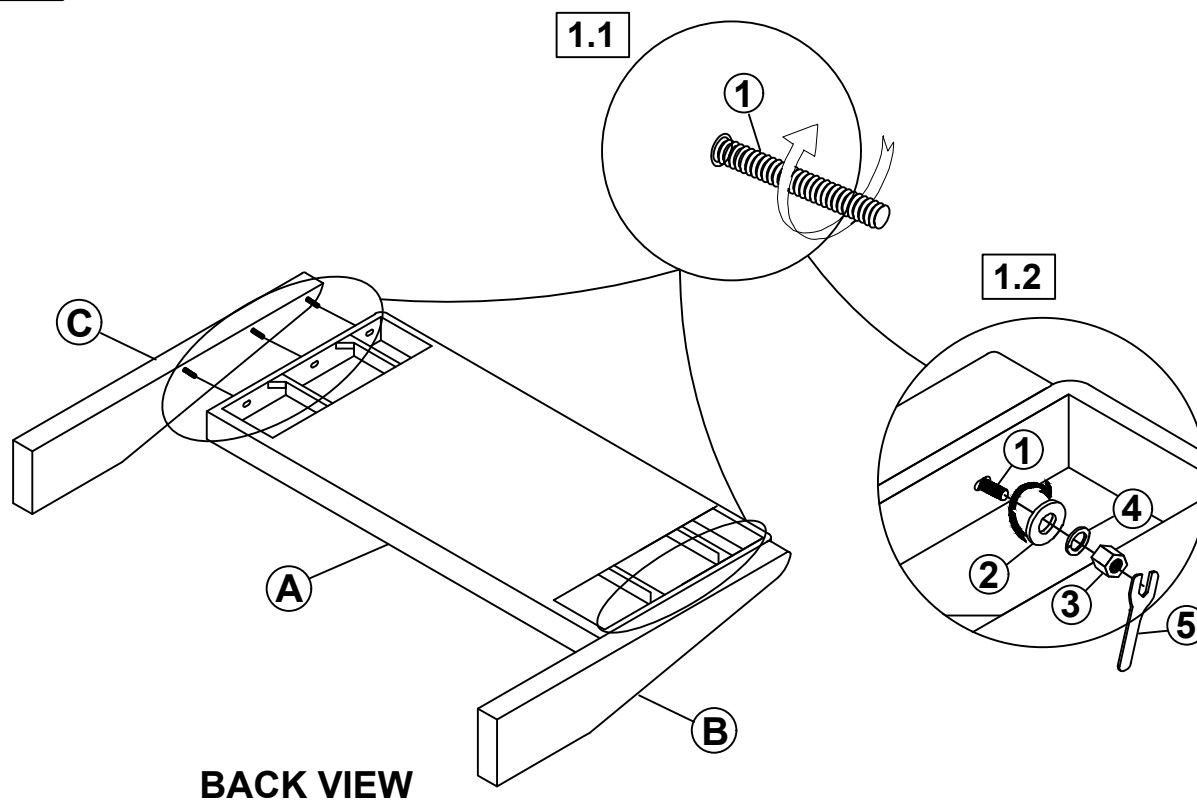

STEP 2

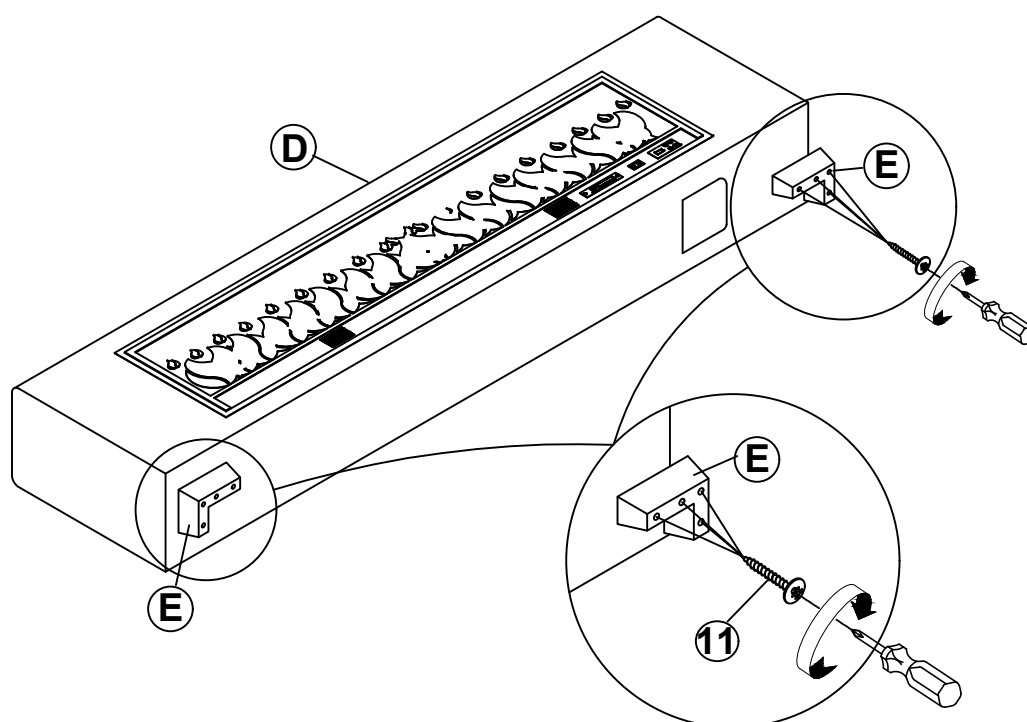


ITEM: **305821KW(B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 3

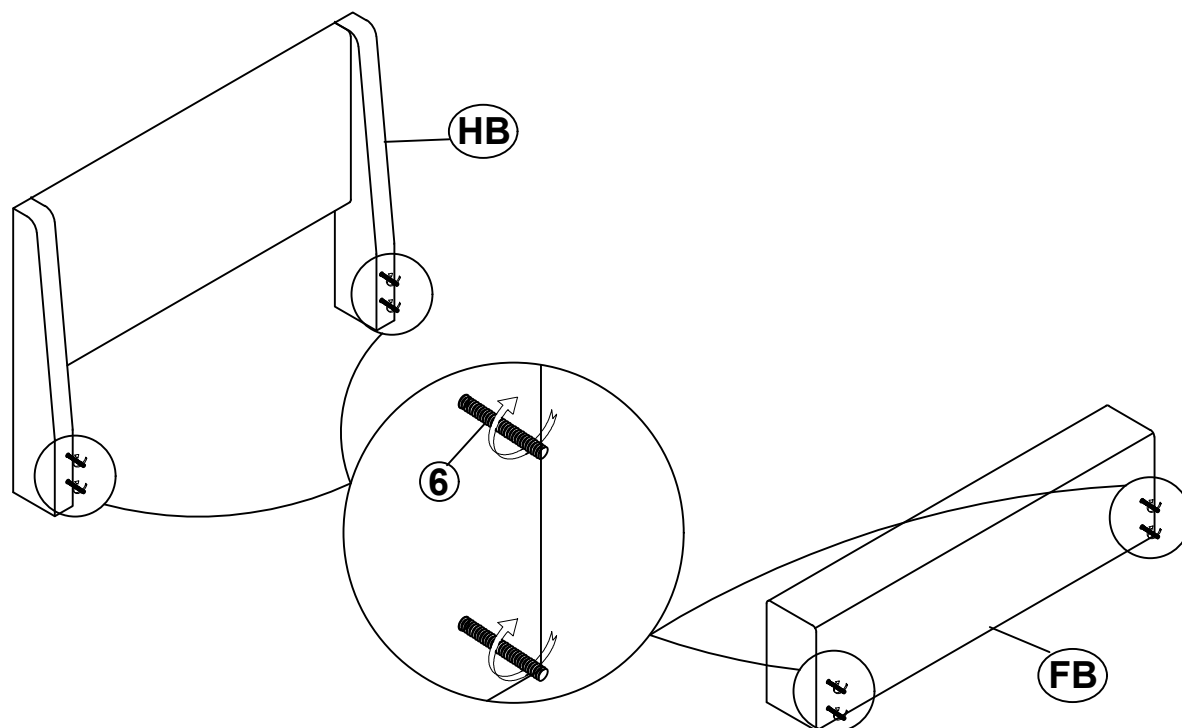


STEP 4

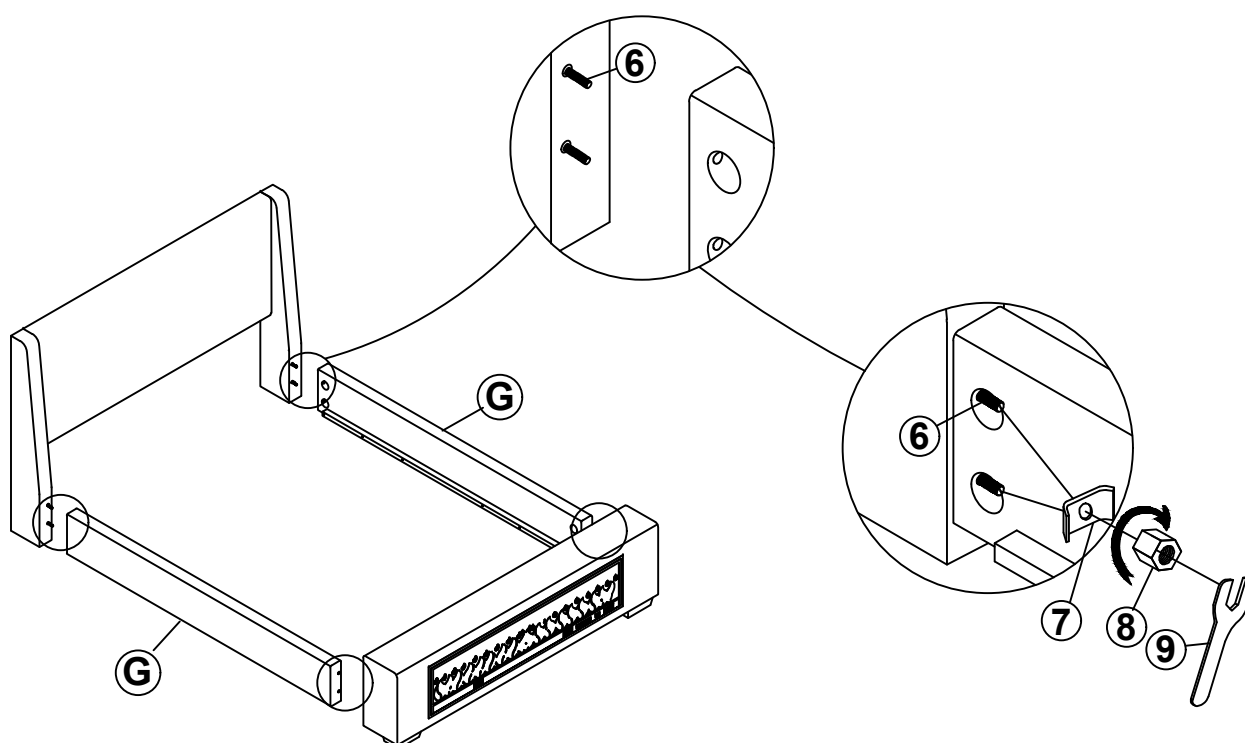


ITEM: **305821KW(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 5

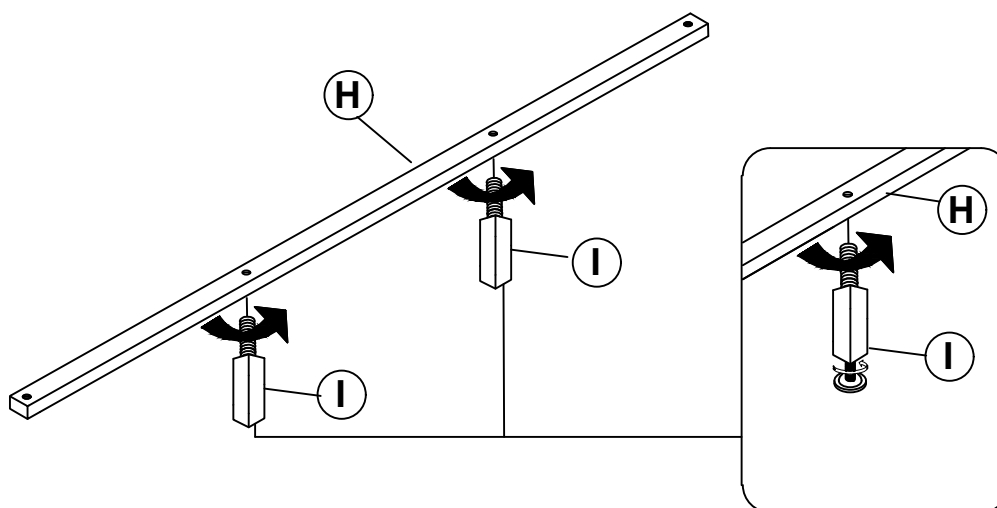


STEP 6

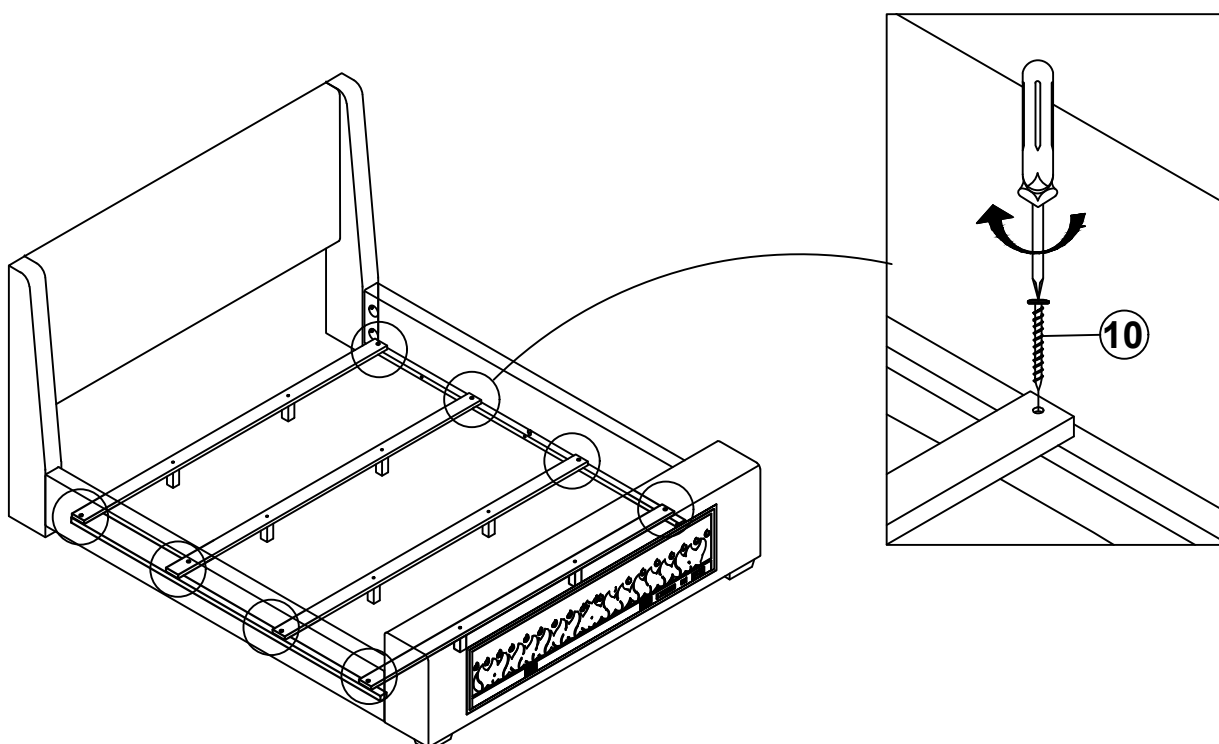



ITEM: **305821KW(B1-B3)**

ASSEMBLY INSTRUCTIONS

STEP 7

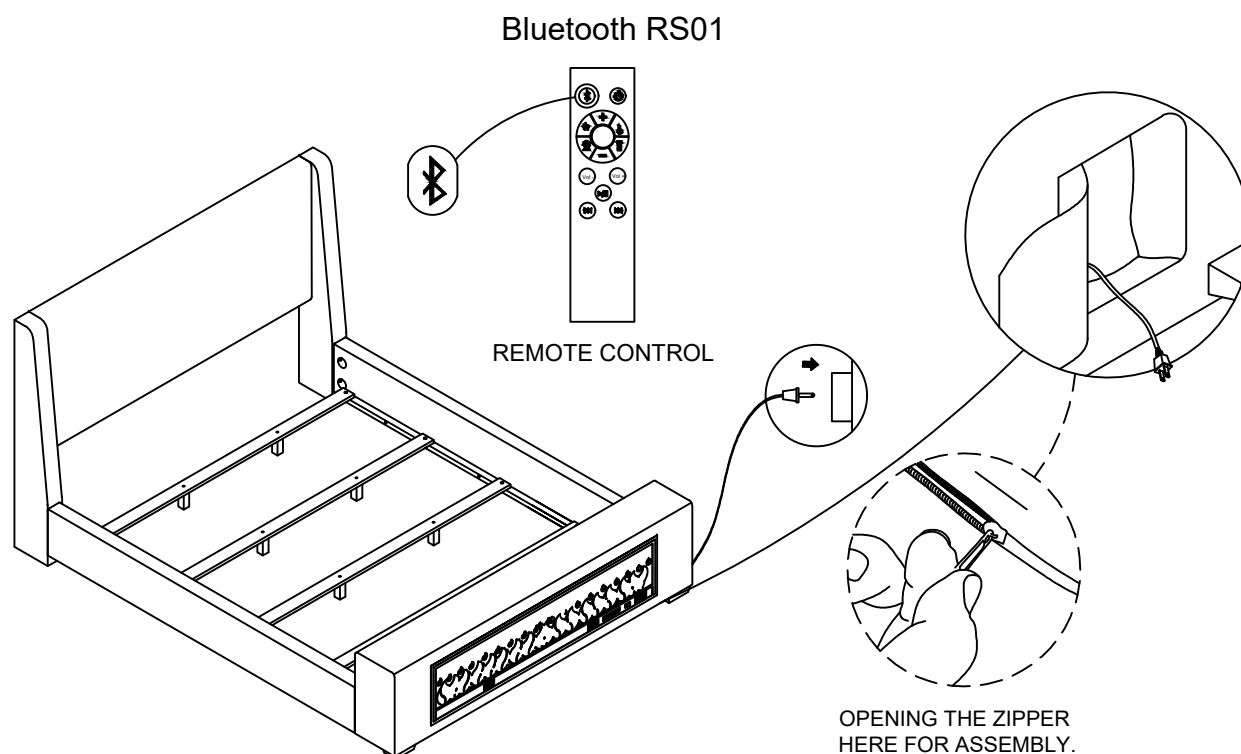


STEP 8 COMPLETE

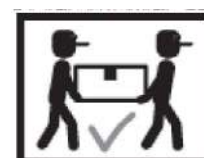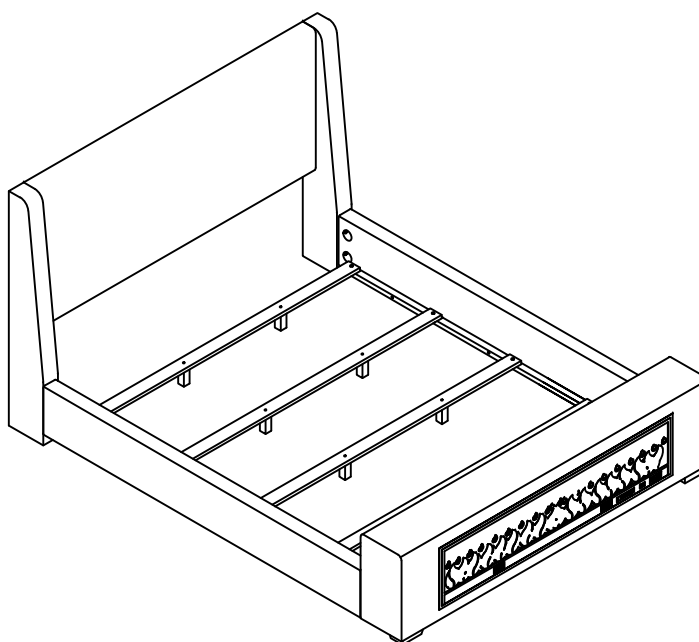

ITEM: **305821KW(B1-B3)**



Inner Size: 73.00"W X 85.00"D

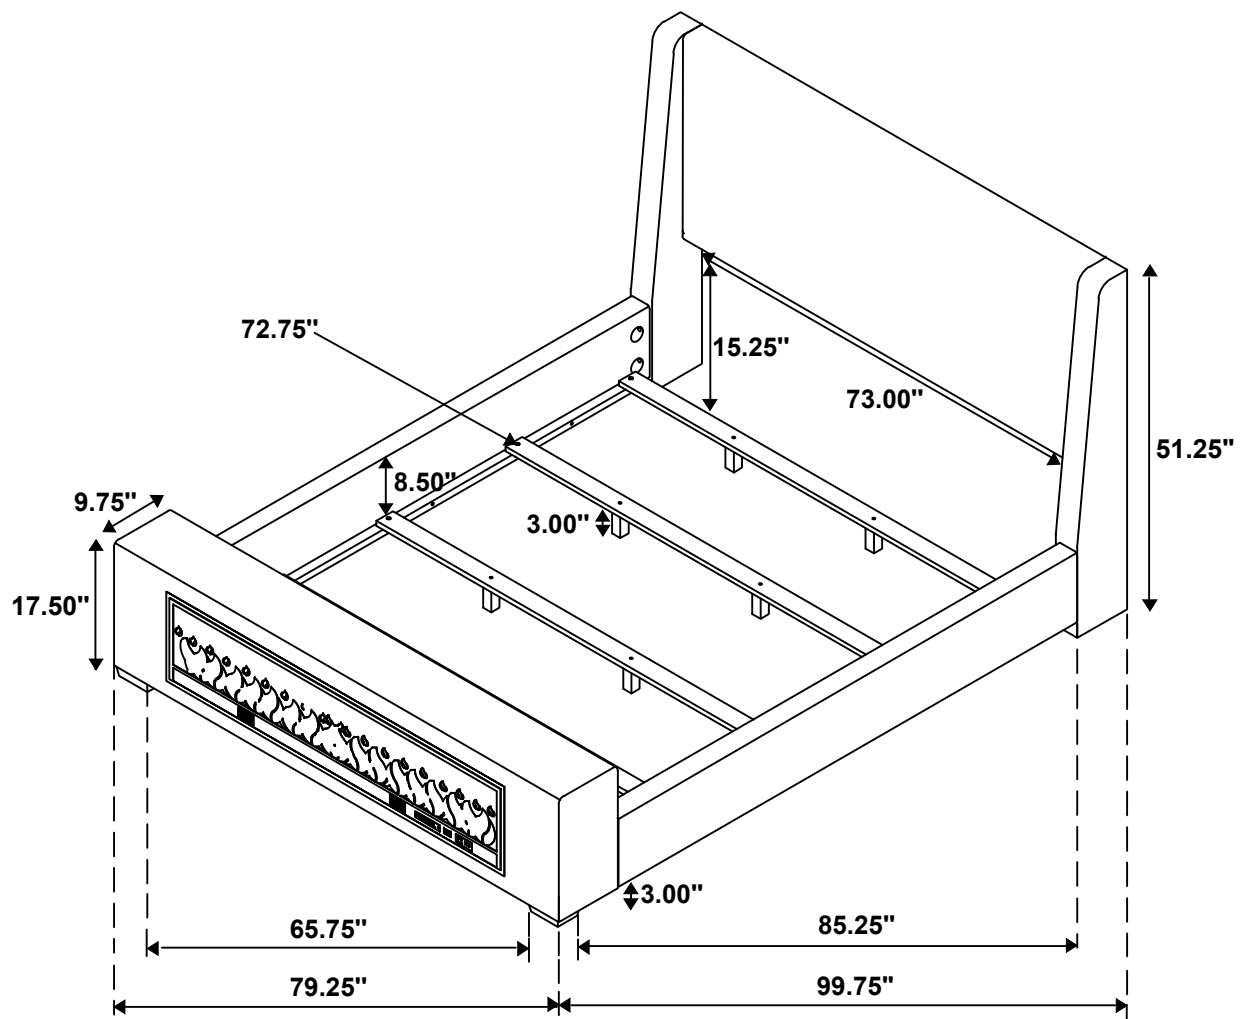

Note : Dimension tolerance $\pm 5\%$