



## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

## 224951Q (B1-B3) Queen Bed

REVISION 0 : 06/20/2024  
REVISION 1 : 02/25/2025

PAGE 1 OF 6

COASTERFURNITURE.COM

# ITEM: 224951Q (B1-B3)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 ( BOX 1)

A HEADBOARD PANEL



1PC

B LEFT HEADBOARD LEG



1PC

C RIGHT HEADBOARD LEG



1PC


D ADAPTER



1PC

### B2 ( BOX 2)

E FOOTBOARD PANEL



1PC

F FOOTBOARD FOOT



2PCS

G BED SLAT



4PCS

H BED SLAT SUPPORT



4PCS


### B3 ( BOX 3)

I BED RAIL




2PCS

HB 224951Q(B1)  
FROM BOX 1  
HEADBOARD  
COMPLETE



1PC

FB 224951Q(B2)  
FROM BOX 2  
FOOTBOARD  
COMPLETE

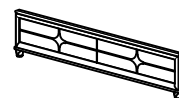

1PC

# ITEM: 224951Q (B1-B3)

## ASSEMBLY INSTRUCTIONS



### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







### WARNING!






1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224951Q (B1)

1	<b>BOLT</b> (M6 x 40mm - RBW)		6PCS
2	<b>LOCK WASHER</b> (M6 x 12mm - RBW)		6PCS
3	<b>FLAT WASHER</b> (M6 x 13mm - RBW)		6PCS
4	<b>ALLEN WRENCH</b> (M4 x 60mm - BLK)		1PC

### Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224951Q (B2)

5	<b>BOLT</b> (M6 x 35mm - RBW)		4PCS
6	<b>LOCK WASHER</b> (M6 x 12mm - RBW)		4PCS
7	<b>FLAT HEAD SCREW</b> (M3.5 x 32mm - RBW)		8PCS
8	<b>ADJUSTABLE LEVELER</b> (M6 x 39mm)		4PCS
9	<b>ALLEN WRENCH</b> (M4 x 60mm - BLK)		1PC


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **224951Q (B1-B3)**

## ASSEMBLY INSTRUCTIONS

## STEP 1

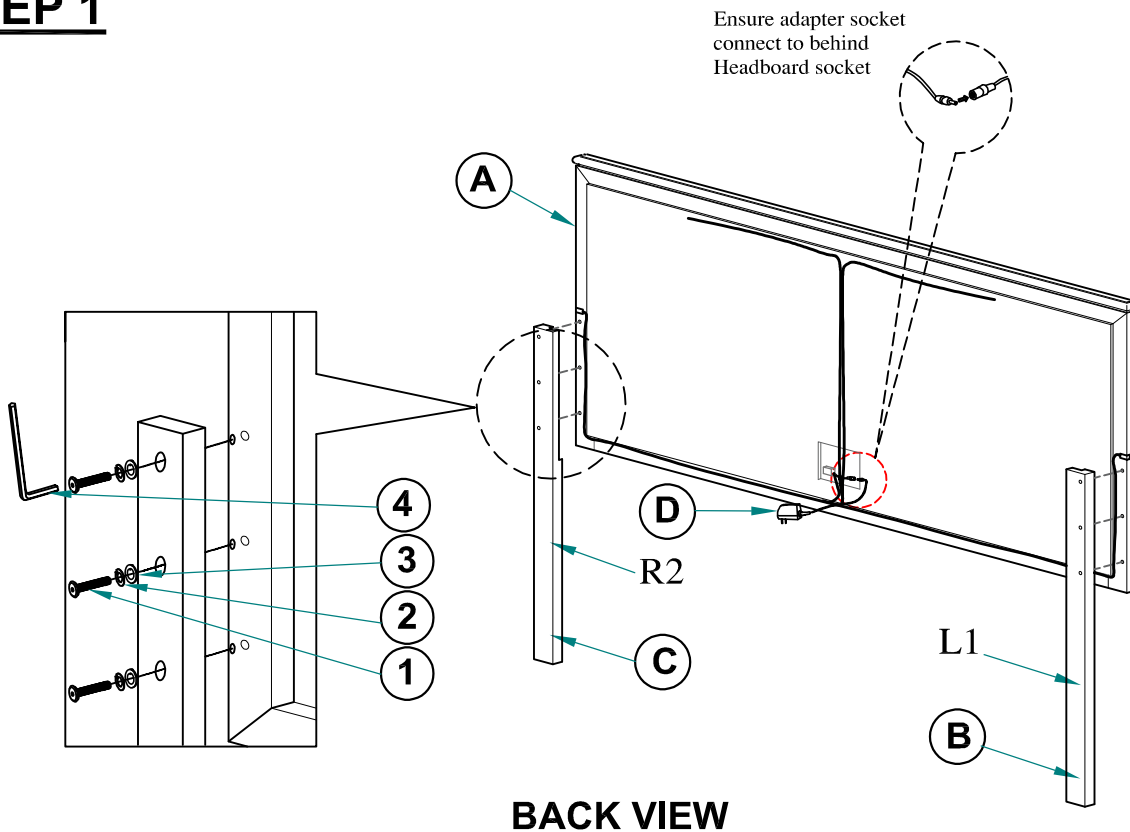

## STEP 2

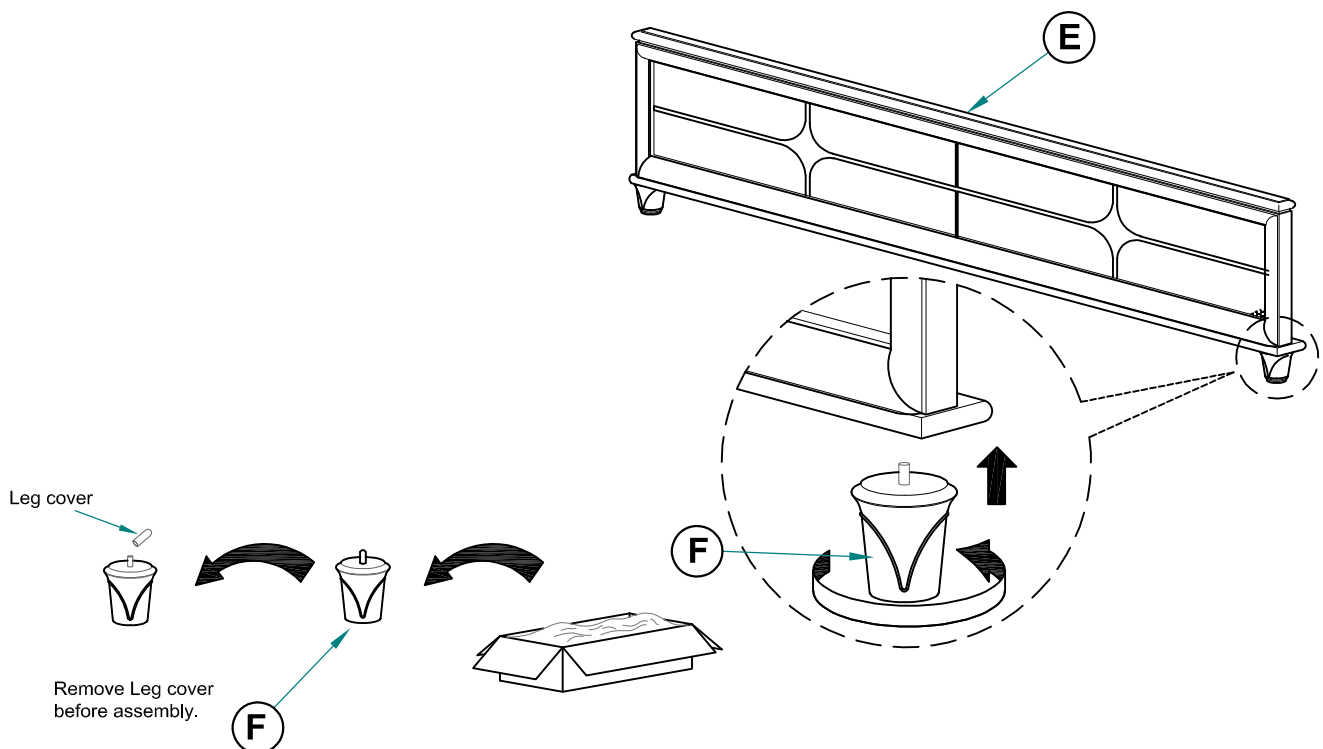


ITEM: **224951Q (B1-B3)**


## ASSEMBLY INSTRUCTIONS



### STEP 3

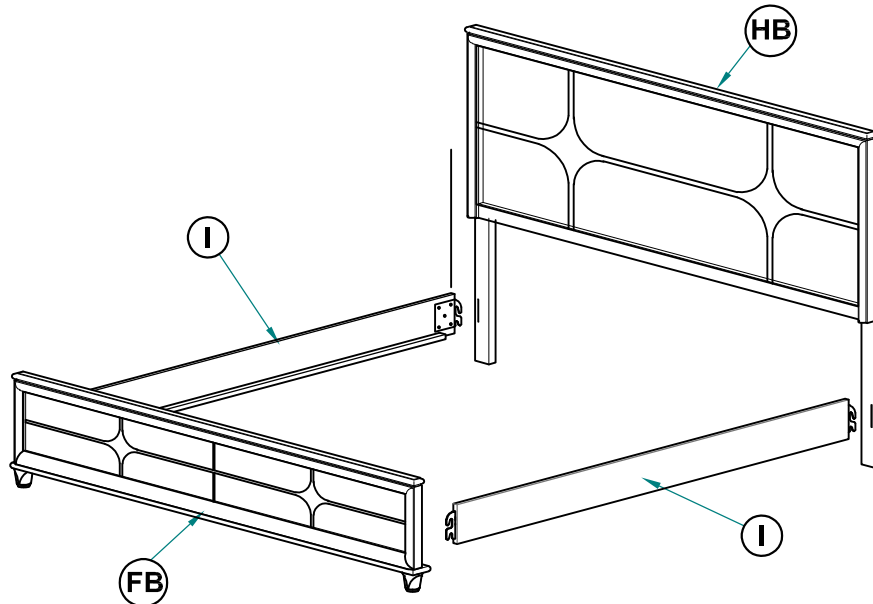



### STEP 4

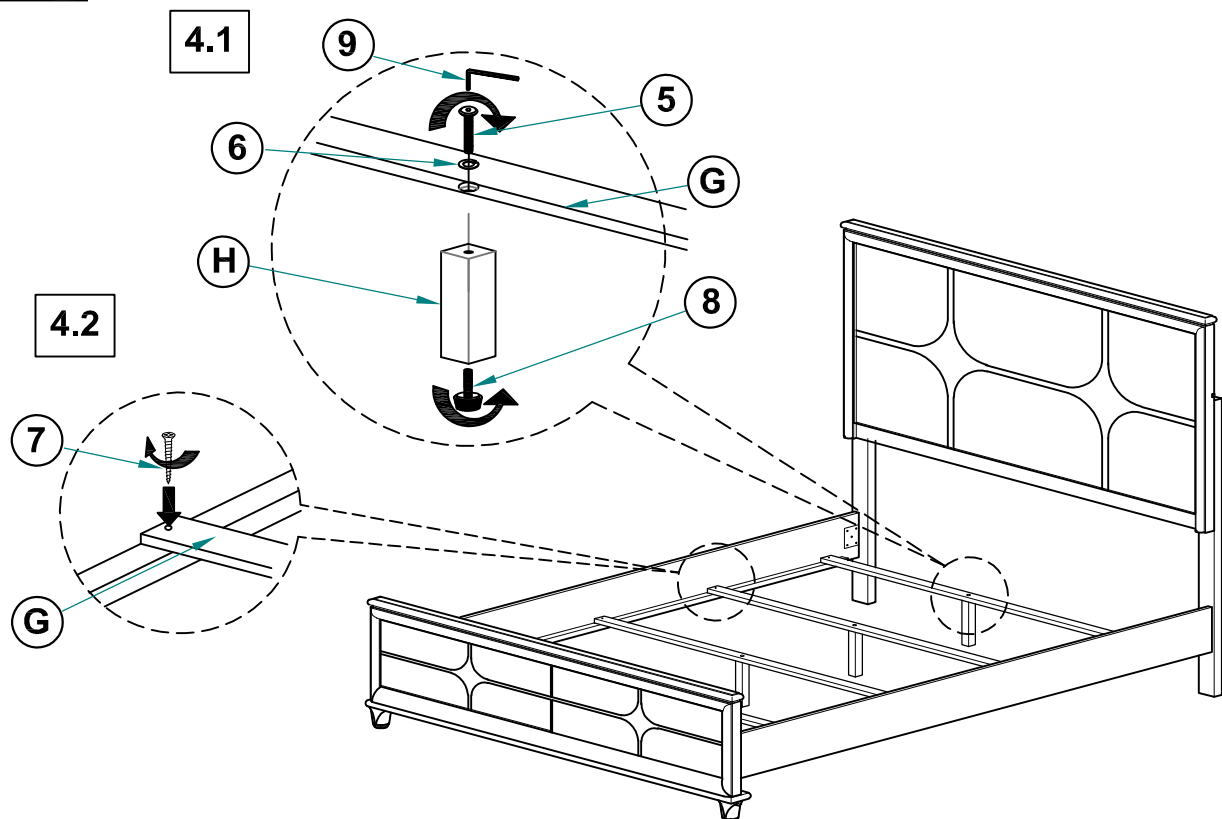

ITEM: **224951Q (B1-B3)**  
**ASSEMBLY INSTRUCTIONS**




**STEP 5**  
**COMPLETE**

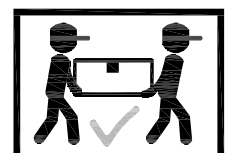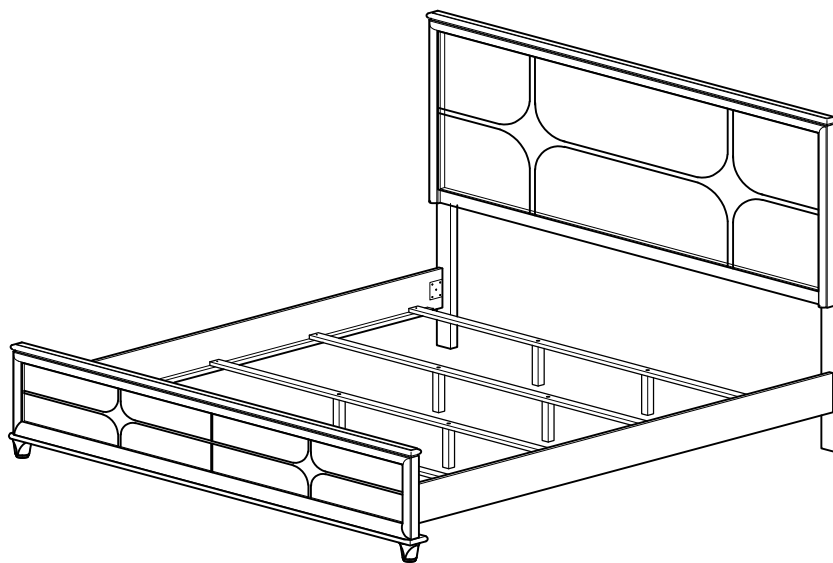

ITEM: **224951Q (B1-B3)**



**Inner Size of Bed : 60.75"W x 81.00"D**

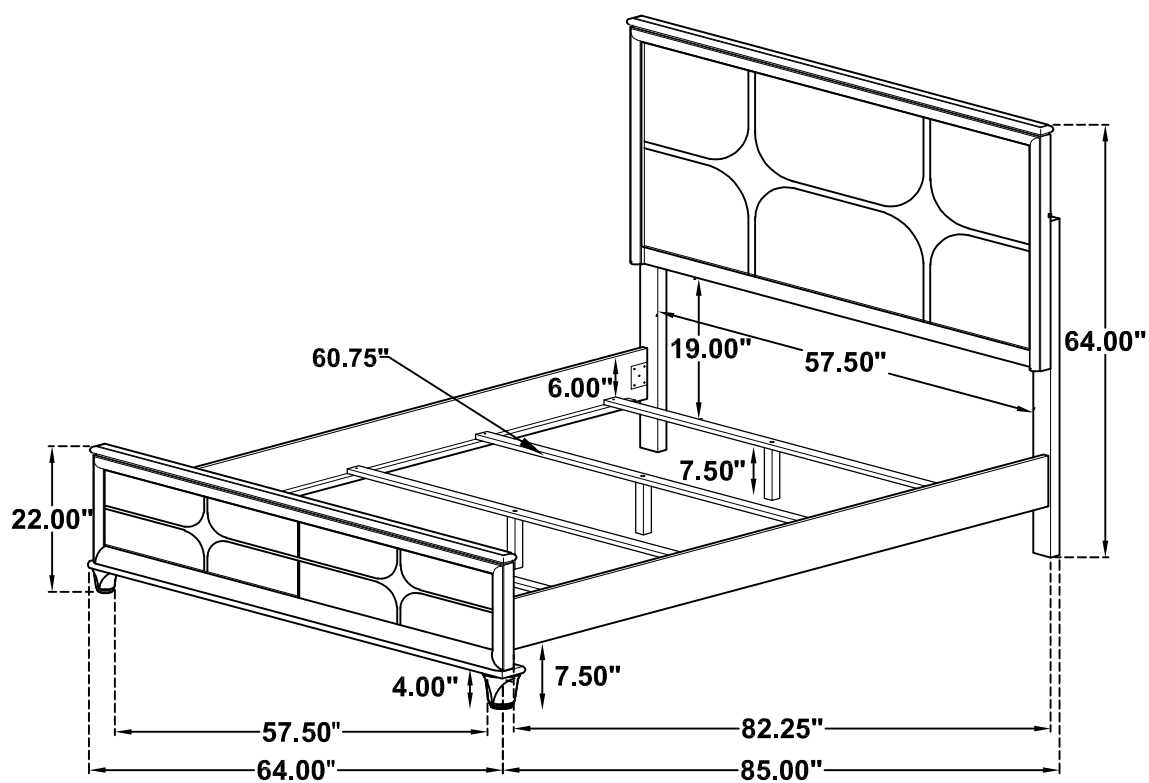

**Note : Dimension tolerance  $\pm 5\%$**