

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE




Fine Furniture for every stage of life





REVISION 0 : 02/18/2025

PAGE 1 OF 13

COASTERFURNITURE.COM

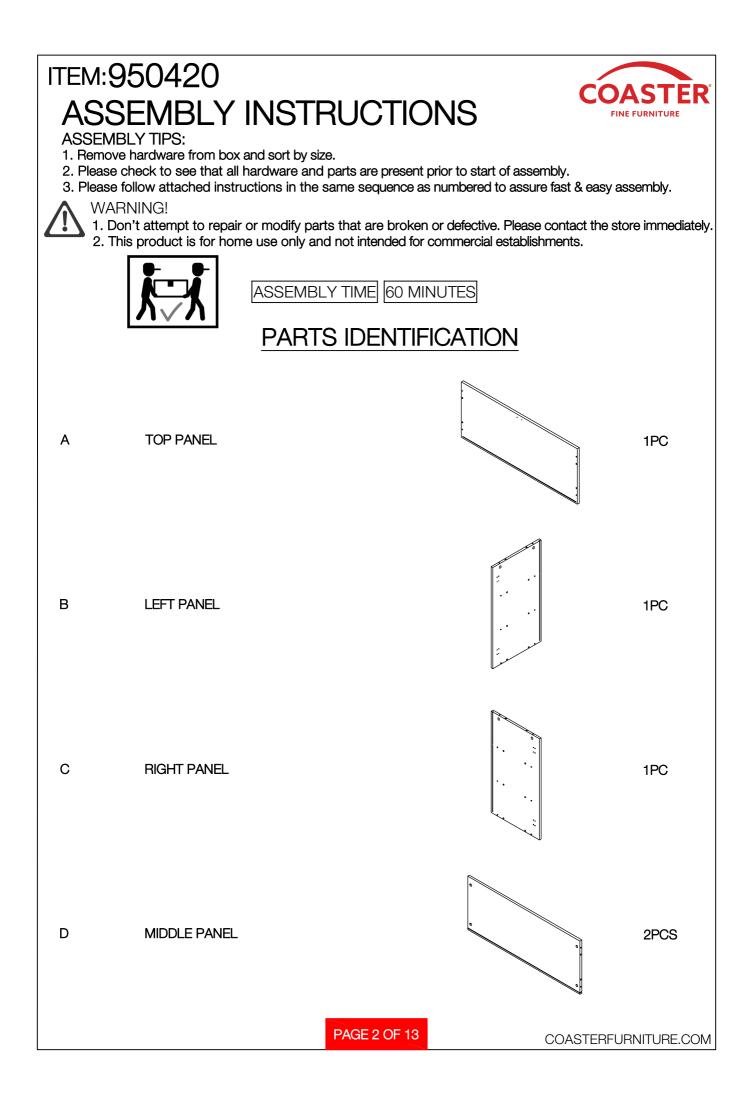

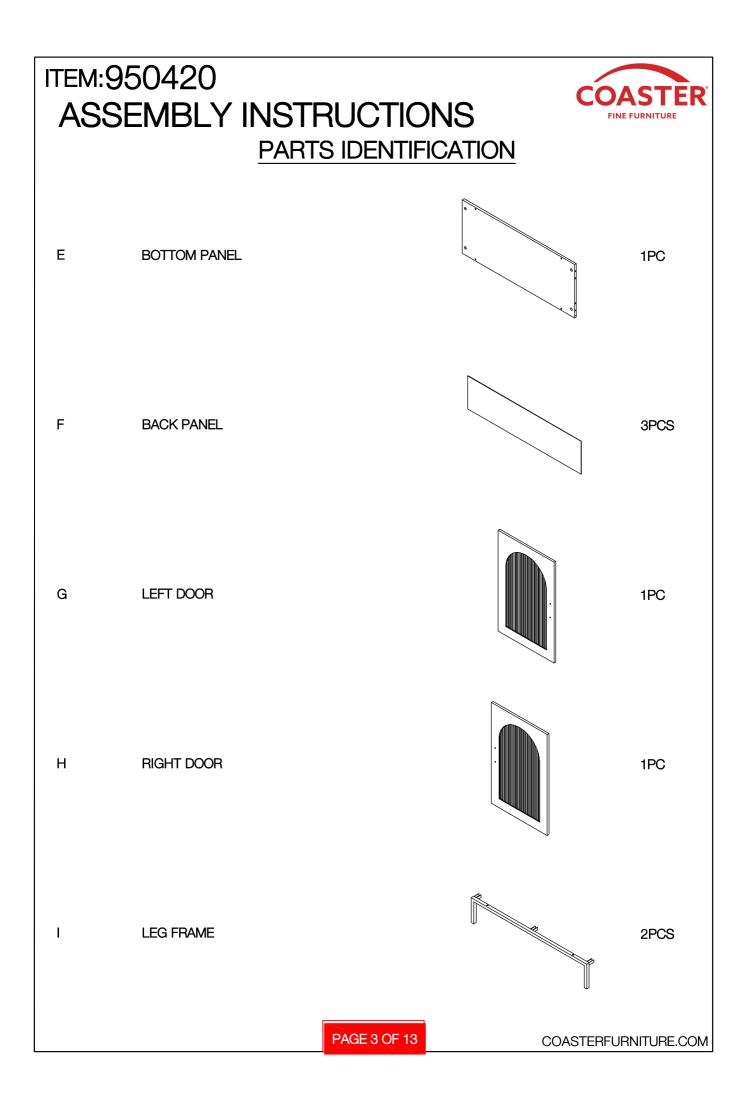


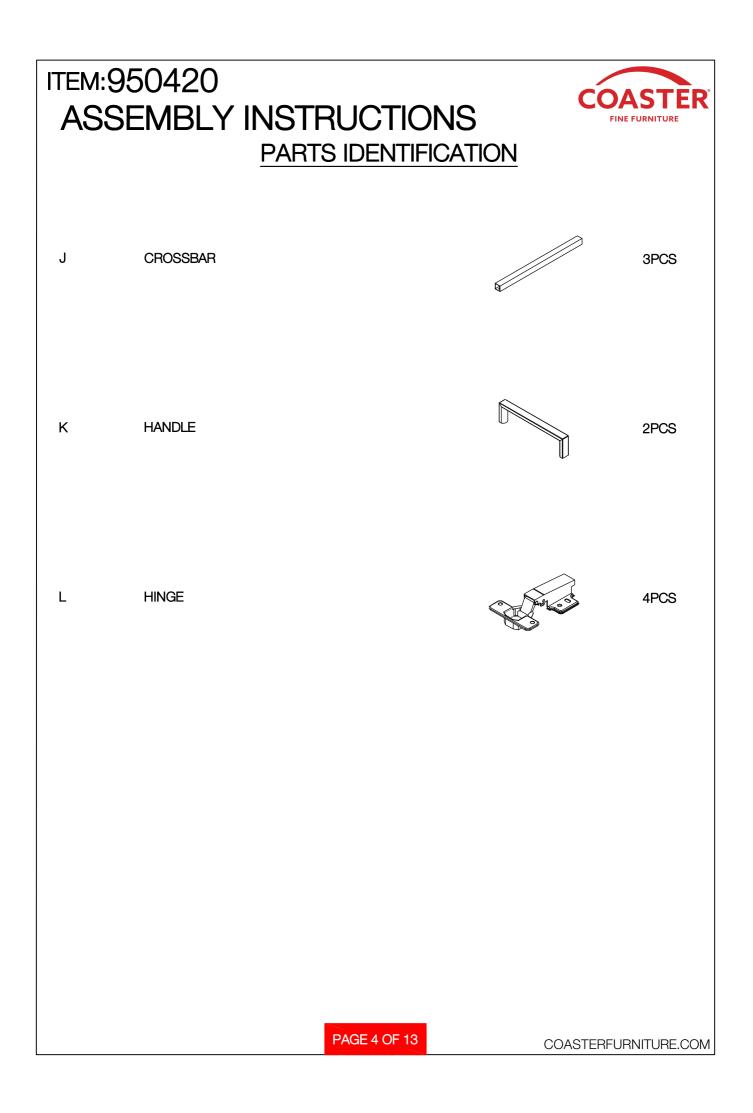



| ITEM:950420 ASSEMBLY INSTRUCTIONS | | | | | | COASTER [®] FINE FURNITURE | |
|--------------------------------------|------------------------------------|---------|-------|----|------------------------|--|------|
| z <u>HARDWARE IDENTIFICATION</u> | | | | | | | |
| 1 | CAM BOLT (38MM) | O.S. M | 16PCS | 11 | PLASTIC MAGNET | | 1PC |
| 2 | CAM LOCK (Ø15mm) | | 16PCS | 12 | METAL | 6 | 2PCS |
| 3 | WOOD DOWEL (8 x 30mm) | | 16PCS | 13 | CAP (20 x 20mm BLK) | | 4PCS |
| 4 | SHORT SCREW (3 x 10mm) | STATE. | 2PCS | 14 | SUPPORT BUCKLE | | 8PCS |
| 5 | HINGE SCREW (7 x 15mm) | Co man | 24PCS | 15 | GLUE | | 1PC |
| 6 | SUPPORT BUCKLE SCREW (5 x 15mm) | Summer. | 8PCS | 16 | ALLEN WRENCH (4mm) | | 1PC |
| 7 | PLASTIC MAGNET SCREW (3 x 15mm) | | 2PCS | | | | |
| 8 | HANDLE BOLT (5/32" x 22mm) | | 4PCS | | | | |
| 9 | SHORT BOLT (1/4" x 12mm BLK) | | 12PCS | | | | |
| 10 | BOLT (1/4" x 30mm BLK) | | 4PCS | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |


PAGE 5 OF 13


COASTERFURNITURE.COM

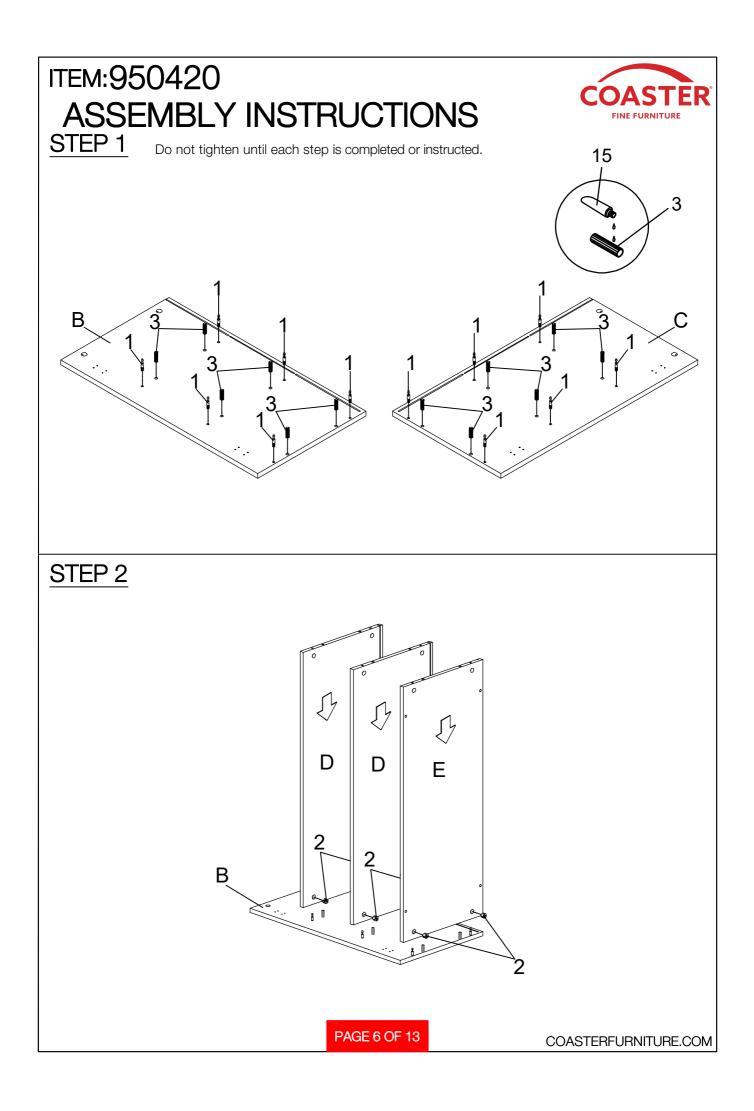


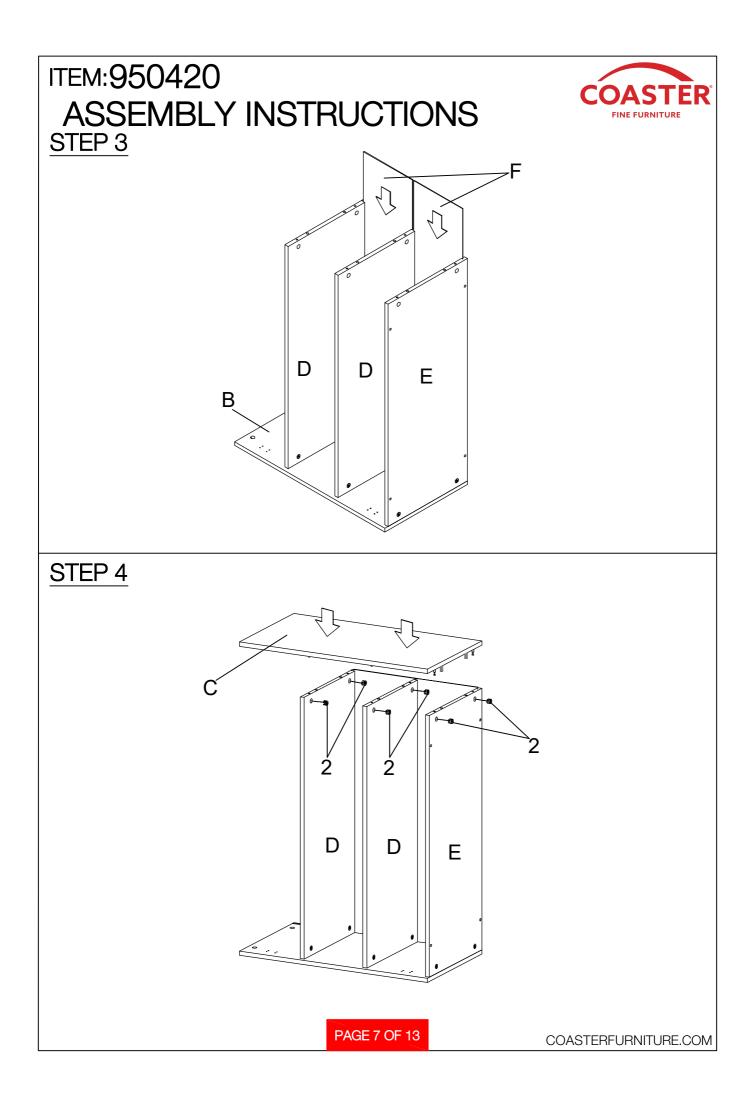


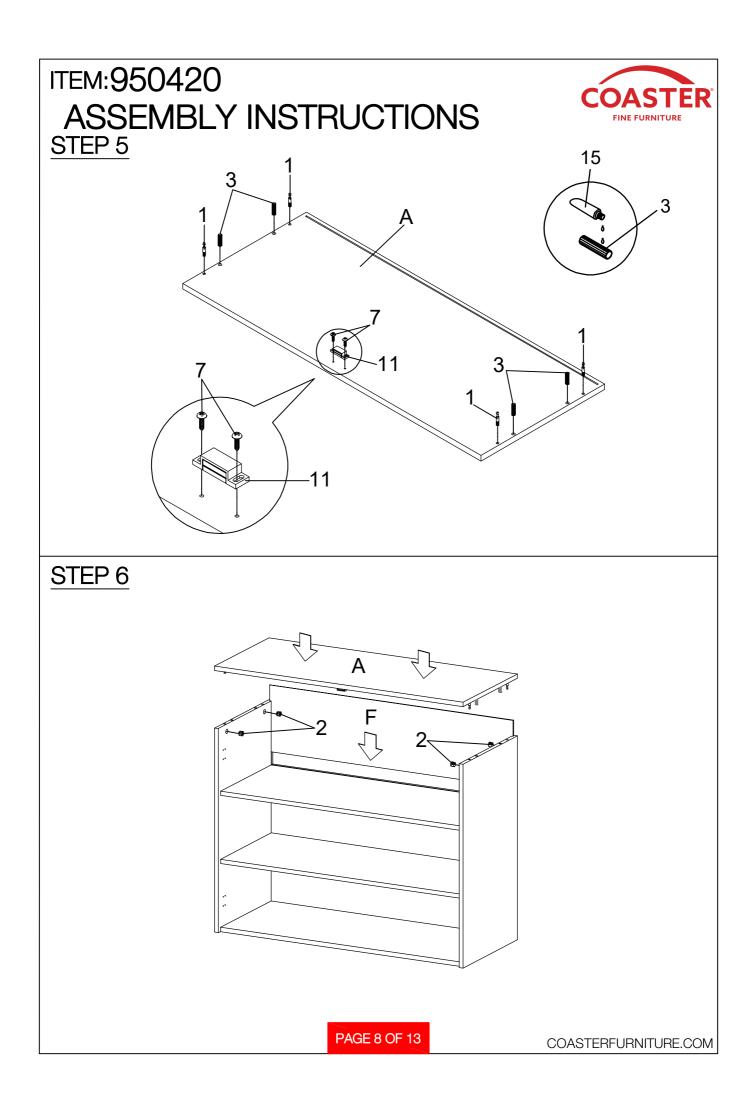

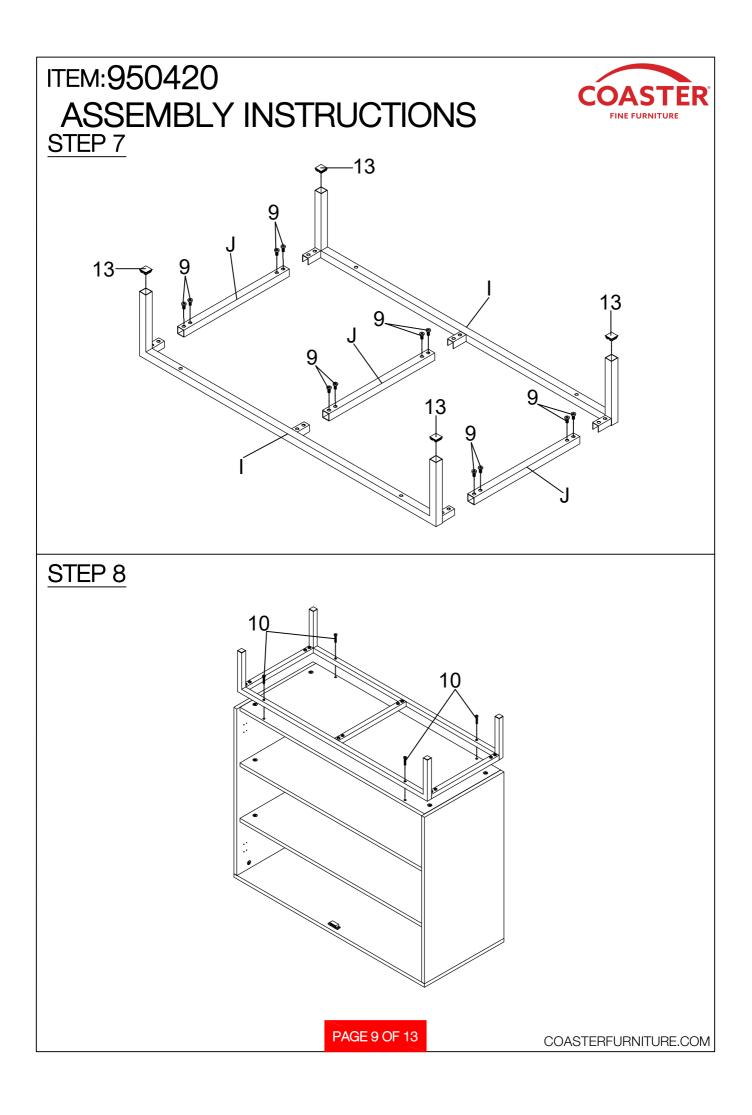

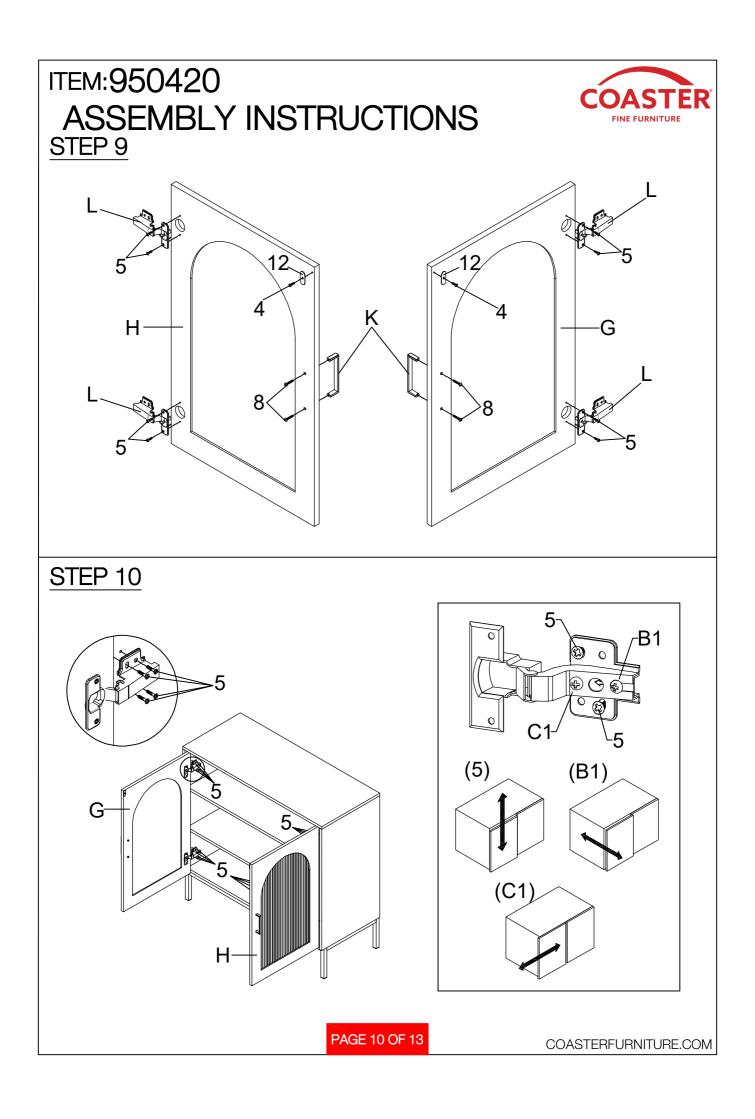

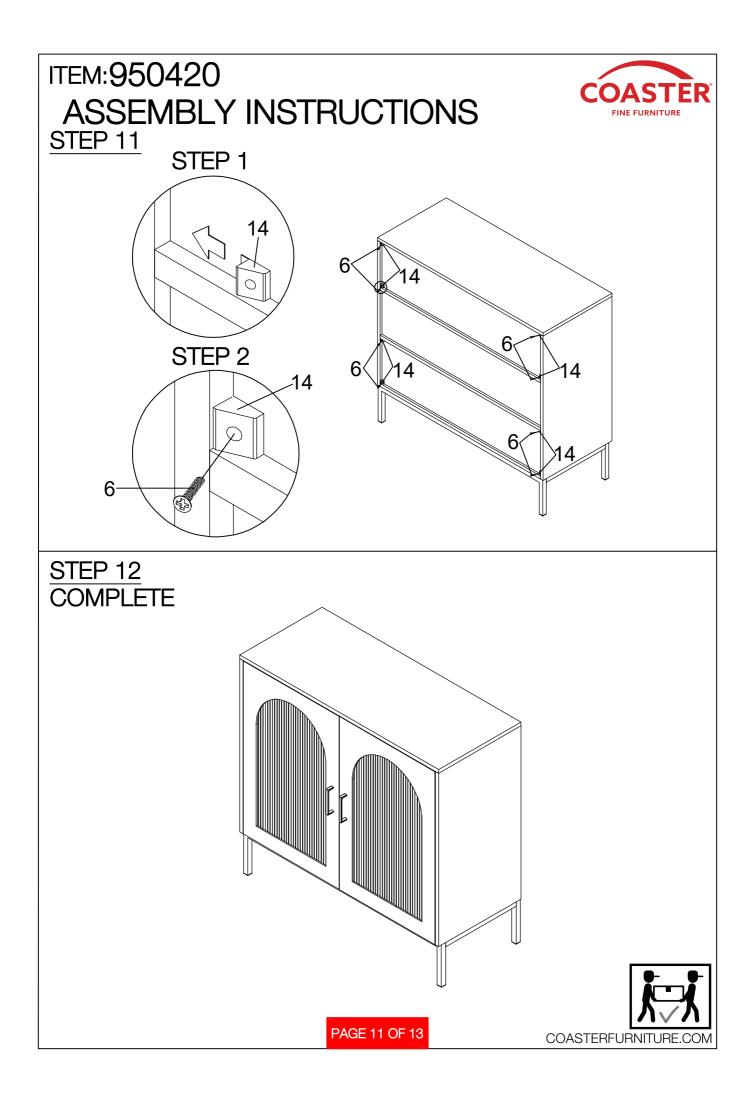

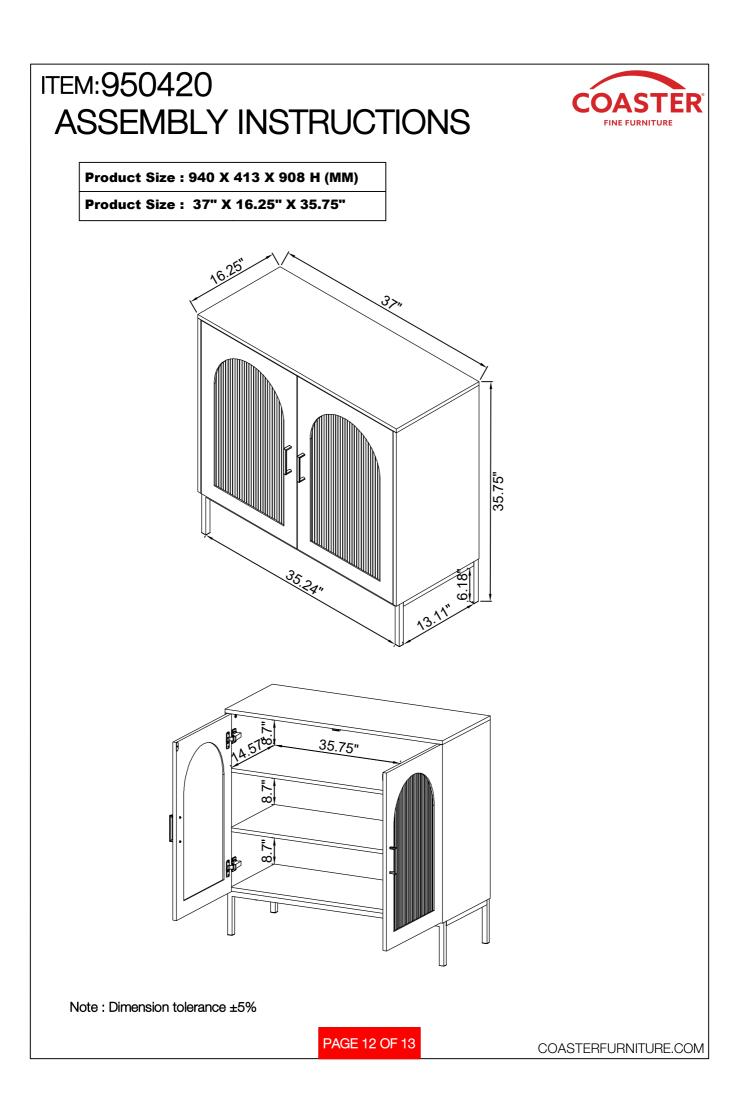

ITEM: 950420 ANTI-TIPPING INSTALLMENT INSTRUCTIONS



FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture. This restraint may protect against tipping furniture. Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This tip restraint must be attached to a wall stud using long screw enclosed.


<u>STEP 1</u>

Attach a bracket securely to the back top rail of the furniture using short screw provided, through the smaller hole.

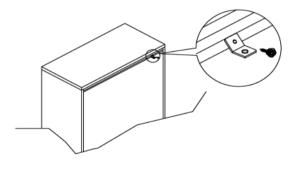

STEP 2

Locate the other bracket on the wall over a plastic wall stud and two inches below the mounting bracket secured to the back of the furniture. Attach the wall stud using the long screw provided, through the smaller hole.

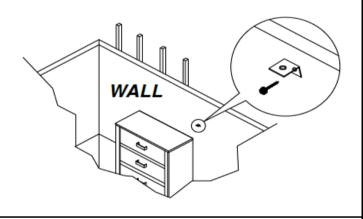

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

